

Easy COMPACT

Gebrauchsanweisung
Instruction for use
Mode d'emploi
Gebruiksaanwijzing
Istruzioni per l'uso



Brugsanvisning
Bruksanvisning
Käyttöohje
Manual de Instruções
Instrucciones para el uso



Οδηγίες χρήσης
Instrukcje użytkowania
Használati utasítás
Инструкция за използване
Інструкція з експлуатації



Návod k použití
Návod na použitie
Instrucțiuni de utilizare
Инструкция по эксплуатации
تعليمات وكيفية الاستعمال
Қолдану бойынша нұсқаулық

www.whirlpool.eu

**Whirlpool**
HOME APPLIANCES

INDEX

INSTALLATION

- 3 Installation

SAFETY

- 4 Important safety instructions
- 5 Trouble shooting guide
- 6 Precautions

ACCESSORIES AND MAINTENANCE

- 7 Accessories
- 8 Maintenance & Cleaning

CONTROL PANEL

- 9 Control panel & Display Description

GENERAL USE

- 10 Stand By Mode
- 10 Start Protection / Child Lock
- 10 Pause or Stop cooking
- 10 Stir/Turn food
- 11 Clock

COOKING FUNCTIONS

- 12 Jet Start
- 13 Microwave
- 14 Grill (only available on MWD122)
- 15 Combi Grill (only available on MWD122)
- 16 AutoDefrost
- 17 Auto Cook
- 18 Memo
- 18 Timer

ENVIRONMENTAL HINTS

- 19 Environmental Hints
- 20 Technical Specifications

INSTALLATION

-PRIOR TO CONNECTING

Position the oven at a distance from other heating sources. For sufficient ventilation there must be a space of at least 30 cm above the oven.

The microwave oven should not be placed in a cabinet. This oven is not intended to be placed or used on a working surface lower than 850 mm above the floor.

Check that the voltage on the rating plate corresponds to the voltage in your home.

Do not remove the microwave inlet protection plates located on the side of the oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.

Place the oven on a stable, even surface that is strong enough to hold the oven and the food utensils you put in it. Use care when handling.

Ensure that the space underneath, above and around the oven is empty to allow for proper airflow.

Ensure that the appliance is not damaged. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.

Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

Do not use extension cord:

If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

WARNING: Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if you have doubt as to whether the microwave oven is properly grounded.

Prior to using the microwave for the first time, it is recommended to remove the protective film from the control panel and the cable tie from the power cord.

-AFTER CONNECTING

The oven can be operated only if the oven door is firmly closed.

Poor television reception and radio interference may result if the oven is located close to a TV, radio or aerial.

The earthing of this appliance is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

The manufacturers are not liable for any problems caused by the users failure to observe these instructions.

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

If material inside / outside the oven should ignite or smoke is emitted, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.

Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements inside the oven. Children less than 8 years of age shall be kept away unless continuously supervised.

The Microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children less than 8 years.

WARNING: Do not use your microwave oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.

WARNING: The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.

Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.

IMPORTANT SAFETY INSTRUCTIONS

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

Do not leave the oven unattended if you are using a lot of fat or oil since they can overheat and cause a fire!

Do not heat, or use flammable materials in or near the oven. Fumes can create a fire hazard or explosion.

Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers or other combustible materials, Fire could result.

Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

Do not hang or place heavy items on the door as this can damage the oven opening and hinges. The door handle should not be used for hanging things on.

TROUBLE SHOOTING GUIDE

If the oven does not work, do not make a service call until you have made the following checks:

- The Turntable and Turntable Support is in place.
- The Plug is properly inserted in the wall socket.
- The Door is properly closed.
- Check your Fuses and ensure that there is power available.
- Check that the oven has ample ventilation.
- Wait for 10 minutes, then try to operate the oven once more.
- Open and then close the door before you try again.

This is to avoid unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label).

Consult your warranty booklet for further advice.

If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organization. The mains cord must only be replaced by a trained service technician.

WARNING: Service only to be carried out by a trained service technician. It is hazardous for anyone other than a trained person to carry out any service or repair operation, Which involves the removal of any cover, which gives protection against exposure to microwave energy.

Do not remove any cover.

PRECAUTIONS

- GENERAL

This appliance is designed for domestic use only!

The appliance should not be operated without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

The ventilation openings on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.

If you practice operating the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

Do not store or use this appliance outdoors.

Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

Do not use the cavity for any storage purposes.

Remove wire twist-ties from paper or plastic bags before placing bag in the oven.

Do not use your microwave oven for deep-frying, because the oil temperature cannot be controlled.

Use hot pads or oven mitts to prevent burns, when touching containers, oven parts, and pan after cooking.

-LIQUIDS

e.g. beverages or water. Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot Liquid.

To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

- CAREFUL

After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

Always refer to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol. Ensure the Lid and the Teat is removed before heating!

ACCESSORIES

GENERAL

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

Ensure that the utensils you use are oven proof and allow microwaves to pass through them before cooking.

When you put food and accessories in the microwave oven, ensure that they do not come in contact with the interior of the oven.

This is especially important with accessories made of metal or metal parts.

If accessories containing metal comes into contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

Always ensure that the turntable is able to turn freely before starting the oven. If the turntable isn't able to turn freely you should use a smaller vessel.

Turntable Support

Use the Turntable Support under the Glass Turntable. Never put any other utensils on the Turntable Support.

 
- Fit the Turntable Support in the oven.



Glass Turntable

Use the Glass Turntable with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.

- Place the Glass Turntable on the Turntable Support.



WIRE RACK (only available on MWD122)

- Use the Wire rack with Grill & Combi Grill functions.



MAINTENANCE & CLEANING

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Do not use metal scouring pads, abrasive cleansers, steel-wool pads, gritty washcloths, etc. Which can damage the control panel, and the interior and exterior oven surfaces. Use a cloth with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.

At regular intervals, especially if spillages have occurred, remove the turntable, the Turntable Support and wipe the base of the oven clean.

Use a soft and damp cloth with mild detergent to clean the interior surfaces, front and rear of the door and the door opening.

Do not use steam cleaning appliances when cleaning your microwave oven.

The oven should be cleaned regularly and any food deposits removed.

Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.

Do not spray directly on the oven.

This oven is designed to operate with the turntable in place.

Do not operate the microwave oven when the turntable has been removed for cleaning.

Do not allow grease or food particles to build up around the door. For stubborn stains, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

Adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.

The Grill element does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with a soft and damp cloth with mild detergent.


If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes, in order to reduce the risk of fire.

DISHWASHER SAFE:


- Turntable Support
- Wire Rack
- Glass Turntable

CONTROL PANEL & DISPLAY DESCRIPTION

MWD121

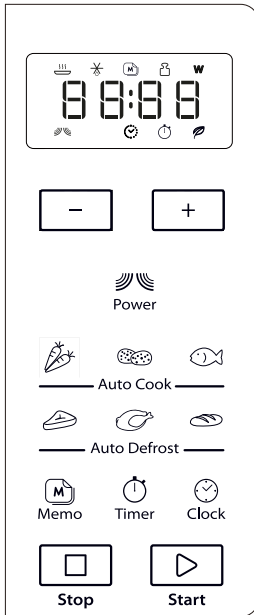

MWD122

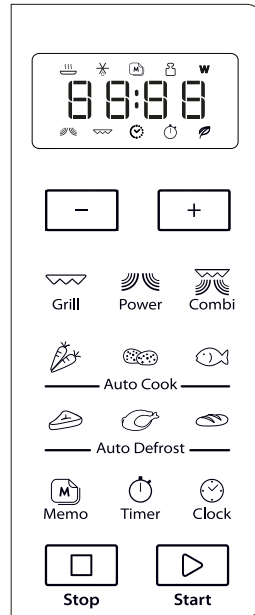

- ① Auto Cook function
- ② Auto Defrost function
- ③ Memo function
- ④ Weight/Portions selection
- ⑤ Microwave Power selection
- ⑥ Microwave function
- ⑦ Grill function (*)
- ⑧ Clock setting / Time selection
- ⑨ Timer function
- ⑩ Stand by mode

* This icon is not available in some models. Please check the control panel of your microwave on this page.



STAND BY MODE

The oven is in stand by mode when the clock is displayed or if the clock has not been set, when the display is ":".

If STOP is pressed during stand by mode, the display is switched off and the "eco" icon is lit.



START PROTECTION / CHILD LOCK

This automatic safety function is activated one minute after the oven has returned to "stand by mode".

When the safety function is active the door must be opened and closed in order to start the cooking, otherwise the display will show door.

door



PAUSE OR STOP COOKING

To pause cooking:
The cooking can be paused to check, turn or stir the food by opening the door. The setting will be maintained for 5 minutes.

If you don't want to continue cooking you can:
Remove the food, close the door and press the STOP Button.

To continue cooking:
Close the door and press the Start ONCE. The cooking is resumed from where it was paused.

When the cooking is finished:
A beep will signal once a minute for 10 minutes when the cooking is finished. Press the STOP Button or open the door to cancel the signal.



STIR/ TURN FOOD

Depending on the selected function, it could be needed to stir / turn food during cooking. In these cases the oven will pause cooking and it will ask you to perform the needed action.


When required, you should:

- ① Open the door.
- ② Stir or Turn the food (depending on the required action).
- ③ Close the door and restart by pressing the Start button.

Notes: if the door is not opened within 2 minutes since the request to Stir or Turn the food, the oven will continue the cooking process (in this case the final results may not be the optimal ones).



CLOCK

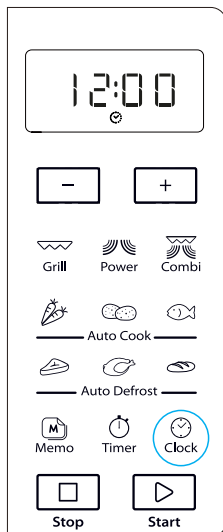

The first time the appliance is plugged in (or after a power failure), the product will enter the clock setting mode.

You can enter the clock setting mode in stand by state by pressing the Clock button.


- 1 Press Plus/Minus button to set the hours.
- 2 Press the Clock button. The numbers on the right of the display will start blinking.
- 3 Press Plus/Minus button to set the minutes.
- 4 Press the Clock button. The clock is set.

Tips and suggestions:

- If the clock has not been set after plug in, the clock will show "12:00".
- During the setting of the clock, if you press the Stop button or if the setting is not completed after a long time, the oven will exit from setting mode and the setting will be invalid, the display will show ":".



JET START

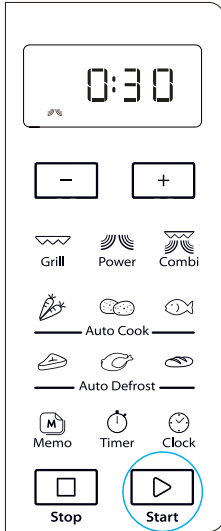

This function is used for quick reheating of food with a high water content such as clear soups, coffee or tea.

- 1 Press the Start button.

Pressing the Start button the Power function will start at maximum microwave power for 30 seconds.

Once the cooking process has been started:

- to adjust the power: press the Power button to adjust value.
- to increase time/decrease time: press Plus/Minus button, or press Start button to increase the cooking time of 30 seconds.



MICROWAVE



Power function allows to quickly cook or reheat food and beverages.

Suggested Accessory:  Plate Cover (sold separately)

- ① Press the Power button repeatedly to set the power (see the table below for the suggested uses).
- ② Press Plus/Minus button to set the cooking time .
- ③ Press Start button to start cooking.


Once the cooking process has been started:

- to adjust the power: press the Power button to adjust value.
- to increase time/decrease time: press Plus/Minus button, or press Start button to increase the cooking time of 30 seconds.

| POWER | SUGGESTED USE: |
|-------|--|
| 700W | Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power. |
| 600 W | Cooking of fish, meat, vegetables, etc. |
| 500 W | More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles. |
| 350 W | Simmering stews, melting butter. |
| 160 W | Defrosting. |
| 90 W | Softening ice cream, butter and cheeses. Keep warming. |



GRILL (only available on MWD122)

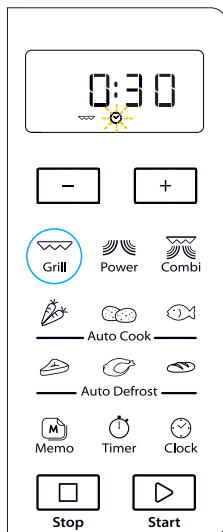

This function uses a powerful grill to brown foods, creating a grill or a gratin effect.

Grill function allows to brown foods like cheese toast, hot sandwiches, potato croquettes, sausages, and vegetables.

Dedicated

Accessory:



Wire Rack

- 1 Press the Grill button.
- 2 Press Plus/Minus button to set the cooking time.
- 3 Press Start button to start cooking.

Tips and suggestions:

- For food like cheese, toast, steaks and sausages, place food on the Wire Rack.
- Ensure that the utensils used are heat resistant when you use this function.
- Do not use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.
- Be careful, do not touch the ceiling beneath the grill element.



COMBI GRILL (only available on MWD122)

This function combines Microwave and Grill heating, allowing you to cook gratin in less time.

Dedicated
Accessory:



Wire Rack



- ① Press the Combi button repeatedly to set the power (see table/cooking chart below).
- ② Press Plus/Minus button to set the cooking time.
- ③ Press Start button to start cooking.

Once the cooking process has been started:

- to adjust the power: press the Combi Grill button to adjust value.
- to increase time/decrease time: press Plus/Minus button, or press Start button to increase the cooking time of 30 seconds.

| POWER LEVEL | SUGGESTED USE |
|-------------|---------------------|
| 600 W | Lasagne |
| 500 W | Vegetables & Gratin |
| 350 W | Fish |
| 160 W | Meat |

Cooking chart


| TYPE OF FOOD | AMOUNT | POWER LEVEL | TIME | HINT |
|---------------|--------|-------------|----------|---------------------------------------|
| Lasagna | 500g | Combi 600W | 6min | 3min standing time after cooking. |
| Potato gratin | 1100g | Combi 500W | 30min30s | Potatoes are cut to 4mm thick pieces. |
| Breaded fish | 250g | Combi 350W | 16min | Turn midway through cooking. |
| Sausage | 250g | Combi 160W | 10min | Turn midway through cooking. |

Tips and suggestions:

- Ensure that the utensils used are microwave safe and heat resistant when you use this function.
- Do not use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.
- Be careful, do not touch the ceiling beneath the grill element.



AUTO DEFROST

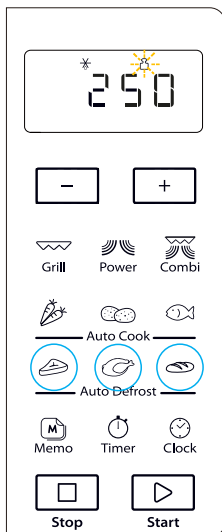

This function allows you to quickly defrost food automatically. Use this function to defrost Meat, Poultry and Bread.

Suggested
Accessory:



Plate Cover
(sold separately)

- ① Press any Auto Defrost button to select the food type.
- ② Press Plus/Minus button to set the weight.
- ③ Press the Start button. The function will start.

Note: after a certain time, the display could ask you to turn or stir the food for a better defrost. See "Stir/Turn food" chapter on page 10.


| FOOD TYPE | | WEIGHT | HINT |
|-----------|---------|--------------|---|
| | Meat | 100g - 1200g | Minced meat, cutlets, steaks or roasts. After cooking, allow meat to rest for at least 5 minutes for better results. |
| | Poultry | 100g - 1000g | Whole chicken, pieces or fillets. After cooking, allow poultry to rest for 5-10 minutes. |
| | Bread | 100g - 500g | Frozen rolls, baguettes & croissants. After cooking, allow bread to rest for 3 minutes. |

Tips and suggestions:

- For best results we recommend to defrost directly on the Glass Turntable. If needed, it is possible to use a container of light plastic material suitable for microwave.
- For food not listed in this table and if the weight is less or more than recommended weight, you should choose manual function with lower microwave power (like microwave 160W).
- If the food is warmer than deep-freeze temperature (-18°C), choose lower weight of the food.
- If the food is colder than deep-freeze temperature (-18°C), choose higher weight of the food.
- Due to food variability, the cooking duration is set on an average shape, we always recommend to check the internal doneness of food and if necessary, prolong the cooking time to achieve proper doneness.
- Boiled food, stews and meat sauces defrost better if stirred during defrosting time.
- Separate pieces as they begin to defrost. Individual slices defrost more easily.
- For details requested to stir/turn food, see "Stir/Turn food" chapter on page 10.



AUTO COOK

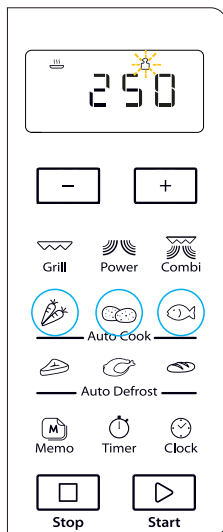




This function allows you to automatically cook your dishes.
Use this function to cook fresh vegetables, baked potatoes and fish.

Suggested
Accessory:  Plate Cover
(sold separately)

- ① Press any Auto Cook button to select the food type.
- ② Press Plus/Minus button to set the food weight.
- ③ Press the Start button. The function will start.

Note: after a certain time, the display could ask you to turn or stir the food for a better defrost. See "Stir/Turn food" chapter on page 10.


| FOOD TYPE | | WEIGHT | HINT |
|---|------------------|--------------|--|
|  | Fresh vegetables | 200g - 600g | Use fresh soft vegetables(such as cauliflower), cover with lid or cling film, creating a few air holes. Add 30ml to 60ml water. Stir when oven prompts during cooking. |
|  | Baked potatoes | 200g - 1000g | Use each 200g-300g weight potatoes, unpeeled, turn when oven prompts during cooking. |
|  | Fish | 150g - 500g | Cutlets or whole fish. |

Tips and suggestions:

- Arrange the thicker, denser food to the center of the plate and the thinner or less dense food the outside of the plate.
- Place thin slices of meat on top of each other or interlace them.
- Due to food variability, the cooking duration is set on an average shape, we always recommend to check the internal doneness of food and if necessary, prolong the cooking time to achieve proper doneness.
- Waiting 1-2 minutes before serving the reheated food will improve the results, especially for frozen food.
- Plastic foil should be scored or pricked with a fork, to relieve the pressure and to prevent bursting, as steam builds-up during cooking.
- Place food onto a microwave safe and heatproof dinner plate or dish.
- For details requested to stir/turn food, see "Stir/Turn food" chapter on page 10.



MEMO

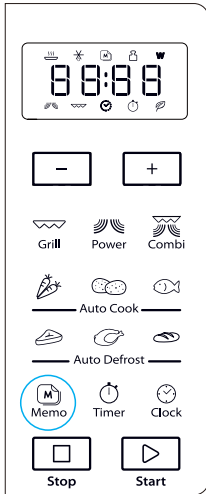

The Memo function provides you with an easy way to quickly store and recall a favourite recipe.

The principle of the Memo function is to store one function of whatever setting that is currently displayed.

HOW TO SAVE A MEMO:

- ① Select a cooking function and its parameters (do not press Start).
- ② Press and hold for a few seconds the Memo button.
- ③ A beep will be played and the function will be stored.

Note: it is possible to replace an existing Memo with a new one.

HOW TO RECALL A MEMO:

- ① Press the Memo button.


Note: when the appliance is plugged in or after a power failure, your Memo function will be reset to default value: maximum microwave power for 2 minutes.

Tips and suggestions:

- If some parameters have not been set yet, the Memo will store their default values.
- For details requested to stir/turn food, see “Stir/Turn food” chapter on page 10.



TIMER

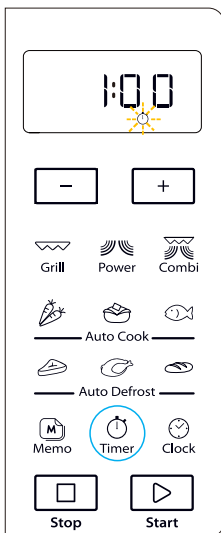

This function allows to measure exact time for various purposes such as letting the dough rise before baking etc.

You can enter the Timer setting mode in stand by state and child lock mode by pressing the Timer button.

- ① Press the Plus/Minus button to set the minutes.
- ② Press the Timer or Start button.

Tips and Suggestions:

During the setting of the timer, if you press the Stop button, the oven will exit from setting mode and the setting will be invalid.

You could start a cooking function if the timer is active.

ENVIRONMENTAL HINTS

The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.

This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.



For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.

In accordance with IEC 60705, Edition 4, 2010.

The International Electrotechnical Commission has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

| TEST | AMOUNT | APPROX. TIME | POWER LEVEL | CONTAINER |
|---------------------------|--------|--|----------------------------|--|
| 12.3.1 (Egg custard) | 750 G | For MWD121, 13min. For MWD122, 12min. | 700W | Pyrex 3.222-R |
| 12.3.2 (Sponge cake) | 475 G | 7min. | 700W | Pyrex 3.827 |
| 12.3.3 (Meatloaf) | 900 G | For MWD121, 22min. For MWD122, 19min. | 700W | Pyrex 3.838 |
| 12.3.4 (Potato gratin) | 1100 G | 30min30sec. | Combi (500W+Grill) | Pyrex 3.837 |
| 13.3 (Minced meat) | 500 G | For MWD121, 16min. For MWD122, 17min. | Manual Defrost (160W) | Place on turntable with 3mm thickness plastic plate |

TECHNICAL SPECIFICATION

| Data Description | MWD121 | MWD122 |
|--------------------------|-----------------|-----------------|
| Supply Voltage | 220-230V~50 Hz | 220-230V~50 Hz |
| Rated Input Power | 1100 W | 1100 W |
| Grill | N/A | 700-800 W |
| Outer dimensions (HxWxD) | 260 x 442 x 355 | 260 x 442 x 355 |
| Inner dimensions (HxWxD) | 216 x 302 x 277 | 186 x 302 x 292 |

