




Trust

www.trust.com/21137/faq



Mechanical Keyboard
GXT 880


Setup Keyboard

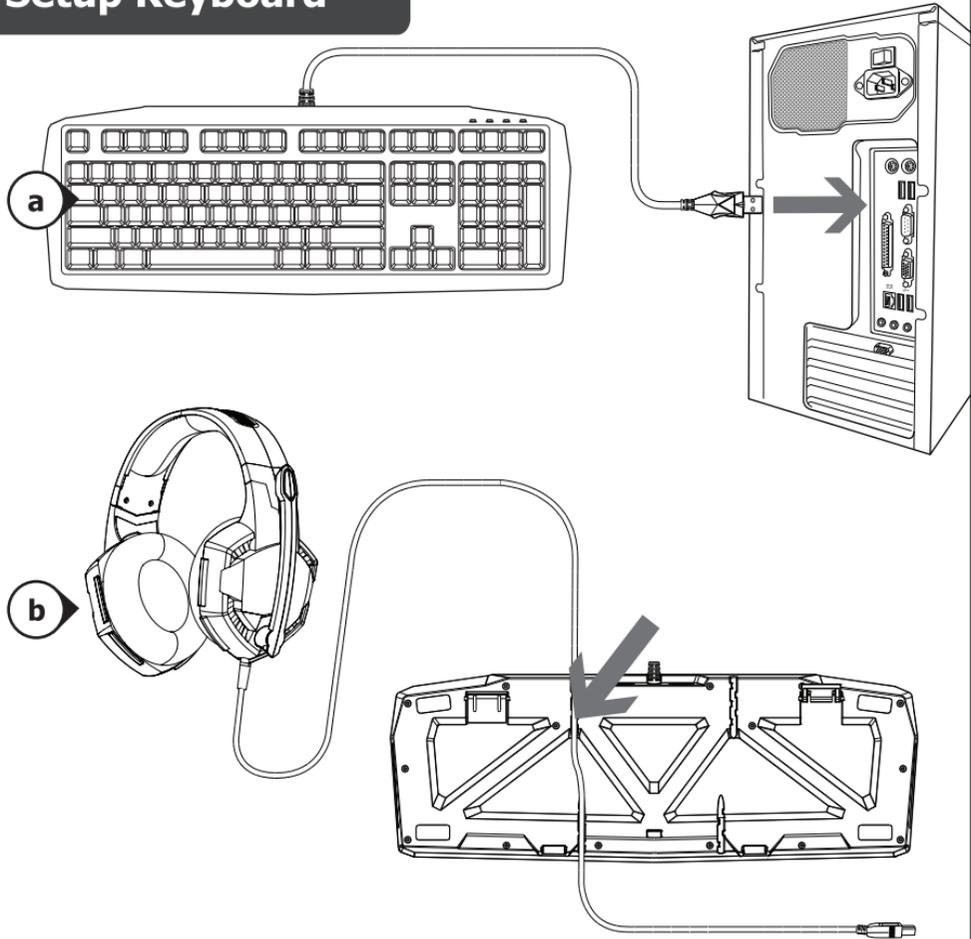


- a. Insert USB cable into USB port on your PC
- b. Use the gutter on the bottom side of the keyboard for cable management (headset, mouse etc.)

Media Functions

a

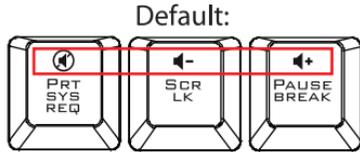

b

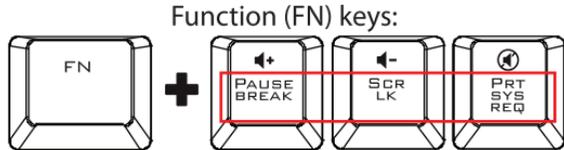

- a. The default functions of the 3 displayed keys are;
 - Mute
 - Volume +
 - Volume -


- b. To use the Pause Break, Scroll Lock and Print screen/System Requirements key, press FN + the respective key

Backlight & Gaming Mode



- Press Gmode Key to activate the gaming mode (the Gmode LED will light up the upper right corner on the keyboard). When the gaming mode is active the Menu/App key and Windows key are locked
- Press Brightness Key to switch backlight intensity
- Press Backlight Profile Key to switch backlight profile;
 - Solid (All LED on)
 - Pulse (LED intensity gradually increase and decrease)
 - Demo (Light show effects)
- Press Backlight on/off Key to turn backlight on/off

Custom Backlight

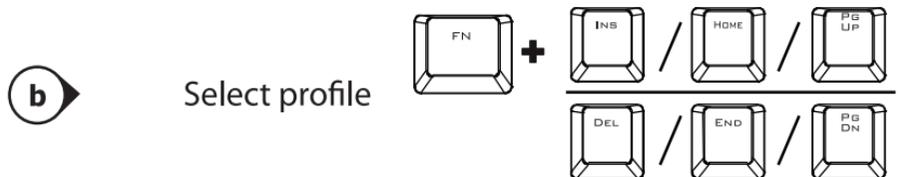


- Press FN + Backlight Profile Key to enter the Custom Backlight mode (backlight mode must be enabled to record custom profiles)*
- In the Custom Backlight mode, 1 of 6 profiles can be selected by pressing a combination of the following keys FN + Insert / Home / Page Up / Page Down / End / Delete
- After the desired profile is selected, press the FN + Backlight Profile key again to start recording, The LED in the top right corner of the keyboard will start to pulse and you can now press any key to turn the backlight on/off of each key individually.**
- When finished recording the custom backlight profile you can save the profile by pressing FN + Backlight Profile Key.***

*Make sure that the LED brightness is at the correct intensity or you will not be able to see the recorded profile until you increase the brightness.

**Note that when you are already in the Custom Backlight mode, you automatically select the last selected profile. If you are already in the profile you want to edit, skip step 4a and 4b.

***Pressing the Backlight Profile key without FN will end the recording session prematurely.


Backlight Profiles

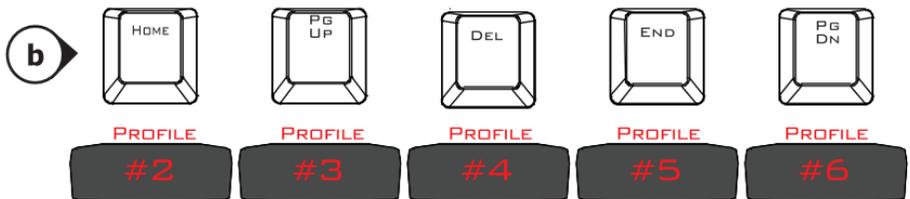

- a. To select the recorded profile make sure the Custom Backlight mode is activated, after that simply press FN + Insert for profile #1
- b. To switch between profiles (make sure that the Custom Backlight mode (step 4a) is enabled) press;
 - FN + Home to switch to profile #2
 - FN + Page Up to switch to profile #3
 - FN + Page Down to switch to profile #4
 - FN + End to switch to profile #5
 - FN + Delete to switch to profile #6


Macros

Gmode:
G1, G2, G3, G4

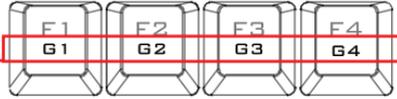


G1 = Macro #1
G2 = Macro #2
G3 = Macro #3
G4 = Macro #4

a

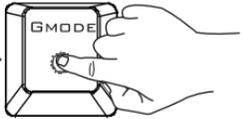

Default function
F1, F2, F3, F4

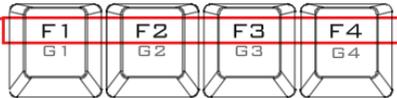


b

- The 4 adjustable macro keys are located on the F1/F2/F3/F4 keys on the keyboard. To use these macro keys, activate the gaming mode by pressing the Gmode key. Make sure the Gmode LED in the upper right corner of the keyboard is lit up.*
- When Gaming Mode is not activated, the default functions will always be F1/F2/F3/F4

*When in Gaming Mode, the macro keys will never be empty the functions will always reset to F1/F2/F3/F4 until a new macro is recorded.

Recording Macros

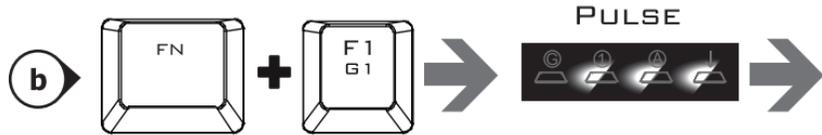


- To record a macro first activate Gaming Mode by pressing the Gmode key
- Start recording by pressing FN + G1/G2/G3/G4 key, the LED in the top right corner of the keyboard will start to pulse.
- A macro sequence up to 60 actions, 30 keys (button press / release are 2 actions) can now be recorded. To save the macro press FN + G1/G2/G3/G4 key or use all 60 actions to save the macro automatically.*

*After 10 seconds of no action, the macro recording will be automatically cancelled.

Reset Macros


a

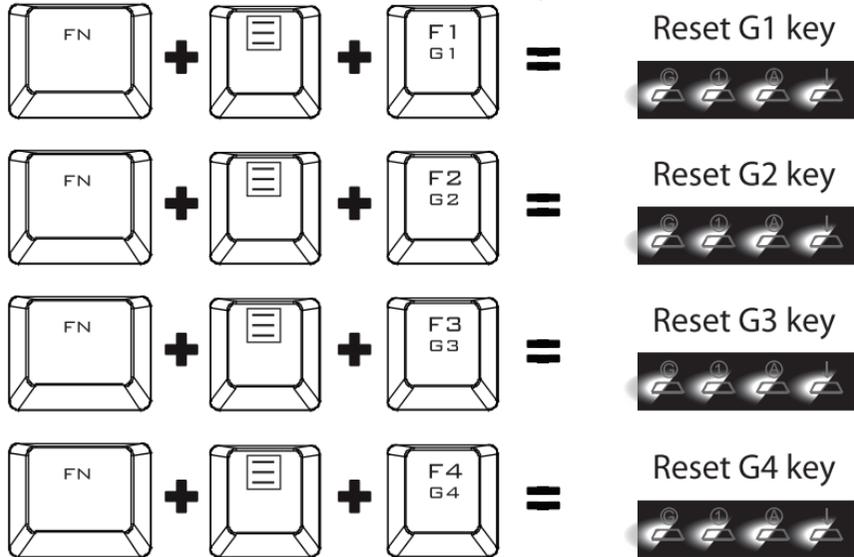

- To reset an individual macro press FN + Menu/App + G1/G2/G3/G4 key. If the reset is executed correctly the LED in the top right corner of the keyboard will pulse 3 times.*

*You can only reset a macro when Gaming Mode is activated.

Factory Reset

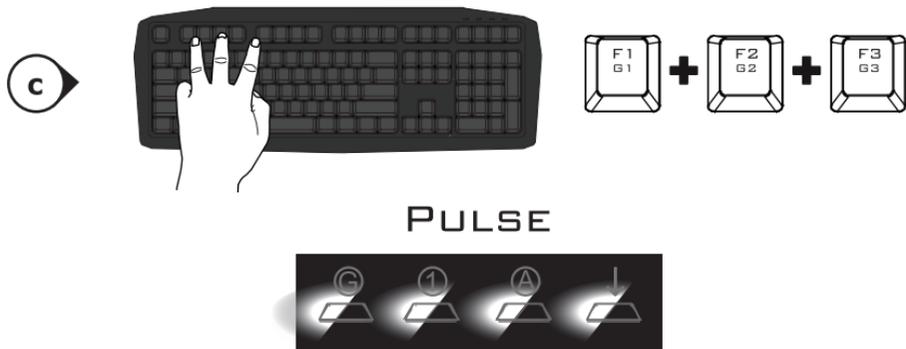

- To set the keyboard back to factory default make sure the Gaming Mode is not activated, the Gmode LED in the top right corner of the keyboard should be off
- Press FN + ESC key
- Press F1 + F3 + F5 at the same time to finish the factory reset. If the reset is executed correctly the LED in the top right corner of the keyboard will pulse 5 times