


**Read the Instructions for Use carefully before using the appliance.**

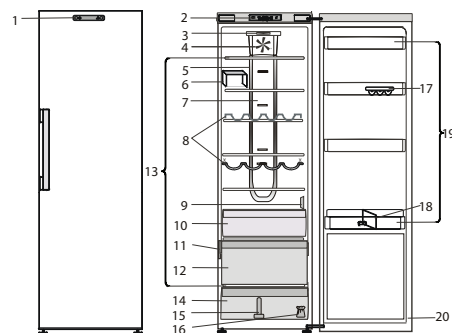

1. External indicators of Power On and alarms
2. Control panel
3. Main LED 's lighting
4. Fan
5. Lighting in Multi-flow\*
6. Shelf divider\*
7. Multi-flow cold air area\*
8. Bottle rack \*
9. Sensor cover
10. Zero degrees drawer\*
11. Rating plate with commercial name
12. Cooler compartment (best for meat and fish)
13. Area shelves
14. Fruits and vegetables crisper
15. Crisper divider \*
16. Door reversibility kit
17. Egg tray\*
18. Bottle holder\*
19. Door trays
20. Door seal

\* Available on selected models

## HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the appliance. When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the freezer compartment settings light-up.

## HOW TO REVERSE THE DOOR SWING

- see enclosed Instructions for Use (Version\_2)
- Is recommended to reverse door swing by two persons. There is not foreseen door reversibility for:
- models with integrated handle
- models with glass panel on the door.

**Specifications, technical data and images may vary from model to model**

### POWER ON (EXTERNAL LED) indicator

An external green LED showing that the appliance is switched ON. It automatically turns off when opening the door.

### ALARM (EXTERNAL LED) indicator

This red LED can blink to show the occurrence of an alarm or a failure even when the door is closed. Please open the door and check on the internal Control Panel which alarm/failure is occurring.

### FAST COOL indicator

### ON/STANDBY indicator

### 6<sup>th</sup> SENSE FRESH CONTROL

This function automatically works to ensure the optimal conditions to preserve the stored food. To deactivate the "6<sup>th</sup> Sense Fresh Control", press and hold Vacation and Stop Alarm buttons at the same time for 3 seconds until an audible signal sounds and 6<sup>th</sup> Sense Fresh Control icon turns off as confirmation that the feature has been deactivated. To reactivate this function repeat the same procedure.

**Note:** Deactivation of the function switch-off the FAN in the fridge.

### FAN

The Fan improves temperature distribution inside the product, allowing better preservation of stored food. By default, the fan is switched on. **To switch off the FAN** press and hold Vacation and Stop Alarm buttons at the same time for 3 seconds until an audible signal sounds and 6<sup>th</sup> Sense Fresh Control icon will turn off as confirmation that the fan has been switched off. **To switched on the FAN** repeat the same procedure. As a confirmation audible signal sounds and the icon turns on.


### ON/STANDBY button

To put the product in Stand-by, press and hold the button for 3 seconds. All the icons turn off except On/Standby indicator . To reactivate the appliance press once (briefly) this button. (see the Instructions for Use).

### FAST COOL button

Using Fast Cool function it is possible to increase the cooling capacity in the refrigerator compartment. The use of this function is recommended when placing a very high quantity of food in the refrigerator compartment. Press the Fast Cool button to activate Fast Cool function. When activated, the Fast Cool indicator turns on. The function is automatically disabled after 6 hours, or can be manually disabled by pressing Fast Cool button again.

### TEMPERATURE DISPLAY

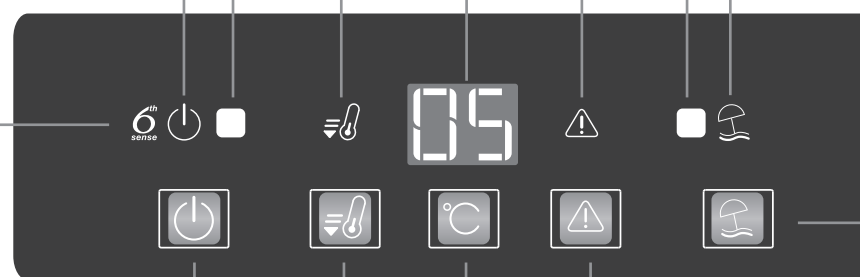

### TEMPERATURE button

Press the Temperature button to change the temperature: the value changes cyclically between 8°C ad 2°C. **Note:** Displayed set points correspond to the average temperature throughout the whole refrigerator.

### ALARM indicator (see the below Alarms Table)

### VACATION indicator

### VACATION button

This function can be activated to reduce the energy consumption of the appliance during a prolonged period of time. Before activating the feature, all perishable food should be removed from the refrigeration compartment and make sure that the door is closed properly, since the refrigerator will maintain a suitable temperature to prevent the formation of unpleasant odors (+12°C). **To activate/deactivate** press the Vacation mode button for 3 seconds. When the function is enabled, the related symbol will light up and the temperature of the refrigerator compartment will be set to a higher setpoint (the temperature display will show the new temperature setpoint of +12°C). Changing the temperature setpoint will automatically deactivate the function.

### STOP ALARM button

Press in case of alarm to mute the acoustic alarm.

## ALARMS TABLE

ALARM TYPE	Signal	Cause	Cure
Door open alarm	The acoustical alarm is activated and the Alarm Indicator  blinks.	The door has remained open for more than 2 minutes	Close the door or press the Stop Alarm to mute the acoustical alarm.
Malfunction	The letter "F" blinks on the display (°C)	Product malfunction.	Contact the After-sales Service