

Philips  
Button



CP0334

## For easy unlocking

Find matching products on the specifications tab

This button including spring is placed inside the telescopic tube to lock and unlock the nozzle and hose in an easy way.

### **Ease of using Philips spare parts**

- Easy renew your product with original Philips parts

**PHILIPS**

# Specifications

## Replaceable part

- Fits product types: FC9060/01, FC9060/02, FC9060/99, FC9061/01, FC9062/01, FC9062/02, FC9062/03, FC9064/01, FC9064/03, FC9066/01, FC9066/02, FC9066/04, FC9067/01, FC9067/02
- Fits product types:: FC9064/03

## Suitable for

- Performer: FC9150 - FC9179
- Aqua Action: FC8950 - FC8952
- PowerPro Active: FC8670/01..FC8673/01

# Highlights

## Easy renew of product parts

From time to time your product needs a facelift but it was never so easy like with Philips consumer replacement parts to renew your product. This all with guaranteed Philips quality.



Issue date 2016-06-24

Version: 1.0.1

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)