



DiscoverSounds® Hammer

 
 
Age 6+ months

621147

ADULT BATTERY INSTALLATION REQUIRED

CONTENTS

- 1 DiscoverSounds® Hammer

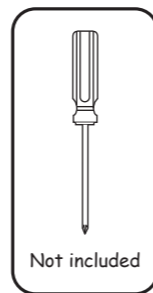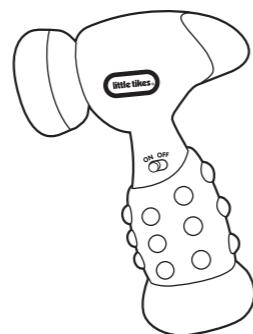

Illustrations are for reference only. Styles may vary from actual contents.

QUICK START

The batteries included in your Little Tikes® DiscoverSounds® Hammer are for in-store demonstration. It is recommended that, prior to playing, fresh alkaline batteries be installed for best performance. An adult must install batteries. Here's how:

1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from bottom of the Hammer handle. (Fig. 1)
2. Install two (2) AA alkaline batteries making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 2)
3. Replace the compartment cover and tighten the screw.
4. Move the ON/OFF switch to "ON" then tap or shake the hammer to activate sounds.

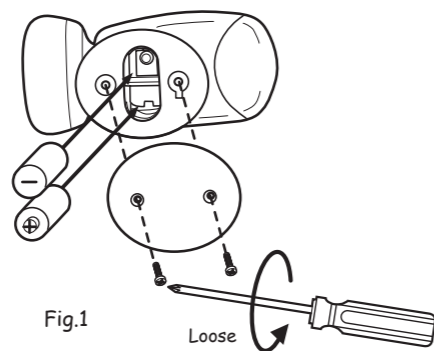 


Fig.1

Loose

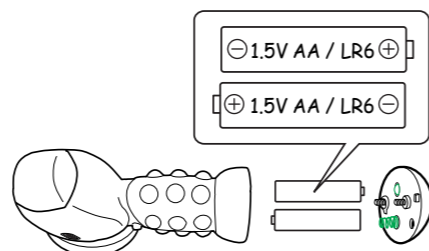 


Fig.2

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.



'Let's care for the environment!'
The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



0311-0-E/INT



© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® and DISCOVERSOUNDS® are trademarks of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes. Little Tikes Consumer Service 2180 Barlow Road Hudson, Ohio 44236 U.S.A. 1-800-321-0183 Printed in China

Little Tikes, MGA Entertainment UK Ltd. 50 Presley Way Crownhill Milton Keynes MK8 0ES UK + 0800 521 558

www.littletikes.com
www.littletikes.co.uk