

BATTERY SAFETY INFORMATION

- Charging of rechargeable batteries should only be done under adult supervision. Use only size "AA" (LR6) alkaline batteries (2 required).
- Never mix old batteries with new batteries, rechargeable (nickel-cadmium) or carbon zinc with alkaline batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the product before recharging.
- Charging of rechargeable batteries should only be done under adult supervision with batteries removed from product.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing unit into storage for a prolonged period of time.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers.

U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



'Let's care for the environment!'
The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.
Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



1214-1-E

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® and COZY COUPE® are trademarks of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.
Little Tikes Consumer Service
2180 Barlow Road Hudson, Ohio 44236 U.S.A.
1-800-321-0183
Printed in China



Visit our website at www.littletikes.com to register your product and to enter our sweepstakes.
(No purchase necessary)

www.littletikes.com



Cozy Coupe® 3 in 1 Mobile Entertainer



Ages 6-18 months

635946/992261

ADULT BATTERY INSTALLATION AND ASSEMBLY REQUIRED

CONTENTS

  - | | | |
|--|-----------------------------|-----------------------|
| A. 1 Vehicle Body of Little Tikes® Cozy Coupe® 3 in 1 Mobile Entertainer | E. 2 Rear Wheels | I. 2 Suspension Pegs |
| B. 1 Rolling Base | F. 1 Steering Wheel | J. 2 Suspension Boots |
| C. 1 Activity Bar with 3 Rings | G. 1 Removable Seat Cushion | |
| D. 2 Front Wheels | H. 1 Seat Backing | |

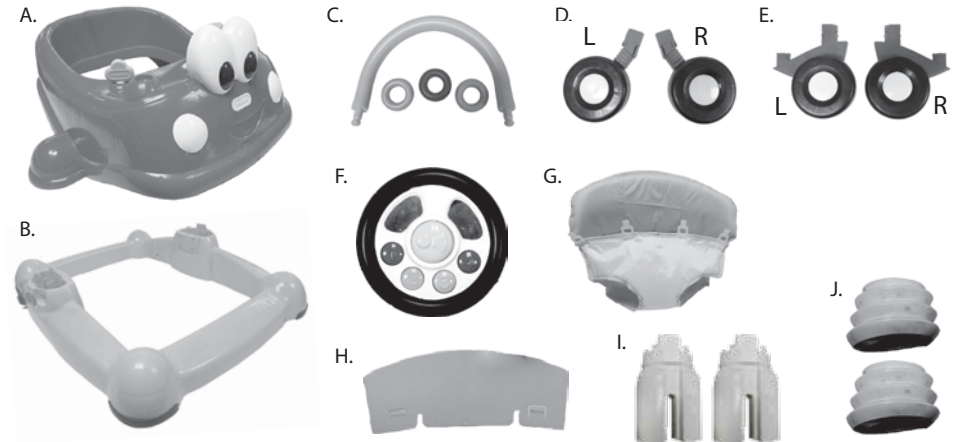

Illustrations are for reference only. Styles may vary from actual contents.

BEFORE YOU BEGIN

Adult Battery Installation:

1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the bottom of the Cozy Coupe® 3 in 1 Mobile Entertainer. (Fig. 1)
2. Install two (2) 1.5V AA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 2)
3. Replace the compartment cover and tighten the screw.

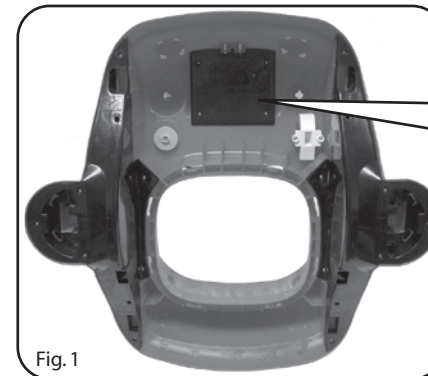 


Fig. 1

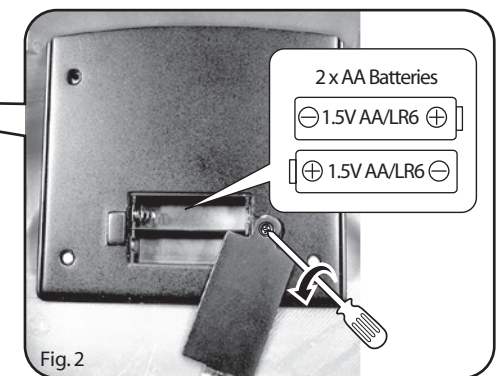 


Fig. 2

WARNINGS

- ⚠ WARNING: ADULT ASSEMBLY REQUIRED**
- Read all instructions before assembly and use of the Cozy Coupe® 3 in 1 Mobile Entertainer. Keep instructions for future use.
 - Failure to follow instructions and warnings could result in serious injury or death.
 - Discontinue use of this product once child can walk unassisted.
 - Do not use the Cozy Coupe® 3 in 1 Mobile Entertainer if it is damaged or broken.
 - Use only on flat, level surfaces free of objects that could cause the walker to tip over.
 - Do not use until baby / child can sit up by itself. This Cozy Coupe® 3 in 1 Mobile Entertainer is only intended for use with children who can sit upright unassisted at approximately 6 months of age.
 - Maximum child's weight: 25 lbs. Limit 1 child.
 - To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fireplaces, etc.
 - Never use near steps, pools, hot surfaces, or areas that may be hazardous to a child.
 - Do not expose the Cozy Coupe® 3 in 1 Mobile Entertainer to liquid of any kind as moisture may damage the unit. Wipe clean with a damp cloth only. See separate instructions below for washing Seat Cushion.
 - Clean friction pads regularly to maintain stopping performance. See IMPORTANT NOTE on Page 5 for further information.
 - Never use near staircase.
 - Strings can cause strangulation! DO NOT place items with a string around child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over product or attach strings to toys.

⚠ WARNING:
Never leave child unattended. Always keep child in view while in walker.

⚠ WARNING:
Parking brake use does not totally prevent walker movement. Always keep child in view while in walker, even when using the parking brake.

 
 
⚠ WARNING: STRANGULATION HAZARD
Never place walker near windows where cords from blinds or drapes may strangle child.

⚠ WARNING – STAIR HAZARD
Avoid serious injury or death.
Block stairs/steps securely before using walker even when using parking brake.

SEAT CUSHION WASHING AND DRYING INSTRUCTIONS

- Machine wash separately in cold water with machine set to the delicate cycle.
- Do not use chlorine bleach or hot iron.
- Drip dry ~ do not put in dryer.


STEERING WHEEL ASSEMBLY

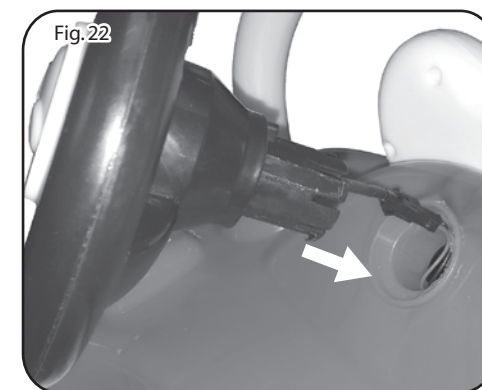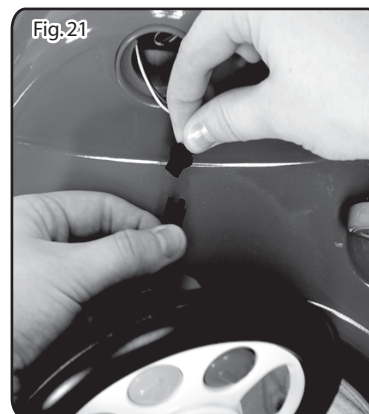

IMPORTANT NOTE: Once the Steering Wheel is snapped into place, it cannot be removed.

1. Connect the wires from the Steering Wheel to the wires in the Dashboard. (Fig. 21)
2. Tuck the wires into the opening.
3. Insert the Steering Wheel into the opening with the numbered buttons at the bottom and snap it into place. (Fig. 22)

 ACTIVITY BAR

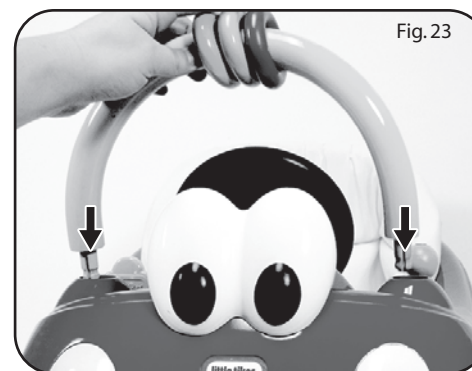


IMPORTANT NOTE: Once the Activity Bar is installed, it cannot be removed.

1. Slide the rings onto the Activity Bar.
2. With the bar curve facing away from the seat, align the pegs on the Activity Bar with the openings above the dashboard. (Fig. 23)
3. Press down firmly until the Activity Bar fits into place. (Fig. 24)

THE WALKER

1. There are 3 positions on the Walker for different heights indicated on the suspension pegs. Position 3 is tallest, 2 is medium, and 1 is shortest.
2. To adjust the height for Positions 1 and 2 start with the knobs beneath the Suspension Pegs in the vertical position (unlocked). Push down on the vehicle to the desired number, then push in and turn the knobs to the locked position (Fig. 18 & 19). The numbers on both sides of the Rolling Base must match before child use. Confirm that the position is locked before child use.
3. As the infant grows, move the Walker to the next position and lock it in place.

 IMPORTANT NOTE: Remove child before adjusting to the next position. Push in and turn the knobs beneath the Suspension Pegs to unlock the position. The knobs on the Rolling Base must be in the vertical position (unlocked) to use the Walker. Walker is intended for use on hard, level surfaces.

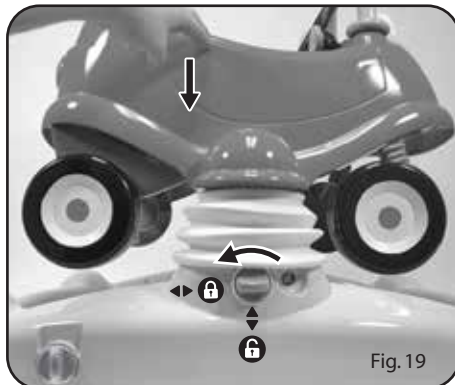

THE BOUNCER (STATIONARY ACTIVITY CENTER)

 
 
 


1. In Position 3, turn the knob on the Rolling Base to the "Lock" position to lock it in place as shown. (Fig. 20)



IMPORTANT NOTE: The vehicle will ONLY bounce in Position 3 (unlocked).

SEAT CUSHION

1. Snap the Seat Backing into the back of the Walker. (Fig. 3)
2. Put the Seat Cushion into the opening of the Walker as shown. (Fig. 4)
3. Slip the back of the cushion over the Seat Backing. (Fig. 5)

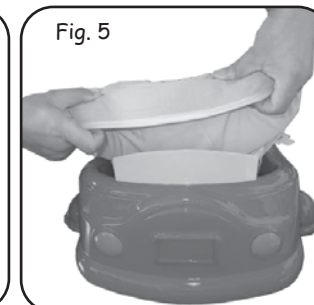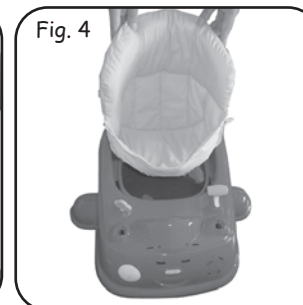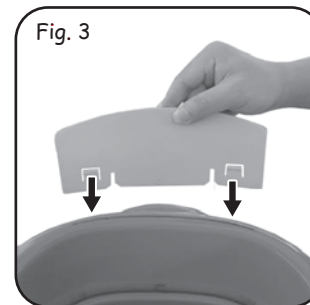


  4. Slide the clips indicated "1" through the corresponding openings on the seat area. (Fig. 6 & 7)
5. Pull the clips through the underside of the Walker and fit them over the tabs. (Fig. 9)
6. Repeat this process for clips indicated "2" (Fig. 6) and then clips indicated "3" (Fig. 6 & 8) until all clips are securely fastened.

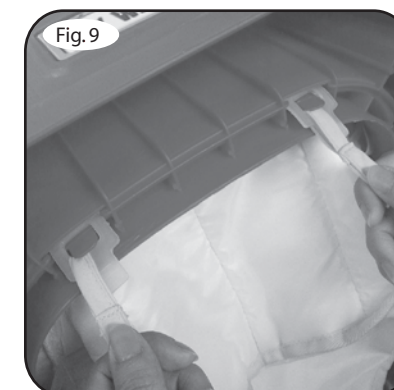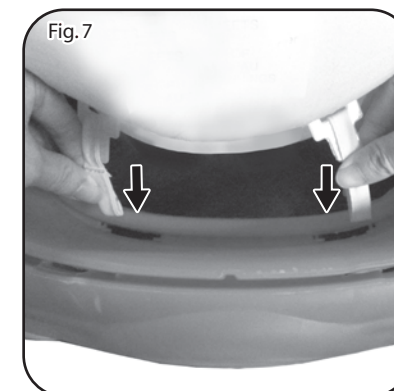


IMPORTANT NOTE: To remove the cushion for washing, follow these steps in reverse order, leaving the Seat Backing in place. See [SEAT CUSHION WASHING AND DRYING INSTRUCTIONS](#) on page 2.

 
REAR WHEEL ASSEMBLY

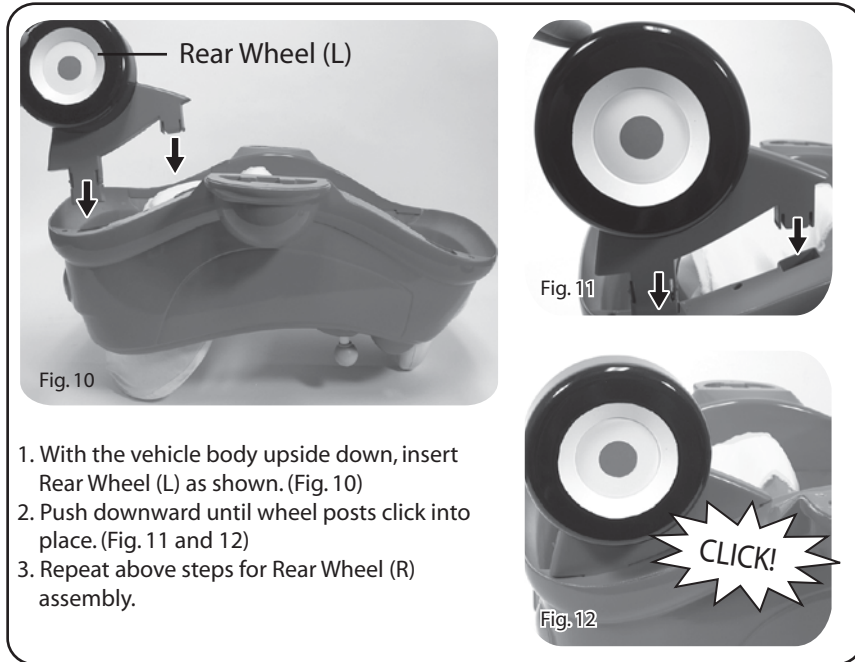

FRONT WHEEL ASSEMBLY

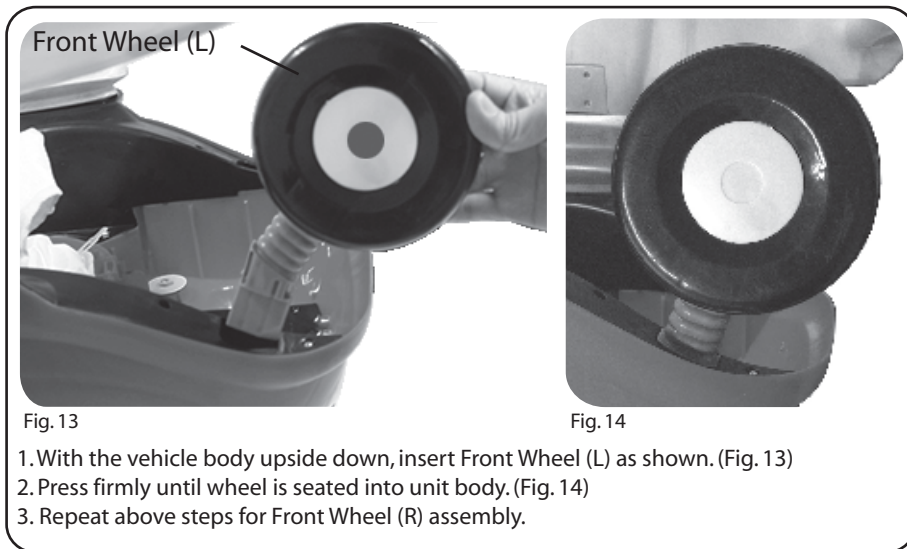 

ROLLING BASE

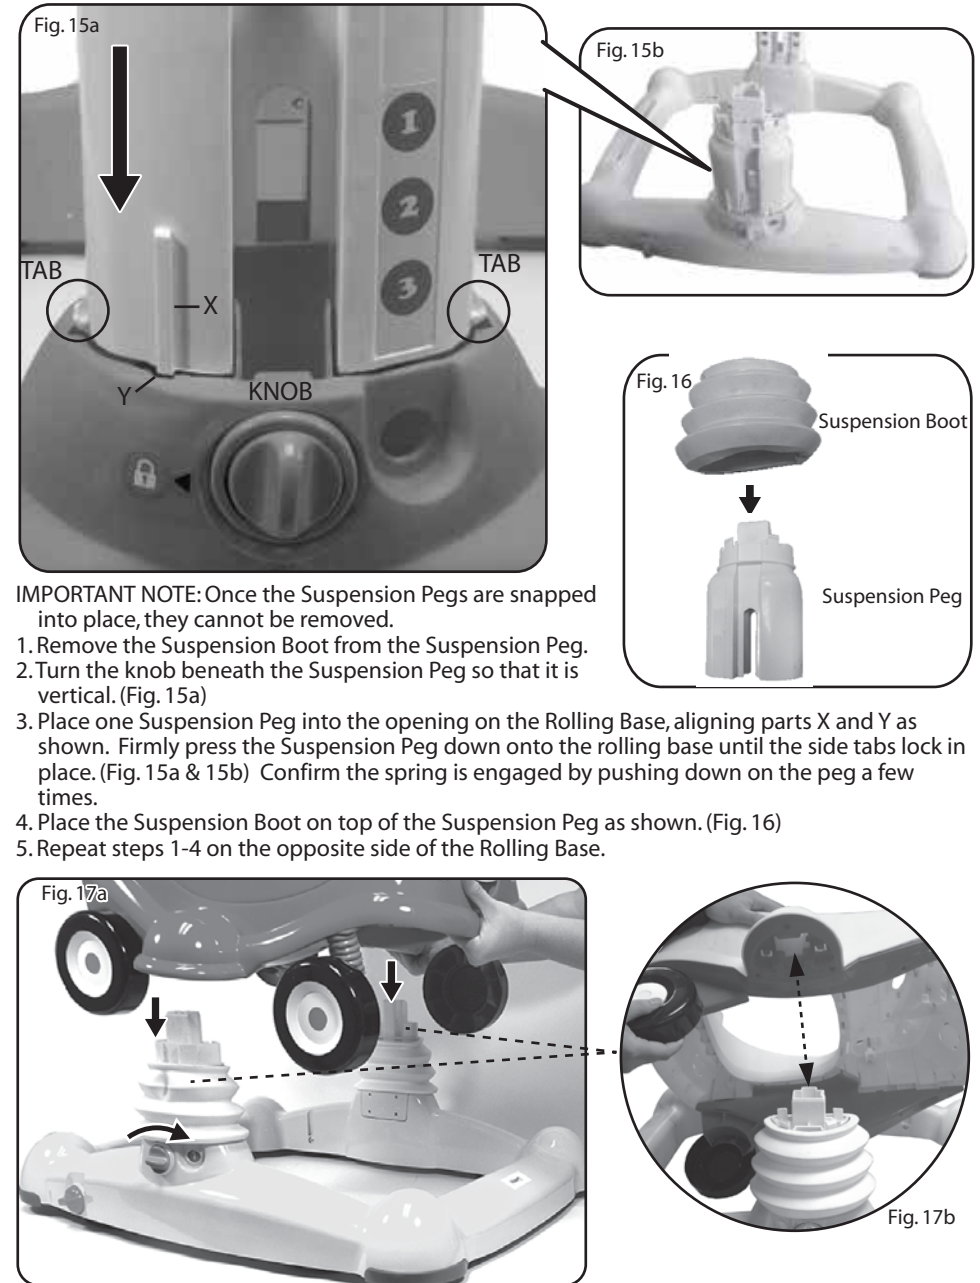 

6. Turn the knobs beneath the Suspension Pegs so that they are horizontal.
7. Press the vehicle body onto the Suspension Pegs with the rear wheels directly over the knob on the Rolling Base as shown. (Fig. 17a & 17b)