


**THANK YOU FOR BUYING A
HOTPOINT-ARISTON PRODUCT**

In order to receive a more complete assistance, please register your product on **www.hotpoint.eu/register**



Before using the appliance carefully read the Safety Instruction.


PRODUCT DESCRIPTION

FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.

CONTROL PANEL

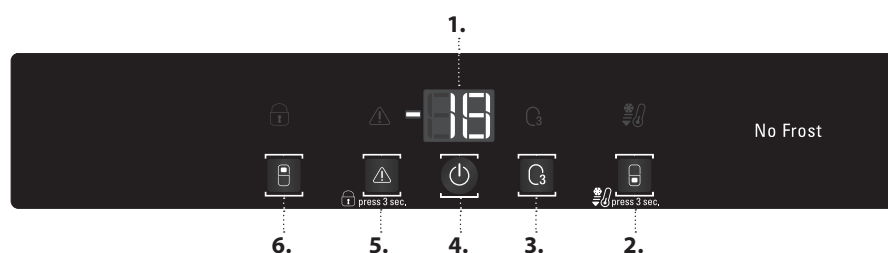


1. Temperature Display
2. Freezer temperature - Fast freeze
3. Active oxygen button
4. On/stand-by
5. Turning off the sound alarm - Child Lock
6. Refrigerator temperature




"ACTIVE OXYGEN" FUNCTION

Through the emission of a small quantity of ozone, this function enables a reduction in the proliferation of bacteria and microorganisms inside the refrigerator and limits bad odours.

To activate the Active Oxygen function, press the  button on the control panel.

When the function is activated, a coloured light will appear on the device, according to the following cyclical features:

- Green light: ozone emission phase
- Blue light: antibacterial and anti-odour action phase (without ozone emission)

To deactivate the function, simply press the  button on the control panel.

Note: when the Active Oxygen function is activated, a faint odour might be perceived inside the refrigerator (the same odour that sometimes accompanies a thunder storm due to the zone produced by the lightning): it is absolutely normal.

Note: Disabling the function optimizes energy consumption. Keep the bottle rack grid in the upper parts of the compartment to optimize the function.

FAN

The fan activates and deactivates automatically for a better temperature distribution and for humidity reduction in the fridge compartment.



ON/STAND-BY

In Stand-by mode, two dashes light up on the display and the light in the refrigerator compartment does not turn on.

Note: this does not disconnect the appliance from the power supply.

TEMPERATURE DISPLAY

The display may alternately show the refrigerator compartment temperature (between 2°C and 8°C) or the temperature of the freezer compartment (between -16°C and -24°C).




TURNING OFF THE SOUND ALARM

To turn off the sound alarm, briefly press the  button.




"CHILD LOCK"

The "Child Lock" can be activated/deactivated by keeping the  button pressed for 3 seconds, until a confirmation sound is heard (the icon lights up).

If you press any button while the "Child Lock" is active, you will hear a sound and the "Child Lock" icon will flash.




REFRIGERATOR COMPARTMENT TEMPERATURE

It is possible to set a different temperature with the  button.





FREEZER COMPARTMENT TEMPERATURE

It is possible to set a different temperature with the  button.



FAST FREEZE

Press the  button for 3 seconds 24 hours before putting large quantities of food to freeze in the freezer compartment. When the function is turned on the icon lights up .

The function turns off automatically after 48 hours, or manually by pressing the "Freezer" button again for 3 seconds.

Note: avoid a direct contact between the fresh food and the food that is already frozen. To optimise the freezing speed, drawers can be removed and the food can be placed directly on the bottom of the compartment.

* Available only on certain models


"FOOD CARE ZONE"*

"Food Care Zone" drawer is specifically designed to maintain a low temperature to preserve fresh food for longer time (for example , fresh pasta, sour cream, pesto/salsa, homemade preparation, pastry cream, pudding, cream cheese , cold cuts, desserts, meat and fish). The internal temperature of the drawer is between +3 °C and -2 °C.

 





For the correct functioning of the "Food Care Zone" drawer, it is necessary that:

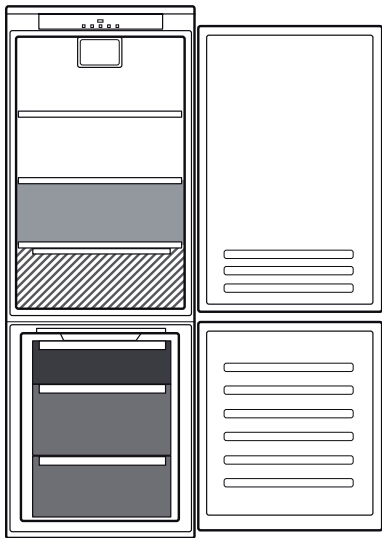- the appliance is turned on
- one of the following special functions is not selected: Standby, Cooling-Off, Vacation (in this case, remove the food contained in it).

HOW TO STORE FOOD AND BEVERAGE







Legend

	TEMPERATURE ZONE Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam
	COOL ZONE Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt
	COOLEST AREA Suggested for storage of cold cuts, desserts, meat and fish
	FRUIT & VEGETABLE DRAWER
	FREEZER DRAWERS
	FREEZING ZONE DRAWER (Max cool zone) Suggested to freeze fresh/cooked food

TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance could be in On/Standby mode. There may be an appliance power supply problem.	Activate the appliance with the On/Standby button Make sure: <ul style="list-style-type: none">• there is not a power outage• the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered)• the household electrical system protection devices are efficient• the power cable is not broken.
The inside light does not work.	The light may need replacing.	Models with lamp: disconnect the appliance from the power supply, check the lamp and, if necessary, replace it with a new one (see the section "Lamp or LED replacement").
	The appliance could be in On/Standby mode.	Models with LED lights: contact the authorised Service Centre. Activate the appliance with the On/Standby button
The temperature inside the compartments is not low enough.	There could be various causes (see "Cures").	Make sure: <ul style="list-style-type: none">• the doors close properly• the appliance is not installed near a heat source• the set temperature is adequate• the circulation of air through the vents at the bottom of the appliance is not obstructed.
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrost water drain hole (see the section "Appliance Maintenance and Cleaning")
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No cure is necessary.

* Available only on certain models

What to do if...	Possible reasons	Solutions
The red light  flashes and an acoustic signal sounds	Door open alarm It is activated when a door remains open for a long period of time.	Close the doors of the product to deactivate the acoustic signal. If the acoustic signal does not go off, it is a power failure alarm (see the section Power failure alarm).
The red light  flashes and an acoustic signal sounds and remains on even with the door closed.	Power failure alarm It is activated in case of a prolonged power outage causing an increase in the freezer compartment temperature. Note: A different product temperature cannot be set until the power failure alarm is deactivated.	Before deactivating the acoustic signal, it is advisable to pay attention to the temperature shown on the temperature display, corresponding to the highest temperature reached in the freezer compartment during the power failure. Press the "Stop Alarm" button briefly to deactivate the acoustic signal. After pressing the button, the temperature display shows the set temperatures again. If the freezer compartment has not yet reached the optimum food preservation temperature, the freezer compartment temperature alarm could be activated (see freezer compartment temperature alarm). Check the food before consuming it.
The red light  comes on (without flashing), an acoustic signal sounds and the freezer compartment temperature display flashes.	Freezer compartment temperature alarm The freezer compartment temperature alarm indicates that the compartment temperature is not optimum. This may happen: with first use, after defrosting and/or cleaning, if large amounts of food are placed inside the freezer or when the freezer door has not been closed properly.	Press the "Stop Alarm" button briefly to deactivate the acoustic signal. The red light goes off automatically when optimum temperature conditions are reached. If the freezer compartment temperature alarm stays on, contact the Authorised Service Centre.
The red light  comes on, an acoustic signal sounds and the letter "F" flashes on the display.	Malfunction alarm The alarm indicates a fault in a technical component.	Call the authorised Service Centre. Press the "Stop Alarm" button briefly to deactivate the acoustic signal.

* Available only on certain models



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website **docs.hotpoint.eu**
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.



Hotpoint

ARISTON

