

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not reach for a corded epilator that has fallen into water. Unplug immediately.
- The power plug and accessories connected to it are not for immersion or for use in the shower.
- Do not use an extension cord with this appliance.
- Always unplug this epilator from the electrical outlet immediately after use, except when epilator is (re)charging.
- Unplug and remove power supply cord from epilator before cleaning.
- Do not place or store appliance where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- The batteries used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance should never be used by, on, or near children or invalids. Keep out of reach of children.
- Use this epilator for its intended household use as described in this manual. Do not use attachments or accessories not recommended or supplied by Philips Electronics North America Corporation.
- Never operate this epilator if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. For assistance, call 1-800-243-7884.
- Keep the epilator, cord, charging plug and any attachments away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the adapter.
- Do not use, charge or plug in epilator outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always check rotating discs, foil and attachments before using the epilator. Do not use the epilator if rotating discs, foil and attachments are damaged or show signs of wear, as injury may occur.
- Always attach plug to appliance first, then to outlet. To disconnect, turn switch off, then remove plug from outlet.
- To prevent possible damage to the cord, do not wrap cord around the epilator.
- Never put epilator in direct sunlight or store at a temperature above 140°F (60°C). Never clean the appliance with water above 104°F (40°C).
- An appliance should never be left unattended while plugged in.
- This epilator is for use on human hair only. Do not use this epilator for any other purpose.
- Always store your epilator and power plug in a moisture-free area. Make sure the cord is disconnected from the epilator.
- When using the epilating head, keep it away from the hair on your head, eyelashes, eyebrows, clothing, brushes, wires, threads and cords to prevent accidents, injury or damage.
- Never point the built-in light directly at your or somebody else's eyes.
- Never insert any type of material into the socket of the appliance plug.
- Only use the power plug and other accessories supplied with the epilator.

SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

Introduction

Congratulations on your purchase and welcome to Philips!


To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome

IMPORTANT


The following information and precautions are important when epilating:

- CAUTION:** Methods of removing hair by the root can cause in-grown hairs and minor skin injuries. Please consult your doctor if you have any questions about the use of an epilator.
- Do not use the epilator if you suffer from varicose veins, rashes, spots or blemishes, or when the skin is irritated or if you have in-grown hairs or a tendency to produce in-grown hairs. Consult your doctor first.
- Any minor injury resulting from hair removal may allow bacteria to penetrate the injury site potentially causing small scars or a change in pigmentation of the skin. The risk of infection may be minimized by thoroughly cleaning the rotating discs before and/or after each use. (See Cleaning section).**
- The epilator should only be used after prior consultation with your doctor if you have or experience:
 - Open wounds
 - Eczema, psoriasis (scaly eczema), inflamed skin reactions such as folliculitis, skin rashes or the tendency to allergy or allergic skin reactions
 - Immune deficiency or disorders
 - Couperose, rosacea, or varicose veins
 - Pregnancy
 - Reduced skin immunity as a result of diabetes, pregnancy, Raynaud's disease, etc.
 - Hemophilia
 - If you have moles, raised skin bumps, etc.
- If you have been or begin taking hormone medication, or recently been pregnant, a change in your hormone levels may influence the thickness, color or amount of hair growth. This is caused by the hormonal changes, not by this method of hair removal.
- Do not use bath or shower oils when epilating on wet skin as this may cause skin irritation.
- Clean the epilating head after each use following **CLEANING** instructions.

Features

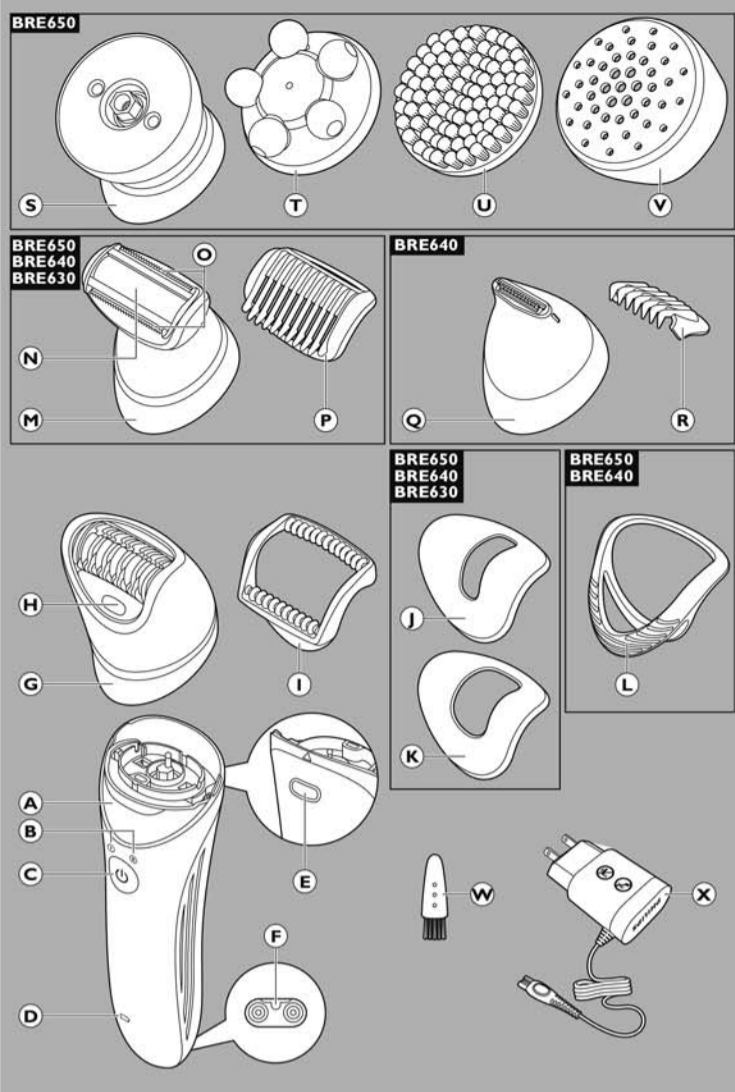

- A Handle
 - B Speed Setting Lights - I and II
 - C On/Off Button
 - D Battery Indicator
 - E Release Button
 - F Socket for Small Plug
 - G Epilating Head
 - H Built-in Light
 - I Massage Cap
 - J Facial Cap
 - K Delicate Area Cap
 - L Efficiency Cap (BRE650/BRE640)
 - M Shaving Head
 - N Foil
 - O Trimmers
 - P Shaving Head Comb
 - Q Trimmer Head (BRE640)
 - R Trimmer Comb (BRE640)
 - S Coupling Unit
 - T Body Massage Head (BRE650)
 - U Body Exfoliation Brush (BRE650)
 - V Body Exfoliation Brush Protective Cap (BRE650)
 - W Cleaning Brush
 - X Adapter
- Pouch (Not Shown)
Full Two-Year Warranty
45-Day Money-Back Guarantee

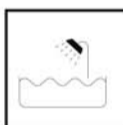

This symbol indicates that the epilator can be used in the bath or shower.

To Charge/Recharge


- Fully charge epilator before using for the first time or after non-use for a long period of time.
- Charging, recharging, or using epilator at temperatures below 50°F (10°C) or higher than 95°F (35°C) adversely affects lifespan of the battery.

- Be certain epilator is OFF.
- Insert the appliance plug directly into the epilator and plug the charging plug into any 120VAC outlet. Use only the cord provided.
- The battery indicator on the appliance will blink white to indicate the epilator is charging (Fig. 1).
- It will take approximately 1.5 hours to fully charge the epilator for a cordless operating time of up to 40 minutes.
- After the epilator is fully charged, the battery indicator will light up white continuously (Fig. 2).
After 30 minutes the battery indicator goes out.
- If the batteries run low while using, the battery indicator will blink orange.
- Disconnect the cord and unplug from electrical outlet.

NOTE: If the epilator is fully charged and connected to the electrical outlet, the battery indicator blinks a few times when you press the on/off button. This reminds you to disconnect the epilator from the electrical outlet before using.

Quick Charge

- When the battery is completely empty, the battery indicator will blink white quickly when charging.
- After approximately 15 minutes, the battery indicator will begin to blink white slowly.
- At this time, the battery contains enough energy for 10 minutes of epilating.

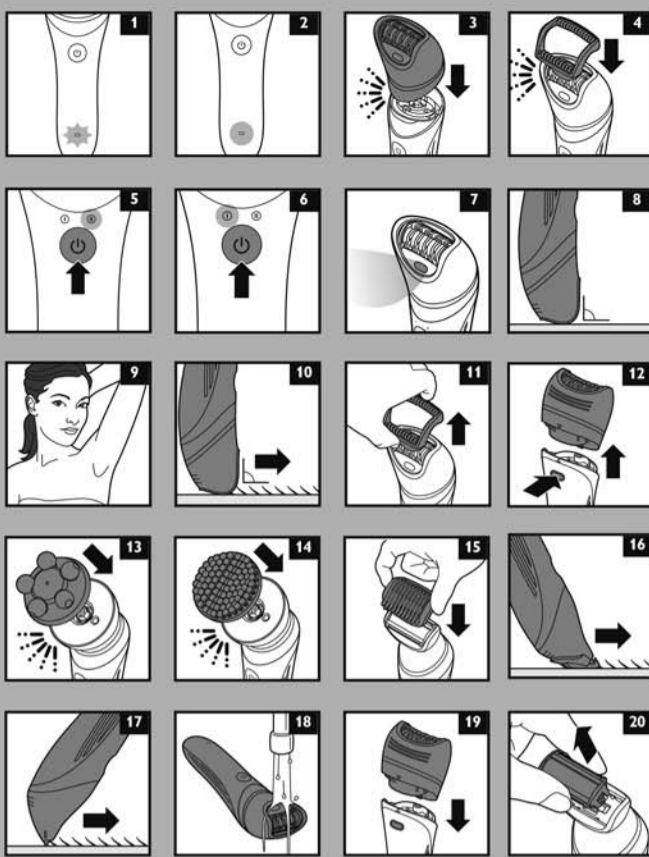

How To Use Your Epilator

- Use this epilator for its intended household use as described in this manual.
- For hygienic reasons, the epilator and attachments should only be used by one person.
- Epilation is easier and more comfortable when the hair has the optimum length of 1/8 - 5/32in/3-4mm. If the hairs are longer, pre-trim them first or shave and epilate after 1 to 2 weeks.
- It is normal to experience slight skin irritation (red skin or red dots) after epilating. In this case, it is best to epilate in the evening as most skin irritation disappears overnight. This effect will gradually lessen with each use.
- After each use, you may want to apply a non-alcohol based mild cream or body lotion which will help reduce the possibility of skin irritation. Be certain it does not contain alcohol as it may cause discomfort.
- Make sure epilator is fully charged before using. This epilator will not operate while cord is connected to an electrical outlet.

Epilating

- Only use the epilator attachment to epilate areas below the neck such as your legs, underarms and bikini line.
- For gentle, less painful epilation, epilate in the shower or bath on wet skin with or without shower gel or soap.
- For dry epilating, make sure your skin is clean, free from grease and creams. Do not apply any cream before using. Hairs are easier to remove after a bath or shower, but your skin should be completely dry before using your epilator.

- Before first use, clean the epilating head. See 'Cleaning' section.
- Press the epilating head onto the handle (click) (Fig. 3).
- If desired put an attachment on the epilating head (click) (Fig. 4).

NOTE: The attachment will only fit onto the appliance in one direction.

- Press the on/off button once to switch on the epilator (Fig. 5).
 - The epilator starts running at Speed II which is the most efficient speed for epilating. The Speed II light lights up.
 - If you want to use Speed I, press the on/off button a second time. Speed I light lights up (Fig. 6).
 - Select Speed I for areas with little hair growth, for hard-to-reach places and for areas with bones close to the skin's surface, such as knees and ankles.
 - When you press the on/off button a third time, the epilator switches off.

Tip: For greater visibility of fine hairs, the built-in light goes on automatically when epilating (Fig. 7). To turn off, press the on/off button for 3 seconds after turning on the appliance.

- Hold the epilator perpendicular to your leg with the on/off button pointing in the direction you are going to move the appliance (Fig. 8).
- Gently press and move the epilator slowly over the skin against the direction of hair growth. If you press too lightly or too hard, the epilator will not be able to grasp and remove the hairs. Experiment until you find the right settings and right amount of pressure for your type of skin and hair.

Tip: When epilating sensitive areas, stretch the skin with your free hand. For epilating underarms, put your hand on the back of your head to stretch the skin (Fig. 9).

- Press the on/off button to turn the epilator OFF.

- Pull the attachment off the epilating head and clean epilator and attachment. (See section 'Cleaning').

IMPORTANT:

- After using the epilator, some redness or irritation may occur. This is normal and should disappear quickly.
- Clean the appliance and attachments after each use following **CLEANING** instructions.

Overheat protection

Note: To avoid overheating of the epilator do not press the appliance too hard onto your skin. The epilator works best when you move it over your skin without exerting any pressure.

- 1 If the overheat protection is activated, the appliance turns off automatically.

The charging light and speed lights blink red.

- 2 Let the appliance cool down.
The lights stop blinking after 30 seconds.

- 3 When the appliance has cooled down, you can turn it on again. If the lights start to blink red again, the appliance has not yet cooled down completely.

Using Epilator Attachments

- When using epilator attachments, always be sure you place the heads flat onto the skin (Fig. 10).
- Simply snap each attachment onto the epilator head (click) (Fig. 4).
- To remove an attachment, grasp its front and back and pull it up off the epilator head (Fig. 11).

Massage Cap

- Attach the massage cap onto the epilating head to massage the skin and minimize the pulling sensation while epilating.

Delicate Area Cap

- Attach the delicate area cap onto the epilating head for more comfortable epilating of delicate areas such as underarms and bikini area.

Facial Cap

- Attach the facial cap onto the epilating head for precise epilating of facial hair such as upper lip.

Do not use the appliance to epilate eyelashes, eyebrows or scalp hair.

Efficiency Cap (BRE650 and BRE640 only)

- Attach the efficiency cap onto the epilating head to keep skin tight and help reduce pain while epilating.

Body Massage Head (BRE650 only)

- Remove the epilator head by pressing the release button on the back of the appliance (Fig. 12).
- Attach the body massage head to the coupling unit and then attach to the appliance handle (Fig. 13). The body massage head rotates firmly to relax muscles.

Body Exfoliation Brush (BRE650 only)

- Remove the epilator head by pressing the release button on the back of the appliance (Fig. 12).
- Attach the body exfoliation brush to the coupling unit and then attach to the appliance handle (Fig. 14). The body exfoliation brush helps remove dead skin cells.

Do not use the body exfoliation brush on your face.

Shaving

- Use the shaving head to shave your legs, underarms and bikini line.
- Attach the shaving head comb onto the shaving head to shave hairs to a length of 1/8 in./3mm (Fig. 15). When removing comb, always grasp the comb on the sides.
- To shave legs and bikini line, always move the appliance gently over the skin against the direction of hair growth.
- To shave underarms, place one arm behind your head and move the appliance up and down and from left to right.

Trimming (BRE640 only)

- Use the trimmer head to trim hard-to-reach areas in the bikini zone.
- Attach the trimmer head comb onto the bikini trimmer head to trim hairs in the bikini zone to a length of 1/8 in./3mm (Fig. 16).
- To create precise lines, place the trimmer head perpendicular onto the skin (Fig. 17).

Caution: Do not use the bikini trimmer head without the comb on intimate areas other than the bikini line as this could cause injury.

Cleaning

IMPORTANT

- Always switch the epilator OFF and remove plug from electrical outlet and epilator before cleaning.
- Do not use compressed air, scouring pads, abrasive cleaners or aggressive liquids such as gasoline or acetone to clean the Epilator.

Cleaning the Epilator Head and Epilator Attachments

- It is essential for hygienic reasons and optimum performance that the epilating head, attachments and rotating discs are cleaned after each use.
- It is strongly recommended to always rinse the epilator head with cold water to help prevent bacterial growth.
- Never clean, remove, or replace epilating head or attachments while motor is ON. The rotating discs are not removable from the epilating head.
- Do not apply pressure or touch rotating discs with hard objects as this may dent or damage the discs. If damage occurs, discontinue use immediately.

- 1 Be certain epilator is OFF.
- 2 Pull any attachment off the epilating head (Fig. 11).

- 3 Remove loose hairs from the epilating discs and attachment with the brush.

Never try to detach the epilating discs from the appliance.

- 4 Rinse attachments thoroughly under warm tap water while turning.
- 5 Turn the appliance ON and rinse the epilator head under cold tap water for 15 seconds (Fig. 18).
- 6 Shake off excess water and dry epilating head and attachments completely with a soft towel or allow to air dry thoroughly.

- 7 Place the epilating head back onto the appliance and push it against the direction of the arrows until it snaps into place (Fig. 19).

The epilating head only fits onto the appliance in one direction.

Cleaning the Shaving Head

- Always clean your shaver and attachments after each use.
- Always switch shaver OFF, unplug and remove power cord before cleaning.
- Never clean, remove or replace shaving head while motor is on.
- Do not apply pressure to shaving head. Do not touch foil with hard objects as this may dent or damage foil or cutters.
- Do not use shaver if foil is damaged or broken. Facial injury may occur.
- Always put the travel cap on the shaving head to prevent damage to the foil and cutters.
- Do not use compressed air, abrasives, scourers or aggressive liquids such as gasoline or acetone to clean the shaver.

- 1 Be certain epilator is OFF.
- 2 Press the release button and remove the shaving head from the handle.
- 3 Pull the cutting unit out of the shaving head (Fig. 20).
- 4 Clean the cutting unit, foil, cutters and inside the shaving head with the cleaning brush. Also, brush away any hairs that have collected under the trimmers.
To avoid damage, never use a brush to clean the shaving foil.
- 5 You can also rinse the cutting unit, inside the shaving head and accessories under warm tap water.
- 6 Allow all parts to air dry thoroughly.
- 7 Put the cutting unit back into the shaving head (click).
- 8 For best shaving performance, it is suggested to lightly oil shaving head every six weeks by spreading a drop of mineral oil over the foil and cutters.

Replacing the Shaving Head Cutting Unit

- If the foil and cutters are worn or damaged, do not continue to use the shaving head.
- A worn or damaged cutting unit should only be replaced with an original Philips cutting unit which is available at www.philips.com/store or call 1-800-243-7884 for assistance.
- The cutting unit is a precision part. Handle with care.

- 1 Always switch epilator OFF, remove power cord from the outlet and epilator before replacing the cutting unit.
- 2 Press the release button and pull the shaving head off the handle (Fig. 12).
- 3 Pull the cutting unit out of the shaving head (Fig. 20).
- 4 Place a new cutting unit into the shaving head (click).
- 5 Attach the shaving head back onto the handle (Fig. 3).

After replacing the cutting unit, check to make sure the cutting unit and shaving head are firmly attached before using the epilator.

This epilator has no other user-serviceable parts. For assistance, call 1-800-243-7884.

Storage

- Be sure epilator is turned OFF. Remove cord from outlet and epilator before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around epilator when storing.
- Store cord in a safe location where it will not be cut or damaged.
- Do not place or store epilator where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
- Put the body exfoliation brush protective cap on the body exfoliation brush after use.
- Store the epilator and attachments in the pouch provided.

Accessories

- For maximum epilator performance replace the shaving head cutting unit once a year.
- If you use the body exfoliation brush 2-3 times a week, replace every 3 months.
- Replacement Shaving Head Cutting Unit
Model BRL384 – Philips Replacement Shaving Head Cutting Unit
- Replacement Body Exfoliation Brush
Model BRE394 – Philips Replacement Body Exfoliation Brush
- Replacement Parts may be purchased on our website www.philips.com/store

Assistance

For assistance, visit our website:

www.philips.com/support or call toll free 1-800-243-7884

Online information is available 24 hours a day, 7 days a week.

Disposal

- This Philips epilator contains a lithium-ion battery which must be disposed of properly (Fig. 21).
- Contact your local town or city officials for battery disposal information or call 1-800-8-BATTERY or www.rbr.com for battery drop-off locations.
- For assistance, visit our website, www.philips.com/support or call: 1-800-243-7884.

PHILIPS

Satinelle



BRE650
BRE640
BRE630

Rechargeable
Cordless Epilator

Always here to help you

Register your product and get support at www.philips.com/welcome



4222 003 0120 2

Full Two-Year Warranty

Philips Electronics North America Corporation warrants each new Philips product, Models BRE650/BRE640/BRE630 (except shaving head and body exfoliation brush) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge. **IMPORTANT:** This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage. **NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.** In order to obtain warranty service, simply go to www.philips.com or call 1-800-243-7884 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty. **NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you. *Read enclosed instructions carefully.

Manufactured by:
Philips Consumer Lifestyle
A division of Philips Electronics North America Corporation
P.O. Box 10313, Stamford, CT 06904

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

PHILIPS is a registered trademark of Koninklijke Philips Electronics N.V.

© 2016 Philips Electronics North America Corporation. All Rights Reserved.

PHILIPS

45-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your Philips Epilator send the product back and we'll refund you the full purchase price. **The Epilator must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail.** **The Epilator must be postmarked no later than 45 days after the date of purchase. Philips reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.**

To obtain money-back guarantee return authorization form, call 1-800-243-7884 for assistance.

Delivery of refund check will occur 6-8 weeks AFTER receipt of returned product.