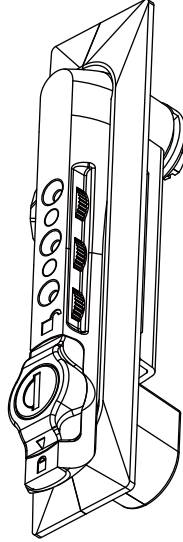


**Combination Door Lock**


for Rack Enclosures

**CRA40001****SAVE THESE INSTRUCTIONS**

Please read this manual and follow the instructions for installation and use.

Copyright © 2016 CyberPower Systems, Inc. All rights reserved.

K01-0000551-00

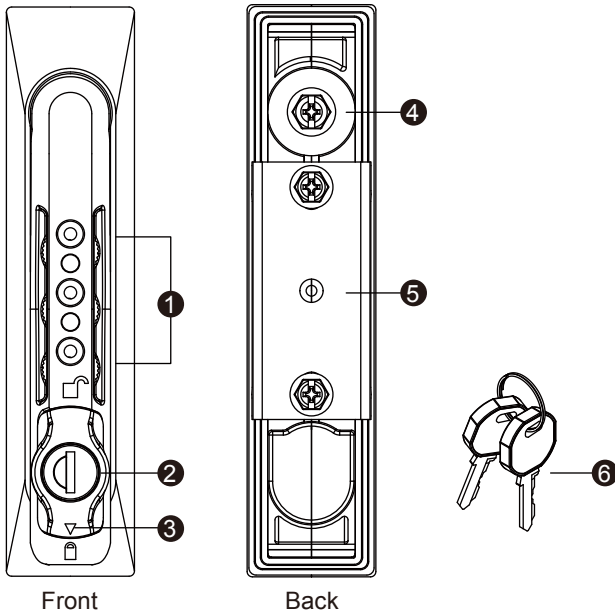
**Part Identification**

No.	Part
1	Combination Lock Dial
2	Wing Knob
3	Locked/Unlocked Position Arrow
4	Cam Washer
5	Screw Plate
6	Keys


**Installation**

1. Remove the existing door lock and handle assembly as shown below.


**NOTE:** Keep the handle cam on hand to use in the following step to install the combination lock.

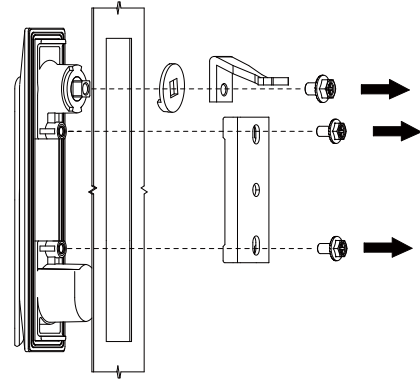


2. Unscrew the cam washer and screw plate from the combination lock.

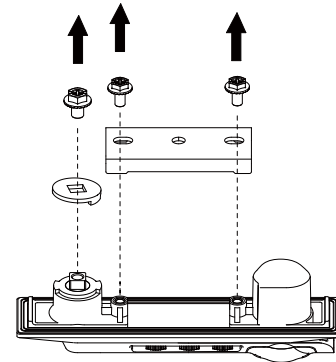

3. Slide the combination lock through the door opening, install the handle cam, and fasten the parts as shown below.

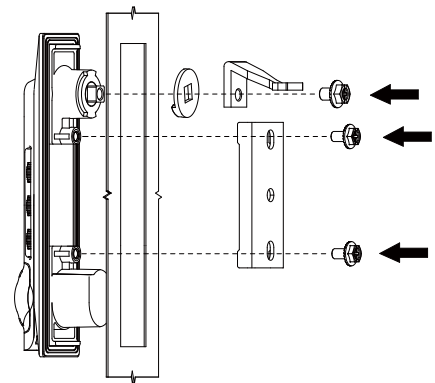**Reversing the Handle Direction**

The direction in which the handle lifts to open can be reversed by rotating the cam washer 90 degrees counterclockwise as shown below. This is especially useful if the door orientation has been reversed.

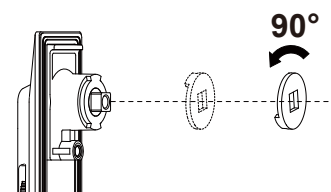


# Setting and Changing the Lock Combination

**NOTE:** To change the combination, the lock must be engaged and the existing combination must be known. The factory default combination is 0-0-0.

- a. Dial the known combination.
- b. Turn the wing knob 180 degrees counterclockwise so that the position arrow points UP (unlocked position).
- c. Turn it an additional 15 degrees counterclockwise.
- d. Dial the new desired combination.
- e. Turn the wing knob 15 degrees clockwise to the unlocked position. The new combination is now set.


To lock, turn the wing knob 180 degrees clockwise so that the position arrow points DOWN (locked position); then scramble the combination dial.

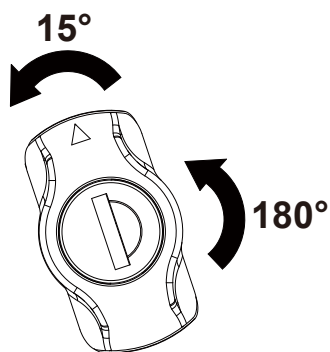

## Locking and Unlocking the Door

### Using the Combination Dial

1. Dial the combination.
2. Turn the wing knob 180 degrees counterclockwise (unlocked position) so that the position arrow points UP. Lift the handle and turn to open the door. To lock, return the handle to the closed position and turn the wing knob 180 degrees clockwise so that the position arrow points DOWN (locked position).
3. Scramble the combination dial.

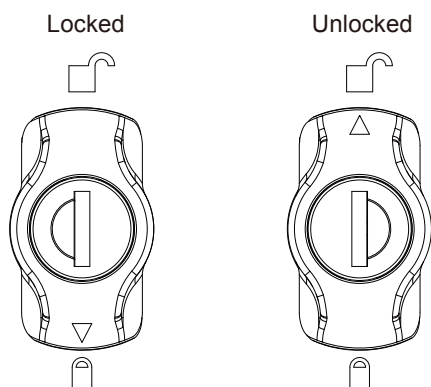

### Using the Key

The lock can be opened or closed using the included keys. Using the key overrides the combination lock feature.

**CyberPower®**

**CyberPower Systems, Inc.**

[www.cyberpower.com](http://www.cyberpower.com)

#### For USA and Canada:

4241 12th Ave East, Suite 400  
Shakopee, MN 55379  
Toll-free: (877) 297-6937

#### For all other regions:

Please visit our website for local contact information.