



# GAMING KEYBOARD Interceptor DS4100



English 1

English 2

### System Requirements

- PC with USB port
- Windows® 8/ Windows® 7/ Windows Vista®/ Windows® XP
- Drivers and software are not required

### Function [Fn] Hot Keys

- The typewriter keys [W], [A], [S], [D] may correspond with the direction keys [↑] [↓] [←] [→]. Using the [Fn] key and the [W] key to exchange the functions of typewriter keys [W], [A], [S], [D] for the direction keys [↑] [↓] [←] [→].

- Using the [Fn] key and the [Windows Logo] key + to disable the function of Windows Key.

The G LED , located on the upper right side of the keyboard, illuminates when the Windows function key is disabled.

### Backlight Adjustments

Functions	Actions	Descriptions
Change the backlight color		Switch between 7 colors by clicking this key
Increasing the brightness level of backlight LEDs	+	4 brightness levels are available
Decreasing the brightness level of backlight LEDs	+	4 brightness levels are available
Activate the breathing LED flashing mode	+	Switching between 7 different backlight colors automatically
Increasing the flashing frequency of breathing mode	+	Increasing the flashing frequency of breathing mode
Decreasing the flashing frequency of breathing mode	+	Decreasing the flashing frequency of breathing mode



Micro-Star INT'L CO., LTD.

No.69, Lide St., Zhonghe Dist.,  
New Taipei City 235, Taiwan(R.O.C.)  
Tel:886-2-3234-5599  
Fax:886-2-3234-5488  
www.msi.com

English 3

繁體中文 1

繁體中文 2

繁體中文 3

### Multimedia Hot keys

Actions	Descriptions	Actions	Descriptions
+	Open Media Player	+	Play or pause playback
+	Decrease the volume	+	Go to next track
+	Increase the volume	+	Open mail
+	Mute the Volume	+	Navigate home
+	Stop playback	+	Keyboard disabled
+	Go to previous track	+	Open calculator

### 系統需求

- 附有 USB 埠的個人電腦
- Windows® 8/ Windows® 7/ Windows Vista®/ Windows® XP
- 不需安裝驅動程式或軟體

### 功能鍵(Fn)組合熱鍵

- 打字鍵 [W], [A], [S], [D] 和方向鍵 [↑] [↓] [←] [→] 為可互相對應之功能鍵。將打字鍵 [W], [A], [S], [D] 切換為方向鍵功能時，請按 Fn + W 按鍵。

- 使用 [Fn] 與 Windows 鍵 + 可鎖定 Windows 鍵功能。當 Windows 鍵功能設定為鎖定時，位於鍵盤右上角的 G LED 指示燈會亮起。

### 背光調整

功能	按鍵	解說
改變背光顏色		按此鍵可在七種顏色中切換
按鍵背光亮度增加	+	四段調整亮度
按鍵背光亮度減少	+	四段調整亮度
啟動背光呼吸燈模式	+	自動在七種顏色間切換呼吸燈
加快呼吸燈頻率	+	加快呼吸燈頻率
減少呼吸燈頻率	+	減少呼吸燈頻率

### 多媒體熱鍵

按鍵	功能說明	按鍵	功能說明
+	開啟預設媒體播放器	+	播放/暫停
+	音量減小	+	下一首
+	音量加大	+	打開郵件
+	靜音	+	打開瀏覽器首頁
+	停止撥放	+	鎖住所有鍵盤功能
+	上一首	+	打開計算機