


Register your product and get support at
www.philips.com/welcome

Important information leaflet
重要信息手册



PHILIPS

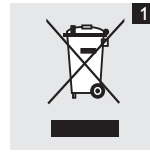

www.philips.com

 100% recycled paper
100% papier recyclé
100% 循环再造纸

4239.000.8054.1

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.
- Beware of hot steam that comes out of the steamer. Steam can cause burns.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or the appliance itself shows visible damage, or if the appliance has been dropped or leaks.
- Always return the appliance to a service centre authorised by Philips for examination or repair. Do not attempt to repair the appliance yourself, otherwise the guarantee becomes invalid.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Never leave the appliance unattended when it is connected to the mains.
- This appliance can be used by children aged 8 or above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instructions in safe use of the appliance or supervision to establish safe use and if they have been made aware of the hazards involved.
- Do not allow children to play with the appliance.
- Keep the appliance and its mains cord out of the reach of children younger than 8 when the appliance is switched on or is cooling down.
- Children aged 8 or above are only allowed to clean the appliance under supervision.
- The nozzle of the steamer head can become extremely hot and may cause burns if touched.
- Always unplug the appliance before you clean it, attach or detach the brush attachment and before you refill the water tank.

Caution

- Only connect the appliance to an earthed wall socket.
- Do not place the appliance on a surface with the steamer head touching the surface while the appliance is hot/connected to the mains.
- Check the mains cord regularly for possible damage.
- Do not let the mains cord come into contact with hot steam when it the appliance is in operation.
- Do not use the appliance when the water tank is empty.
- When you leave the appliance even for a short while, switch off and unplug the appliance.
- When you have finished steaming, always switch off and unplug the appliance and let it cool down for 60 minutes before you clean it, attach or detach the brush attachment, empty the water tank or store it.
- This appliance is intended for household use only.
- Never drag or pull the appliance across the floor.
- Steam may damage or cause discolouration of certain wall or door finishes.

Type of water to be used

- Your appliance has been designed to be used with tap water. In case you live in an area with very hard water, fast scale build-up may occur. Therefore, it is recommended to use distilled water to prolong the lifetime of your appliance.
- Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank, as your appliance is not designed to work with these chemicals.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 1).

Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country. You find its phone number in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

简体中文**简介**

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。

注意事项

使用本产品之前，请仔细阅读本使用说明书，并妥善保管以备日后参考。

危险

- 不要将本产品浸入水或其它液体中，也不要在水龙头下冲洗。
- 小心挂烫机产生的热蒸汽。蒸汽可能会导致烫伤。

警告

- 在将产品连接电源之前，请先检查产品所标电压与当地的供电电压是否相符。
- 如果插头、电源线或产品本身已经明显损坏，或产品曾坠落或出现渗漏，请勿再使用产品。
- 产品只能送到由飞利浦授权的维修中心检修。不要自己修理产品，否则产品维修保证书将会无效。
- 如果电源软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员来更换。
- 在产品接通电源期间，使用者不得离开。
- 本产品不适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，除非有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们意识到相关的危害。
- 切勿让儿童玩耍本产品。
- 当产品已通电或者正在冷却时，应将产品及其电源线置于 8 岁以下儿童触不到的地方。
- 8 岁或以上年龄的儿童只有在监督下才可清洁本产品。
- 蒸汽挂烫机蒸汽喷头的喷嘴会变得非常烫，如触摸喷嘴，则会导致烫伤。
- 在清洁产品、安装或拆卸毛刷附件或向水箱中注水前，请务必先将电源插头拔掉。

注意

- 产品只能使用带接地线的插座。
- 如果产品很烫/已连接到电源，在放置产品时切勿让蒸汽喷头与任何表面接触。
- 定期检查电源线是否损坏。
- 产品工作期间，切勿让电源线与高温蒸汽接触。
- 水箱为空时，请勿使用产品。
- 当您短时间离开产品时，请关闭产品电源并拔下电源插头。
- 熨烫结束后，请务必关闭电源并拔下电源插头，并让其冷却 60 分钟之后再清洁产品、安装或拆卸毛刷附件、倒空水箱或进行存放。
- 本产品仅限于家用。
- 切勿在地板上拖拉本产品。
- 蒸汽可能损坏或导致某些墙体或门褪色。

应使用的水质类型

- 根据设计，您的产品适合使用自来水。万一您所居住的区域水质非常硬，水垢积聚可能会非常快。因此，建议向水箱中注入蒸馏水，以延长产品的使用寿命。
- 切勿将香水、醋、淀粉、除垢剂、烫衣剂或其它化学品注入水箱内，因为您的产品不适合使用这些化学品。

电磁场 (EMF)

这款飞利浦产品符合关于电磁场 (EMF) 的相关标准。据目前的科学证明，如果正确使用并按照本用户手册中的说明进行操作，本产品是安全的。

环保

- 弃置产品时，请不要将其与一般生活垃圾堆放在一起：应将其交给官方指定的回收中心。这样做有利于环保。(图 1)

保修与服务

如果您需要服务或更多信息，或者有任何疑问，请访问飞利浦网站：www.philips.com。您也可与您所在国家/地区的飞利浦客户服务中心联系（可从全球保修卡中找到其电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请与当地的飞利浦经销商联系。