
COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

SALORA
closer to you
ACE900

Action Camera

Wi-Fi · Waterproof · Ultra HD



Wide Angle
Lens



HDMI



Ultra HD

 


Waterproof
to 30m


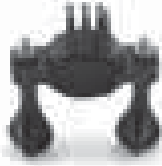 




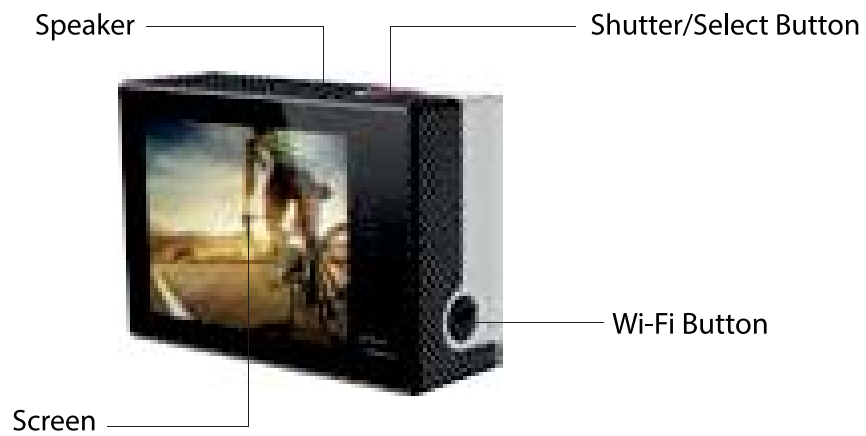


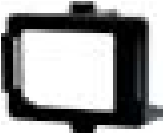 











Long-lasting
battery

THE BASICS

 
 
 
 
 
 


ACCESSORIES

			
Waterproof Housing	Handle Bar/Pole Mount	Mount 1	Mount 2
			
Mount 3	Mount 4	Mount 5	Mount 6
			
Mount 7	Clip 1	Clip 2	Helmet Mounts
			
Bandages	Battery	Lens Cloth	Tethers
			
Protective Backdoor	USB Cable	Charger	

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

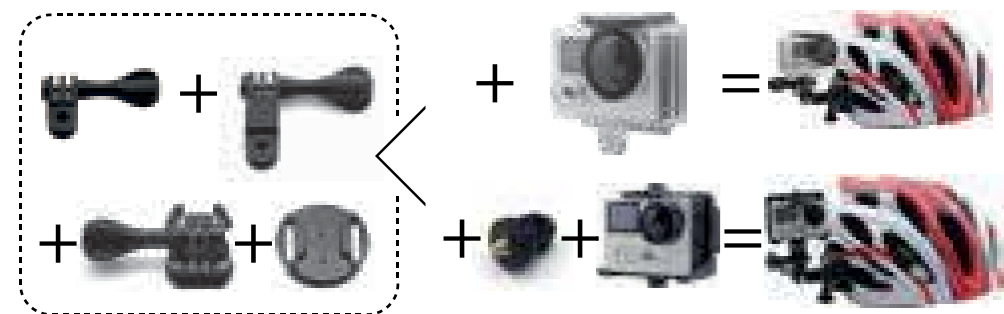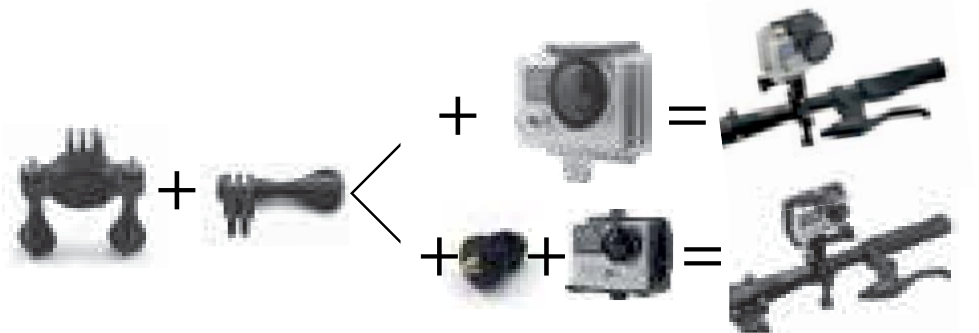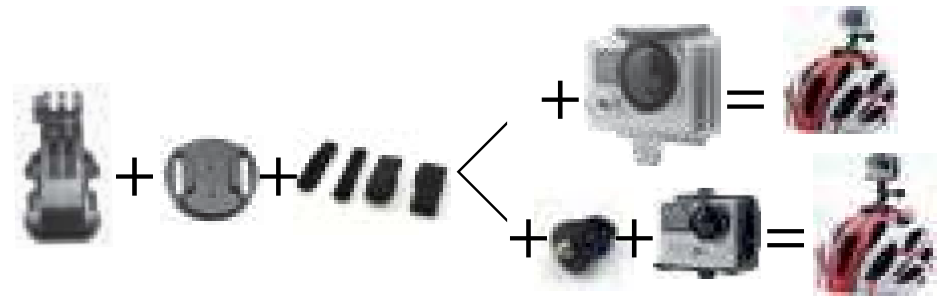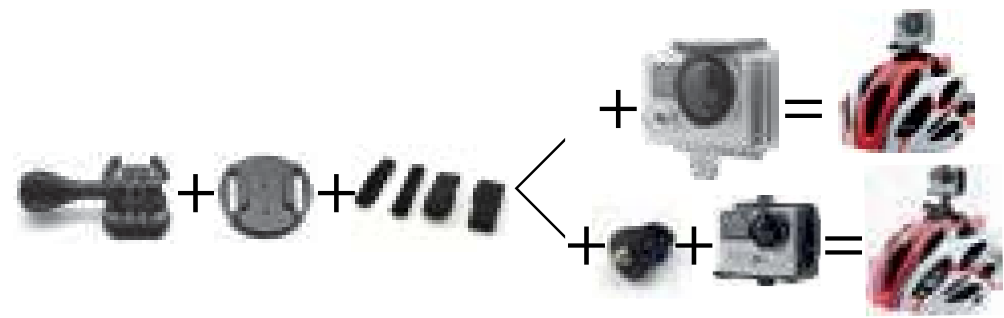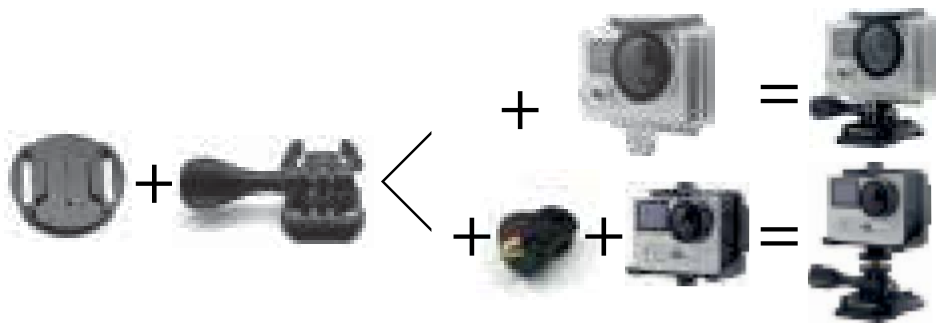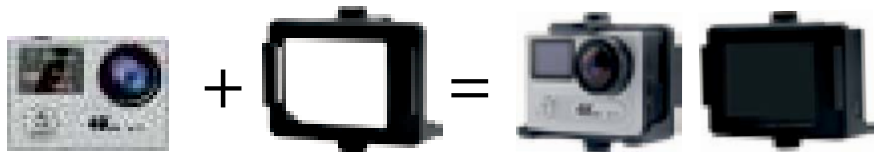

GETTING STARTED

HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:

 
Press the **Power/Mode Button**.

To power OFF:

Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:

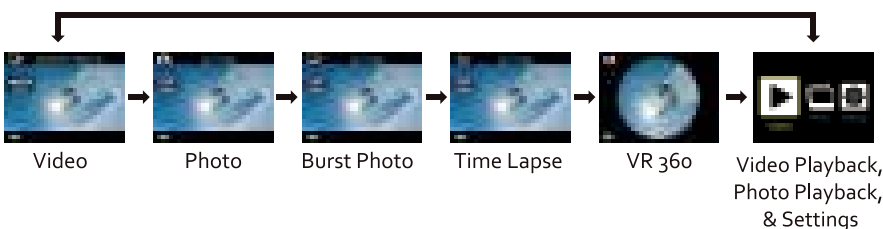

 Video

Record Video

 Photo

Capture a single photo.

 Burst Photo

Capture photo bursts

 Time Lapse

Shoot a series of photos at set time intervals

 VR 360

Record VR 360 Video

 


Video & Photo playback



Adjust camera settings, resolution and more.

SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. To go back to the previous screen or exit the settings menu, press the **Wi-Fi Button**.

Video Resolution:

4k30/2.7k30/1080p60/1080p30

MicroSD Card	4k30/2.7k30	1080p60	1080p30
32 GB	60 mins	120 mins	240 mins
16 GB	30 mins	60 mins	120 mins

Photo Resolution: 14M

Looping Video: Off/On (4K & 2.7K not supported)

Metering: Center/Multi/Spot

Time Stamp: Off/Date/Date & Time

Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

Burst Photo: 3 Photos

Time Lapse: 2s/3s/5s/10s/20s/30s/60s

Continuous Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English/Tranditional Chinese

/Italian/Spanish/Portuguese/German/
Dutch/France/Czech/Polish/Turkish/
Russian/Japanese/Korean/Thai

Date & Time: MM/DD/YY, DD/MM/YY,
or YY/MM/DD

Sound Indicator: Shutter On/Off, Start Up 1/2/3/
None, Beep On/Off, Volume
0/1/2/3

Upside Down: On/Off

Screen Saver: Off/1 min/3 min/5 min

Power Saver: Off/1 min/3 min/5 min

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE

Video

Due to filesize restrictions, recording is limited to following maximum recording times per video after which a new recording must be initiated manually:
4K: 8 minutes, 2.7K: 8 minutes, 1080P/60fps:
25 minutes, 1080P/30fps: 25 minutes, 720P/120fps:
14 minutes, 720P/60fps: 25 minutes, 720P/30 fps:
25 minutes

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

To stop recording:

Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

PHOTO MODE

Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst**

Photo icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE

Time Lapse

To capture a **Time Lapse** series, verify the **Continuous Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.


VR 360 VIDEO

To record **VR360 Video**, you have to download the **Ez iCam App** to your smartphone at the Apple App Store in advance.

To start recording:

1. Verify the camera is in **VR360 mode**.
2. Press the **Wi-Fi Button** to turn on **Wi-Fi**.
3. In your smartphone's **Wi-Fi settings**, connect to the network called "**iCam_VR_H8Rse_ACE900**" followed by a series of numbers. enter the password **1234567890**
4. Open the **Ez iCam App** on your smartphone.
5. Press your Action camera on the device list.
6. Press the **Red Record Button** to start recording.

Playing Back VR360 Videos*

1. Go to the Album  on the Ez iCam App.
2. Press a **Playback button**  at the bottom of each **VR360 video**.

*This **VR360** feature is only supported on Ez iCam Playback

PLAYBACK

Playing Back Videos and Photos

To enter the Playback menu:

1. Press the **Power/Mode Button** to select **Video** or **Photo**.
2. Press the **Shutter/Select Button** to enter the **Playback** menu.
3. Use **Power/Mode Button** to cycle through the various options.
4. Press the **Shutter/Select Button**.
5. To return to the **Playback menu**, press the **Wi-Fi Button**.

STORAGE/MICROSD CARDS

This camera is compatible with **16GB** and **32GB** capacity **microSD**, **microSDHC**, and **microSDXC** memory cards. You must use a **microSD** card with at least a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

Charging The Battery

To charge the battery:

1. Connect your camera to a USB power supply.

* Charging Time: 5 hours

CAMERA APP

Connecting to the Ez iCam App (4K & 2.7K not supported)

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.

4. Press the **Wi-Fi Button** to turn on **Wi-Fi***.
 5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "iCam_VR_H8Rse_ACE900" followed by a series of numbers. enter the password **1234567890**
 6. Open the **Ez iCam App** on your smartphone or tablet.
- * Press and hold the **Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below.

For Apple iOS

- * iPhone5, 5s, 6 (Plus), & 6s (Plus) (iOS9)
- * iPad Air & Mini (iOS9)

For Android:

- * Android 4X Quad-core devices



iOS / Android
App Download

2.4G Remote



Photo Button

Video Button

Splashproof

Video

To record **Video**, verify the camera is in **Video** mode.

To start recording:

Press the **Grey Video Button**. The camera will emit one beep and the **Camera Light** will flash while recording.

To stop recording:

Press the **Grey Video Button** again. The camera will emit one beep and the **Camera Light** will stop flashing while recording.

Photo

To capture a **Photo**, verify the camera is in **Photo** mode.

To take a photo:

Press the **Red Photo Button**. The camera will emit a camera shutter sound.

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode.

To take a Burst Photo series:

Press the **Red Photo Button**. The camera will emit camera shutter sounds.

Time Lapse

To capture a **Time Lapse** series, verify the Continuous Lapse is **ON** and camera is in **Time Lapse** mode.

To take Time Lapse:

Press the **Red Photo Button**. The camera initiates countdown and emits a camera shutter sound each time a **Photo** is taken.

*To power OFF camera:

Press and hold the **Red Photo Button**.