


Dell Web Management for Monitors

This monitor comes with networking capability which lets you remotely access and change settings such as Input Source Selection, Brightness and Volume.


Before accessing the Dell Monitor Web Management feature, ensure that you have a working Ethernet cable connected to the RJ45 port at the rear of the monitor.



- Ethernet Enable**

Press and hold the Button 1 and Button 3 on the front panel for 3 seconds to turn on , A network icon  appears and is shown on Top - left corner for 5 seconds .

- Ethernet Disable**

 
 
 
 
 




Press and hold the Button 1 and Button 3 on the front panel for 3 seconds to turn off , A network icon  appears and is shown on Top - left corner for 5 seconds .


To access the Dell Monitor Web Management tool you need to set the IP Addresses for your computer and the monitor.

1. Press the **Menu** key on the remote control to display the IP Address of the monitor, or by navigating to OSD Menu > **Others**. By default, the IP Address is 10.0.50.100

Dell C7017T

Energy Use

| | | |
|--|------------------|-------------|
|  Brightness/Contrast | DDC/CI | Enable |
|  Auto Adjust | LCD Conditioning | Disable |
|  Input Source | Firmware | 00X000 |
|  Color | IP Address | 10.0.50.100 |
|  Display | Reset Others | |
|  Energy | Factory Reset | |
|  Menu | | |
|  Personalize | | |
|  Others | | |

 Resolution: 1920x1080, 60Hz


↑

↓

→

✖


2. In the computer's IP Properties tab, specify an IP Address by selecting Use the following IP Address and enter the following values: For IP Address: 10.0.50.101 and for Subnet Mask: 255.0.0.0 (leave all other entries as blanks).

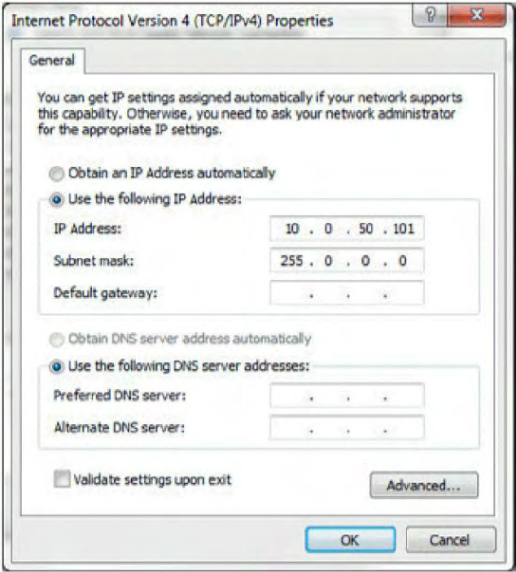

3. The IP Address configuration would now look like this:




Configure notebook IP Address to 10.0.50.101

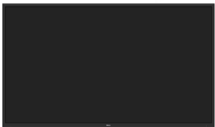


Monitor IP Address 10.0.50.100

To access and use the web management tool, follow these steps:


1. Open a web browser and type the monitor's IP Address (10.0.50.100) in the address bar.

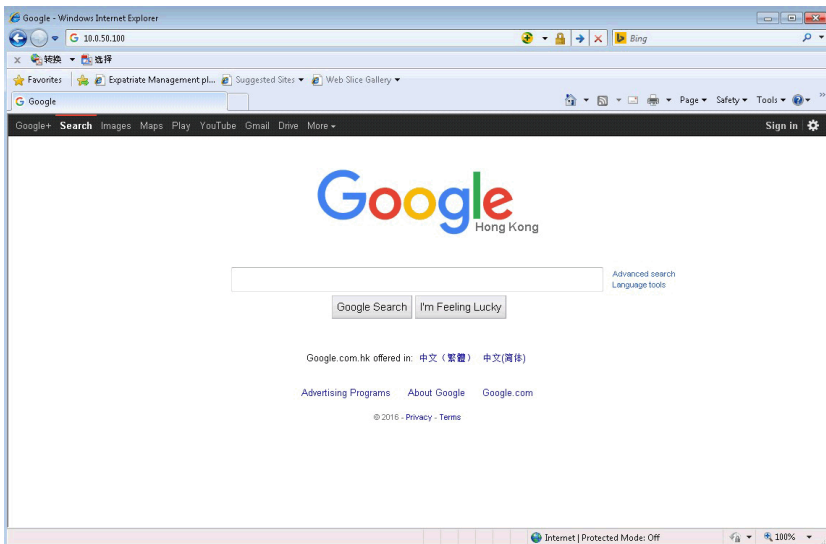


2. The log-in page opens. Enter the Administrator Password to continue.

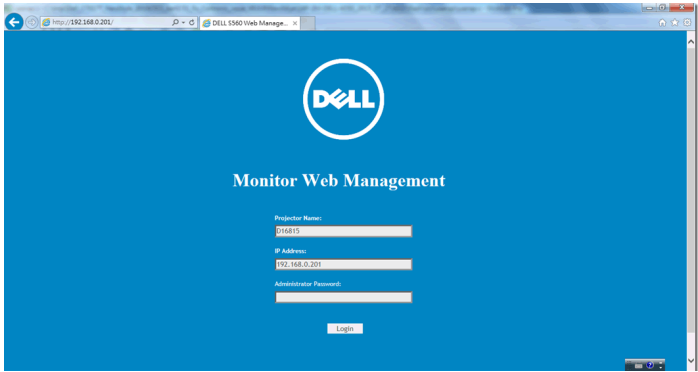

3. The **Home** page opens:

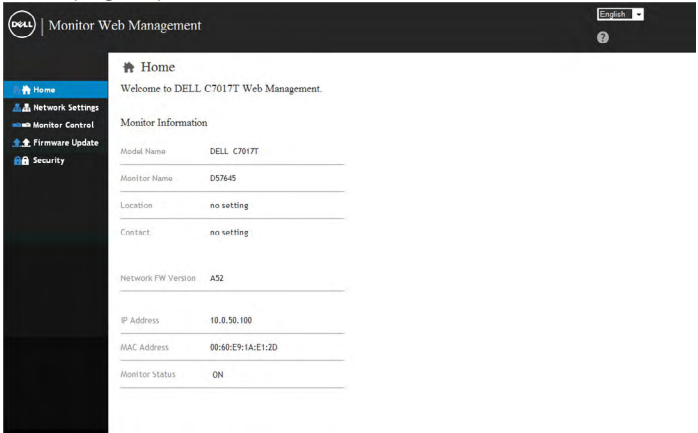

4. Click **Network Settings** tab to see the network settings.

 Monitor Web Management English ▾ ?

Network Settings

Network Adapter Properties

Model Name:

Monitor Name:

Location:

Contact:

IP Settings

☐ Obtain IP address automatically: ☒ Use the following IP address:

IP Address:


Subnet Mask:

Gateway:

DNS Server:

Reset Network Settings

5. Click **Monitor Control** to see the monitor's status. It takes about 3 to 5 mins for the monitor information to be updated on the Web Management.

 Monitor Web Management English ▾ ?

Monitor Control

Monitor Status

Monitor Status: ☒ Power ON ☐ Power OFF

Image Control

Source Select:

Preset Mode:

Aspect Ratio:

Brightness: (0-100)

Contrast: (0-100)

Sharpness: (0-100)

Response Time:

Audio Control

Volume: (0-100)

Speaker: ☒ Enable ☐ Disable

Keypad Control

Keypad: ☐ Lock ☒ Unlock

Reset Monitor Control Settings

6. Click **Security** to set a password.

The screenshot shows the Dell Monitor Web Management interface. The top header includes the Dell logo and the text "Monitor Web Management" with a language dropdown set to "English". A left sidebar contains navigation links: Home, Network Settings, Monitor Control, Firmware Update, and Security. The main content area is titled "Security" and features a "Web Management Login Option" section. This section includes a "Password Login" toggle with "Enable" and "Disable" radio buttons, where "Disable" is selected. Below this are three input fields labeled "Current Password", "New Password", and "Confirm Password". A "Save" button is positioned at the bottom right of the form.

7. Update **Firmware** for your monitor’s network card. You can download the latest network firmware, if available, from the Dell Support website at www.dell.com/support.

The screenshot shows the Dell Monitor Web Management interface for the Firmware Update section. The top header and left sidebar are identical to the previous screenshot. The main content area is titled "Firmware Update" and includes an information icon and a message: "Firmware update will take about a minute. Do not interrupt the process once it has begun. Keep the connection established until completion of process. The network system will auto reboot and you can re-login after update is complete." Below this message, it displays "Network Firmware Version: AS3". At the bottom right, there are two buttons: a blue "Update" button and a grey "Cancel" button.