


SETUP.EXE

PATCHBOX

Simplify IT

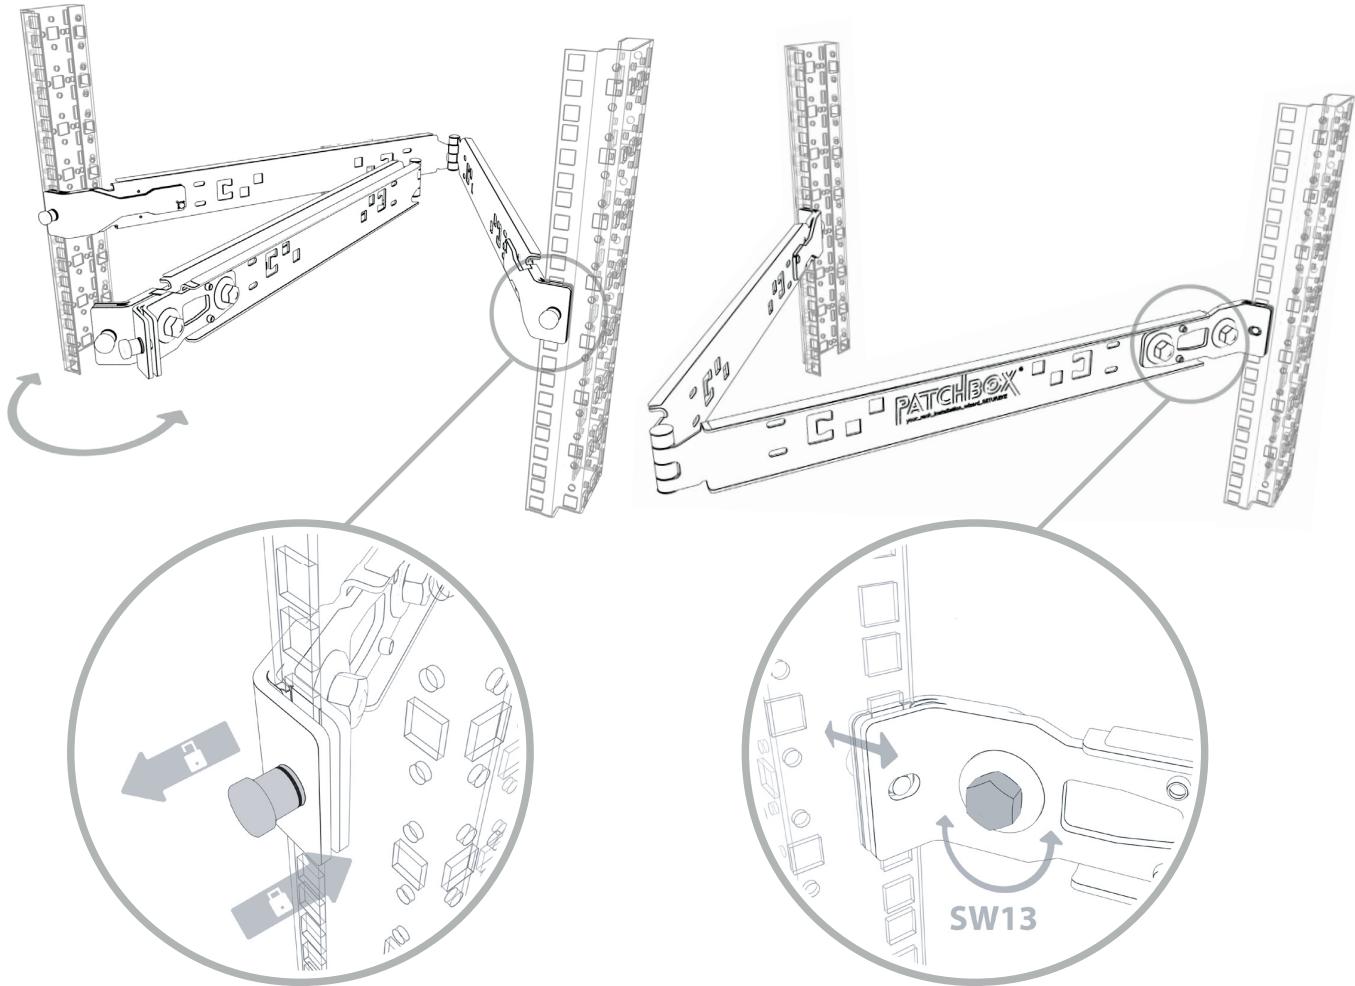

SETUP.EXE - MANUAL

Warning: Please clarify the load capacity of the server rack with the manufacturer. Always check assembly aid for tightness before loading. Assembly aid needs to be free from contamination, such as oil and lubricants. Make sure all nuts are tight. Before loading, make sure that the locking pins are fully inserted. If necessary, remove the extended locking bolts with one turn. Loads must not be pushed over the joint of the assembly aid (risk of overloading). Loads must be protected from the risk of damage caused by falling down through appropriate additional measures. The mounting aid includes magnets. Keep away from data carriers, magnetic storage devices and sensitive electronic devices. Keep away from children, risk of swallowing small parts.

patchbox.com

PATCHBOX