



Philips
CD Soundmachine

CD, MP3-CD, USB, FM
2W

AZ385

Enjoy music wherever you go

Want to enjoy the music collections stored at portable music player without using headphone? Plug the USB Direct socket to the Philips CD soundmachine and enjoy your favorite digital music through the powerful speakers - anytime, anywhere.

The ultimate listening experience

- USB Direct for MP3/WMA music playback
- Play MP3/WMA-CD, CD and CD-RW
- FM tuner for radio enjoyment

Easy to use

- CD Shuffle/Repeat for personalized music enjoyment
- Audio-in for easy portable music playback

Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

PHILIPS


Highlights

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

CD Shuffle/Repeat

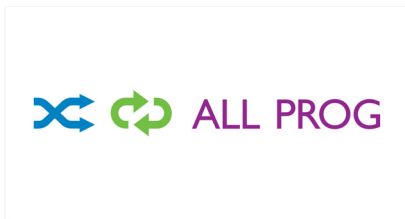

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes -

"Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.



Specifications

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/backward, next/previous album search, next/previous track search, repeat/shuffle/program

Tuner/Reception/Transmission

- Tuner bands: FM
- Antenna: FM antenna

Sound

- Sound enhancement: Dynamic Bass Boost
- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

Connectivity

- Audio in (3.5mm)
- USB: USB host

Power

- Mains power: 110V-127V
- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 6
- Power type: AC Input

Accessories

- Cables/Connection: power cord
- Others: Quick start guide
- Warranty: Warranty leaflet

Dimensions

- Gross weight: 1.84 kg
- Packaging width: 284 mm
- Packaging height: 264 mm
- Packaging depth: 155 mm
- Weight: 1.5 kg
- Main unit depth: 245 mm
- Main unit height: 123 mm
- Main unit width: 262 mm

Convenience

- Display Digits: 3
- Display type: LCD display
- Loader type: top



Issue date 2014-06-12

Version: 2.0.2

12 NC: 8670 001 02277
EAN: 87 12581 68480 8

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com