

DAILY REFERENCE GUIDE



THANK YOU FOR PURCHASING A WHIRLPOOL PRODUCT

To receive more comprehensive help and support, please register your product at www.whirlpool.eu/register




You can download the Safety Instructions and the Use and Care Guide by visiting our website docs.whirlpool.eu and following the instructions on the back of this booklet.



Before using the appliance carefully read the Health and Safety guide.

PRODUCT DESCRIPTION

APPLIANCE

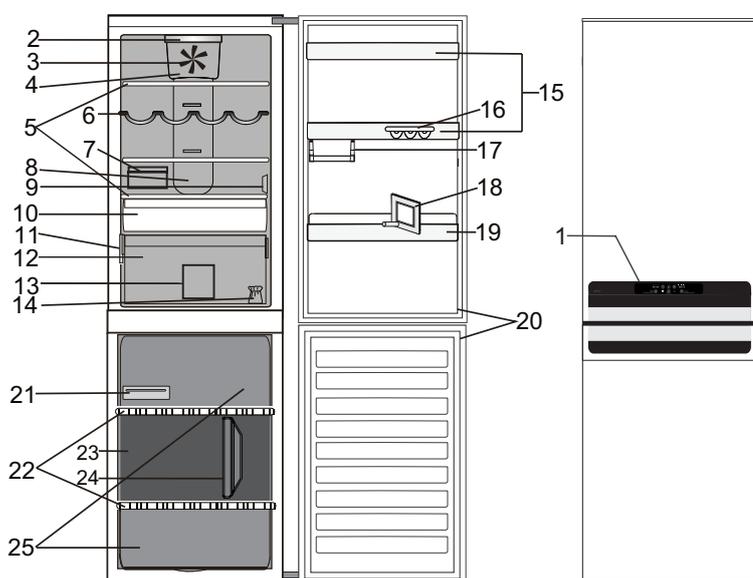

1. Control panel

Refrigerator compartment


2. LED lighting
3. Fan
4. Fan cover and antibacterial filter area
5. Shelves
6. Bottle rack *
7. Cheese box + Lid *
8. Multi-flow cold air area
9. Sensor cover
10. Cooler compartment (best for meat and fish)
11. Rating plate with commercial name
12. Fruits and vegetables crisper
13. Fridge drawer divider *
14. Door reversibility kit
15. Door trays
16. Egg tray *
17. Small items half balcony *
18. Bottle separator
19. Bottle balcony
20. Door seal

Freezer compartment

20. Door seals
21. Ice tray
22. Shelves
23. Middle drawer: coolest zone best for freezing fresh food
24. Freezer drawer divider *
25. Freezer drawers

* Varies by number and/or position, available only on certain models

CONTROL PANEL

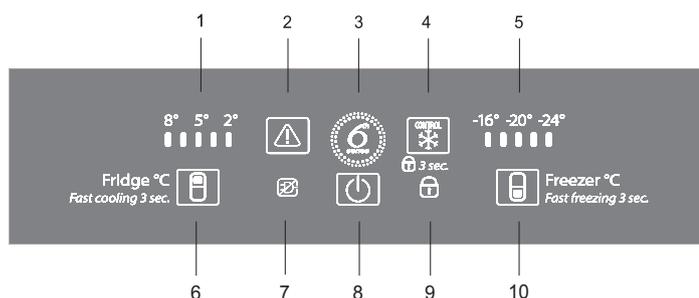

1. FRIDGE TEMPERATURE LED's
2. STOP ALARM button
3. 6TH SENSE FRESH CONTROL indicator
4. FREEZE CONTROL button
5. FREEZER TEMPERATURE LED's
6. FRIDGE °C button / FAST COOLING button
7. BLACK-OUT ALARM indicator
8. ON/STAND-BY button
9. KEY LOCK indicator
10. FREEZER °C button / FAST FREEZING button

ACCESSORIES *

EGG TRAY




CHEESE BOX




BOTTLE RACK




BOTTLE SEPARATOR

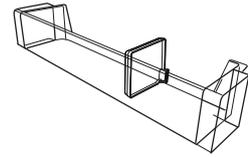


FRIDGE DRAWER DIVIDER

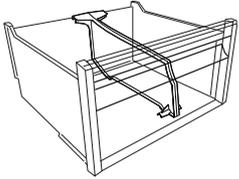

FREEZER DRAWER DIVIDER

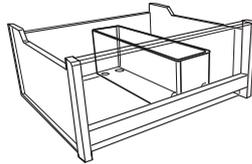

ICE TRAY

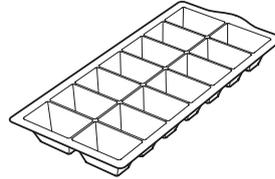

FIRST TIME USE

HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically.
After starting the appliance, wait at least 4-6 hours before placing food into the fridge and into the freezer compartment.

When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

DAILY USE

See Use and Care Guide for more details on functions / see last page for information on how to obtain the Use and Care Guide

FUNCTIONS

ON/STANDBY

To put the product in Stand-by, **press and hold the On/Stand By button for 3 seconds**. All the indicators turn off except On/Standby indicator.

Press again to reactivate the appliance.

SMART DISPLAY

This optional function can be used to save energy. To activate the Smart Display, press Fridge Temperature and Freezer Temperature buttons at the same time for 3 seconds until an audible signal sounds. To deactivate this function repeat the same procedure. Remember that this function does not disconnect the appliance from the power supply, but only reduce the power consumed by external display.

TEMPERATURE SETTING

FRIDGE TEMPERATURE

To adjust the Fridge Temperature, press the Fridge °C button. The Fridge Temperature can be adjusted between +2°C and +8°C, as shown by the Fridge Temperature Display (°C).

FREEZER TEMPERATURE

To adjust the Freezer Temperature, press the Freezer °C button. The Freezer Temperature can be adjusted between -16°C and -24°C, as shown by the Freezer Temperature Display (°C).

KEY LOCK

To lock/unlock the keys of the Control Panel, press the and hold the Freeze Control button for 3 seconds: the Key Lock indicator will light up and an acoustical signal will be played.

FREEZE CONTROL

Freeze Control is an advanced technology that reduces temperature fluctuations in the whole freezer compartment to minimum, thanks to an innovative air system, totally independent from the fridge. Freeze burns are reduced up to 60% and food preserves its original quality and color. To activate/deactivate the Freeze Control function simply press the FREEZE CONTROL button.

The function works properly in a defined range of temperature: between -22°C and -24°C. When the function is engaged and the current temperature in the freezer is set to the warmer set point than -22°C, the temperature is automatically set to -22°C to match the working range. If the function is engaged and the user modify the freezer temperature out of the working range, the function is automatically switched off.

 
In case of Fast Freezing is engaged, the function "Freeze control" is inhibited until the Fast Freezing function switched off.

6TH SENSE FRESH CONTROL

This function automatically works to ensure the optimal conditions to preserve the stored food. If there are any variations, 6th Sense Fresh Control immediately restores the ideal conditions. Results are outstanding: freshness preserved at best throughout the fridge cavity up to 4 times longer.

FAST COOL

Using Fast Cool function it is possible to increase the cooling in the refrigerator compartment. The use of this function is recommended when placing a very high quantity of food in the refrigerator compartment. Press & hold for 3 sec. the Fridge °C button to activate Fast Cool function. When activated, the Fast Cool indication will be displayed by the Fridge Temperature LEDs as shown in the beside sequence. The function is automatically disabled after 6 hours, or can be manually disabled by pressing Fridge °C button.

**FAST FREEZE**

The use of this function is recommended when placing a very high quantity of food to be frozen in the freezer compartment. 24 hours before freezing fresh food, press & hold for 3 sec. The Freezer button to activate the Fast Freeze function. When activated, the Fast Freeze indication will be displayed by the Freezer Temperature LEDs as shown in beside sequence. After 24 hours place the food to be frozen in the middle basket of freezer compartment. The function is automatically disabled after 48 hours, or can be manually disabled by pressing Freezer °C button.

**REFRIGERATOR LIGHT**

The light system inside the refrigerator compartment uses LEDs light, allowing a better lightning as well as a very low energy consumption. If the LED light system does not work, please contact the Service to replace it.

Important: The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more then 10 minutes the light will be automatically switched off.

FAN + ANTIBACTERIAL FILTER


The Fan improves temperature distribution inside the refrigerator compartment, allowing better preservation of stored food.

If the appliance has the Fan it can be equipped with the antibacterial filter. Remove it from the box placed in the crisper drawer and insert into the fan cover. The replacement procedure is included in the filter box.


ALARM TABLE

ALARM TYPE	Signal	Cause	Cure
Door open alarm	Door open alarm indicator remains on, the acoustical alarm is activated and the Alarm Indicator blinks.	The Fridge or Freezer door has remained open for more than 2 minutes.	Close the door or press the Stop Alarm to mute the acoustical alarm.
Temperature alarm	The Freezer Temperature LEDs blinks and the Alarm Indicator remains on.	The inside temperature is not adequate	Press the Stop Alarm button ; the acoustical alarm stops, the Freeze Temperature LEDs blinks and the Alarm Indicator remains on until a temperature < -10°C is reached.
Long black-out alarm	The Black Out Alarm icon remains on and the Alarm indicator blinks.	Prolonged power failure, able to cause the inside temperature to increase to 0°C.	Press the Stop Alarm button ; the acoustical alarm stops.
Malfunction	3 central LEDs in the Freezer Temperature LEDs blinks on the display.	Product malfunction.	Contact the After-sales Service.

HOW TO STORE FOOD AND BEVERAGE

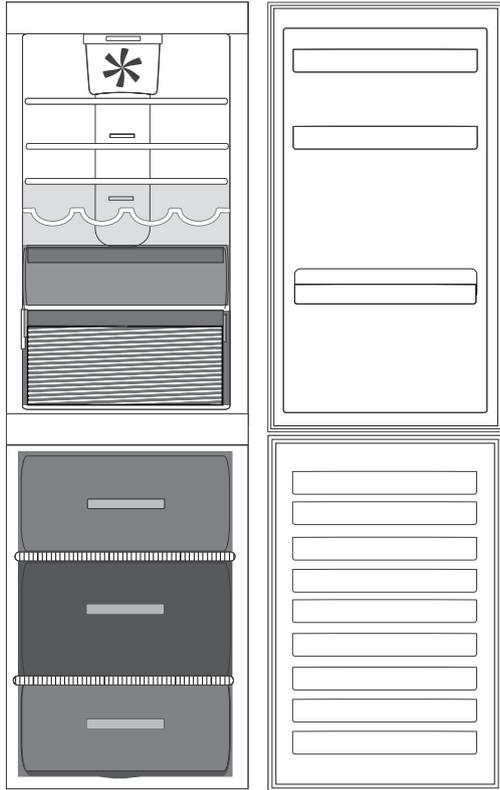

Legend

 	TEMPERATE ZONE Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam.
	COOL ZONE Suggested for storage of cheese, milk, dairy food, delicatessen, yogurt.
	COOLEST ZONE Suggested for the storage of fish, meat, cold cuts.
	FRUIT & VEGETABLE DRAWER
	FREEZING ZONE DRAWER (MAX COOL ZONE) Suggested to freeze fresh/cooked food.
	NORMAL FREEZER DRAWERS

Note: The Grey tone of the legend doesn't match with the color of drawers

FRIDGE COMPARTMENT

Use recyclable plastic, metal, aluminum and glass containers and cling film to wrap foods.

Always use closed containers for liquids and for food that may give off or be tainted by odor or flavor transfer or cover them.

If you have a little quantity of food to store in the refrigerator, we recommend to use the shelves above the crisper for fruits and vegetables since this is the coolest area of the compartment.

Foods which give off a large amount ethylene gas and those that are sensitive to this gas, such as fruit, vegetables and salad, should always be separated or wrapped so as not to reduce the storage life; for example do not store tomatoes together with kiwi fruits or cabbage.

To avoid bottles falling over, you can use the bottle holder (available on selected models).

Do not store food too close together to enable sufficient air circulation.

FREEZER COMPARTMENT

The freezer is the ideal storage location for store frozen food, make ice cubes and freeze fresh food in the freezer compartment.

The maximum number of kilograms of fresh food that can be frozen within a 24-hour period is indicated on the rating plate (...kg/24h).

If you have a little quantity of food to store in the freezer, we recommend to use the coldest areas of your freezer compartment, corresponding to the middle area.

PRODUCT FICHE

 [www](http://www.docs.whirlpool.eu) The product fiche with energy data of this appliance can be downloaded from the website docs.whirlpool.eu

HOW TO OBTAIN THE USE AND CARE GUIDE


>  [www](http://www.docs.whirlpool.eu) Download the Use and Care Guide from our website docs.whirlpool.eu (you can use this QR Code), specifying the product's commercial code.

> Alternatively, contact our Client After-sales Service.



CONTACTING OUR AFTER-SALES SERVICE

You can find our contact details in the warranty manual. When contacting our Client After-sales Service, please state the codes provided on your product's identification plate.

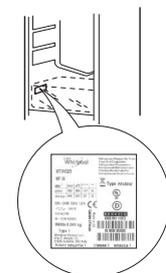

400011089392

Printed in Italy