

# Inspiron 13 7000

## 2-in-1

## Setup and Specifications

Computer Model: Inspiron 13-7378  
Regulatory Model: P69G  
Regulatory Type: P69G001



# Notes, cautions, and warnings

---



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

---

© 2016 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2016-06

Rev. A00

# Contents

<b>Set up your computer.....</b>	<b>5</b>
<b>Views.....</b>	<b>8</b>
Front.....	8
Left.....	8
Right.....	9
Base.....	10
Display.....	11
Modes.....	12
Notebook.....	12
Tablet.....	12
Stand.....	12
Tent.....	13

<b>Specifications.....</b>	<b>14</b>
Dimensions and weight.....	14
System information.....	14
Memory.....	14
Ports and connectors.....	15
Communications.....	15
Video.....	15
Audio.....	16
Storage.....	16
Media-card reader.....	16
Keyboard.....	16
Camera.....	17
Touch pad.....	17
Power adapter.....	17
Battery.....	18
Display.....	18
Computer environment.....	19
 <b>Keyboard shortcuts.....</b>	 <b>20</b>
 <b>Getting help and contacting Dell.....</b>	 <b>22</b>
Self-help resources.....	22
Contacting Dell.....	22

 
# Set up your computer

---


- 1 Connect the power adapter and press the power button.




- 2 Follow the instructions on the screen to finish Windows setup:
- a) Enable security and Dell updates.

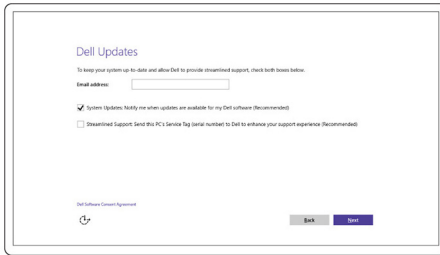

 - b) Connect to a wireless network.

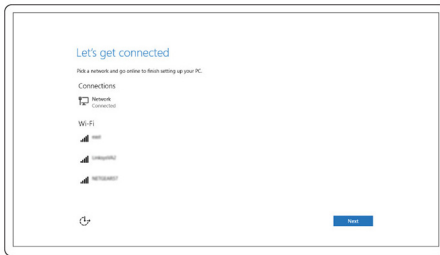

 - c) Sign-in to your Microsoft account or create a new account.

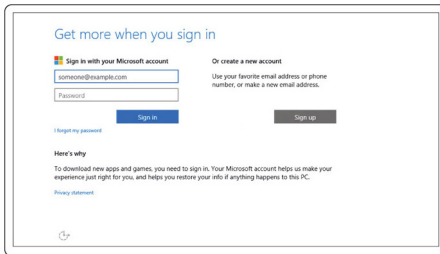


3 Explore Dell resources on your desktop.



Register your computer

 Dell Help & Support

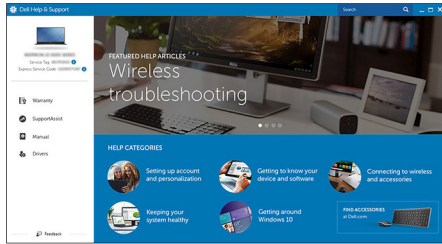


SupportAssist — Check and update your computer

# Views

 
---

## Front



### 1 Power and battery-status light/hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.

 **NOTE:** Press Fn+H to toggle this light between power and battery-status light and hard-drive activity light.

#### Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.

#### Power and battery-status light

Indicates the power and battery-charge status.

 
**Solid white** — Power adapter is connected and the battery has more than 5% charge.

**Amber** — Computer is running on battery and the battery has less than 5% charge.

#### Off

- Power adapter is connected and the battery is fully charged.
- Computer is running on battery and the battery has more than 5% charge.
- Computer is in sleep state, hibernation, or turned off

## Left

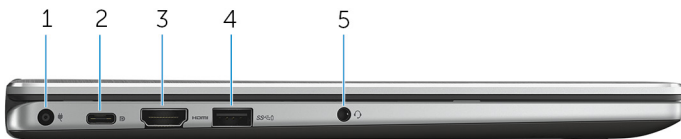

### 1 Power-adapter port




Connect a power adapter to provide power to your computer and charge the battery.

## 2 **USB Type-C port**

Connect peripherals such as external storage devices, printers, external displays, and so on. Provides data transfer speeds up to 5 Gbps.

Supports Power Delivery that allows two-way power supply between devices. Provides up to 15 W power output that enables faster charging.

 **NOTE:** Adapters (sold separately) are required to connect standard USB and DisplayPort devices.


## 3 **HDMI port**


Connect a TV or another HDMI-in enabled device. Provides video and audio output.

## 4 **USB 3.0 port with PowerShare**

Connect peripherals such as storage devices, printers, and so on. Provides data transfer speeds up to 5 Gbps.

PowerShare allows you to charge your USB devices even when your computer is turned off.

 **NOTE:** If your computer is powered off or in hibernate state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.

 **NOTE:** Certain USB devices may not charge when the computer is powered off or in sleep state. In such cases, turn on the computer to charge the device.

## 5 **Headset port**

Connect a headphone, a microphone, or a headset (headphone and microphone combo).

# Right



## 1 **Power button**

Press to turn on the computer if it is turned off or in sleep state.

Press to put the computer in sleep state if it is turned on.

Press and hold for 4 seconds to force shut-down the computer.



**NOTE:** You can customize the power-button behavior in Power Options. For more information, see *Me and My Dell* at [www.dell.com/support/manuals](http://www.dell.com/support/manuals).

## 2 **Volume-control buttons**

Press to increase or decrease the volume.

## 3 **Media-card reader**

Reads from and writes to media cards.

 
## 4 **USB 2.0 port**

Connect peripherals such as storage devices, printers, and so on. Provides data transfer speeds up to 480 Mbps.

## 5 **Security-cable slot**

Connect a security cable to prevent unauthorized movement of your computer.

# Base

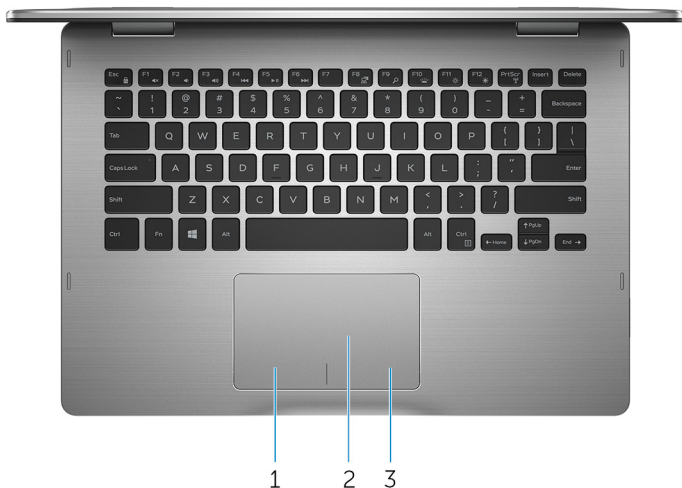

## 1 **Left-click area**

 
Press to left-click.

## 2 **Touch pad**

Move your finger on the touch pad to move the mouse pointer. Tap to left-click and two finger tap to right-click.

- 3 Right-click area**  
Press to right-click.

## Display

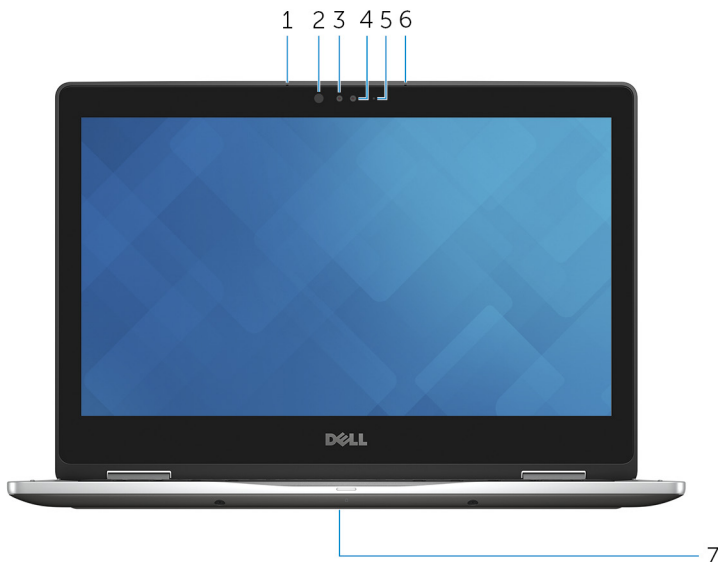

- 1 Left microphone**  
Provides digital sound input for audio recording, voice calls, and so on.
- 2 Infrared emitter**  
Emits infrared light, which allows the infrared camera to sense depth and track motion.
- 3 Infrared camera**  
Allows you to video chat, capture photos, and record videos. Depth-sensing feature of the camera enhances security when paired with Windows Hello.
- 4 Camera**  
Allows you to video chat, capture photos, and record videos.
- 5 Camera-status light**  
Turns on when the camera is in use.
- 6 Right microphone**  
Provides digital sound input for audio recording, voice calls, and so on.

## 7 Service tag location

The service tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information.

# Modes

## Notebook



## Tablet



## Stand



# Tent



# Specifications

---

## Dimensions and weight

Height	18.70 mm (0.74 in)
Width	322.40 mm (12.69 in)
Depth	224 mm (8.82 in)
Weight (maximum)	1.65 kg (3.64 lb)



**NOTE:** The weight of your computer varies depending on the configuration ordered and the manufacturing variability.

## System information

Computer model	Inspiron 13-7378
Processor	<ul style="list-style-type: none"><li>• 7th Generation Intel Core i3/i5/i7</li><li>• Intel Celeron Dual Core</li><li>• Intel Pentium Dual Core</li></ul>
Chipset	Integrated in the processor

## Memory

Slots	Two SODIMM slots
Type	Dual-channel DDR4
Speed	2133 MHz
Configurations supported	4 GB, 8 GB, 12 GB, and 16 GB

# Ports and connectors

---

## External:

---

USB

- One USB Type-C port
- One USB 2.0 port
- One USB 3.0 port with PowerShare

Audio/Video

- One HDMI port
- One headset (headphone and microphone combo) port

---

## Internal:

---

M.2 Card

One M.2 slot for SSD card

# Communications

Wireless

- Wi-Fi 802.11 ac
- Bluetooth 4.0
- Bluetooth 4.1 (optional)
- Miracast
- Wi-Fi Display Support (Wi-Fi Alliance)

# Video

Controller

- Intel HD Graphics 610 - Intel Celeron and Pentium
- Intel HD Graphics 620 - Intel Core i3/i5/i7
- Intel Iris Graphics 640 - Intel Core i7

Memory

Shared system memory

## Audio

Controller	Realtek ALC3253 with Waves MaxxAudio Pro
Speakers	Two
Speaker Output	<ul style="list-style-type: none"><li>• Average – 2 W</li><li>• Peak – 2.5 W</li></ul>
Microphone	Digital-array microphones in camera assembly
Volume controls	Media-control shortcut keys and volume-control buttons

## Storage

Interface	SATA 6 Gbps
Solid-state drive	One M.2 drive

## Media-card reader

Type	One SD card slot
Cards supported	SD card

## Keyboard

Type	Backlit keyboard
Shortcut keys	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.





**NOTE:** You can define the primary behavior of the function keys (F1–F12) by changing **Function Key Behavior** in BIOS setup program.

[Keyboard shortcuts](#)

## Camera

Resolution	<ul style="list-style-type: none"><li>• Still image: 0.92 megapixel</li><li>• Video: 1280 x 720 (HD) at 30 fps (maximum)</li></ul>
Diagonal viewing angle	74 degrees

## Touch pad

Resolution	<ul style="list-style-type: none"><li>• Horizontal: 1260</li><li>• Vertical: 960</li></ul>
Dimensions	<ul style="list-style-type: none"><li>• Height: 65 mm (2.56 in)</li><li>• Width: 105 mm (4.13 in)</li></ul>

## Power adapter

Type	45 W
Input voltage	100 VAC–240 VAC
Input frequency	50 Hz–60 Hz
Input current (maximum)	1.30 A
Output current (continuous)	2.31 A
Rated output voltage	19.50 VDC
Temperature range: Operating	0°C to 40°C (32°F to 104°F)
Temperature range: Storage	–40°C to 70°C (–40°F to 158°F)

## Battery

Type	3-cell "smart" lithium-ion (43/56 WHr)
Weight (maximum)	0.2 kg (0.44 lb)
Voltage	11.40 VDC
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Life span (approximate)	300 discharge/charge cycles
Temperature range: Operating	0°C to 35°C (32°F to 95°F)
Temperature range: Storage	-40°C to 65°C (-40°F to 149°F)
Coin-cell battery	CR-2032
Height	5.90 mm (0.23 in)
Width	97.15 mm (3.82 in)
Depth	184.15 mm (7.25 in)

## Display

Type	13.3-inch HD WLED touch	13.3-inch Full HD WLED touch screen
Resolution (maximum)	1366 x 768	1920 x 1080
Viewing angle	120 degrees	160 degrees
Pixel pitch	0.2148 mm	0.1529 mm
Height	164.97 mm (6.49 in)	165.10 mm (6.50 in)
Width	293.42 mm (11.55 in)	293.60 mm (11.56 in)
Diagonal	337.82 mm (13.30 in)	337.82 mm (13.30 in)
Refresh rate	60 Hz	
Operating angle	0 degree (closed) to 360 degrees	
Controls	Brightness can be controlled using shortcut keys	

# Computer environment

**Airborne contaminant level:** G1 as defined by ISA-S71.04-1985

	<b>Operating</b>	<b>Storage</b>
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G <sup>†</sup>	160 G <sup>‡</sup>
Altitude (maximum)	-15.2 m to 3048 m (-50 ft to 10,000 ft)	-15.2 m to 10,668 m (-50 ft to 35,000 ft)




 

















\* Measured using a random vibration spectrum that simulates user environment.








† Measured using a 2 ms half-sine pulse when the hard drive is in use.

‡ Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

# Keyboard shortcuts

---

Keys	Description
	Mute audio
	Decrease volume
	Increase volume
	Play previous track/chapter
	Play/Pause
	Play next track/chapter
	Switch to external display
	Search
	Toggle keyboard backlight
	Decrease brightness
	Increase brightness
 + 	Turn off/on wireless
 + 	Pause/Break
 + 	Sleep
 + 	Toggle scroll lock
 + 	Toggle between power and battery-status light/hard-drive activity light

Keys	Description
 Fn + R	System request
 Fn + Ctrl	Open application menu
 Fn + Esc	Toggle Fn-key lock
 Fn + End →	End
 Fn + ←Home	Home
 Fn + ↓PgDn	Page down
 Fn + ↑PgUp	Page up

# Getting help and contacting Dell

---

## Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Information about Dell products and services [www.dell.com](http://www.dell.com)

Dell Help & Support app



Get started app



Accessing help in Windows 10

In Windows search, type **Help and Support**, and press **Enter**.

Online help for operating system

[www.dell.com/support/windows](http://www.dell.com/support/windows)  
[www.dell.com/support/linux](http://www.dell.com/support/linux)

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on


[www.dell.com/support](http://www.dell.com/support)

Learn about your operating system, setting up and using your computer, data backup, diagnostics, and so on.

See *Me and My Dell* at [www.dell.com/support/manuals](http://www.dell.com/support/manuals).

## Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [www.dell.com/contactdell](http://www.dell.com/contactdell).

 **NOTE:** Availability varies by country and product, and some services may not be available in your country.



**NOTE:** If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.