

SIMPLE MANUAL

High Power Speaker System

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
FJ5



 
ENGLISH	ČESKY	SLOVENČINA
DEUTSCH	SLOVENČINA	SHQIP
FRANÇAIS	POLSKI	BOSANSKI
NEDERLANDS	ROMÂNĂ	SVENSKA
ITALIANO	LATVIEŠU	DANSK
ESPAÑOL	HRVATSKI	NORSK
ΕΛΛΗΝΙΚΑ	SRPSKI	SUOMI
PORTUGUÊS	Български	МАКЕДОНСКИ
MAGYAR		

www.lg.com

Copyright © 2017 LG Electronics Inc. All Rights Reserved.



Top Panel

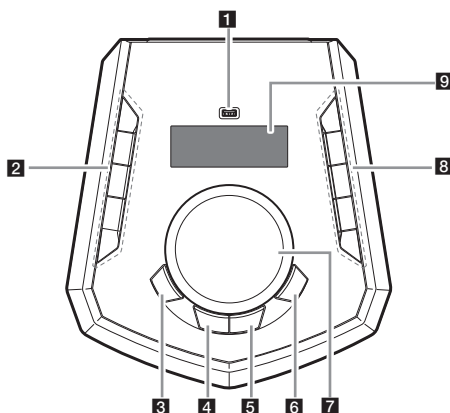

- 1** **USB Port**
You can play sound files by connecting the USB device.
- 2** **⏻ (Standby)**
Turns the power on or off
#/⏮ KEY CHANGER
Changes the key to suit your vocal range.
VOICE CANCELLER
You can enjoy this function while playing music by reducing the singer's vocal in music from various source.
ECHO/DEMO
- Selects ECHO mode.
- In power off status, if you press **ECHO/DEMO**, shows DEMO mode.
- 3** **LIGHTING**
Selects the lighting effects.
- 4** **MIC (Microphone) VOL. (Volume)**
Select to adjust microphone volume.
(Adjust microphone volume by rotating **MASTER VOLUME/MULTI JOG.**)

- 5** **VOCAL EFFECTS**
Selects VOCAL EFFECTS mode.
- 6** **BASS BLAST**
Press to select BASS effect directly.
- 7** **MASTER VOLUME/MULTI JOG**
- Adjust speaker volume.
- Adjust microphone volume.
- Selects lighting mode.
- Selects VOCAL EFFECTS mode.
- 8** **F (Function)**
Selects the function and input source.
>>I (Skip/Search)
- Skips forward.
- Searches for a section within a file.
>|| (Play/Pause)
Starts or pauses playback.
I<< (Skip/Search)
- Skips backward.
- Searches for a section within a file.
WIRELESS LINK
- Selects MASTER or SLAVE on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.
- 9** **Display window**

Controller App



 
Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync (Wireless)




For more information, download the online owner's manual. <http://www.lg.com>

Front panel / Rear panel

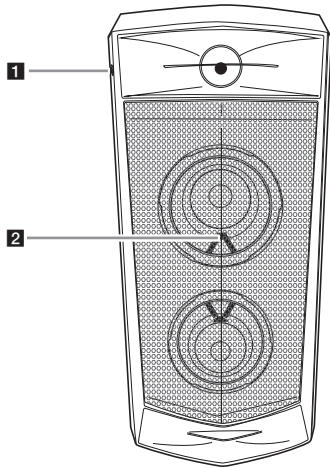


 - 1** MIC (Microphone) jack
- 2** Remote sensor

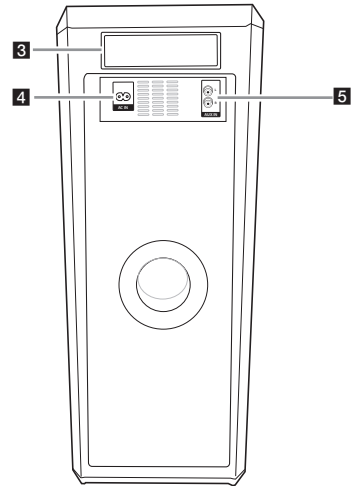

- 3** Handle
- 4** AC IN socket
- 5** AUX IN (L/R)
Connect an auxiliary device.

 How to place the unit

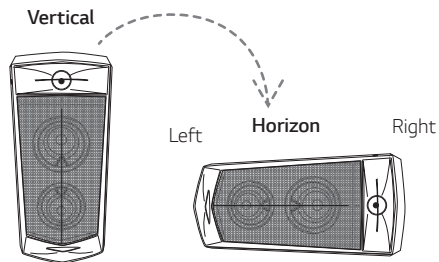

On the horizon mode, you can hear the stereo sound and on the vertical mode, the sound transforms into a mono signal.

Additional Information

Specifications


Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 615 mm x 272 mm x 318 mm
Bus Power Supply (USB)	5 V $\overline{\text{---}}$ 1 A
Amplifier (Total RMS output power)	220 W RMS

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

 Replacement of battery

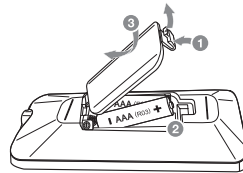

Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type High Power Speaker System is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm