


- A. Programme selector
- B. Time display
- C. "Start delay" button
- D. Programme sequence indicator
- E. "Variable spin" button
- F. "Start/Pause" button
- G. "Reset/Drain" button
- H. "Lid locked" indication

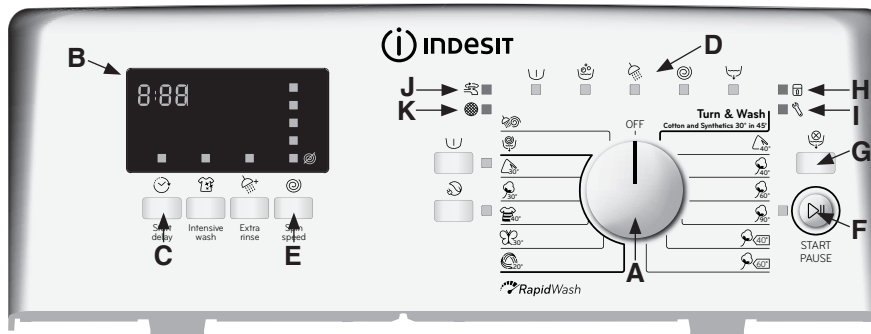

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

- I. "Service" indication
- J. "Water tap closed" indication
- K. "Clean pump" indication






Programme	Care Labels	Max. Load kg	Type of wash / Notes <small>- for temperature selection, respect the manufacturer's recommendations on the care label</small>	Detergents and Additives			Special options					Max. Spin Speed rpm	
				Pre-wash	Main Wash	Softener	Start delay	Intensive wash	Extra rinse	Energy saver	Pre-wash		Spin Speed
<b>Turn &amp; Wash</b> 30°C	<b>Turn &amp; Wash</b> 30°C	3.5	The best daily washing solution. Particularly useful for lightly and normally soiled textiles made of cotton or synthetic fabrics, as it washes at low temperature and at maximum spin speed.	-	Yes	*	*	-	-	-	-	-	1000 <sup>1)</sup>
<b>Synthetics</b> 40°C		3.0	For washing soiled garments made from synthetic fibres (such as polyester, polyacrylic, viscose, etc.) or cotton/synthetic blends.	*	Yes	*	*	*	*	*	*	*	max.
<b>Cotton</b> 40 - 60 - 90°C		max.	From normally to heavily soiled and robust cottons.	*	Yes	*	*	*	*	*	*	*	max.
<b>Eco Cotton</b> 40 - 60°C		max.	For washing normally soiled cotton garments. At 40°C and 60°C, this is the standard cotton programme and the most efficient in terms of water and energy consumption.	-	Yes	*	*	-	*	-	-	*	max.
<b>RapidWash</b>	<b>Wool</b> 20°C	1.0	All wool garments can be washed using programme "Wool" even those carrying the "hand-wash only" label. For best results, use special detergents and <b>do not exceed max kg declaration of laundry.</b>	-	Yes	*	*	-	-	-	-	*	1000 <sup>1)</sup>
	<b>Delicates</b> 30°C	1.5	For washing particularly delicate garments. Preferably turn garments inside out before washing.	-	Yes	*	*	-	-	*	-	*	1000 <sup>1)</sup>
	<b>Colours</b> 40°C	3.5	From lightly to normally soiled laundry made of cotton, synthetics or their blends; also delicates. Helps preserving colours.	-	Yes	*	*	-	*	*	-	*	max.
	<b>Cotton</b> 30°C	3.5	For washing lightly soiled garments quickly. This cycle lasts only 30 minutes, saving time and energy.	-	Yes	*	*	-	-	*	-	*	max.
	<b>Synthetics</b> 30°C	3.0	Enshorted cycle for lightly soiled garments made from synthetic fibres (such as polyester, polyacrylic, viscose, etc.) or cotton/synthetic blends.	-	Yes	*	*	-	*	*	-	*	max.
<i>Spin + Drain</i>		-	max.	Separate intensive spin programme. For robust laundry.	-	-	-	*	-	-	-	*	max.
<i>Rinse + Spin</i>		-	max.	Separate rinse and intensive spin programme. For robust laundry.	-	-	*	*	-	*	-	*	max.

Yes = dosing required / \* = optional

1) For improved garment care, spin speed is restricted in these programmes.


**CONSUMPTION DATA**

Power consumption in off-mode 0.11 W / in left-on mode 0.11 W

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration ☺ (hrs : min)	 %
Turn & Wash	30	3.5	43	0.40	0:45	
Synthetics	40	3.0	45	0.52	1:50	40
Cotton	40	6.0	61	0.97	3:00	57
Cotton	60	6.0	61	1.14	3:00	
Cotton	90	6.0	55*	1.90	2:00	53
Eco Cotton  **	60	6.0	46	0.78	3:30	
Eco Cotton  **	60	3.0	32	0.71	2:45	
Eco Cotton  **	40	6.0	46	0.70	2:30	
Eco Cotton  **	40	3.0	32	0.53	2:00	
Wool	20	1.0	40	0.40	0:35	
Delicates	30	1.5	50	0.50	0:45	
Colours	40	3.5	43	0.47	0:59	
Cotton	30	3.5	42	0.25	0:30	
Synthetics	30	3.0	40	0.31	0:50	

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

 Approximate remaining moisture content (%). After programme end and spinning with maximum selectable spin speed, in default programme setting.

\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\* Reference Programmes for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

**PREPARATION OF THE WASH CYCLE**

1. Load the washing machine, close the drum door and check that it is closed properly.
2. Pour in the detergent and any additives, as described overleaf and in the instruction manual.
3. Close the lid.
4. Turn the **programme selector** to the desired programme and temperature. The time display shows the duration of the chosen programme (in hours and minutes), and the lamp next to the **"Start/Pause"** button flashes. The indication lamp of the predefined spin speed lights up. If you do not start the programme soon after having made your choice, the washing machine will switch off automatically after about a quarter of an hour. Switch on the washing machine again by turning the programme selector back to "Off" and then to the desired programme.

**SELECT ANY DESIRED OPTION**

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

**"Prewash" button**

- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 19 min.

- Do not use liquid detergent for the main wash when activating the Prewash option.

**"Intensive wash" button**

- Choose this option if you use an in-wash additive for stain removal - it will optimize the additive's efficiency to get better wash performance and stain removal.
- Use with the maximum load. Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash.
- May prolong the programme by up to 10 minutes. Appropriate for use of stain removers and bleaches on oxygen basis. Chlorine or perborate bleaches must not be used!

**"Extra Rinse" button**

- Helps to avoid detergent residues in the laundry by extending the rinse phase.
- Particularly suitable for washing baby laundry, for people suffering from allergies and for areas with soft water.

**"Energy Saver" button**

- Saves energy used for water heating while maintaining good wash result.
- Recommended for lightly soiled laundry without stains.
- Make sure that your detergent is suitable for cold wash temperatures (15 or 20 °C).
- Mainly selectable on the lowest temperature step of the programmes.

**"Spin Speed" button**

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

**START DELAY**

To set the selected programme to start at a later time, press the **"Start delay"** button to set the desired delay time. The lamp for the **"Start delay"** option button lights up, and it goes off when the programme starts. Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. The time delay indication on the display disappears when the programme starts and it is replaced by the remaining programme time. Number of hours preselected can be reduced by pressing the **"Start delay"** button again. Do not use liquid detergent when activating this option. To cancel the **"Start delay"** turn the programme selector to another position.

**PROGRAMME START**

Open the tap and press the **"Start/Pause"** button. The blinking light next to the **"Start/Pause"** button becomes constant. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phase is finished, the corresponding indication goes out.

**"LID LOCKED" INDICATION**

After start of a program the lamp lights up to indicate that the lid can not be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

**FAILURE INDICATIONS**


In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

**"Water tap closed"** - 

No or not sufficient inlet water.

**"Service"** - 

Failure or malfunction of an electrical component.

**"Clean pump"** - 

Waste water is not pumped out.

**Spin speed indication blinks:** unbalance during spinning.

**PROGRAMME END**

- The "Lid locked" indication lights off. After about a quarter of an hour, the washing machine will switch off completely to save energy.
1. Turn the programme selector to the "Off" position.
  2. Close the water tap.
  3. Open lid and drum and unload the machine.
  4. Leave the lid open for some time to allow the interior of the machine to dry.

**CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START**

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

**CANCEL A RUNNING PROGRAMME BEFORE THE END**

The **"Reset/Drain"** button cancels a programme before the end.

- Press the **"Reset/Drain"** button for at least 3 seconds. The water is drained out; it may last a while until you can open the lid.