

BOHLT
Electric scooter's manual
EKICK10 PRO

 


User manual
Keep this manual for future reference

WARNING


Wear helmets can save your life!!!

**Always wear a properly the helmet that
complies with CPSC or CE safety standards
when you ride your bicycle.**

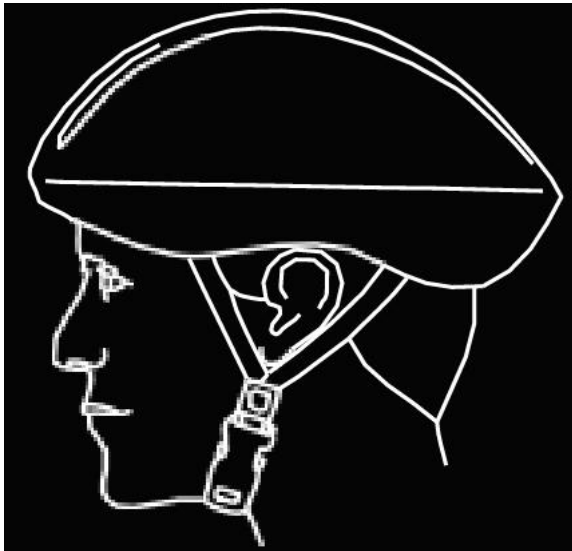

**Correct Fitting:
Make sure your helmet
covers your forehead.**

 **Incorrect Fitting:
Forehead is exposed
and vulnerable to
serious injury.**

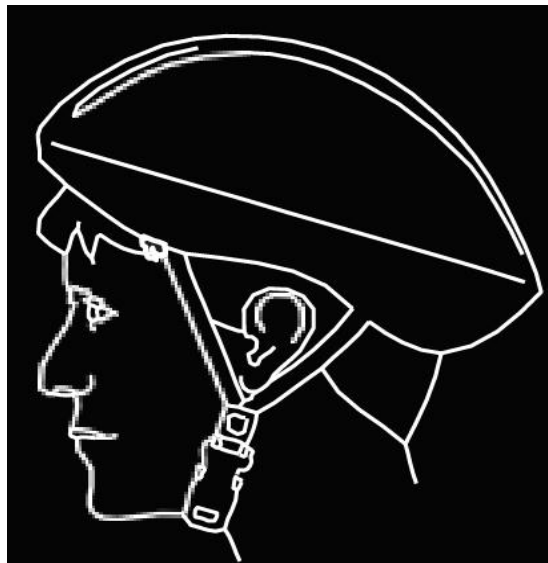

WARNING

As with all mechanical components, the bicycle is subjected to wear and high stresses. Different materials and components may react to wear or fatigue in different ways. If the design life of a component has been exceeded, it may suddenly fail possibly causing injuries to the rider. Any form of crack, scratch or change of coloring in highly stressed areas indicate that the life of the component has been reached and it should be replaced. Do not ride in an abusive manner.

CAUTION

In this manual, the CAUTION sign indicates a hazardous situation which, if not avoided, can cause minor or moderate injury.

WARNING

In this manual, the WARNING sign indicates a hazardous situation which, if not avoided, can cause death or serious injury.

WARNING

Great care should be taken when locking the quick release levers on the bicycle when folding or unfolding. If you do not understand how to operate the levers, contact our Customer Support team.

DO NOT RIDE YOUR CROSSOVER WITHOUT ALL

RELEASES SECURELY LOCKED.

INTRODUCTION

This manual is intended to provide you with all the necessary information for the safe use and maintenance of the eKick 10 PRO. Please read this manual carefully before using eKick 10 PRO.

WARNING
Be sure to read this manual carefully before using the step. Failure to do this can lead to serious bodily injury and even death.

Section One of this manual involves safety and eKick 10 Pro care. Understanding and following this Information will help you and your eKick 10 Pro avoid injury or damage.

Section Two of this manual gives basic instructions on how to fold and unfold your E-scooter.

Section Three of this manual covers specific safety and operating instructions for your eKick 10 Pro. Even if you are an experienced rider, you should review this section before your test ride.

Your serial number is stamped on the bottom of the Steering Column behind the headlight. Record the serial number in this manual below in the event that your e-scooter is lost or stolen.



Make use of a warranty claim

- 1.If you wish to make use of the warranty, please contact our service center via email.
- 2.The supplier will evaluate your problem and try to solve it. If it is determined that the problem is covered by the warranty, you will be assigned a Return Material Authorization Number (RMA) and you will be prompted to return the product.

IMPORTANT: The supplier will only accept returned packages with an RMA number.

Follow the instructions below to return the product.

- 1.Send the product back into a suitable package where shipping and insurance costs are paid. Do not include any accessories (such as cables, manuals, etc) unless expressly requested by the supplier.
- 2.Note the RMA number clearly visible and clearly legible on the outside of the package.
- 3.You must include a copy of the receipt.
- 4.Close a check value of \$ on the name of the supplier.
- 5.When the product has been received, the supplier will meet the warranty conditions and return the product to the sender where the shipping costs and the cost of the insurance are met.

Service beyond warranty

The supplier can reject a claim that is not covered by the warranty.

If the supplier agrees to perform a repair that is not covered by the warranty, the customer will be billed for all repair and shipping costs. The supplier will not accept packages that do not have an RMA number.

Contact us at:

Bohlt BV

Vareseweg 44

3047 AV Rotterdam

The Netherlands

We offer a guarantee on all our products under the following conditions:

1. The warranty does not cover overcharging or damage to batteries installed in the step, resulting from poor maintenance. The warranty does not cover tires and other parts that are considered consumables,

parts that are fragile like glass or plastic or defects due to normal wear and tear. We do not have a warranty obligation in case of minor variations in appearance and performance, unless they adversely affect normal use in case of damage caused by chemical or electrochemistry influence due to water or other abnormal conditions.

2. Under the warranty, the supplier will determine whether the defective parts will be repaired free of charge or that they will be replaced. The supplier reserves the right to replace the product in its entirety for a similar product of the same value if a repair can not be performed within a reasonable period or at reasonable cost. Applications can not be submitted for on-site repair. Parts that have been repaired or replaced become the property of the supplier.
3. The warranty will expire if the repair is performed by persons not authorized by the supplier to perform this repair or if parts have been replaced by parts that are not suitable for our product.
4. If the warranty is used, the warranty will not be renewed or a new warranty period will be entered. If parts are replaced, the warranty period will expire after the warranty period of the entire product.
5. All other claims are excluded, especially in case of replacement of parts from the outside of the step, unless there is mandatory legal liability.

Therefore, we do not accept liability for damage caused by accidents, indirect damage or any other consequential damages that lead to use limitation, data loss, loss of income or work interruption.

Product diagram



1.	Folding handle	7.	Steering column
2.	LCD display	8.	Steering column lock
3.	Fold up switch	9.	Frame folding switch
4.	Switch ON / OFF switch	10.	Head light
5.	Brake	11.	Front damper
6.	Handlebar height adjustment	12.	Kick stand

Warranty

This product is shipped with a 30 day warranty for replacement for defects by the manufacturer. These include engine failures, gyroscopic sensor batteries, etc.

This product comes with a 120 day warranty on parts and labor costs.
Transport and handling fees are not included.
The terms of this warranty and our responsibilities under this warranty are as follows:

The supplier's warranty is not transferable. This warranty applies only to the original buyer.

- * You should be able to show the date of the original purchase by means of the receipt on which the date is stated.
- * The warranty will expire in case of deliberate damage, improper installation or unauthorized modifications or repairs by third parties.
- * The supplier's responsibility for repairs or replacement of the product will be carried out at their sole discretion.
- * In particular, excluded from the warranty are limited durable consumables that are subject to normal wear, such as wheels, decorations and other accessories.
- * The supplier assumes no responsibility if the failure of the device is due to an accident, improper use, or any unauthorized repair, adjustment or disassembly.
- * Adjustments or repairs should only be carried out by authorized personnel or by returning to the supplier.
- * This warranty gives you specific legal rights, in addition, other rights may apply depending on where you live.

These terms and conditions include the requirements and application of our warranty terms and do not affect our legal and contractual warranty obligations.

 
5. Gently squeeze the handbrake until you have fully stopped



- * Do not brake too abruptly, this can lead to injury or damage to the brake discs.

Warning

Any step that does not work properly can make you lose or lose control. Every time you drive, you must fully check the step and correct any defects.

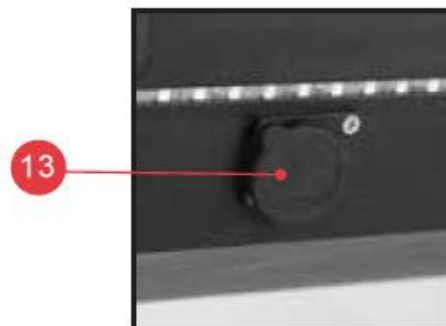

13.	Charge port
14.	Optional seat
15.	Rear brake light
16.	Rear brake

Handlebar diagram



1.	Brake
2.	Handlebar folding switch
3.	Head light ON/OFF switch
4.	Horn
5.	LCD Display
6.	Power button
7.	Throttle
8.	LCD brake light

Ensure your bike is fully unfolded and fully charged. Review all safety precautions before riding.

Find a flat surface with no obstacles. It is important that you familiarize yourself with all features of your e-scooter as shown in the Handlebar Diagram before riding.

 
1. Press and hold the Power Button for 3 seconds. The Essential will turn on.



2. The LCD display will show you the available battery life.



3. Using your thumb, press on the Throttle slowly to move the bike forward. The bike will accelerate in accordance with the turn of the Throttle.

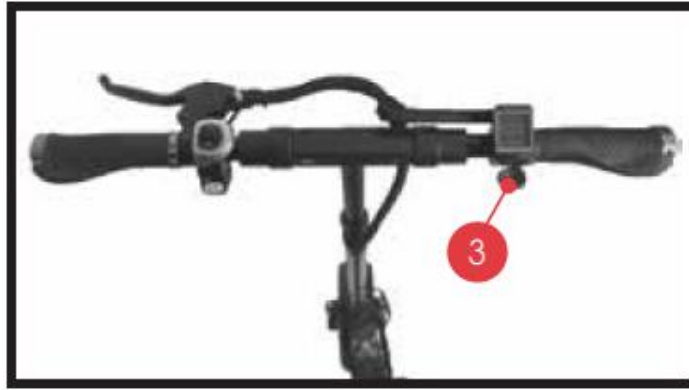

4. Release the Throttle to slow down.

- Never carry other riders or packages as they may obstruct vision or proper control of your Essential.
- Do not ride while intoxicated or while taking medications which can make you drowsy.
- When approaching a descent, decrease your speed.
- Do not abuse your e-scooter.

Warning

There may be additional risk to injury if you use your bike incorrectly. This includes, but is not limited to:

- Jumping your bike
- Riding over debris or obstacles
- Performing stunts
- Riding in off-road terrain
- Riding fast
- Racing other riders
- Riding in unusual manner

The aforementioned examples add stress to each part of your bike and can lead to long term damage of the device. Damage to your bike can lead to an accident or increase your risk of injury. To decrease your risk of injury, use your bike correctly.

Always look ahead to avoid and anticipate any upcoming obstacles. The distance of any upcoming obstacles will vary according to your speed.

Use caution when you encounter road obstacles. If you are going fast, even as small obstacle can create a significant impact to both you and your bike. If you are unsure about your ability to safely ride over an obstacle, it is best to either ride around it, or stop your bike, dismount, and walk your bike around the obstacle.

The natural tendency of riders is to move where they are looking. Avoid focusing on obstacles, even if you are trying to avoid them. Instead, focus on the part of the road where you want to go.

Specifications

Max speed	18.7mph (30km/h)
Endurance Mileage	15.5mi (25km)
Charging time	Max 5 h
Battery Capacity	10Ah
Battery type	Lithium
Nominal Voltage:	36V
Tire Size	10 inch
Motor type	300W DC Brushless Gearless
Brake type	Electric & rear Brake
Electricity Consumption	0.3 kW/h
Over-current Protection:	~15A
Under-voltage Protection:	~30.5V
Max Climbing Angle	< 15°
Tire Pressure:	N/A

Your new e-scooter was assembled and tuned in the factory and then partially disassembled for shipping. You may have purchased the e-scooter already fully assembled and ready to ride, or in the shipping carton in the partially disassembled form.

If you have questions or concerns about any of these steps, please feel free to contact our Customer Service Team. Someone will be in touch to walk you through these steps.

 
Carefully follow the steps shown below for folding and unfolding your e-scooter. Read the remainder of this manual before riding your e-scooter.

Warning
Never attempt to ride the Essential if it is not fully or properly assembled and locked in its unfolded position.

Your eKick 10 Pro will arrive in the box folded. Remove it from the box.



1. Locate and press down on the Frame Folding Switch.

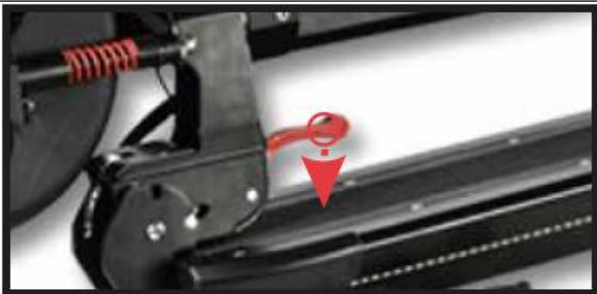

2. Lift the Steering Column so that it sits upright. You should hear it click into an open position.



3. Twist the Steering Column Height Adjuster counterclockwise to loosen it. Lift the Steering Column and tighten the Adjuster when adjusted to your desired height.



4. Unfold the Handlebars until they click open and lock in place.



Your eKick 10 Pro should be fully unfolded and ready to ride.



Your e-scooter is not equipped with reflectors. It is not recommended that you ride your e-scooter in conditions of low visibility.

If you are riding your e-scooter in low-visibility conditions, ensure your headlight is turned on, and that you are wearing bright, reflective clothing.

Warning
When you ride in low-visibility conditions such as fog, dusk, or night, you might be difficult to see, which could lead to a collision. In addition to keeping your headlight on, wear bright, reflective clothing when riding in poor lighting conditions.

Think about safety when you ride. You can prevent many accidents if you think about safety. Below is a helpful checklist for Essential riders.

Safety checklist

Check your bike before every ride, making sure brakes are operating effectively and everything is in good working condition.

- Do not ride “no hands.” Always keep both hands on the handlebars.
- Do not ride “double” with more than one adult rider on the seat.
- Avoid riding in large groups, as this can force you to ride too close to other riders, making it difficult to see other vehicles and road hazards.
- Do not ride above your skill level. Ensure you have had enough practice with all functions and features of your e-scooter.
- Do not ride too fast -- with increased speed comes increased risk. If you are moving at a higher speed, small bumps can turn into large impacts, leading to a higher risk of injury if an accident occurs.
- Do not ride with loose objects attached to the handlebars or other parts of the bike.
- Do not ride your bike with any pets leashed to your bike.

Warning
<p>Proper use of your brake is vital to ensure safe, effective stopping. To avoid misuse and potential injury, do not apply sudden or excessive force to your brakes. Apply your brakes gradually and give yourself enough room to come to a complete stop safely.</p>

- Watch for cars pulling out into traffic and for the sudden opening of car doors.

- Avoid potholes, drainage grates or other road surface hazards.

- Cross railroad tracks at a right angle.

- Be careful when riding on soft road edges, gravel, sand and uneven surfaces. Ride slowly and avoid quick turns when riding on these surfaces.

- Never hitch onto other vehicles.

- Do not “stunt” ride or race in traffic.

- Do not weave in and out of traffic or swerve from side to side.

- A crash can put extraordinary stress on eKick 10 Pro's components, possibly causing them to fatigue prematurely. Components surface from stress fatigue can fail suddenly, causing loss of control, or serious injury.

CAUTION: RIDING IN WET WEATHER

Brakes do not work as well under wet conditions as they do when dry. It is recommended that you do not ride your bike in wet weather, as there are electronic components of your bike that may be damaged if exposed to water.

INCLUSIONS OF YOUR EKICK10PRO

Before you step in, check that it has been disabled. If you have mounted the optional saddle, you must disassemble it first. Look at the optional saddle section for the instructions.

 
1. Put the handlebar folding switch outward and fold your handlebar down.



2. Twist the Steering Column Height Adjuster counterclockwise to loosen it.




3. Locate the Steering Column Lock and press down to loosen it. With the Steering Column Lock pushed down, push the Steering Column down to its lowest height. The Steering Column Lock will click and lock in place.

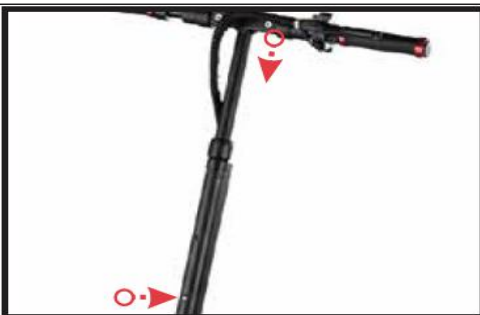

4. Adjust the steering column lock so that it can not move.

 5. Locate and press down on the Frame Folding Switch.

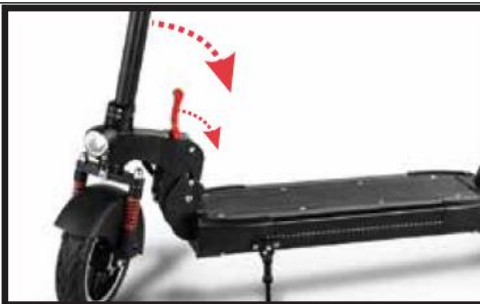

6. Fold the Steering column backwards towards the base of your Essential. Your Essential should appear folded as shown below.



Safety instructions

The first rule in safe riding is to use common sense. A eKick 10 Pro is vulnerable; it cannot protect you in a crash, against impact, or lose of control the way driving a car can. An bike can tip over sideways or pitch you over the front wheel. It moves faster than a typical bicycle. It does not have bumpers or airbags as a car does. This section is a guide of safe riding practices for on and o-road operation. Make sure you are using your eKick 10 Pro properly.

Different localities and countries have different laws governing riding on public roads, and you should check with local organization to ensure you are complying with these laws.

Hype is not liable for tickets or violations given to riders or who do not follow these regulations.

- For your safety, always wear a helmet that meets CPSC or CE safety standards. In the event of an accident, a helmet can protect you from serious injury and in some cases, even death.
- Obey all local legal. Obey red and green lights, one-way streets, stop signs, pedestrian crosswalks, etc.
- Ride with the traffic, not against it.
- If riding with friends, ride in a single and straight line.
- Have a satisfactory signaling device (bell, horn, etc.) to warn drivers and pedestrians of your approach.
- Ride defensively; expect the unexpected.

- Give pedestrians the right-of-way.
- Do not ride too close to pedestrians and alert them if you intend to pass them from behind.
- Slow down at all street intersections and look to the left and right before crossing.
- Always use proper hand signals for turning and stopping. Give signals 100ft before stopping or turning and always return both hands to the handle bars before stopping or turning.
- Make sure your eKick 10 Pro is fully extended in the unfolded position.
- Check to ensure the tires are not worn.
- Check to ensure all connections are maintained on the eKick 10 Pro.
- Ensure the read-outs on the LCD screen of your eKick 10 Pro are visible.
- Ensure the brake cables are well lubricated. It is suggested you lubricate brakes every 6 months.

CHECKING BRAKES

A cable connects the Brake lever to your brakes. The lever causes the brake pads to apply pressure to the rims of your wheels.

Pull the lever to ensure the brake moves freely and stops the eKick 10 Pro. If the lever can be pulled at to the handlebar, the brake is too loose.

When brakes are not applied, brake pads should be 1 - 2mm from the rim of each wheel. If brake pads are too near the rim, the brake is too tight. The brake pads should be in line with the rim surface.

Adjust your brake controller to improve brake sensitivity. Brakes will wear down over time. If after you have adjusted brake sensitivity, you feel that the brakes are not performing well, you may need to have brake discs replaced.

CAUTION

Disc brakes and discs get very hot during use and could burn skin. The disc edges can also be very sharp and cut skin. Do not touch the disc or disc brake directly after riding your Essential.

OPTIONAL SEAT

 
This eKick 10 Pro model comes with an optional seat. Follow the below instructions on how to install/uninstall the Optional Seat.

Installing the optional seat

1. Carefully remove the optional seat from packaging.



2. Using the provided allen wrench, remove the four (4) screws on the rear of the eKick 10 Pro platform.

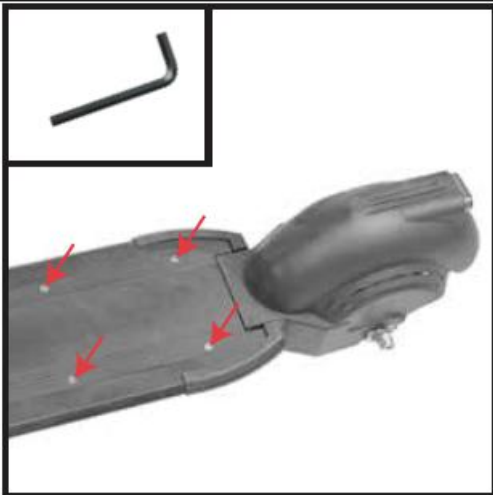

3. Align the four (4) slots on the base of the optional seat with the same four (4) screw holes from the Essential's platform in the previous step.



4. Place the four (4) screws through the slots on the base of the optional seat and into the screw holes of the Essential's platform.

5. Screw the screws by means of the hex wrench so that everything is firmly attached.

Once you have mounted the optional saddle, the step should now look like the picture below.



Before riding, check that the saddle is firmly mounted.

Dismantle the optional saddle

1. Screw the four (4) screws from the base of the saddle, using the hex wrench.
2. Remove the optional saddle of the footplate.
3. Replace the four (4) screws in the footplate holes.
4. Screw the four screws (4) using the hex wrench. Make sure that the screws are tight before driving.

* Save the spanner for future use.
Position options for driving.

Before riding

Warning
Any bicycle that does not work properly can cause you to lose control and fall. Inspect the entire bike thoroughly before every ride, and do not ride it until any problems have been corrected.

Use of your eKick 10 PRO

It's important that you know how your electrical step works. If you do not know all the features of the step, you may lose control during use. Practice a couple of times in a quiet environment and do not drive too hard to get to know the features and features of the step.

A checklist before using the electric step.

Before using the step, make sure that all features work properly. If this is not the case, please contact our customer service.

Warning
Any step that does not work properly can make you lose or lose control. Every time you drive, you must fully check the step and correct any defects. If a component is defective, first replace it.

- * Always check that the battery is fully charged before driving.
- * If the step will not be used for a long period of time, you should charge the battery every 2 months for a longer life.
- * Check every time you drive, or tighten the screws on the front and rear wheels.
- * The battery contains hazardous substances, never open the batteries and never insert anything into the batteries.
- * Use only the included charger.
- * Never attempt to charge the battery if it leaks or if it releases another substance. In this case, keep the battery remotely as there may be a risk of fire or explosion.
- * Lithium-ion battery is considered dangerous material. Always follow the instructions of the local authorities regarding the disposal of the batteries.

Warning
If you are exposed to a substance from the battery, seek medical attention immediately.

Riding Option

A. Ride your eKick 10 Pro while standing.



B. Attach the Optional Seat to ride your eKick 10 Pro while sitting in comfort!



* Please refer to the Optional Seat section for installation instructions.

Battery Care

The lithium-ion battery is built into the device. Do not disassemble the device to remove the battery or attempt to separate it from the device.

- When charging the device, please use the enclosed 3-pin charging cable or otherwise ensure that the battery charging conditions are met.
- Do not connect or attach the device or the battery to a power supply plug or directly to a car's cigarette lighter.
- Do not place the device or batteries near or into direct sunlight. Heating the device and/or the battery can cause additional heating, breaking, or ignition of the battery inside the device.
- Do not continue charging the battery if it does not recharge within the specified charging time. Doing so may cause the battery to become hot, rupture, or ignite.

To preserve natural resources, please recycle or dispose of batteries properly. This product contains lithium-ion batteries. Local, state, or federal laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

Warning
Failure to follow the safety precautions listed below could lead to serious bodily injury and/or death.

- Do not attempt to modify, change, or replace your battery.
- Do not use your device if the battery begins to emit odor, overheats, or begins to leak.
- Do not touch any leaking materials or breathe fumes emitted.
- Do not allow children and animals to touch the battery.

Charging can take up to 5 hours for a full charge. The charger is equipped with an over-current protector and the charging current should be below 3A. Heavier or unstable currents will damage the Essential and shorten the battery's lifespan.

Caution
Only use the enclosed charging cable and charger to charge your Essential. Using any other unauthorized charger may damage your e-scooter.

Pinch Points

Some parts of your eKick 10 Pro can injure you if mishandled. Moving and folding parts can cut skin. Clamps and pivoting parts such as brake levers can pinch. When folding and unfolding your eKick 10 Pro, Please watch for pinch points where possible injury may be sustained.

Do not leave your hand in these areas during folding or unfolding.



 
LCD display

Familiarize yourself with the LCD display of this eKick 10 Pro. If the readout of the LCD display of your eKick 10 Pro is unclear, you may need to recharge your eKick 10 Pro.

Press and hold the Power button for 3 seconds to turn on your eKick 10 Pro. Press and hold the LCD Backlight button to turn on the LCD Display's light. Press the Power/Mode button to cycle through 3 readouts.


TRIP - Tripometer - Trip Distance ODO - Odometer - Total Travel Distance TM - Timer - Trip Time in Minutes

The Tripometer and Timer will reset itself each time the eKick 10 Pro is turned on and turned back on.

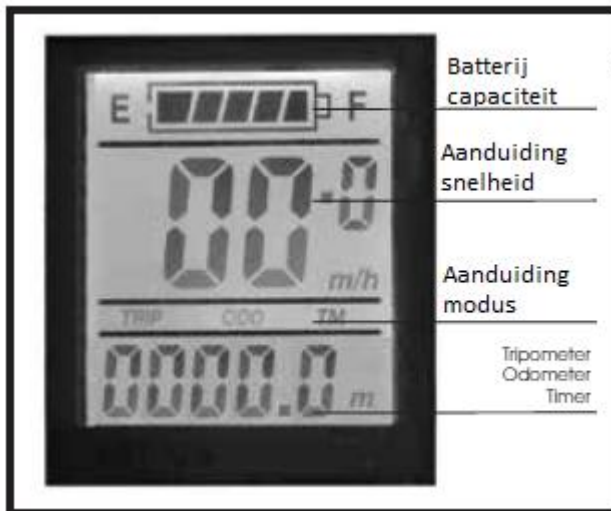


Powering your eKick 10 Pro

 Locate the charging Port Flap on the bottom of your eKick 10 Pro.

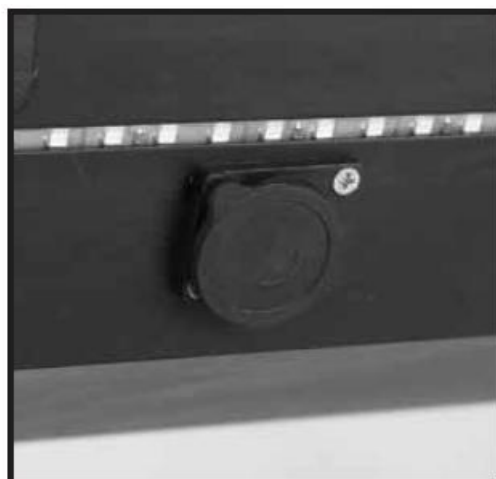

 Rotate the flap to reveal the charging port.

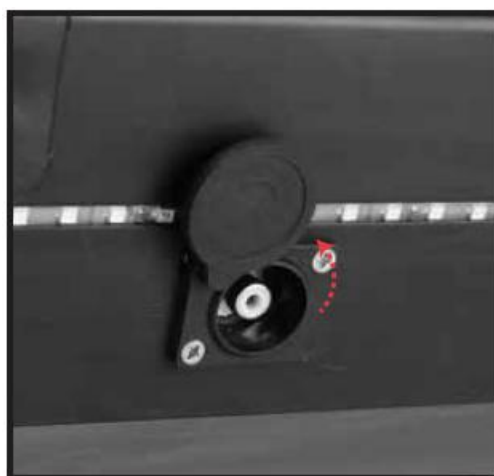

Using the enclosed cable, attach the charging cable to your eKick 10 pro by aligning the cable pins. Plug the other end into a grounded wall outlet.

The red LED light will turn on and remain lit while your eKick 10 Pro is charging.

