

# Inspiron 14 7000

## Setup and Specifications

**Computer Model:** Inspiron 14-7472  
**Regulatory Model:** P74G  
**Regulatory Type:** P74G001



# Notes, cautions, and warnings

---



**NOTE:** A NOTE indicates important information that helps you make better use of your product.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

---

**Copyright © 2017 Dell Inc. or its subsidiaries. All rights reserved.** Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2017 - 09

Rev. A00

# Contents

- Set up your computer..... 5**
- Create a USB recovery drive for Windows..... 8**
  - Reinstall Windows using a USB recovery drive..... 8
- Views.....10**
  - Front..... 10
  - Left..... 10
  - Right..... 11
  - Base..... 12
  - Display..... 13
  - Bottom..... 14
- Specifications.....15**
  - Computer model..... 15
  - System information..... 15
  - Operating system..... 15
  - Dimensions and weight..... 15
  - Memory..... 16
  - Ports and connectors..... 16
  - Communications..... 17



Wireless module.....	17
Audio.....	17
Storage.....	18
Media-card reader.....	18
Keyboard.....	18
Camera.....	19
Touchpad.....	19
Battery.....	20
Display.....	20
Power adapter.....	21
Video.....	22
Computer environment.....	22
<b>Keyboard shortcuts.....</b>	<b>23</b>
<b>Getting help and contacting Dell.....</b>	<b>25</b>
Self-help resources.....	25
Contacting Dell.....	26



# Set up your computer

---

 
- 1 Connect the power adapter and press the power button.



2 Finish operating system setup.


**For Windows:**

- a) Connect to a network.

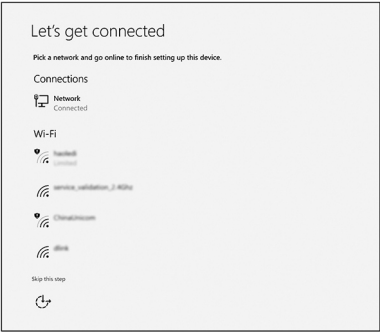

**NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.**

 - b) Sign in to your Microsoft account or create a new account.

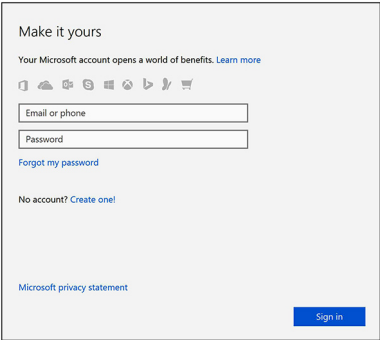

**For Ubuntu:**

Follow the instructions on the screen to finish setup.



3 Explore Dell resources on your desktop.


**Table 1. Locate Dell apps**



Register your computer



 
Dell Help & Support

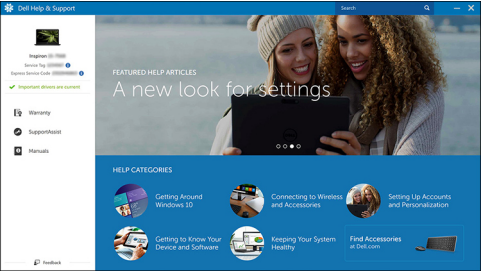

SupportAssist — Check and update your computer

4 Create recovery drive for Windows.

 **NOTE: It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.**

For more information, see [Create a USB recovery drive for Windows](#).



# Create a USB recovery drive for Windows

---

Dell recommends that you create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.



**NOTE:** The following steps may vary depending on the version of Windows installed. Refer to the [Microsoft support site](#) for latest instructions.

- 1 Connect the USB flash drive to your computer.
- 2 In Windows search, type `Recovery`.
- 3 In the search results, click **Create a recovery drive**.  
The **User Account Control** window is displayed.
- 4 Click **Yes** to continue.  
The **Recovery Drive** window is displayed.
- 5 Select **Back up system files to the recovery drive** and click **Next**.
- 6 Select the **USB flash drive** and click **Next**.  
A message appears, indicating that all data in the USB flash drive will be deleted.
- 7 Click **Create**.



**NOTE:** This process may take several minutes to complete.

- 8 Click **Finish**.

## Reinstall Windows using a USB recovery drive



**CAUTION:** This process formats the hard drive and removes all data on your computer. Ensure that you back up data on your computer before beginning this task.



**NOTE:** Before reinstalling Windows, ensure your computer has more than 2 GB of memory and more than 32 GB of storage space.

- 1 Connect the USB recovery drive to your computer.
- 2 Restart your computer.

 


- 3 Press F12 after the Dell logo is displayed on the screen to access the boot menu.  
A **Preparing one-time boot menu** message appears.
- 4 After the boot menu loads, select the USB recovery device under **UEFI BOOT**.  
The system reboots and a screen to **Choose the keyboard layout** is displayed.
- 5 Choose your keyboard layout.
- 6 In the **Choose an option** screen, click **Troubleshoot**.
- 7 Click **Recover from a drive**.
- 8 Choose one of the following options:
  - **Just remove my files** to do a quick format.
  - **Fully clean the drive** to do a complete format.
- 9 Click **Recover** to start the recovery process.  
This will take several minutes to complete and your computer will restart during this process.



# Views

## Front

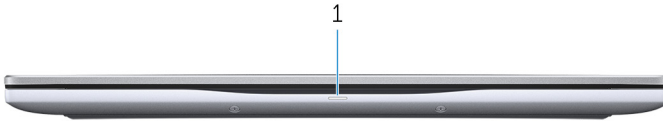

### 1 Power and battery-status light/hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.



**NOTE:** Press **Fn+H** to toggle between the power and battery-status light, and hard-drive activity light.

#### Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.

#### Power and battery-status light

Indicates the power and battery-charge status.

 
**Solid white** — Power adapter is connected and the battery has more than 5% charge.

**Amber** — Computer is running on battery and the battery has less than 5% charge.

#### Off

- Power adapter is connected and the battery is fully charged.
- Computer is running on battery and the battery has more than 5% charge.
- Computer is in sleep state, hibernation, or turned off.

## Left

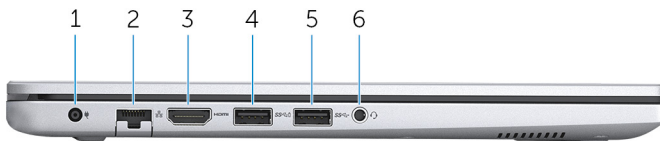

1 **Power-adaptor port**

Connect a power adapter to provide power to your computer and charge the battery.

2 **Network port**

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

3 **HDMI port**

Connect a TV or another HDMI-in enabled device. Provides video and audio output.

4 **USB 3.1 Gen 1 port with PowerShare**

Connect peripherals such as storage devices and printers.

Provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.



**NOTE: If your computer is turned off or in hibernate state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.**



**NOTE: Certain USB devices may not charge when the computer is turned off or in sleep state. In such cases, turn on the computer to charge the device.**

 
5 **USB 3.1 Gen 1 port**

Connect peripherals such as storage devices and printers. Provides data transfer speeds up to 5 Gbps.

6 **Headset port**

Connect headphones or a headset (headphone and microphone combo).

## Right

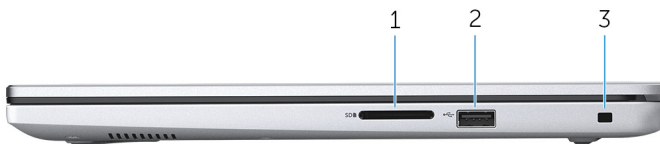

1 **SD-card slot**

Reads from and writes to the SD card.

2 **USB 2.0 port**

Connect peripherals such as storage devices and printers. Provides data transfer speeds up to 480 Mbps.

3 **Security-cable slot**

Connect a security cable to prevent unauthorized movement of your computer.

## Base



1 **Left-click area**

Press to left-click.

2 **Touchpad**

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two finger tap to right-click.

3 **Right-click area**

Press to right-click.

4 **Power button**

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

Press to put the computer in sleep state if it is turned on.

Press and hold for 4 seconds to force shut-down the computer.



**NOTE:** You can customize the power-button behavior in Power Options. For more information, see *Me and My Dell* at [www.dell.com/support/manuals](http://www.dell.com/support/manuals).

## Display



### 1 **HD Camera**

Enables you to video chat, capture photos and record videos in high-definition.

### 2 **Camera-status light**

 
Turns on when the camera is in use.

### 3 **Digital-array microphones (2)**

Provide digital sound input for audio recording, voice calls, and so on.



## Bottom

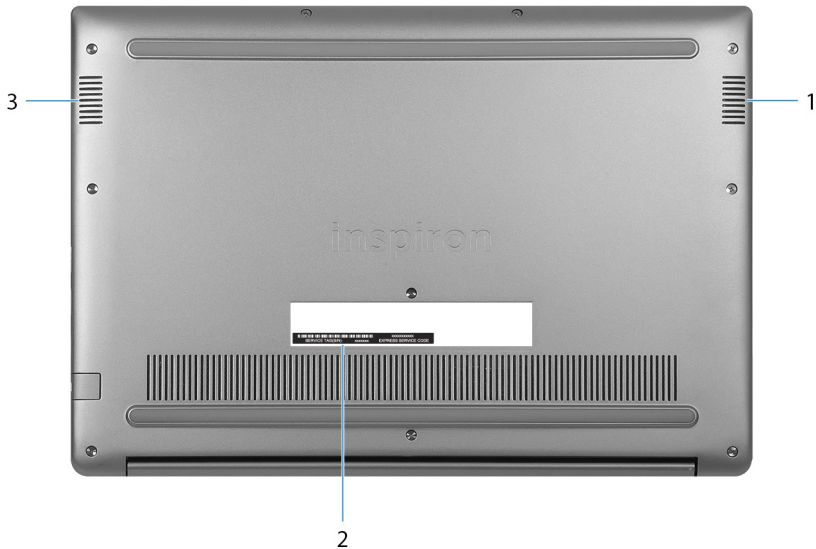

**1 Right speaker**

Provides audio output.

**2 Service Tag label**

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

**3 Left speaker**

Provides audio output.

# Specifications

---

## Computer model

**Table 2. Computer model**

Computer model	Inspiron 14-7472
----------------	------------------

## System information

**Table 3. System information**

Processor	8 <sup>th</sup> generation Intel Core i5/i7
Chipset	Integrated in the processor

## Operating system

**Table 4. Operating system**

Operating systems supported	<ul style="list-style-type: none"><li>• Ubuntu</li><li>• Windows 10 Value Plus</li><li>• Windows 10 Pro Standard</li><li>• Windows 10 Home Standard</li><li>• Windows 10 Home Plus</li></ul>
-----------------------------	--

## Dimensions and weight

**Table 5. Dimensions and weight**

Height	18.95 mm (0.75 in)
Width	323.30 mm (12.73 in)
Depth	227.10 mm (8.94 in)
Weight (approximate)	1.60 kg (3.53 lbs)





**NOTE:** The weight of your computer varies depending on the configuration ordered and the manufacturing variability.

## Memory

**Table 6. Memory specifications**

Slots	One SODIMM slot
Type	DDR4
Speed	2400 MHz
Configurations supported	
Per memory module slot	4 GB, 8 GB, and 16 GB
Total memory	4 GB, 8 GB, and 16 GB

## Ports and connectors

**Table 7. External ports and connectors**

External:	
Network	One RJ-45 port
USB	<ul style="list-style-type: none"><li>• One USB 2.0 port</li><li>• One USB 3.1 Gen 1 port</li><li>• One USB 3.1 Gen 1 port with PowerShare</li></ul>
Audio/Video	<ul style="list-style-type: none"><li>• One HDMI 1.4a port</li><li>• One headset (headphone and microphone combo) port</li></ul>

**Table 8. Internal ports and connectors**

Internal:	
M.2 card	<ul style="list-style-type: none"><li>• One M.2 slot for SSD card (SATA)</li></ul>





---

**Internal:**

---

- One M.2 slot for WiFi/Bluetooth

# Communications

**Table 9. Supported Communications**

Ethernet	100/1000 Mbps Ethernet controller integrated on system board
Wireless	<ul style="list-style-type: none"><li>• WiFi 802.11ac</li><li>• Bluetooth 4.1/Bluetooth 4.2</li></ul> <div> <b>NOTE: Windows 10 currently supports up to Bluetooth 4.1.</b></div>

## Wireless module

**Table 10. Wireless module specifications**

Transfer rate	Up to 867 Mbps
Frequency bands supported	Dual band 2.4 GHz/5 GHz
Encryption	<ul style="list-style-type: none"><li>• 64-bit and 128-bit WEP</li><li>• TKIP</li><li>• AES-CCMP</li></ul>

# Audio

**Table 11. Audio specifications**

Controller	Realtek ALC3246 with Waves MaxxAudio Pro
Speakers	Two
Speaker output	
Average	2 W



Peak	2.5 W
Microphone	Digital-array microphones
Volume controls	Media-control shortcut keys

## Storage

**Table 12. Storage specifications**

Interface	<ul style="list-style-type: none"> <li>SATA 6 Gbps</li> <li>PCIe/NVMe</li> </ul>
Hard drive	One 2.5-inch drive (SATA)
Solid-state drive	One M.2 drive (SATA or PCIe/NVMe)
Capacity	
Hard drive	Up to 1 TB
SSD	<ul style="list-style-type: none"> <li>SATA: Up to 256 GB</li> <li>PCIe/NVMe: Up to 512 GB</li> </ul>

## Media-card reader

**Table 13. Media-card reader specifications**

Type	One 2-in-1 slot
Cards supported	<ul style="list-style-type: none"> <li>Secure Digital (supports SD 3.0)</li> <li>Multimedia Card (MMC)</li> </ul>

## Keyboard

**Table 14. Keyboard specifications**

Type	<ul style="list-style-type: none"> <li>Non-backlit keyboard</li> </ul>
------	--



Shortcut keys

- Backlit keyboard

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.



**NOTE: Press Fn+Esc to switch the primary behavior of the function keys (F1–F12) between two modes – multimedia key mode and function key mode.**



**NOTE: You can define the primary behavior of the function keys (F1–F12) by changing Function Key Behavior in BIOS setup program.**

[Keyboard shortcuts](#)

# Camera

**Table 15. Camera specifications**

Resolution

- Still image: 1 megapixel
- Video: 1280 x 720 (HD) at 30 fps

Diagonal viewing angle

74.6 degrees

# Touchpad

**Table 16. Touchpad**

Resolution

- Horizontal: 1228
- Vertical: 748

Dimensions

- Width: 105 mm (4.14 in)



- Height: 65 mm (2.56 in)

## Battery

**Table 17. Battery specifications**

Type	3-cell “smart” lithium-ion (42 WHr)
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Life span (approximate)	300 discharge/charge cycles
Temperature range: Operating	0°C to 35°C (32°F to 95°F)
Temperature range: Storage	–40°C to 65°C (–40°F to 149°F)
Operating time (approximate)	4 hours (when the computer is off)
Coin-cell battery	CR-2032
Dimensions	
Width	97.15 mm (3.82 in)
Depth	184.15 mm (7.25 in)
Height	5.90 mm (0.23 in)
Weight (maximum)	0.20 kg (0.44 lb)
Voltage	11.40 VDC

## Display

**Table 18. Display specifications**

Type	14-inch FHD non-touch screen IPS (In-plane switching) panel
Resolution (maximum)	1920 x 1080
Viewing angle (Left/Right/Up/Down)	85/85/85/85
Pixel pitch	0.161 mm



Refresh rate	60 Hz
Operating angle	85 degrees
Controls	Brightness can be controlled using shortcut keys
Dimensions	
Height (excluding bezel)	173.95 mm (6.85 in)
Width (excluding bezel)	309.40 mm (12.18 in)
Diagonal (excluding bezel)	355.60 mm (14 in)

## Power adapter

**Table 19. Power adapter specifications**

Type	45W	65W
Input current (maximum)	1.30 A	1.50 A
Output current (continuous)	2.31 A	3.34 A
Diameter (connector)	4.5 mm	
Input voltage	100 VAC–240 VAC	
Input frequency	50 Hz–60 Hz	
Rated output voltage	19.50 VDC	
Temperature range: Operating	0°C to 40°C (32°F to 104°F)	
Temperature range: Storage	–40°C to 70°C (–40°F to 158°F)	



# Video

Table 20. Video specifications

	Integrated	Discrete
Controller	Intel UHD Graphics 620	NVIDIA GeForce MX150
Memory	Shared system memory	Up to 2 GB GDDR5

# Computer environment

**Airborne contaminant level:** G1 as defined by ISA-S71.04-1985

Table 21. Computer environment

	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	–40°C to 65°C (–40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G‡
Altitude (maximum)	–15.2 m to 3048 m (–50 ft to 10,000 ft)	–15.2 m to 10,668 m (–50 ft to 35,000 ft)

\* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

‡ Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.



# Keyboard shortcuts


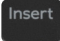

 

 



 



 

 

 

 


**NOTE:** Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

**Table 22.** List of keyboard shortcuts

Keys	Description
	Mute audio
	Decrease volume
	Increase volume
	Play previous track/chapter
	Play/Pause
	Play next track/chapter
	Switch to external display
	Search
	Toggle keyboard backlight (optional)
	Decrease brightness
	Increase brightness
+	Turn off/on wireless
+	Pause/Break



Keys	Description
 + 	Sleep
 + 	Toggle scroll lock
 + 	Toggle between power and battery-status light/hard-drive activity light
 + 	System request
 + 	Open application menu
 + 	Toggle Fn-key lock
 + 	Page up
 + 	Page down
 + 	Home
 + 	End




# Getting help and contacting Dell

## Self-help resources

You can get information and help on Dell products and services using these self-help resources:

**Table 23. Self-help resources**

Information about Dell products and services	<a href="http://www.dell.com">www.dell.com</a>
Dell Help & Support app	
Accessing help	In Windows search, type Help and Support, and press Enter.
Online help for operating system	<a href="http://www.dell.com/support/windows">www.dell.com/support/windows</a> <a href="http://www.dell.com/support/linux">www.dell.com/support/linux</a>
Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.	<a href="http://www.dell.com/support">www.dell.com/support</a>
Dell knowledge base articles for a variety of computer concerns.	<ol style="list-style-type: none"><li>1 Go to <a href="http://www.dell.com/support">www.dell.com/support</a>.</li><li>2 Type the subject or keyword in the <b>Search</b> box.</li><li>3 Click <b>Search</b> to retrieve the related articles.</li></ol>
Learn and know the following information about your product: <ul style="list-style-type: none"><li>• Product specifications</li><li>• Operating system</li><li>• Setting up and using your product</li><li>• Data backup</li><li>• Troubleshooting and diagnostics</li></ul>	<p>See <i>Me and My Dell</i> at <a href="http://www.dell.com/support/manuals">www.dell.com/support/manuals</a>.</p> <p>To locate the <i>Me and My Dell</i> relevant to your product, identify your product through one of the following:</p> <ul style="list-style-type: none"><li>• Select <b>Detect Product</b>.</li></ul>



- Factory and system restore
- BIOS information
- Locate your product through the drop-down menu under **View Products**.
- Enter the **Service Tag number** or **Product ID** in the search bar.

## Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [www.dell.com/contactdell](http://www.dell.com/contactdell).



**NOTE: Availability varies by country and product, and some services may not be available in your country.**



**NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.**