


- A. Programme selector
- B. Temperature, Time
- C. "Start delay" button
- D. Programme sequence indicator
- E. "Spin" button (incl. Rinse hold)
- F. "Start/Pause" button
- G. "Reset/Drain" button
- H. "Temperature" button
- I. "Soil level" button
- J. Child lock button combination
- K. Detergent overdosage indication
- L. "Door locked" indication

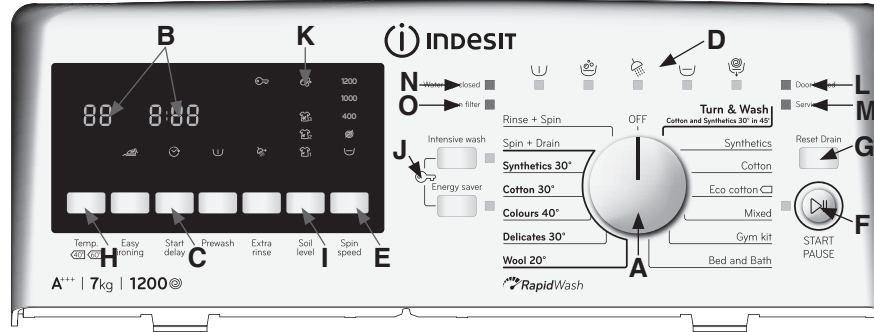

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:


- M. "Service" indication
- N. "Water tap closed" indication
- O. "Clean pump" indication

Programme	Care Labels	Max. Load kg	Type of wash / Notes <small>- for temperature selection, respect the manufacturer's recommendations on the care label</small>	Detergents and Additives			Special options							Max. Spin Speed rpm	
				Pre-wash	Main Wash	Softener	Easy Ironing	Start delay	Pre-wash	Extra Rinse	Soil Level	Rinse Hold / Spin Speed	Energy Saver		Intensive wash
Turn & Wash 30°C	Turn & Wash 30°C	3,5	The best daily washing solution. Particularly useful for lightly and normally soiled textiles made of cotton or synthetic fabrics, as it washes at low temperature and a maximum spin speed.	-	Yes	*	-	*	-	-	*	-	-	-	1000 ¹⁾
Synthetics cold - 60°C	Sintetici freddo - 60°C	3.0	For washing soiled garments made from synthetic fibres (such as polyester, polyacrylic, viscose, etc.) or cotton/synthetic blends.	*	Yes	*	*	*	*	*	*	*	*	*	max.
Cotton cold - 95°C	Cotone freddo - 95°C	max.	Normally to heavily soiled and robust cottons .	*	Yes	*	*	*	*	*	*	*	*	*	max.
Eco Cotton 40 - 60°C	Cotone Eco 40 - 60°C	max.	For washing normally soiled cotton garments. At 40°C and 60°C, this is the standard cotton programme and the most efficient in terms of water and energy consumption. - Reference programme for the Energy Label.	-	Yes	*	-	*	-	*	*	*	*	-	max.
Mixed cold - 40°C	Misti freddo - 40°C	max.	For washing mixed fabrics garments or for mixed load of cotton and synthetics, preserving fibers.	*	Yes	*	-	*	*	*	*	*	*	-	max.
Gym kit 40 - 60°C	Kit Palestra 40 - 60°C	3,5	Normally soiled and sweaty sportswear made of cotton jersey or microfibers. Includes a prewash cycle – you can add detergent also to the prewash chamber. Do not use softener.	*	Yes	-	-	*	*	*	*	*	*	-	1000 ¹⁾
Bed and Bath cold - 60°C	Lenzuola e Asciugamani freddo - 60°C	3.5	White or coloured bed linen made of cotton and synthetic fibers, or blends of both. Reduces microbes and gently cleans, also delicate bed linen. A thorough rinse phase helps to prevent detergent and pollen residues. Prefer powder detergent for this programme.	*	Yes	*	*	*	*	*	*	*	*	-	max.
RapidWash	Wool 20°C	Lana 20°C	1.0	All wool garments can be washed using programme "Wool" even those carrying the "hand-wash only" label. For best results, use special detergents and do not exceed max kg declaration of laundry.	-	Yes	*	-	*	-	*	*	*	-	1000 ¹⁾
	Delicates 30°C	Delicati 30°C	1.5	For washing particularly delicate garments. Preferably turn garments inside out before washing.	-	Yes	*	-	*	-	*	*	*	-	1000 ¹⁾
	Colours 40°C	Colorati 40°C	3,5	From lightly to normally soiled laundry made of cotton, synthetics or their blends; also delicates. Helps preserving colours.	-	Yes	*	*	*	-	*	*	*	-	max.
	Cotton 30°C	Cotone 30°C	3.5	For washing lightly soiled garments quickly. This cycle lasts only 30 minutes, saving time and energy	-	Yes	*	-	*	-	*	*	*	-	max.
	Synthetics 30°C	Sintetici 30°C	3.0	Enshorted cycle for lightly soiled garments made from synthetic fibres (such as polyester, polyacrylic, viscose, etc.) or cotton/synthetic blends.	-	Yes	*	-	*	-	*	*	*	-	max.
Rinse + Spin	Risciacquo + Centrifuga	-	max.	Separate rinse and intensive spin programme. For robust laundry.	-	-	*	-	*	-	*	-	-	-	max.
Spin + Drain	Risciacquo + Scarico	-	max.	Separate intensive spin programme. For robust laundry.	-	-	-	-	*	-	-	-	-/*	-	max.

Yes = dosing required / i = optional
 1) For improved garment care, spin speed is restricted in these programmes.


CONSUMPTION DATA

Power consumption in off-mode 0.11 W / in left-on mode 0.11 W

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration ☺ (hrs : min)	 %
Turn & Wash	30	3.5	43	0.40	0:45	40
Synthetics	60	3.0	54*	0.89	2:05	
Synthetics	40	3.0	50	0.56	1:50	
Cotton	95	7.0	58*	2.10	2:35	64
Cotton	60	7.0	52	1.33	2:35	
Cotton	40	7.0	64	0.99	3:00	
Eco Cotton ☐**	60	7.0	48	0.90	4:00	62
Eco Cotton ☐**	60	3.5	34	0.75	2:50	
Eco Cotton ☐**	40	7.0	48	0.75	2:45	
Eco Cotton ☐**	40	3.5	34	0.65	2:30	
Mixed	40	7.0	55	0.80	2:00	
Gym kit	40	3.5	57	0.75	1:30	
Bed and Bath	60	3.5	55	1.10	2:00	
Wool	20	1.0	40	0.10	0:35	
Delicate	30	1.5	50	0.50	0:45	
Colours	40	3.5	40	0.47	0:59	
Cotton	30	3.5	42	0.25	0:30	
Synthetics	30	3.0	40	0.31	0:50	

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

 Approximate remaining moisture content (%). After programme end and spinning with maximum selectable spin speed, in default programme setting. To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference Programmes for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

PREPARATION OF THE WASH CYCLE

1. Load the washing machine, close the drum door and check that it is closed properly.
2. Pour in the detergent and any additives, as described overleaf and in the instruction manual.
3. Close the lid.
4. Turn the **programme selector** to the desired programme. The display shows the duration of the selected programme (in hours and minutes), and the indicator for the **"Start/Pause"** button flashes. The temperature and spin speed can be changed by pressing the **"Temperature"** and **"Rinse Hold/Spin Speed"** buttons. After the end of a programme, or when a programme is selected but not yet started, the washing machine will therefore switch off automatically after about a quarter of an hour. To switch the washing machine on again, turn the programme selector to "Off" and afterwards to the desired programme again.

SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Easy Ironing" button

- By selecting this option, the wash and the spin cycles will be modified in order to reduce the formation of creases.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 19 min. Do not use liquid detergent for the main wash when activating the Prewash option.

"Extra Rinse" button

- Helps to avoid detergent residues in the laundry by extending the rinse phase. Particularly suitable for washing baby laundry, for people suffering from allergies and for areas with soft water."

"Soil Level" button

- Soil level is an option working on 3 different levels (Heavy, Mid and Low) that are specially designed to set the right washing action, depending on your cleaning needs:
 - Heavy: high levels of dirtiness, removing most stubborn stains.
 - Mid: everyday stains.
 - Low: lightly soiled stains.

"Rinse Hold/ Spin Speed" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If you select spin speed "0", the final spinning is cancelled and the water is drained out only. However, intermediate spin phases remain during the rinse.
- If you select "Rinse hold", the laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing and prevent colours from changing. To activate the "Rinse hold", press the "Spin" button repeatedly until the "Rinse hold" symbol on the display lights up.

- The wash programme stops to "Rinse hold" when the "Rinse hold" symbol on the display blinks; the light of **"Start/Pause"** button also blinks.
- To terminate the "Rinse hold" by spinning the laundry, press **"Start/Pause"** - the laundry will be spun with the default spin speed. You can also select another spin speed with the "Spin" button before you start the spin cycle by pressing **"Start/Pause"**.
- To terminate the "Rinse hold" by draining the water without spinning, press the "Spin" button until spin speed "0" appears on the display; then press **"Start/Pause"** to start the draining. Do not leave the laundry to soak for too long in the "Rinse hold" (especially silk).

"Energy Saver" button

- Saves energy used for water heating while maintaining good wash result.
- Reconvertible for lightly soiled laundry without stains.
- Make sure that your detergent is suitable for cold wash temperatures (15 or 20 °C).
- Mainly selectable on the lowest temperature step of the programmes.

"Intensive wash" button

- Choose this option if you use an in-wash additive for stain removal - it will optimize the additive's efficiency to get better wash performance and stain removal.
- Use with the maximum load. Add an appropriate of in-wash additive for stain removal (powder) to the main wash
- May prolong the programme by up to 10 minutes. Appropriate for use of stain removers and bleaches on oxygen basis. Chlorine or perborate bleaches must not be used!

START DELAY

To set the selected programme to start at a later time, press the **"Start delay"** button to set the desired delay time. The lamp for the **"Start delay"** option button lights up, and it goes off when the programme starts. Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. The time delay indication on the display disappears when the programme starts and it is replaced by the remaining programme time. Number of hours preselected can be reduced by pressing the **"Start delay"** button again. Do not use liquid detergent when activating this option. To cancel the **"Start delay"** turn the programme selector to another position.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The blinking light next to the **"Start/Pause"** button becomes constant. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phase is finished, the corresponding indication goes out.

"DOOR LOCKED" INDICATION

After start of a program the lamp lights up to indicate that the lid can not be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

CHILD LOCK BUTTONS

You can lock the buttons of the control panel against improper use (e.g. by children).

- Press both of the child lock buttons simultaneously and hold them for at least 3 seconds. The key symbol on the display lights up.
- To unlock the buttons again: proceed in the same way.

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Water tap closed" - No or not sufficient inlet water.

"Service" - Failure or malfunction of an electrical component.

"Clean pump" - Waste water is not pumped out.

Spin speed on display blinks: unbalance during spinning

PROGRAMME END

- The "Door locked" indication lights off and the display shows "End". After about a quarter of an hour, the washing machine will switch off completely to save energy.
 1. Turn the programme selector to the "Off" position.
 2. Close the water tap.
 3. Open lid and drum and unload the machine.
 4. Leave the lid open for some time to allow the interior of the machine to dry.

DETERGENT OVERDOSAGE INDICATION

The symbol will light up at the end of the programme if you used too much detergent. Use less detergent next time. If the symbol lights up and the display shows "Fod", too much foam interrupted the wash process; refer to the "Troubleshooting Guide" in your Instructions for use.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A RUNNING PROGRAMME BEFORE THE END

The **"Reset/Drain"** button cancels a programme before the end.

- Press the **"Reset/Drain"** button for at least 3 seconds. The water is drained out; it may last a while until you can open the lid.