Inspiron 11 3000 Series Setup and Specifications



Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2016 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2016-04

Rev. A00

Contents

Set up your computer	5
Views	8
Left	
Right	
Base	
Display	
Modes	11
Notebook	11
Tablet	11
Stand	12
Tent	12
Specifications	13
Dimensions and weight	13
System Information	13
Memory	
Ports and Connectors	14
Communications	14
Video	14
Audio	14
Storage	15
Media-card reader	15
Display	15
Keyboard	
Camera	16
Touchpad	16
Battery	17
Power Adapter	17
Computer Environment	18

Keyboard shortcuts	19
Getting help and contacting Dell	20
Self-help resources	20
Contacting Dell	21

Set up your computer

1 Connect the power adapter and press the power button.



- When your computer is switched on for the first time, you will be prompted to complete these steps:
 - a) Enable security and Dell updates.



b) Connect to a wireless network.



c) Sign-in to your Microsoft account or create a new account.



3 Explore Dell resources on your desktop.



Help and Tips



 
My Dell



Register your computer

Views

Left



1 Power-adapter port

Connect a power adapter to provide power to your computer and charge the battery.

2 HDMI port

Connect a TV or another HDMI-in enabled device. Provides video and audio output.

 
3 **USB 3.0 port**

Connect peripherals such as storage devices, printers, and so on. Provides data transfer speeds up to 5 Gbps.

4 microSD-card slot

Reads from and writes to media cards.

Right



1 Power button

Press to turn on the computer if it is turned off or in Sleep state.

Press to put the computer in Sleep state if it is turned on.

Press and hold for 4 seconds to force shut-down the computer.



NOTE: You can customize the power-button behavior in Power Options. For more information, see Me and My Dell at www.dell.com/support/manuals.

2 Volume-control button

Press to increase or decrease the volume.

3 **Headset port**

Connect a headphone, a microphone, or a headset (headphone and microphone combo).

4 USB 2.0 ports (2)

Connect peripherals such as storage devices, printers, and so on. Provides data transfer speeds up to 480 Mbps.

5 Security-cable slot

Connect a Noble security-cable to prevent unauthorized movement of your computer.

Base



Left-click area

Press to left-click.

2 Touch pad

Move your finger on the touch pad to move the mouse pointer. Tap to left-click

3 Right-click area

Press to right-click.

Display



1 Left microphone

Provides high-quality digital sound input for audio recording, voice calls, and so on.

2 Camera

Allows you to video chat, capture photos, and record videos.

3 Camera-status light

Turns on when the camera is in use.

4 Right microphone

Provides high-quality digital sound input for audio recording, voice calls, and so on.

Modes

Notebook



Tablet



Stand



Tent



Specifications

Dimensions and weight

	Inspiron 11-3168	Inspiron 11-3169	
Height	21.85	mm (0.86 in)	
Width	291.61	mm (11.48 in)	
Depth	201.92	201.92 mm (7.95 in)	
Weight	1.25 kg (2.76 lb)	1.35 kg (2.98 lb)	
	NOTE: The weight of your laptop varies depending on the configuration ordered and the manufacturing variability.		

System Information

	Inspiron 11-3168	Inspiron 11-3169
Processor	Intel Celeron Dual CoreIntel Pentium Quad Core	6th generation Intel Core i3
Chipset	Integrated	in processor

Memory

Slot	One SODIMM slot (Inspiron 11–3168 only)	
Туре	DDR3L	
Speed	1600 MHz	
Configurations supported	2 GB (Inspiron 11–3168 only)4 GB	

Ports and Connectors

External:	
USB	One USB 3.0 portTwo USB 2.0 ports
Audio/Video	 One HDMI port One headset (headphone and microphone combo) port

Internal:	
M.2	One M.2 slot for Wi-Fi and Bluetooth combo card

Communications

W La	
Wireless	 Wi-Fi 802.11 b/g/n/ac
	 Wi-Fi 802.11 ac
	 Bluetooth 4.0
	 Intel WiDi (optional)

Video

	Inspiron 11-3168	Inspiron 11-3169
Controller	Intel HD Graphics	Intel Graphics 515
Memory	Shared system memory	

Audio

Controller • Realtek ALC3243 with Waves MaxxAudio (Inspiron 11–3168)

 Realtek ALC3246 with Waves MaxxAudio (Inspiron 11–3169)

Speakers Two

Output

• Average 2 W

Peak 2.5 W

Microphone Digital array-microphones in camera

assembly

Volume controls Media-control shortcut keys and

volume-control buttons

Storage

Interface SATA 6 Gbps

Hard drive

• One 2.5-inch drive

One Solid State Drive (SSD)

• One eMMC card (Inspiron 11–

3168 only)

Media-card reader

Type One microSD-card slot

Card supported microSD

Display

Type 11.6-inch HD touch

Resolution (maximum) 1366 x 768
Pixel pitch 0.2265 mm

Refresh rate 60 Hz

Operating angle 0 degrees (closed) to 360 degrees

Controls Brightness can be controlled using

shortcut keys

Height 144 mm (5.67 in)

Width 256.13 mm (10.08 in)

Diagonal 294.64 mm (11.60 in)

Keyboard

Type Chiclet keyboard

Shortcut keys

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate

can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.



NOTE: You can define the primary behavior of the shortcut keys by pressing Fn+Esc or by changing Function Key Behavior in System Setup.

Keyboard Shortcuts

Camera

Resolution • Still image: 0.92 megapixel

• Video: 1280 x 720 (HD) at 30 fps

(maximum)

Diagonal viewing angle 74 degrees

Touchpad

Resolution

• Horizontal: 1940 dpi

• Vertical: 1040 dpi

Dimensions

• Width: 100 mm (3.94 in)

• Height: 55 mm (2.16 in)

Battery

Туре	2-cell prismatic (32 WHr)
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Life span (approximate)	300 discharge/charge cycles
Temperature range: Operating	0°C to 35°C (32°F to 95°F)
Temperature range: Storage	-40°C to 65°C (-40°F to 149°F)
Coin-cell battery	CR-2032
Weight (maximum)	0.19 kg (0.42 lb)
Voltage	7.6 VDC
Charging time when the computer is off (approximate)	Within 4 hours
Width	272.10 mm (10.71 in)
Depth	70.50 mm (2.78 in)
Height	6.82 mm (0.27 in)

Power Adapter

Туре	45 W	65 W
Input voltage	100 VAC-240 VAC	
Input frequency	50 Hz-60 Hz	
Input current (maximum)	1.30 A	1.70 A
Output current (continuous)	2.31 A	3.34 A
Rated output voltage	19.50 VDC	
Temperature range: Operating	0°C to 40°C (32°F to 104°F)	
Temperature range: Storage	-40°C to 70°C (-40°F to 158°F)	

Computer Environment

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non- condensing)	0% to 95% (non- condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G [†]	160 G [‡]
Altitude (maximum)	-15.2 m to 3048 m (- 50 ft to 10,000 ft)	-15.2 m to 10,668 m (- 50 ft to 35,000 ft)

^{*} Measured using a random vibration spectrum that simulates user environment.

[†] Measured using a 2 ms half-sine pulse when the hard drive is in use.

[‡] Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

Keyboard shortcuts

Icons	Description
F1 «x	Mute audio
F2 4)	Decrease volume
F3 📢	Increase volume
F4 H44	Play previous track/ chapter
F5 <u> </u>	Play/Pause
F6 ▶	Play next track/chapter
F8 <u>2</u> 7	Switch to external display
F9 p	Search
F11 *	Decrease brightness
F12	Increase brightness
Fn + B	Pause/Break
Fn + Esc a	Toggle Fn-key lock
Fn + Insert	Sleep
$\left[\begin{array}{c} Fn \end{array}\right] + \left[\begin{smallmatrix} PrtScr & & & & & & & & \\ & In & & & & & & & \\ & In & & & & & & & \\ & In & & & & & & & \\ \end{smallmatrix}\right]$	Turn off/on wireless
Fn + S	Scroll lock

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Information about Dell products and services

Windows 8.1 and Windows 10

www.dell.com

Dell Help & Support app



Windows 10

Get started app



Windows 8.1

Help + Tips app



Accessing help in Windows 8, Windows 8.1, and Windows 10

Accessing help in Windows 7

Online help for operating system

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on

Learn about your operating system, setting up and using your computer, data backup, diagnostics, and so on.

In Windows search, type **Help and Support**, and press **Enter**.

Click Start \rightarrow Help and Support.

www.dell.com/support/linux
www.dell.com/support

See *Me and My Dell* at www.dell.com/support/manuals.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.



NOTE: Availability varies by country and product, and some services may not be available in your country.



NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.