



## TO REMOVE 40-DISC DRUM

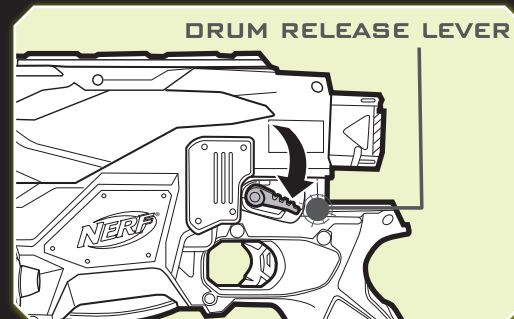


Push down the DRUM RELEASE LEVER and pull out the 40-DISC DRUM. Repeat loading steps above to reload.

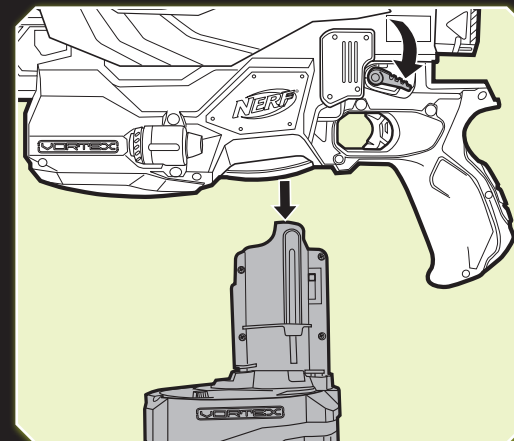


## CLEARING A JAM

If the blaster is loaded but will not fire, it may be jammed.

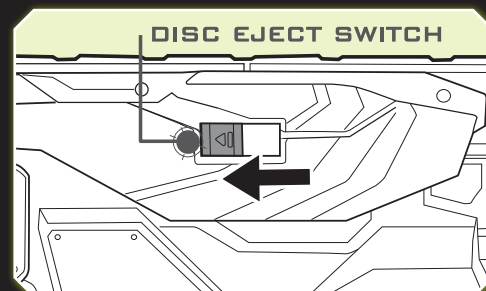

- (1) Remove the 40-DISC DRUM following the loading instructions.
- (2) Press and hold the DISC EJECT SWITCH backward.

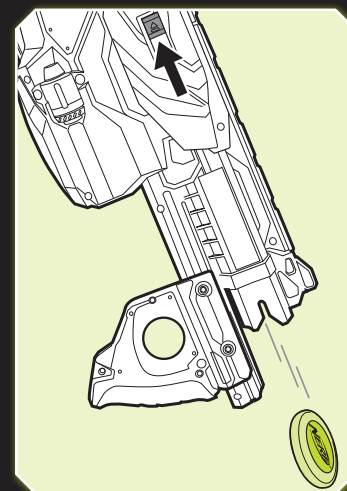

- (3) Point the blaster at the ground. The jammed disc will fall out.

# NERF

AGES 8+

## VORTEX

## PYRAGON

**CAUTION:**  
Do not aim at eyes or face. TO AVOID INJURY: Use only discs designed for this product. Do not modify discs or disc blaster.



Be sure to read and follow all instructions carefully before using this product.

### Hey NERF Nation!

Join us online and keep up with the latest and greatest news from NERF!



Find us on Facebook



WATCH ON YouTube

Ask a parent before going online.

Questions? Call 1-800-327-8264

Product and colors may vary.

A0092  
PN 7278330000




YouTube and the YouTube logo are trademarks of Google Inc.


®\* and/or TM\* & © 2012 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks.  
U.S. Pat. Pend., BR, CN & EC Reg. Des. Apps.




LOADING

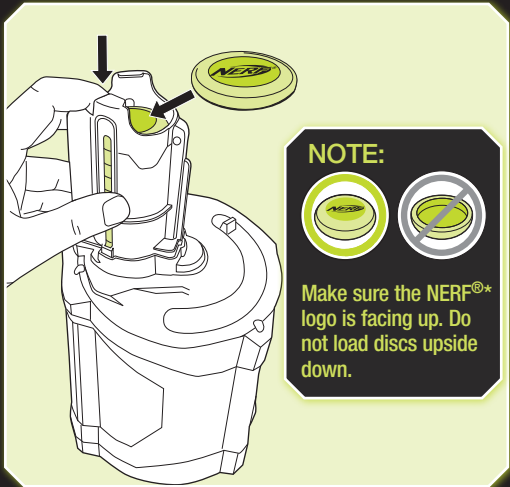


**1** One at a time, load DISCS into the 40-DISC DRUM until no more will fit. Do not load DISCS upside down.

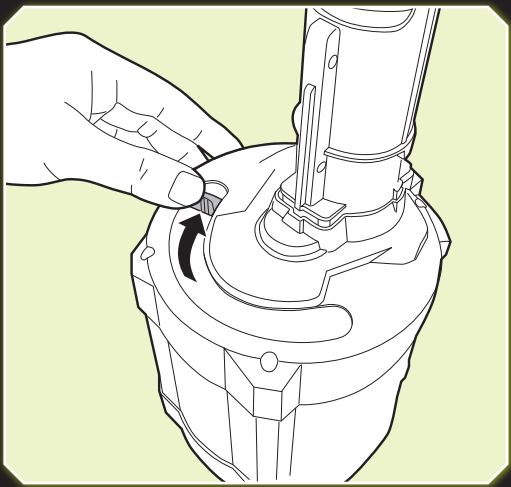

**2** Push the CARTRIDGE ADVANCE LEVER all the way clockwise, then release.

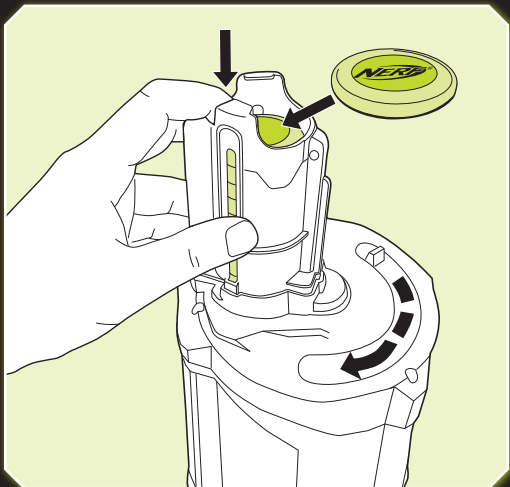




**3** Repeat steps 1 and 2 until the CARTRIDGE ADVANCE LEVER no longer moves.

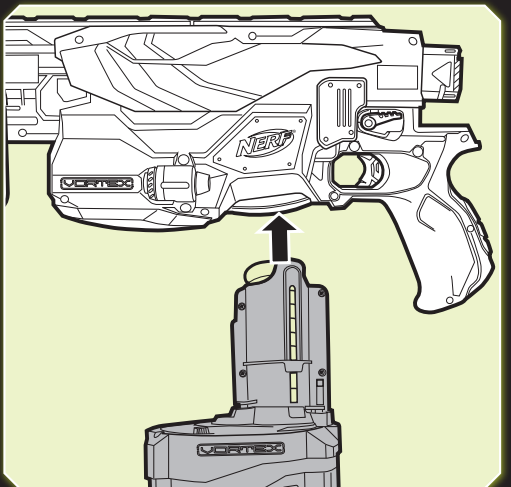


**4** The 40-DISC DRUM should slide easily into place. It only fits in one direction. Do not force it.

FIRING

Single-Fire Mode:

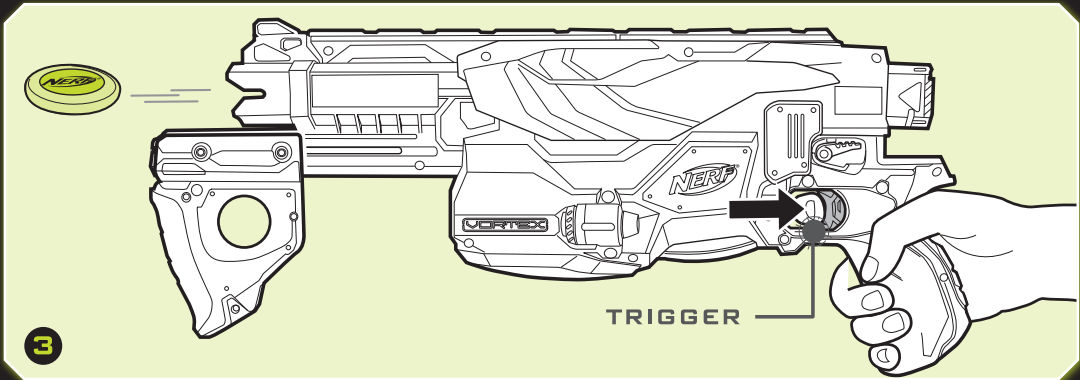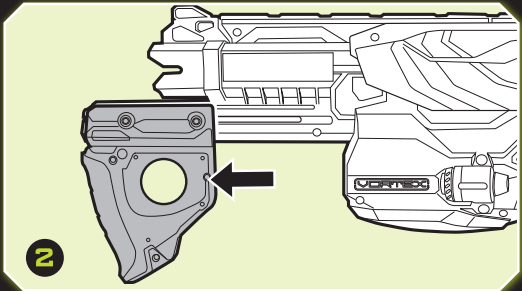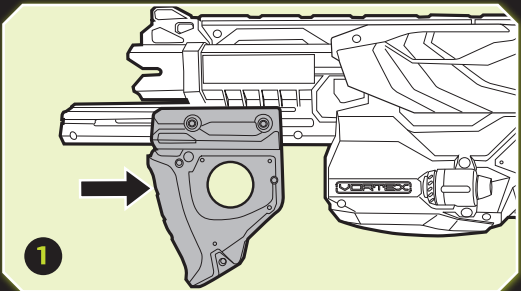

SLAM FIRE® Mode:

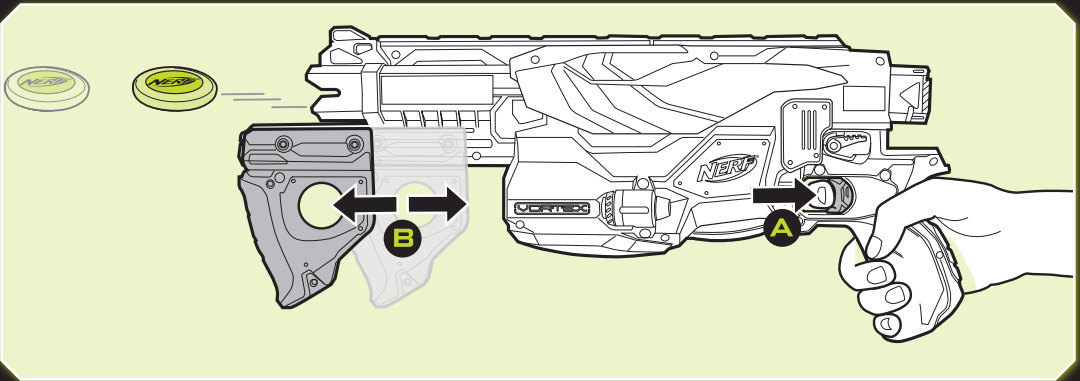

Hold TRIGGER down (A) and rapidly slide SLAM FIRE® HANDLE back and forth repeatedly (B).

NOTE: Be sure to slide SLAM FIRE® HANDLE all the way back and all the way forward to prevent damaging DISCS.