

BP-30WS-B

BP-35WS-B

BP-50WS-B

BP-50HS-A

BP-85HS-A

BP-100HS-A

BP-160HS-A



User manual - Heat Pump

Contents.

1. General warnings and information for the addressee.....	4
1.1. Warranty.....	4
1.1.1. General conditions.....	4
1.1.2. Special conditions.....	4
1.1.3. Restrictions.....	4
1.2. Symbol key.....	4
1.3. Safety regulations for heated pools.....	4
1.4. Energy savings.....	5
1.5. General information.....	5
1.6. Definitions.....	5
2. Product presentation.....	6
2.1. Product scope.....	6
2.2. Composition.....	7
3. Technical specifications.....	8
4. Installation.....	9
4.1. Inspection.....	9
4.2. Handling.....	9
4.3. Positioning.....	9
4.3.1. Support and its location.....	9
4.3.2. Necessary clearance.....	10
4.3.3. Noise wave echo.....	10
4.4. Disposal.....	10
4.4.1. General instructions.....	10
4.4.2. Heat pump decommissioning.....	10
4.4.3. Electric/electronic waste disposal.....	10
4.5. Hydraulic connections.....	11
4.5.1. Warnings.....	11
4.5.2. Installation hydraulic layout.....	11
4.6. Electrical connections.....	12
4.7. Commissioning, preliminary checks.....	12
4.7.1. Commissioning, precautions.....	12
4.7.2. First start-up, preliminary checks.....	12
5. Operations and use.....	12
5.1. Introduction.....	12
5.2. Control panel use.....	13
5.2.1. Turning on the heat pump.....	13
5.2.2. Standby.....	13
5.2.3. Turning off the heat pump.....	13
5.2.4. Starting the heat pump.....	13
5.2.5. Operating mode selection.....	14
5.2.6. Set temperature regulation.....	14
5.2.7. Minimum working temperature and restart temperature.....	14
5.2.8. Automatic start settings.....	14
5.2.9. Automatic standby settings.....	15
5.2.10. Manual defrost.....	15
5.2.11. Key lock.....	15
5.2.12. Sensor temperature display.....	15
5.3. Manometer use.....	16
6. Control and safety devices.....	16
6.1. Control devices.....	16
6.1.1. Ambient and pool temperature sensors.....	16
6.1.2. Flow sensor.....	17
6.2. Safety devices.....	17
6.2.1. Compressor and plate heat exchanger temperature sensors.....	17
6.2.2. High pressure sensor.....	17
6.2.3. Low pressure sensor.....	17
7. Routine, scheduled and extraordinary maintenance.....	18
7.1. User controls.....	18
7.2. Specialised technician controls.....	18

ENGLISH

7.3. Winter protection.	18
7.4. Spring commissioning.	18
7.5. Troubleshooting.	19
8. Spare parts.	21

1. General warnings and information for the addressee.

1.1. Warranty.

1.1.1. General conditions.

- i. In accordance with these provisions, the dealer guarantees that the Product under this warranty ("the Product") does not have any conformity defect upon delivery.
- ii. The Product Warranty Period is two (2) years, effective upon delivery to the purchaser.
- iii. In the event of Product conformity defects and the purchaser informs the dealer during the Warranty period, the dealer must repair or replace the Product at his/her own expense and at the site deemed most suitable, unless this is impossible or out of proportion.
- iv. Should the Product be irreparable or irreplaceable, the purchase may request a proportionate price reduction or, if the conformity defect is sufficiently important, the termination of the sales contract.
- v. Parts replaced or repaired under this warranty do not extend the length of the original Product warranty but are covered by their own warranty.
- vi. To validate this warranty, the purchaser must provide proof of Product purchase and purchase date.
- vii. Should the purchaser find conformity defects six months after delivery, the purchaser must prove the origin and existence of the defect found.
- viii. The Warranty Certificate does not restrict or compromise consumer rights provided by mandatory national regulations.

1.1.2. Special conditions.

- i. This warranty covers the products referred to in this manual.
- ii. This Warranty Certificate is only applicable in EU member countries.
- iii. To validate this warranty, the purchaser must strictly follow the instructions provided by the Manufacturer in the documents that accompany the Product when applicable according to Product range and model.
- iv. Should a schedule be specified for the replacement, maintenance or cleaning of some Product parts or components, the warranty is only considered valid if this schedule is correctly observed.

1.1.3. Restrictions.

- i. This warranty is only applicable to consumer sales where a "consumer" is the person who purchases the Product for purposes not pertinent to his/her profession.
- ii. The warranty does not cover normal wear due to Product use. As for parts, components and/or replaceable or consumable materials such as batteries, light bulbs, etc., that instructed in the documentation that accompanies the Product shall be observed.
- iii. The warranty does not cover the cases in which the Product:
 - a. was subject to incorrect treatment;
 - b. was subject to repairs, maintenance or tampering by unauthorised personnel;
 - c. was repaired and equipped with unoriginal parts.

Should the Product conformity defect be consequent to incorrect installation or commissioning procedure, this warranty shall only be applicable when this installation or commissioning procedure is included in the Product sales contract and performed by the dealer or under his/her authority.

1.2. Symbol key.

⚠ Indicates hazardous situations and warnings. The manual parts marked by this symbol must be read with the utmost care.

⚡ Indicates that work must not be performed on live electrical equipment. This work can begin after taking safety measures.

1.3. Safety regulations for heated pools¹.

⚠ During normal swimming activities, 26÷30 [°C] water temperature is recommended. 38 [°C] water temperature is only considered safe for adults in good health conditions. The utmost caution is recommended for use by children.

⚠ Pool temperature must never exceed 40 [°C].

⚠ Do not drink alcoholic beverages before, after and while swimming. Alcohol consumption may cause drowsiness, loss of consciousness and consequent drowning.

Swimming in pools with temperatures over 38 [°C] is not recommended for pregnant women. Excessively hot water could damage the foetus, especially during the first trimester, causing deformities or brain damage.

Before entering the pool, always check water temperature with a precision thermometer. Temperature regulated by the heat pump guarantees approximately ±2 [°C] precision.

People who suffer from diabetes, heart disease, circulatory or blood pressure problems should consult a physician before entering heated pools.

If taking drugs that induce drowsiness (i.e.: tranquillizers, antihistamines or anticoagulants), avoid swimming in heated pools.

¹ Guidelines for safe recreational water environments - VOLUME 2 - SWIMMING POOLS AND SIMILAR ENVIRONMENTS - WORLD HEALTH ORGANIZATION 2006.

⚠ Prolonged immersion in hot water may cause hyperthermia², while immersion in cold water may cause hypothermia³, with symptoms such as: Dizziness, fainting, drowsiness, lethargy⁴. Consequences of hyperthermia and hypothermia may be: unawareness of imminent danger, lack of heat or cold perception, failure to recognise the need to exit the pool, physical inability to exit the pool, damages to foetus for pregnant women, unconsciousness with consequent drowning risks.

1.4. Energy savings.

The heat pump slowly heats pool water. For weekend use, keeping pool temperature at the desired value even when not in use is recommended. If temperature is allowed to drastically reduce, several days may be required to restore the desired temperature. In the event of prolonged pool disuse (more than one week), turning off the heat pump or reducing the set temperature by several degrees is recommended to save energy.

The difference between the ambient temperature and water temperature should never be over 15 [°C]. For this reason, do not use the heat pump when the ambient temperature is under 15 [°C]. Please see Paragraph 5.2.7.

For improved energy savings, using the automatic start and stop functions is recommended. Please see Paragraph 5.2.8 and Paragraph 5.2.9.

Once the ideal water temperature is set, use the key lock function to prevent changes to the set temperature and/or prevent other adjustments. Please see Paragraph 5.2.11.

Protect the pool from wind.

When the pool is not in use, cover it with a tarp to limit heat dispersion.

1.5. General information.

⚠ SERIES BP heat pumps are devices accessible to the public and were designed to heat and cool water intended for home pools.

⚠ SERIES BP heat pumps must not be used with other heating systems such as electric heaters.

⚠ This manual provides instructions for the installation and use of SERIES BP heat pumps. Carefully read this manual before installation. Failure to observe the manual instructions may cause personal or property damages or damage the heat pump.

⚠ Failure to observe the instructions in this manual immediately null and voids the warranty.

INTERHIVA is not liable for any damages due to improper heat pump use.

The manual must be kept integral and in good conditions. It must accompany the heat pump until it is decommissioned.

⚠ In the event of malfunctions, consult the instruction manual and, if necessary, contact specialised technicians.

⚠ Installation and maintenance must be performed by qualified technicians unless otherwise indicated in the manual.

Initial system commissioning must only be performed by specialised technicians.

⚡ Working on the heat pump when connected to the electrical mains is strictly prohibited. Only begin work after taking the safety measures.

The heat pump is not suited for people (even children) who suffer from physical, sensorial or mental handicaps or people who do not have sufficient experience or training unless instructed on heat pump use and assisted by a person in charge of their safety. Supervise children to ensure they do not play with the device.

INTERHIVA continually strives to improve all types and models. We trust the user will understand the technical modifications INTERHIVA reserves the right to make on the shape and fittings on SERIES BP heat pumps.

1.6. Definitions⁵.

Power cord: flexible cord, for power supply, attached to the device.

Tool: Screwdriver, coin or any other object that can be used to move a screw or similar fastening device.

Protection device: Device whose operations prevent hazardous situations in abnormal operating conditions.

Contact switch disconnection: Disconnection of both power conductors with a single contact opening action.

Heat pump: device that absorbs heat at a given temperature and releases it at a higher temperature.

Heat exchanger: device specifically designed to transfer heat between two physically separate fluids.

Compressor: device specifically designed to increase fluid pressure.

Plate heat exchanger: heat exchanger where coolant is vaporised by heat absorption.

Pressure limiter device: mechanism that automatically responds to a set pressure, interrupting the operations of the element that controls pressure.

² Increase in body temperature over physiological limits, maximum limit 37 [°C].

³ Decrease in body temperature over physiological limits, minimum limit 35 [°C].

⁴ State of inactivity or lack of reactivity that nears unconsciousness.

⁵ Definitions in accordance with regulation CEI EN 60335.

ENGLISH

Device accessible to the public: device intended to be installed in homes or commercial buildings.

Installation manual: document intended for specialised technicians that illustrates how to commission and maintain the heat pump.

User manual: document intended for the end user that illustrates how to use the heat pump.


Necessary clearance: minimum heat pump installation area.

2. Product presentation.

2.1. Product scope.

SERIES BP heat pumps were designed to heat and cool water intended for home pools.

2.2. Composition.

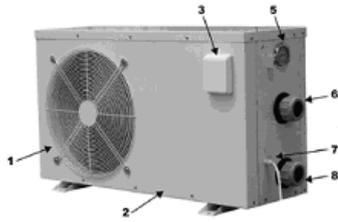

Inside:
(Front sheet cover and panel removed)

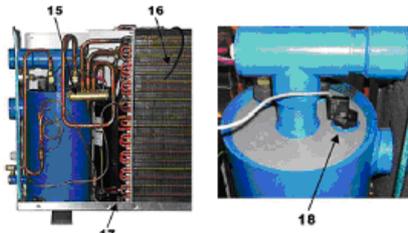
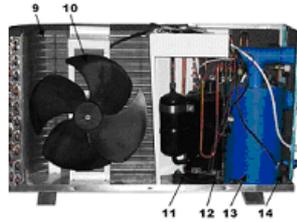


Figure 1: main heat pump parts.

1	Fan protection net
2	Body
3	Display
4	Refrigerant charge valve (inside for BP-35WS-B)
5	Pressure manometer
6	Water outlet
7	Power cord
8	Water inlet
9	Plate heat exchanger
10	Fan
11	Compressor
12	Pressure sensor
13	Heat exchanger
14	Water sensor
15	Four way valve ⁶
16	Ambient sensor ⁷
17	Plate heat exchanger temperature sensor ⁸
18	Flow sensor

⁶ Not included in model BP-xxWS-B (xx=30, 35, 50).

⁷ Not included in model BP-xxWS-B (xx=30, 35, 50).

⁸ Not included in model BP-xxWS-B (xx=30, 35, 50).

3. Technical specifications.

	Unit of measure	Model						
		BP-30WS-EB	BP-35WS-EB	BP-50WS-EB	BP-50HS-A	BP-85HS-A	BP-100HS-A	BP-160HS-A
Thermal power (heating) ⁹	[kW]	3.1	4.3	6.1	6.1	8.9	11	18.1
Refrigerant power (cooling)	[kW]	- ¹⁰			4	5.9	7.2	11.4
Absorbed power ¹¹	[kW]	0.45	0.65	0.9	1.1	1.7	1.95	3.3
Absorbed current ¹²	[A]	3.0	3.3	4.6	4.8	7.4	8.8	5.5
Power voltage ¹³	[V] [Hz]	220-240  50						
COP (Coefficient Of Performance)	[]	6.1	6.0	6.1	6.1	6.0	6.0	6.1
ERR (Energy Efficient Ratio)	[]	-14			3.6	3.5	3.7	3.5
Refrigerant	-	R32						
Refrigerant gas quantity	[kg]	0.28	0.3	0.42		0.65	0.75	1.15
Protection grade at water input	-	IPX4						
Number of compressors	-	1						
Compressor type	-	Rotativo						
Heat exchanger	-	Titanio						
Minimum water flow	[m ³ /h]	3.5		5		6	6.5	8
Hydraulic connections	[mm]	50						
Number of fans	-	1						
Absorbed power by fan	[W]	70				85	100	220
Fan RPM	[RPM]	830				900	850	800
Fan air flow direction		Orizzontale						
Fan air flow	[m ³ /h]	1200		1600		2000		3400
Noise	[dB(A)]	<47	49	50		52	54	57
Dimensions (L/D/H)	[mm]	640x265x495	660x265x495	845x285x540			900x305x615	1030x400x790
Net/gross weight	[kg]	27/30	30/34	38/42		46/50	54/58	86/96
t CO ₂	[t]	0.19	0.21	0.29	0.29	0.44	0.51	0.78

⁹ Variable according to ambient conditions.

¹⁰ Operating mode not included.

¹¹ Variable according to ambient conditions.

¹² Variable according to ambient conditions.

¹³ Single phase alternating current.

¹⁴ Operating mode not included.

4. Installation.

⚠ The heat pump must be installed and commissioned by specialised technicians and in keeping with current national system regulations.

⚠ Installation must be conducted evaluating all the specific site factors: vicinity and height of walls, public accessibility, etc.

4.1. Inspection.

⚠ Upon receiving the heat pump, check packaging integrity. The machine should come with complete **manuals**, for the user and for installation.

4.2. Handling.

⚠ The unit is equipped with suitable protections to protect the heat pump for any damages during handling. Avoid exerting pressure on the sides of the packaging.

Once the heat pump is unpacked, avoid exerting pressure on the body, plate heat exchanger and fan protection net. See Figure 1.

4.3. Positioning.

⚠ The heat pump must be positioned by specialised technicians and in keeping with current national system regulations.

The heat pump must be carefully positioned considering the following aspects:

- Dimensions and origin of hydraulic tubes.
- Location of the power supply.
- Support and its location.
- Necessary clearance.
- Noise wave and vibration echo.
- Condensation discharge.

4.3.1. Support and its location.

⚠ The heat pump must be installed outdoors. It cannot be installed indoors and must be at least 3.5 [m] from the pool surface (zone 2¹⁵).

⚠ During normal operations, the heat pump plate heat exchanger produces condensation. The amount of condensation produced varies according to ambient conditions. The higher the air humidity, the higher the amount of condensation produced. The heat pump comes with a condensation drain. Make sure there are no obstacles to condensation draining.

The heat pump must be positioned to avoid damages attributable to any water or condensation leaks. If necessary, install suitable discharge outlets or collection containers.

⚠ The heat pump must be installed on a solid and level support (cement slab or prefabricated platform). Avoid positioning the heat pump on instable ground. In this case, installing a suitably dimensioned support slab or platform is recommended. The support surface must be slightly tilted to promote collected rain water and condensation draining from the device base.

⚠ Support surface inclination must be a maximum of 2%.

Make sure the pump is not subject to rain water flows from nearby building roofs. Protruding roofs without gutters could pour significant amounts of water and/or debris on the heat pump which could damage it. If necessary, install gutters or discharge outlets to protect the heat pump.

⚠ If the heat pump is installed under the pool level, any water leaks could cause significant water leaks or floods. INTERHIVA is not liable for any of said leaks, floods or consequent damages.

⚠ Make sure the heat pump is not within the range of action of any irrigation systems. If necessary, install suitable protections.

¹⁵ See CEI 64-8/7 for pool zone classifications.

4.3.2. Necessary clearance.

Minimum clearance required for heat pump installation is illustrated in the following figure.

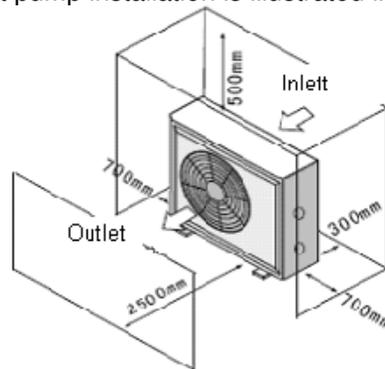


Figure 2: Clearance required for correct installation.

Clearance guarantees accessibility during SERIES BP heat pump maintenance and operations.

⚠ Avoid hot air from circulating between machine distribution and suction. See Figure 2. For this purpose, avoid all situations in which there could be an obstacle to the free flow of air produced by the fan. Specifically, pay careful attention to the direction of strong winds in the heat pump installation area. Strictly avoid installing the heat pump where the direction of strong wind is contrary to heat pump flow.

4.3.3. Noise wave echo.

SERIES BP heat pumps were designed with special attention to noise and vibrations. Retail or accessory shock absorbers can be used to diminish vibrations and noise.



Figure 3: Shock absorber supports.

To diminish noise wave echoes, avoid positioning the pump in the immediate vicinity of vertical walls.

4.4. Disposal.

4.4.4. General instructions.

⚠ Collecting recyclable material, both those used for packaging (cardboard, nylon, etc.) and those replaced during routine and extraordinary maintenance is recommended.

Suitable collection of waste material for recycling, processing and environmentally compatible disposal contributes in avoiding possible negative effects on the environment and health and promote the reuse and/or recycling of device materials.

⚠ Illicit product disposal by the user may be punishable by current national laws.

4.4.5. Heat pump decommissioning.

When the unit reaches the end of its working life and must be removed and/or replaced, follow the instructions below:

- Refrigerant gas must be collected by specialised technicians and sent to collection centres.
- Compressor lubricant oil must be collected by specialised technicians and sent to collection centres.
- The body and various parts, if unusable, should be dismantled and divided according to their material type (for example, copper, aluminium, plastic, etc.) and must be sent to collection centres.

4.4.6. Electric/electronic waste disposal.



In keeping "Implementation of Directives 2002/95/CE, 2002/96/CE and 2003/108/CE" on the reduction of the use of hazardous substances in electric and electronic material as well as waste disposal. The barred bin symbol on the equipment or packaging indicates that the product must be separated from other waste at the end of its working life. Therefore, the user must take equipment to electronic and electro-technical waste collection centres at the end of its working life or return it to the dealer when purchasing similar new equipment, on a one to one basis. Suitable collection of decommissioned equipment for recycling, processing and environmentally compatible disposal contributes in avoiding possible negative effects on the environment and health and promote the reuse and/or recycling of device materials. Illicit product disposal by the user may be punishable by current national laws.

4.5. Hydraulic connections.

4.5.7. Warnings.

- ⚠ The heat pump hydraulic connections must be performed by specialised technicians and in keeping with current national system regulations.
- ⚠ During hydraulic connections, avoid using free flames near or within the heat pump.
- ⚠ The following retail components are recommended for hydraulic connections:
 - Cut-off valves upstream and downstream from the heat pump to facilitate maintenance and/or heat pump bypass from the pool hydraulic system.
 - Hydraulic circuit charge and drain valve for the heat pump.
 - Hydraulic circuit bypass valve, see Figure 6.
 - Mechanical filter upstream from the heat pump, usually a sand filter.
 - Non-return valve, installed between the pool and the heat pump output fitting, to prevent water reflux.
- ⚠ Tubes that have the same diameter of the heat pump inlet and outlet are recommended for upstream and downstream heat pump connections.
- ⚠ During periods of heat pump disuse, for example, during the winter, drain water from the heat pump circuit and heat pump.
- ⚠ Chemical dosing devices, when applicable, must be installed downstream from the heat pump and non-return valve. This prevent chemically saturated water reflux which could damage the heat pump.

4.5.8. Installation hydraulic layout.

The hydraulic circuit where the heat pump is installed must be created observing the following general layout.

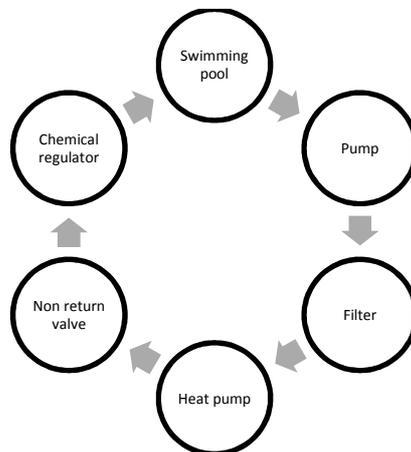


Figure 4: General hydraulic circuit layout.

The pump must be hydraulically connected with PVC tubes with 50 [mm] external diameters. Tubes must be inserted in the fittings for about 1÷2 [cm] and secured with the supplied fast connections.

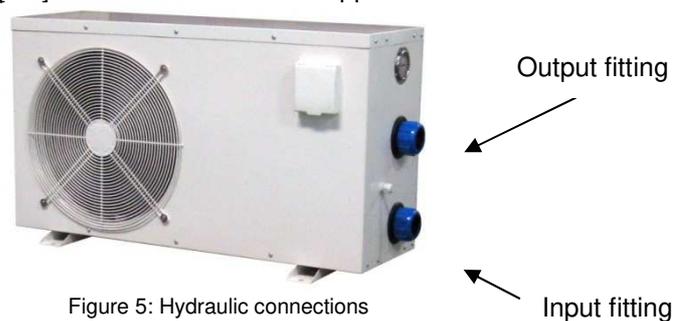


Figure 5: Hydraulic connections

The hydraulic circuit is usually created as illustrated in the following figure.

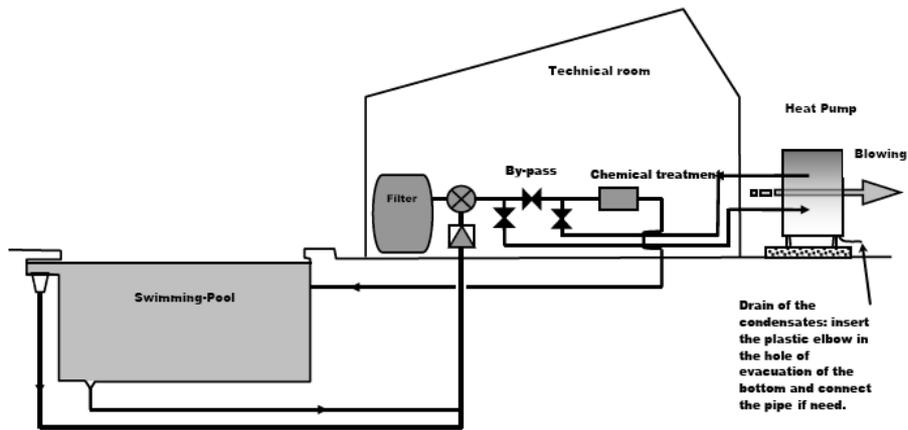


Figure 6: Typical hydraulic circuit part layout.

⚠ Minimum heat pump water input flow must not be under the value required for the model in question. See Paragraph 3. For system layouts such as that in Figure 6, water flow can be regulated using the bypass valve.

4.6. Electrical connections.

- ⚡ The heat pump electrical connections must be performed by specialised technicians and in keeping with current national system regulations.
- ⚡ Working on live electrical equipment is prohibited. Before starting work, make sure the heat pump is disconnected from the electrical mains.
- ⚡ Modifying electrical connections inside the heat pump without INTERHIVA authorisation is strictly prohibited.

Power voltage must not vary more than 10 % from the nominal value. It must be within the 207÷253 [V] interval. If power voltage is subject to frequent variations, contact specialised technicians for suitable protection devices.

Install a protection device, circuit breaker with delayed type 16 [A] fuse, upstream from the heat pump. This protection device must only service the heat pump. Furthermore, install a contact switch protection device, circuit breaker, that has nominal operating differential current not over 30 [mA].

 


Figure 7: Protection device and/or contact switch.

⚠ The electrical mains connected to the heat pump must be grounded.

If a socket is installed for electrical mains connections, the latter must have a protection grade no lower than IPX4 and must have a grounding terminal. The same applies for the mains which must be grounded.

4.7. Commissioning, preliminary checks.

4.7.9. Commissioning, precautions.

Before starting the pump, make sure there is water in the pool, that the skimmer and suction fittings, when installed, are submerged, that the cut-off valves do not prevent water flow from the pool to the heat pump and vice versa and that the circulation pump is on.

4.7.10. First start-up, preliminary checks.

At first heat pump start-up, make sure that:

- the electrical mains were connected in keeping with current national system regulations, see Paragraph 4.6.
- there are no refrigerant fluid leaks checking the pressure on the manometer, see Paragraph 5.3, using leak detection devices.
- Make sure hydraulic connections were correctly performed, see Paragraph 4.5.
- Make sure all body panels are in place and locked with screws.
- Make sure there are no impediments to free water flow from the pool to the heat pump and vice versa.

5. Operations and use.

5.1. Introduction.

Please read the paragraph on energy savings, see Paragraph 1.5.

SERIES BP heat pumps are equipped with control boards which, thanks to a simple but functional interface, allow heat pump programming to guarantee efficient service.

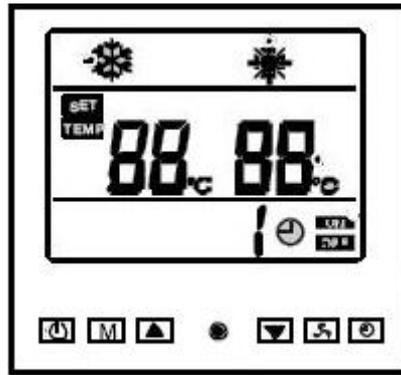


Figure 8: Heat pump panel.

	Heat pump on/off button.
	Operating mode selection button (heating/cooling ¹⁶) or operating parameter programming access.
	Up button.
	Down button.
	Multi-function button.
	Timer or temperature control on/off button.
	Heat pump operating mode indication: cooling ¹⁷ .
	Heat pump operating mode indication: heating.

Table 2: control panel display symbol key.

5.2. Control panel use.

The control panel displays all information required for the user, data and/or error messages. Please see Paragraph 7.5.

5.2.1. Turning on the heat pump.

Use the protection device and/or contact switch to turn on the heat pump. Please see Paragraph 4.6.

5.2.2. Standby.

Water temperature is displayed when the heat pump is turned on. Please see Figure 9. The heat pump is in standby conditions. It does not heat or cool pool water.

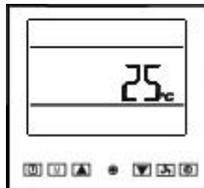


Figure 9: Heat pump display in standby conditions.

5.2.3. Turning off the heat pump.

Use the protection device and/or contact switch to turn off the heat pump. Please see Paragraph 4.6. Make sure the heat pump is in standby before turning it off.

5.2.4. Starting the heat pump.

To start the heat pump, press . The heat pump starts within 3 minutes. The last selected operating mode (heating or cooling¹⁸), see Figure 10, Figure 11, the last temperature set and the current pool water temperature (heating or cooling) is immediately displayed.

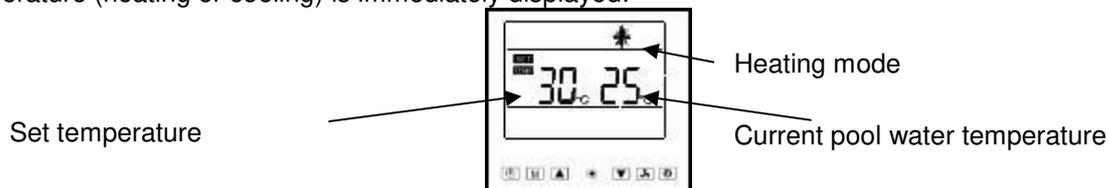


Figure 10: Heat pump display when turned on, heating mode.

¹⁶ The BP-xxWS-B (xx=30, 35, 50) model has only one operating mode: heating.

¹⁷ Operating mode not included in model BP-xxWS-B (xx=30, 35, 50).

¹⁸ Operating mode not included in model BP-xxWS-B (xx=30, 35, 50).

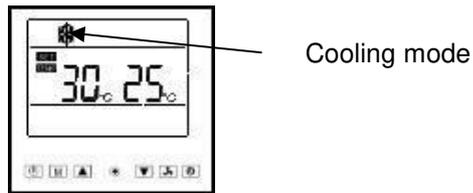


Figure 11: Heat pump display when turned on, cooling mode.

5.2.5. Operating mode selection¹⁹

Start the heat pump, see Paragraph 5.2.4, press **M** to select the operating mode:

- Heating,  is displayed, see Figure 10.
- Cooling,  is displayed, see Figure 11.

Whenever the operating mode changes, the set temperature is switched to the following default values:

- Heating mode, 25 [°C].
- Cooling mode, 30 [°C].

Thus, the set temperature must be regulated, see Paragraph 5.2.6, whenever the operating mode changes.

5.2.6. Set temperature regulation.

Before regulating the set temperature, carefully read the instructions in Paragraph 1.4.

Set temperature can be regulated by pressing **▲**, to increase it and **▼**, to decrease it. Set temperature can be selected in the interval 5÷45 [°C].

Parameter programming, upon heat pump assembly, guarantees that the difference between pool water temperature and set temperature is never over 2 [°C] as illustrated by the following examples:

- Heating mode, set temperature 30 [°C], pool water temperature is never under 28 [°C].
- Cooling mode, set temperature 15 [°C], pool water temperature is never over 18 [°C].

5.2.7. Minimum working temperature and restart temperature²⁰

Once the pump is started, see Paragraph 5.2.4. if the ambient temperature is lower than the minimum working temperature, the heat pump stops, displaying error message “EE C”, and only restarts if the ambient temperature exceeds the restart temperature. When the pump is constructed, the minimum working temperature and restart temperature are a -15 [°C] and -13 [°C] respectively, minimum admissible values. The minimum working temperature must be at least 2 [°C] lower than the restart temperature.

Proceed as follows to set minimum working temperature:

- When the pump is in standby, see Paragraph 5.2.2, press **U** and hold down for 3 seconds.

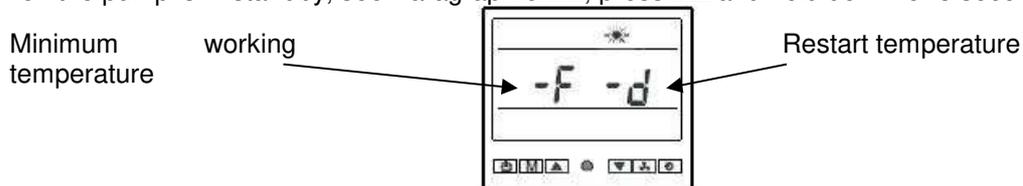


Figure 12: Minimum working temperature and restart temperature.

- Regulate minimum working temperature with keys **▲** (increase), **▼** (decrease). Minimum working temperature cannot be under -15 [°C] (-F), the regulation interval for minimum working temperature is -15÷97 [°C].
- Press **U**, to regulate the restart temperature.
- Regulate restart temperature with keys **▲** (increase), **▼** (decrease). Minimum restart temperature cannot be under -13 [°C] (-d), the regulation interval for restart temperature is -13÷99 [°C].

5.2.8. Automatic start settings.

When the pump is in standby, see Paragraph 5.2.2, press **U** to turn on the automatic start mode. Press **▲** (increase), **▼** (decrease) to select when the heat pump should automatically start (1÷24 hours).

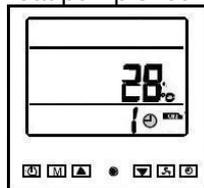


Figure 13: Automatic start settings.

Automatic start can only be set when the pump is in standby, see Paragraph 5.2.4.

¹⁹ Not included in model BP-xxWS-B (xx=30, 35, 50).

²⁰ Not included in model BP-xxWS-B (xx=30, 35, 50).

5.2.9. Automatic standby settings.

When the pump is running, see Paragraph 5.2.4, press  to turn on the automatic standby mode. Press  (increase),  (decrease) to select when the heat pump should automatically return to standby mode (1÷24 hours), see Paragraph 5.2.2.

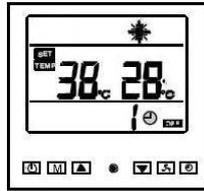


Figure 14: Automatic standby settings.

Automatic standby can only be set when the pump is running, see Paragraph 5.2.4.

5.2.10. Manual defrost²¹.

Frost may form on the plate heat exchanger during normal operations in heating mode, see Figure 1. Frost on the plate heat exchanger reduces heat pump performance. Frost is formed during heating mode because the heat pump cools surrounding ambient air to heat water. SERIES BP pumps are equipped with a temperature sensor that detects frost on the plate heat exchanger and starts automatic defrost. However, if this is insufficient, manual defrost can be started.

Manual defrost can only be started when the heat pump is running in heating mode.

When the pump is running, see Paragraph 5.2.4, press  and hold down for 5 seconds to turn on manual defrost. Manual defrost lasts several minutes. At the end of the manual defrost cycle, the heat pump automatically starts.

When defrosting, refrigerant fluid pressure is increased to make refrigerant fluid hotter so that it heats the plate heat exchanger during circulation to defrost.

When defrosting, refrigerant fluid pressure significantly increases. For further information, see Paragraph 5.3. The heating mode icon blinks during defrost. See Figure 15.

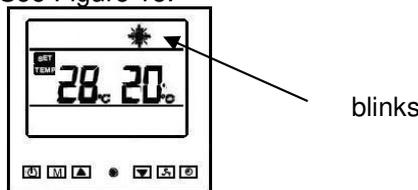


Figure 15: Manual defrost.

5.2.11. Key lock.

Keys can be locked to prevent accidental regulations.

To lock keys, press and simultaneously hold down keys  and  for 5 seconds. Symbol  will appear on the display. See Figure 16 and Figure 17.

To unlock keys, press and simultaneously hold down keys  and  for 5 seconds. Symbol  will disappear on the display.

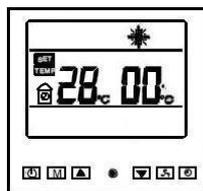


Figure 16: Key lock, heating mode.



Figure 17: Key lock, cooling mode.

5.2.12. Sensor temperature display.

SERIES BP heat pumps are equipped with 4 temperature sensors that continuously read pool water, ambient²², compressor and plate heat exchanger temperatures²³.

²¹ Operating mode not included in model BP-xxWS-B (xx=30, 35, 50).

²² Not included in model BP-xxWS-B (xx=30, 35, 50) where the sensor is not installed.

²³ Not included in model BP-xxWS-B (xx=30, 35, 50) where the sensor is not installed.

The temperature read by each sensor can be displayed by pressing  (for model BP-xxWS-B (xx=30, 35, 50), press ) and hold down for 3 seconds with the pump is running, see Paragraph 5.2.4. To display temperatures read by the various sensors, press  (for model BP-xxWS-B (xx=30, 35, 50), press ). The temperature read by the sensor is displayed for 10 seconds, if no other key is pressed, or press  to return usual information to the display, see Figure 10 and Figure 11.

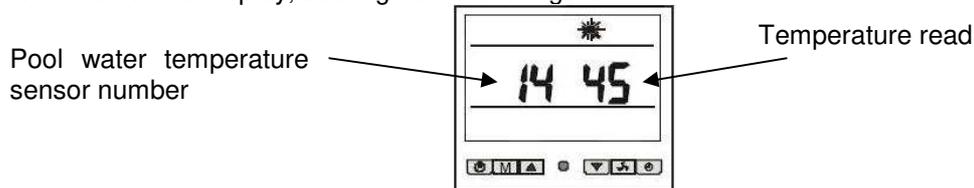


Figure 18: Pool water temperature sensor.

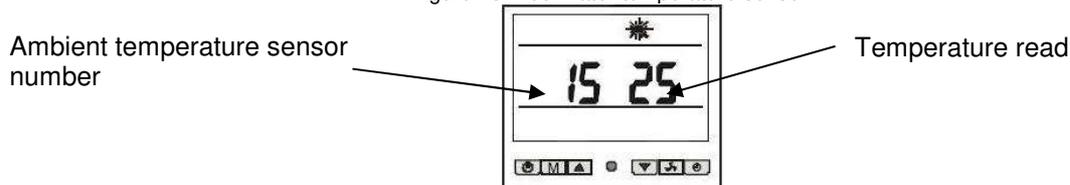


Figure 19: Ambient temperature sensor²⁴.

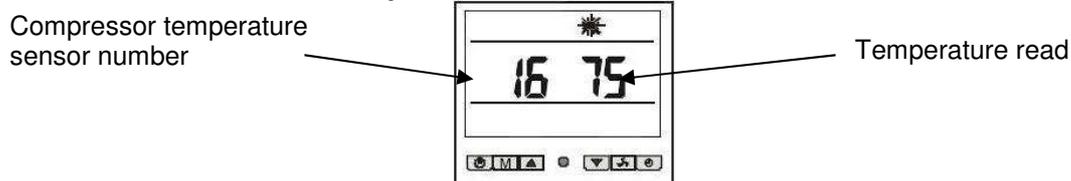


Figure 20: Compressor temperature sensor.

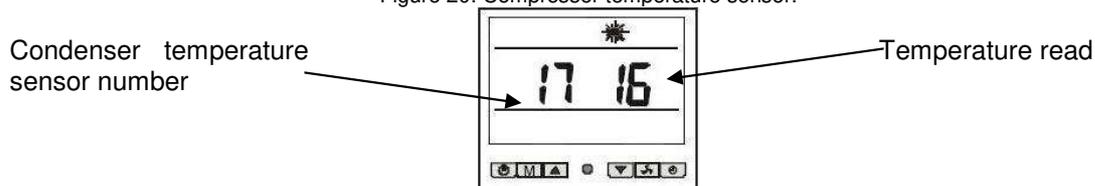


Figure 21: Condenser temperature sensor.

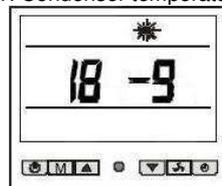


Figure 22: Sensor not used²⁵.

5.3. Manometer use²⁶.

SERIES BP heat pumps are equipped with a manometer that displays refrigerant fluid pressure in the high pressure circuit.

Typical pressure values are the following:

- Heat pump off or in standby, the indicated pressure is between 14÷16 [bar] ([kg/cm²]);
- Heat pump running, the indicated pressure is between 21÷35 [bar] ([kg/cm²]).

When defrosting, refrigerant fluid pressure is increased to make refrigerant fluid hotter so that it heats the plate heat exchanger during circulation to defrost. Defrosting lasts several minutes.

6. Control and safety devices.

6.1. Control devices

6.1.1. Ambient²⁷ and pool temperature sensors.

SERIES BP control pumps are equipped with sensors that continuously check ambient and pool water temperatures. The sensors are located as illustrated in the following figures.

²⁴ For model BP-xxWS-B (xx=30, 35, 50), parameter 15 indicates the compressor temperature sensor.

²⁵ Not used for SERIES BP heat pump control.

²⁶ Not included in model BP-xxWS-B (xx=30).

²⁷ Not included in model BP-xxWS-B (xx=30, 35, 50).

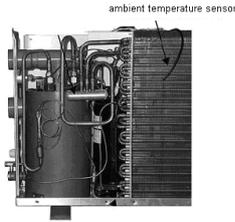


Figure 23: Ambient temperature sensor.

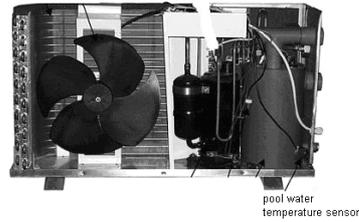


Figure 24: Pool water temperature sensor.

6.1.2. Flow sensor.

SERIES BP control pumps are equipped with a flow sensor that continuously reads water flow. The sensor is located as illustrated in the following figure.

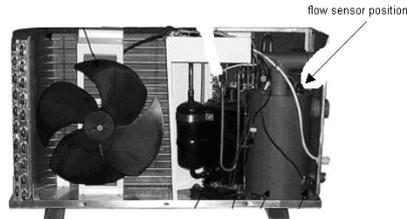


Figure 25: Flow sensor position.

6.2. Safety devices.

6.2.3. Compressor and plate heat exchanger temperature sensors²⁸.

SERIES BP heat pumps are equipped with 2 temperature sensors that continuously read compressor and plate heat exchanger temperatures. The sensors are located as illustrated in the following figures.

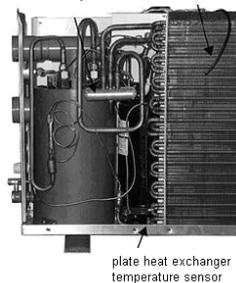


Figure 26: Plate heat exchanger temperature sensor.

compressor temperature sensor

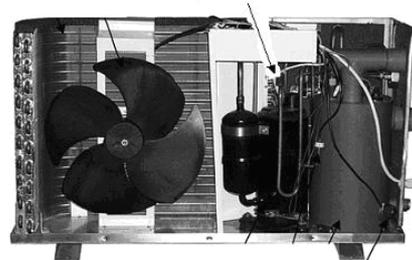


Figure 27: Compressor temperature sensor.

6.2.4. High pressure sensor.

The high pressure sensor stops the compressor when supply pressure, in the refrigerant circuit high pressure section, exceeds the calibration value.

The high pressure sensor signal is not considered during either manual or automatic defrost. For further information see Paragraph 5.2.10 and Paragraph 5.3.

Trigger pressure is 4.2 [bar]. After a high pressure alarm, see Paragraph 7.5, the heat pump must be manually restarted, see Paragraph 5.2.4.

6.2.5. Low pressure sensor.

The low pressure sensor stops the compressor when suction pressure in the high pressure section is under the calibration value.

Trigger pressure is 0.05 [bar]. After a low pressure alarm, the heat pump must be manually restarted, see Paragraph 5.2.4.



Figure 28: High pressure sensor.



Figure 29: Low pressure sensor.

²⁸ Not necessary in model BP-xxWS-B (xx=30, 35, 50) since there is no plate heat exchanger defrost process.

7. Routine, scheduled and extraordinary maintenance.

⚠ Periodic controls are required to keep SERIES BP heat pumps in good working order and to guarantee the foreseen performance and safety levels. Some controls can be performed by the user while specialised technicians are required for others.

⚠ During normal operations, the heat pump plate heat exchanger produces condensation. The amount of condensation produced varies according to ambient conditions. The higher the air humidity, the higher the amount of condensation produced. The lower heat pump panel acts as a condensation collection tray. Keep the drain hole clean.

7.1. User controls.

SERIES BP heat pump users must periodically make sure that:

- Dirt is not accumulated near the heat pump (leaves, paper, etc.). Performing this control weekly is recommended. Use caution when nearing the plate heat exchanger blade since rather sharp.
- There are no leaks in the hydraulic circuit. Conduct this control monthly.
- Electrical mains wires and connections are integral, Performing this control monthly is recommended.
- The correct chemical balance in the pool water is guaranteed in order to guarantee hygienic accessibility conditions and long heat pump life. Conducting this control daily with specific retail kits is recommended.
- The pressure values indicated on the manometer are correct. See Paragraph 5.3.
- Make sure the condensation drain hole is open.

7.2. Specialised technician controls.

The following controls must be conducted by a specialised technician at least once a year to guarantee safe and efficient SERIES BP heat pump operations:

- Electrical mains wire and connection integrity.
- Hydraulic system integrity.
- Inspect and clean the plate heat exchanger coil.
- Check correct heat pump operations, start, see Paragraph 5.2.4.
- Check usual pressure values indicated by the manometer, see Paragraph 5.3.
- Make sure there are no oil leaks from the compressor.

7.3. Winter protection.

The following instructions must be observed to protect SERIES BP heat pumps for the winter:

- Disconnect the electrical mains using the protection device and/or contact switch, see Paragraph 5.2.3.
- Drain the heat pump hydraulic system using the cut-off valve, see Paragraph 4.5.
- Protect the plate heat exchanger and fan from dirt accumulation. Do not wrap the heat pump with plastic or other material that can hold heat and/or humidity inside the device.

7.4. Spring commissioning.

The following instructions must be observed for SERIES BP heat pump spring commissioning.

- Remove any protections used for winter protection, see Paragraph 7.3.
- Fill the heat pump hydraulic system using the cut-off valve, see Paragraph 4.5.
- Check the water chemical composition, see Paragraph 7.1, act accordingly if necessary.
- Restore the electrical mains using the protection device and/or contact switch, see Paragraph 4.6.

7.5. Troubleshooting.

The following table can be used to solve main heat pump problems. When a message error is displayed, the following is required to restore operations:

- turn off the heat pump, see Paragraph 5.2.3;
- turn on the heat pump, see Paragraph 5.2.1;
- start the heat pump, see Paragraph 5.2.4.

Problem	Possible cause	1 st solution	2 nd solution
The heat pump does not turn on, see Paragraph 5.2.1.	The instructions in Paragraph 5.2.1 were not followed.	Follow the instructions in Paragraph 5.2.1.	
	The mains connection line protection device fuse is burned out or the contact switch triggered, see Paragraph 4.6.	Reset the switch and/or replace the fuse.	
The heat pump does not start, see Paragraph 5.2.6.	The 3 minutes required for pump start have not elapsed. See Paragraph 5.2.4.	Wait until the 3 minutes required for pump start have elapsed. See Paragraph 5.2.4.	
	Pool temperature is greater than or equal to set temperature. See Paragraph 5.2.6.	The pump will start when the pool temperature is lower than the set temperature. See Paragraph 5.2.6.	
	The pump operating mode is not the required mode. See Paragraph 5.2.5.	Set the required operating mode. See Paragraph 5.2.5.	
The heat pump is running but the water is not heating.	The heat pump was just installed.	24÷48 hours may be required to reach the set temperature. See Paragraph 1.5.	Contact specialised technicians.
	Pool water has significantly cooled since the last heat pump use.	24÷36 hours may be required to reach the set temperature. See Paragraph 1.5.	Contact specialised technicians.
There is frost on the plate heat exchanger.	Too low ambient temperature and/or a significant amount of humidity in the air.	Start manual defrost. See Paragraph 5.2.10.	
	Pressure refrigerant drop down.	Contact specialised technicians.	
Water leaks from the heat pump.	Probable accumulation of condensation. See Paragraph 4.3.	Put the heat pump in standby, see Paragraph 5.2.2, if the leak stops, this is normal condensation.	
	Possible water leak from the water exchanger or from hydraulic unit connection devices. See Figure 1 and/or Figure 5.	Tighten the fastening nut, for an example, see Figure 5.	
Error message EE b is displayed.	Insufficient water flow	Increase water flow in the hydraulic circuit that supplies the heat pump. After 2 minutes restart.	Contact specialised technicians.
Error message EE c is displayed.	Ambient temperature under -15 [°C]. See Paragraph 5.2.7.	Wait until ambient temperature rises to start the heat pump.	Contact specialised technicians.
Error message EE d is displayed.		Contact specialised technicians.	
The heat pump does not work ²⁹ and error message EE 1 is displayed.		Contact specialised technicians.	

²⁹ Compressor and fan off.

ENGLISH

Problem	Possible cause	1 st solution	2 nd solution
The heat pump does not work ³⁰ and error message EE 2 is displayed.		Contact specialised technicians.	
The heat pump is running work ³¹ and error message EE 3 is displayed.		Contact specialised technicians.	
The heat pump is running ³² and error message EE 4 is displayed.	Automatic defrost did not run correctly.	Increase water flow at pump inlet.	Contact specialised technicians.
Error message EE 5 is displayed. ³³		Contact specialised technicians.	
The heat pump does not work ³⁴ and error message EE 6 is displayed.	Compressor temperature too high.	Wait until compressor temperature drops.	Contact specialised technicians.
The heat pump does not work ³⁵ and error message EE 7 is displayed.		Contact specialised technicians.	
The heat pump does not work and error message EE 8 is displayed.		Contact specialised technicians.	
Error message EE 9 is displayed.	Pool temperature too high.	Wait until pool temperature drops.	Contact specialised technicians.
	Ambient temperature too high.	Wait until ambient temperature drops.	Contact specialised technicians.
	Manual defrost started without frost on plate heat exchanger	Turn off, see Paragraph 5.2.3, turn on, see Paragraph 5.2.1, and start the pump, see Paragraph 5.2.4.	

³⁰ Compressor and fan off.

³¹ Compressor and fan on.

³² Compressor and fan on.



³³ This error message is not used and should not be displayed.



³⁴ Compressor and fan off.



³⁵ Compressor and fan off.


ENGLISH

8. Spare parts.

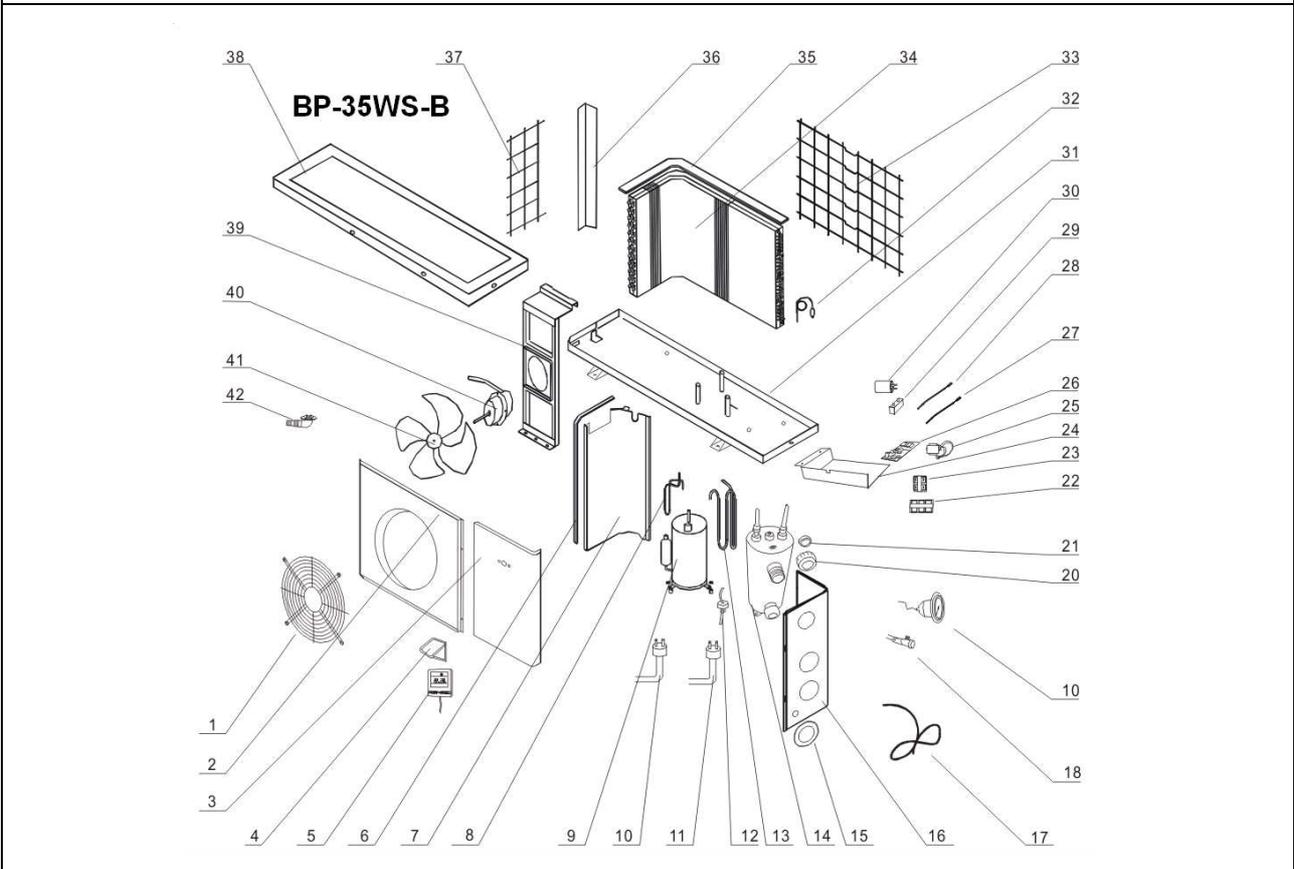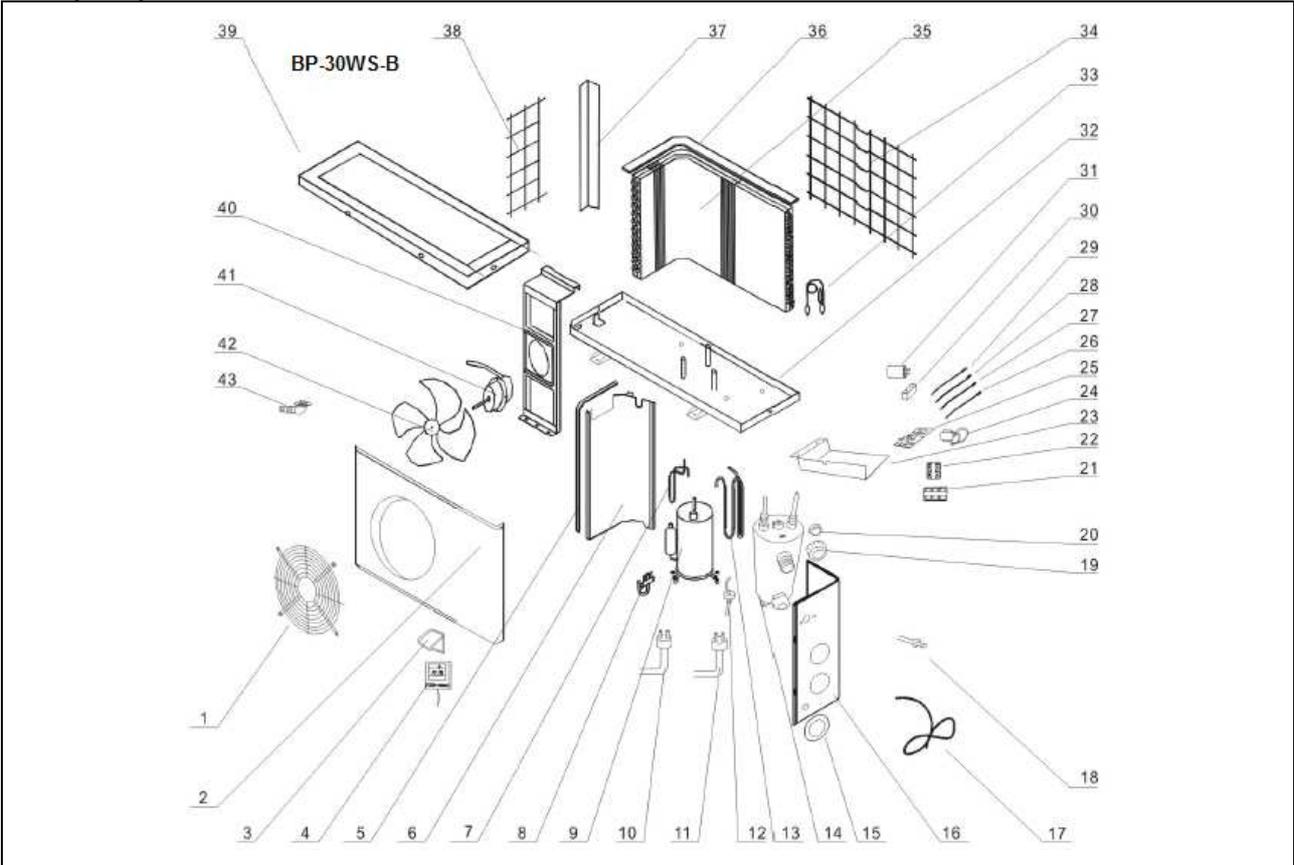

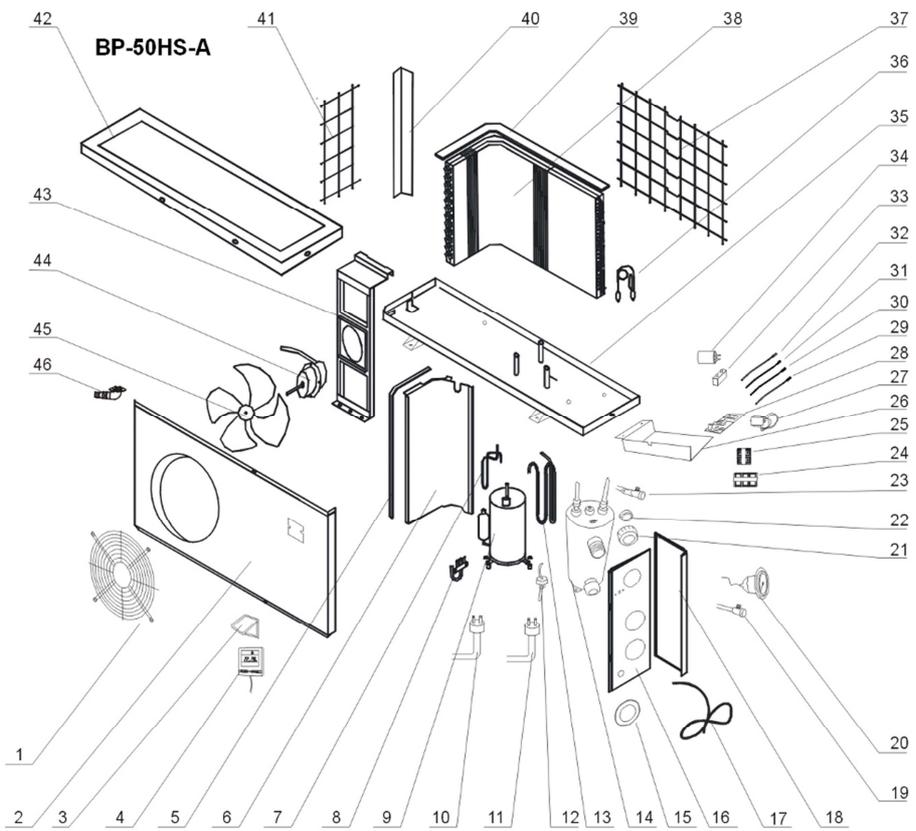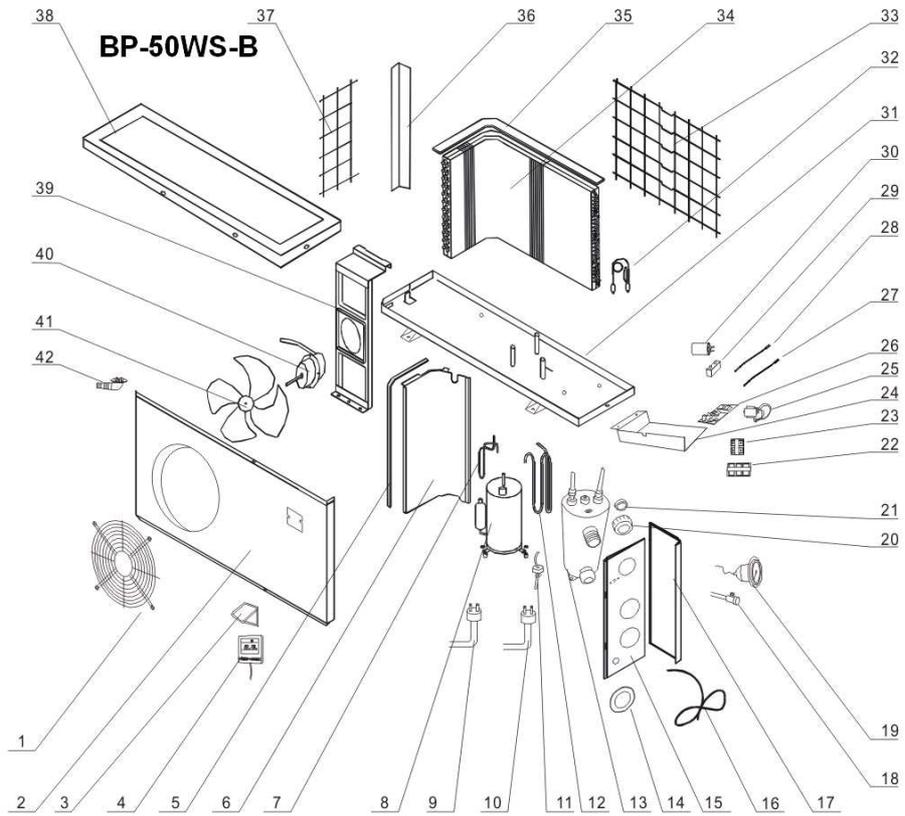

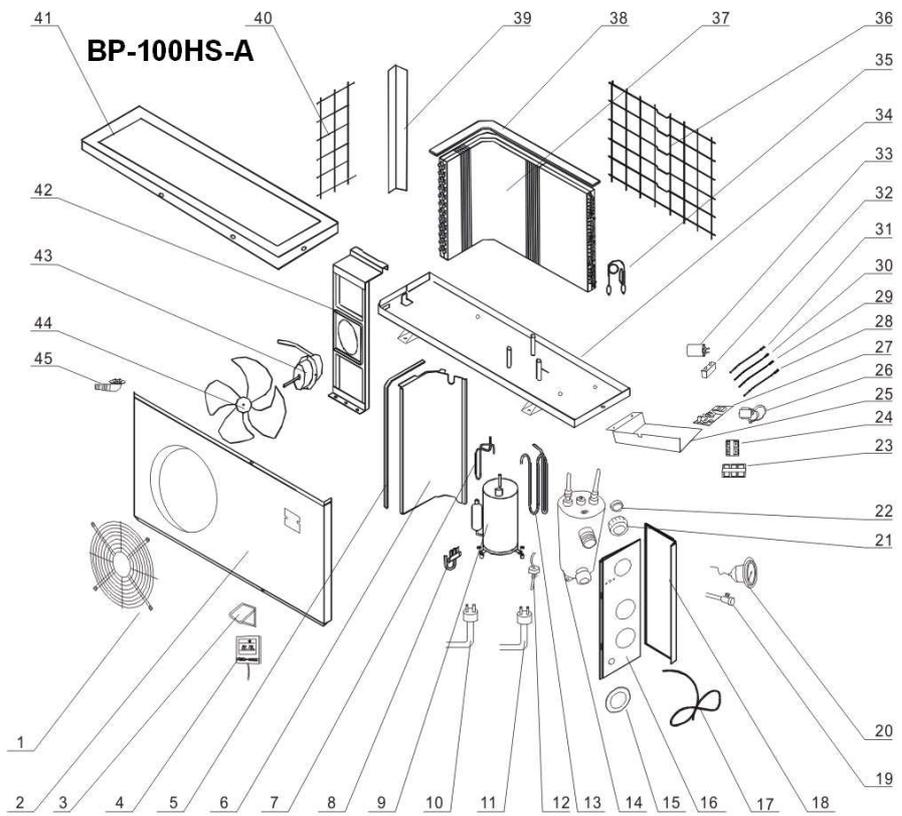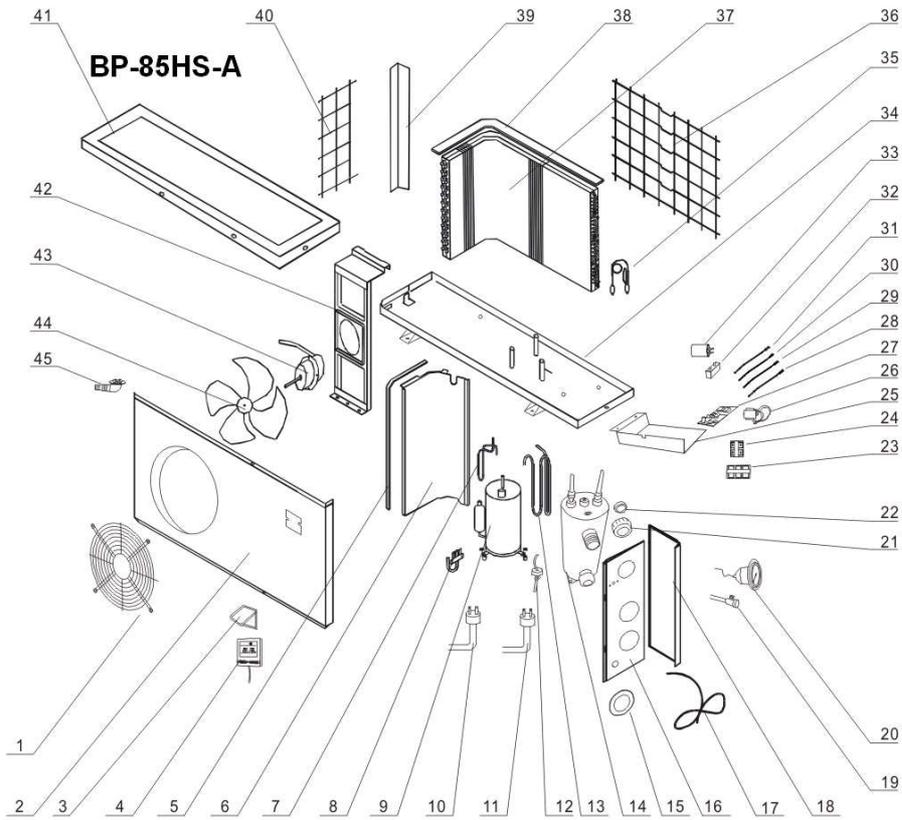

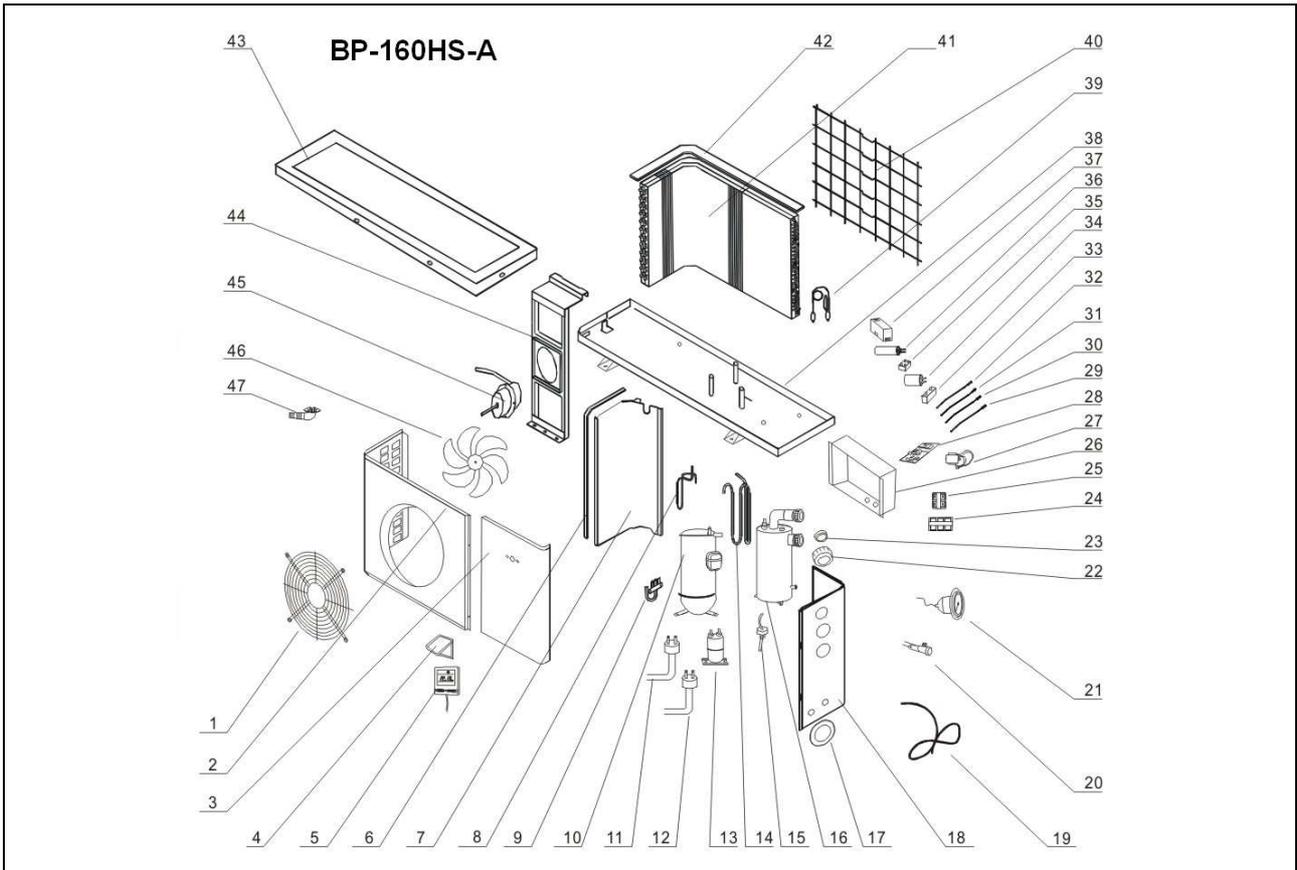

ENGLISH

#	BP-30WS-B	BP-35WS-B	BP-35HS-A	BP-50WS-B	BP-50HS-A	BP-85HS-A	BP-100HS-A	BP-160HS-A	
1	X	X							XW35HSI001A
				X	X	X			XW50HSI001A
							X		XW100HSI001A
								X	XW160HSI001A
2	X								XW30HSI002A
2		X	X						XW35HSI002A
3		X	X						XW35HSI002B
2				X	X	X			XW50HSI002A
2							X		XW100HSI002A
2								X	XW160HSI002A
3								X	XW160HSI002B
3	X				X				XW50HSI003A
3				X	X	X	X		XW50HSI003B
4		X	X						XW50WSI004A
4	X								XW50HSI004A
5		X		X					XW50HSI004A
6			X					X	XW50HSI005A
5	X			X	X	X			XW100HSI005A
6							X		XW160HSI005A
6	X								XW30HSI006A
7		X	X						XW35HSI006A
6				X	X	X			XW50HSI006A
6							X		XW100HSI006A
7								X	XW160HSI006A
7	X								XW30HSI007A
8		X							XW35WSI007A
8			X						-
7				X	X				XW50HSI007A
7						X			XW85HSI007A
7							X		XW100HSI007A
8								X	XW160HSI007A
9	X								XW30HSI009A
9		X							XW35HSI009A
10			X						XW50HSI009A
8				X					XW50HSI009A
9					X				XW85HSI009A
9						X			XW100HSI009A
10								X	XW160HSI009A
9				X					XW50HSI010A
10	X	X			X	X	X		XW50HSI011A
11			X						XW50HSI012A
12					X				XW50HSI012A
12	X	X			X	X	X		XW50HSI012B
11			X						XW50HSI012B
13				X					XW30HSI013A
15								X	XW35WSI013A
13	X								-
12				X					XW50HSI013A
13					X				XW50HSI013A
13						X			XW85HSI013A
13							X		XW100HSI013A
14								X	XW160HSI013A
14	X								XW30HSI014A
14		X							XW35HSI014A
15			X						XW50HSI014A
14				X					XW50HSI014A
13				X					XW50HSI014B
14					X				XW85HSI014A
14						X			XW100HSI014A
16								X	XW160HSI014A
15		X							-
16			X						-
14				X					XW50HSI015B
15	X	X			X	X	X		XW50HSI015B
16			X						XW50HSI015B
17								X	XW50HSI015B
16	X								XW30HSI016A
16		X							XW35HSI016A
17			X						XW50HSI016A
16				X	X	X			XW50HSI016A
16							X		XW100HSI016A
18								X	XW160HSI016A
17	X			X					XW50HSI018A
18					X	X			XW50HSI018A
18							X		XW100HSI018A

#	BP-30WS-B	BP-35WS-B	BP-35HS-A	BP-50WS-B	BP-50HS-A	BP-85HS-A	BP-100HS-A	BP-160HS-A	
17			X						XW35HSI017A
18				X					XW35HSI017A
15					X				XW50HSI017A
17						X	X		XW100HSI017A
19								X	XW160HSI017A
9			X						XW50HSI008A
8	X				X				XW50HSI008A
8						X	X		XW85HSI008A
9								X	XW160HSI008A
18	X	X		X					XW50HSI019B
19			X		X	X	X		XW50HSI019B
20								X	XW50HSI019B
19		X		X					XW50HSI020A
20			X		X	X	X		XW50HSI020A
21								X	XW50HSI020A
19+20	X								XW50HSI021A
20+21		X	X						XW50HSI021A
21+22				X	X	X			XW50HSI021A
22+23							X	X	XW50HSI021A
20	X	X							XW50HSI022A
21		X							XW50HSI022A
21			X						XW50HSI022A
22			X						XW50HSI022A
20				X					XW50HSI022A
21					X	X	X		XW50HSI022A
22								X	XW50HSI022A
21		X		X					XW50HSI022A
22			X		X	X	X		XW50HSI022A
23								X	XW50HSI022A
23					X				XW50HSI023A
21	X								XW50HSI024A
22		X		X					XW50HSI024A
23			X			X	X		XW50HSI024A
24					X			X	XW50HSI024A
22	X								XW50HSI025A
23		X		X					XW50HSI025A
24			X			X	X		XW50HSI025A
25					X			X	XW50HSI025A
24		X							XW35HSI026A
25			X						XW35HSI026A
23	X								XW50HSI026A
26					X				XW50HSI026A
25						X			XW50HSI026A
24				X					XW100HSI026A
25							X		XW100HSI026A
26								X	XW160HSI026A
27					X			X	XW50HSI026A
26			X			X	X		XW50HSI026A
25		X		X					XW50HSI026A
25	X								XW50WSI028A
26		X		X					XW50WSI028A
28					X				XW50HSI028A
28					X				XW50HSI028B
28						X			XW50HSI028C
28					X			X	XW50HSI028D
27			X			X	X		XW50HSI028D
26									XW50HSI029A
28			X			X	X		XW50HSI029A
29					X			X	XW50HSI029A
27	X	X							XW50HSI030A
29			X			X	X		XW50HSI030A
27				X					XW50HSI030A
30					X			X	XW50HSI030A
28									XW50HSI030A
30			X						XW50HSI031A
30						X	X		XW50HSI031A
31					X			X	XW50HSI031A
29	X								XW50HSI032A
31			X						XW50HSI032A
32					X				XW50HSI032A
28		X		X					XW50HSI032A
31						X	X		XW50HSI032A
32								X	XW50HSI032A
29	X	X							XW50HSI033A
32			X						XW50HSI033A
29				X					XW50HSI033A
33					X				XW85HSI033A
32						X			XW50HSI033A
32				X	X				XW100HSI033A
33							X		XW160HSI033A
31	X								XW30HSI031A
30		X							XW30HSI031A
33			X						XW50HSI034A
34					X				XW50HSI034A

ENGLISH

#	BP-30WS-B	BP-35WS-B	BP-35HS-A	BP-50WS-B	BP-50HS-A	BP-85HS-A	BP-100HS-A	BP-160HS-A	
30				X					
33					X				XW85HSI034A
33						X	X		XW100HSI034A
34							X		XW160HSI034A
32	X								XW30HSI032A
31		X							XW35HSI035A
34			X						
35				X					
31				X					XW50HSI035A
34					X				
34						X			XW100HSI035A
38							X		XW160HSI035A
33	X								XW30HSI033A
32		X							XW35WSI036A
35			X						
32				X					XW50WSI036A
36					X				XW50HSI036A
35						X			XW85HSI036A
35							X		XW100HSI036A
39								X	XW160HSI036A
34	X								XW30HSI034A
33		X							XW35HSI037A
36			X						
37				X					
33				X					XW50HSI037A
36					X				
36						X			XW100HSI037A
40							X		XW160HSI037A
35	X								XW30HSI035A
34		X							XW35HSI038A
37			X						
38				X					XW50HSI038A
34				X					
37					X				XW85HSI038A
37						X			XW100HSI038A
41							X		XW160HSI038A
35				X					XW50WSI039A
36	X								
38			X						
35		X							XW50HSI039A
39				X					
38					X				XW85HSI039A
38						X			XW100HSI039A
42							X		XW160HSI039A
37	X								XW30HSI037A
36		X							XW35HSI040A
39			X						
40				X					
38				X					XW50HSI040A
39					X				
39						X			XW100HSI040A
38	X								XW30HSI038A
37		X							XW35HSI041A
40			X						
41				X					
37				X					XW50HSI041A
41					X				
40						X			XW100HSI041A
39	X								XW30HSI039A
41			X						XW35HSI042A
38		X							
42				X					
38				X					XW50HSI042A
41					X				
41						X			XW100HSI042A
43							X		XW160HSI042A
40	X								XW30HSI040A
39		X							XW35HSI043A
43				X					
39				X					XW50HSI043A
42					X				
42						X			XW100HSI043A
44							X		XW160HSI043A
41	X								
43			X						XW35HSI044A
40		X							
44				X					XW50HSI044A
40				X					
43					X				XW85HSI044A
43						X			XW100HSI044A
45							X		XW160HSI044A
42	X								
41		X							XW35HSI045A
44			X						
45				X					XW50HSI045A
41				X					

#	BP-30WS-B	BP-35WS-B	BP-35HS-A	BP-50WS-B	BP-50HS-A	BP-85HS-A	BP-100HS-A	BP-160HS-A	
44						X			
44							X		XW100HSI045A
46								X	XW160HSI045A
43	X								
46						X			XW50HSI046A
42		X		X					
45			X			X	X		
20								X	XW160HSI046A
13							X		XW160HSI048A
35							X		XW160HSI049A
36								X	XW160HSI050A
37								X	XW160HSI051A

INTERLINE



www.interline-products.com