


- A. Programme selector
- B. Time display
- C. "Start delay" button
- D. "Spin" button
- E. "Start/Pause" button
- F. Programme sequence indicator
- G. "Reset" button
- H. "Lid open" indication

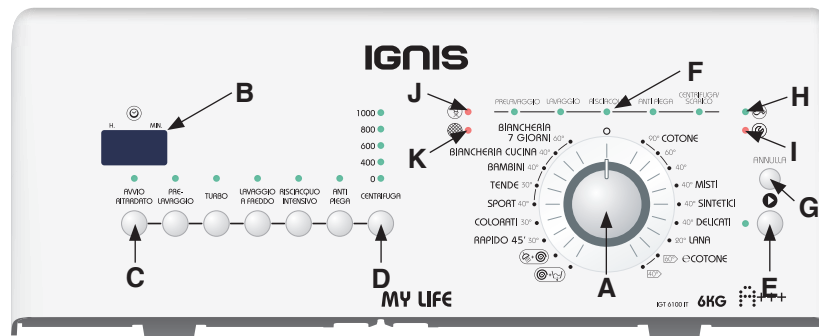

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

- I. "Service" indication
- J. "Water tap closed" indication
- K. "Clean pump" indication

Programme	Care Labels	Max. Load kg	Type of wash / Notes <i>Respect the manufacturer's recommendations on the care label</i>	Detergents and Additives			Special options					Max. Spin Speed rpm	
				Pre-wash	Main wash	Softener	Start delay Avvio ritardato	Pre-wash Pre-lavaggio	Rapid Turbo	Cold wash Lavaggio a freddo	Intensive rinse Risciacquo intensivo		Rinse hold Anti piega
Cotton 40 - 60 - 90 °C	Cotone 40 - 60 - 90 °C	Max.	Normally to heavily soiled and robust laundry made of cotton and linen. Automatically adapts programme duration and water consumption to the load size and thus allows economical washing of even small loads.	*	Yes	*	*	*	*	*	*	*	Max.
Mixed 40 °C	Misti 40 °C	3.5	Slightly to normally soiled textiles made of cotton and/or synthetics.	-	Yes	*	*	-	-	*	*	*	Max.
Synthetics 40 °C	Sintetici 40 °C	3.0	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon).	*	Yes	*	*	*	*	*	*	*	Max.
Delicates 40 °C	Delicati 40 °C	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	-	Yes	*	*	-	-	*	-	*	800 ¹⁾
Wool 20 °C	Lana 20 °C	1.0	Woollens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable.	-	Yes	*	*	-	-	-	-	*	Max.
eCotton 40°/60°	eCotone 40°/60°	Max.	Normally soiled cotton laundry. At 40°C and 60°C standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.	-	Yes	*	*	-	-	-	*	*	Max.
Daily 60 °C	Biancheria 7 giorni 60 °C	3.0	The ideal cycle for accurate washing of linens, towels and bathrobes.	*	Yes	*	*	*	-	*	*	*	Max.
Kitchen 40 °C	Biancheria cucina 40 °C	Max.	Cycle designed to remove dirt from tablecloths and kitchen linens.	-	Yes	*	*	-	-	*	*	*	Max.
Children 40 °C	Bambini 40 °C	3.5	The cycle is specially designed to remove the dirt that is typically found on children's clothes.	-	Yes	*	*	-	-	*	*	*	Max.
Curtains 30 °C	Tende 30 °C	1.5	Perfect program for washing and care of even the most delicate curtains.	-	Yes	*	*	-	-	*	-	*	800 ¹⁾
Sport 40 °C	Sport 40 °C	3.0	For washing lightly soiled sports clothing (tracksuits, shorts, etc.). For best results, we recommend not exceeding the maximum load. We recommend using liquid detergent, and adding the amount suitable for half-load.	*	Yes	*	*	*	-	*	*	*	Max.
Colours 30 °C	Colorati 30 °C	3.0	From lightly to normally soiled laundry made of cotton, synthetics or their blends; also delicates. Helps preserving colours.	*	Yes	*	*	*	*	*	*	*	Max.
Speed 45' 30 °C	Rapido 45' 30 °C	3.5	The best daily washing solution. Particularly useful for lightly and normally soiled textiles made of cotton or synthetic fabrics, as it washes at low temperature and a maximum spin speed.	-	Yes	*	*	-	-	*	-	*	Max.
Rinse + Spin		-	Max. Same as the last rinse and the final spin in the "Cotton" programme.	-	-	*	*	-	-	-	*	*	Max.
Spin + Drain		-	Max. In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	-	-	-	*	-	-	-	-	*	Max.

Yes = dosing required / * = optional
 1) For improved garment care, spin speed is restricted in these programmes.

CONSUMPTION DATA

Power consumption in off-mode 0.11 W/ in left-on mode 0.11 W

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy without "Rapid" (kWh)	Approx. Programme Duration ☺ (hrs : min)		👤 %
					without "Rapid"	with "Rapid"	
Cotton	90	6.0	53*	1.91	2:05	1:55	64
Cotton	60	6.0	60	0.99	3:00	1:45	
Cotton	40	6.0	60	0.80	3:00	1:45	
Mixed	40	3.5	43	0.47	0:59	-	47
Synthetics	40	3.0	45	0.52	1:50	0:59	
Delicate	40	1.5	50	0.55	0:45	-	
Wool	20	1.0	40	0.10	0:35	-	
eCotton <60>**	60	6.0	48	0.78	4:00	-	62
eCotton <60>**	60	3.0	31	0.65	2:10	-	
eCotton <40>**	40	3.0	31	0.59	2:00	-	
Daily	60	3.0	50	0.90	2:05	-	
Kitchen	40	6.0	48	0.65	2:50	-	
Children	40	3.5	50	0.50	1:09	-	
Curtains	30	1.5	50	0.50	0:45	-	
Sport	40	3.0	50	0.53	2:09	-	
Colours	30	3.0	45	0.45	1:46	0:55	
Speed 45'	30	3.5	43	0.40	0:45	-	

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

👤 Approximate remaining moisture content (%). After programme end and spinning with maximum selectable spin speed, in default programme setting.

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference Programmes for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

PREPARATION OF THE WASH CYCLE

1. Load the machine, close the drum doors and check that they are properly locked.
2. Add detergent and eventual additives as described on the front page and in your Instructions for use.
3. Close the lid.
4. Turn the **programme selector** to the desired programme and temperature. The time display shows the duration of the selected programme (in hours and minutes), and the indicator for the **"Start/Pause"** button flashes. The indicator for the preset spin speed lights up. If you do not start the programme soon after having made your choice, the washing machine will switch off automatically after about a quarter of an hour. Switch on the washing machine again by turning the programme selector back to "O" and then to the desired programme.

SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for main wash if you have activated prewash option.

"Rapid" button

- Enables quicker washing by shortening the programme duration.
- Recommendable for small loads or only lightly soiled laundry.

"Cold wash" button

- Water is heated only up to 20°C.
- Suitable for delicate laundry items with wash temperature recommendation of max. 30°C on the care label.
- **Selectable only on the lowest temperature step of each programme.**

"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

"Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the "Synthetics", "Daily load" and "Delicates" programmes.
- It is useful if you want to postpone spinning to a later time, or if you want to drain out only.
- If you select "Rinse Hold", do not leave items to soak for too long.

- As soon as the appliance stops in the rinse hold, the "Rinse hold" lamp of the sequence indicator lights up and the lamp next to the **"Start/Pause"** button flashes.

Terminate the "Rinse Hold" option:

- Press the **"Start/Pause"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button.

"Spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

START DELAY

The "Start delay" button allows the user to run the machine at his convenience, for example at night when electricity is cheaper. Do not use liquid detergent.

- Select programme, spin speed and options.
- Press the "Start delay" button several times to select a delay time by 1 to 23 hours.
- Start the countdown of the "Start delay" by pressing **"Start/Pause"**. The lamp over the "Start delay" button blinks, and it goes off when the programme starts.
- Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. The time delay indication on the display disappears when the programme starts and is replaced by the remaining programme time.
- After the **"Start/Pause"** button has been pressed, the number of hours preselected can be reduced by pressing again the "Start delay" button.

To cancel the "Start delay"

..before you press the "Start/Pause" button:

- Turn the programme selector to another position or press the **"Reset"** button.

..after having pressed the "Start/Pause" button:

- Press the **"Start/Pause"** button - the delay time disappears from the display.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The blinking light next to the **"Start/Pause"** button becomes constant. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phase is finished, the corresponding indication goes out.

- **Note:** If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

"LID OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Water tap closed" -

No or not sufficient inlet water.

"Service" -

Failure or malfunction of an electrical component.

"Clean pump" -

Waste water is not pumped out.

Spin speed on programme sequence indicator blinks: unbalance during spinning

PROGRAMME END

- The "Lid open" indication lights up and the display show "End". After about a quarter of an hour, the washing machine will switch off completely to save energy.

1. Turn the programme selector to the "O" position.
2. Close the water tap.
3. Open lid and drum and unload the machine.
4. Leave the lid open for some time to allow the interior of the machine to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press the **"Reset"** button for at least 3 seconds. The water is drained out; it may last a while until you can open the lid.