

Register your product and get support at
www.philips.com/welcome

Portable Notebook
Power Adaptor

SPJ7100

 


EN User manual





PHILIPS

EN Notebook tips specification table

EN	Tip number	Voltage	Tip dimension	Notebook brand	Series	Polarity
	1	19V	4.75/1.7 x 12mm	HP Pavilion dv2-1000(dv2-1004ax), 1000(dv2-1005ax), 1000(dv2-1006ax), 1115ea, 1125ea, 1127ea	HP Pavilion dv2	Centre+
				HP Touchsmart tx2-1012au(NK927PA), tx2-1013au(NK928PA), tx2Z	HP Touchsmart	
				HP Compaq 510(VX573PA), 510(VX574PA), 510(WB228PA), 510(WB229PA), 510(WB230PA), 510(WB231PA), 515(VF593PA), 515(VF938PA), 515(VF939PA), 515(VF940PA), 515(VF941PA)	HP Compaq	
				HP Pavilion dm1-1020ea, 1030sa, 1101sa, 1020sa, 1102sa	HP Pavilion dm1	
				HP Pavilion dm3- 1112sa, 1025sa, 1101ea, 1020ea, 1100sa, 1101sa, 1105ea	HP Pavilion dm3	
	2	19V	5.5/1.7 x 12mm	Acer Aspire Timeline 5810T, 4810T	Acer Aspire timeline	Centre+
				Acer Aspire 1410, 2930, 2930Z, 3410, 3935, 4330, 4530, 4535, 4540, 4730Z, 4732Z, 4736, 4736Z, 4930, 4935, 4937, 5410, 5532, 5534, 5535, 5536, 5538, 5542, 5732Z, 5735, 5738, 5738Z, 5740, 5935G, 7736Z, 7740	Acer Aspire	
				Acer Extensa 4130, 4230, 4430, 4630Z, 5235	Acer Extensa	
				Acer TravelMate 4330, 4530, 4730, 5330, 5530, 5730, 6293, 6493, 7730, 8331, 8371, 8431, 8471, 8531	Acer TravelMate	
				Acer TravelMate Timeline 8571	Acer TravelMate Timeline	
				Acer Ferrari 1100, 1200	Acer Ferrari	
	3	16V	6.5/4.3 (1.4) x 12mm	Fujitsu LB 770	Fujitsu Lifebook 700	Centre+
				Fujitsu LBP 8010-AC032S0F1, 8010-AC033S0E1, 8010-AC064S0F1, 8010-AC088S0E1, 8020-AC005S0E1, LOP8020-ACSOE10083, 8020	Fujitsu Lifebook P	
				Fujitsu LBT 2010-AC047S0E1, 2010-AC122S0E1, 2020-AC021S0E1, LOT2020-ACSOE10040	Fujitsu LifebookT	
				Fujitsu Stylistic ST5010, ST5020, ST5030, ST6012, ST5112-AC104S0F1, ST5112-AC207S0F1	Fujitsu Stylistic	
	4	16V	6.5/4.3 (1.4) x 12mm	Sony TT VGN-TT13, TT17N, TT18N, TT23, TT27D, TT28D, TT36GG, TT45G, TT46GG, TT47GG, TT45I	Sony TT	Centre+
				Sony TX VGN-TX37GP, TX45C, TX46C, TX56C, TX57CN, TX58CN	Sony TX	
				Sony TZ VGN-TZ121, TZ13, TZ131N, TZ132N, TZ16N, TZ17N, TZ18N, TZ27N, TZ28N, TZ33, TZ37N, TZ38N	Sony TZ	
				Sony G VGN-G118CN, G218N, G218TN	Sony G	
	5	19V	5.5/2.5 x 12mm	ASUS Versatile performance A2H, A3Ac, A3E, A3Fc, A3G, A3H, A3N/L, A5E, A5Eb, A5Ec, A6G, A6J, A6jc-, A6K, A6L, A6M, A6Ne, A6R, A6Rp, A6Tc, A6U, A6Vc, A6Vm, A8E, A8F-, A8He, A8Jc, A8Le, F2F-, F2Je, F3F-, F3H, F52Q, F6E, F7Sr, F80Cr, F80L, F83Cr, F83T, K40J, K40IN, K50J, K50IN, M3N, M3Np, N20A, V6j-, V6V, V6Va, W1Ga, W1Gc, W1N, W1Na, W3N, W3V, M9V, X51L, X51R, X51RL, X58C, X58L, X58Le, X61GX, X80Le	ASUS Versatile performance	Centre+
				ASUS special edition VX1 ASUS-LAMBORGHINI VX1	ASUS special edition VX1	
				ASUS Business B50A, B80A, F5GL, F5M, F5R, F5RI	ASUS Business	
				ASUS Multimedia entertainment M5A, M6A, M6N/Ne, M6R, M6V, M6Va	ASUS Multimedia entertainment	
				ASUS Superior mobility F9E, F9F, N10E, N10J, N10Jc, N10Jh, R1E, S6F, S6F leather collection, S6Fm, S7F, U1E, U1F, U2E, U5A, U5F-, U6E, U6Ep, UL50Ag, UL50Vg, UL50Vs, UL50Vt, UL80V, UX50V, W5A, W5F, W5Fe, W5Fm, W6A, W6Fp-, W7F, Z35H, Z35L	ASUS Superior mobility	
				Lenovo G450L-TTH, M-TFO	Lenovo G450	
				Lenovo IdeaPad U150-SFO(Black star), U150-SFO(Black star)(R), U150-SFO(Phantom), U150-SFO(Colourful matrix), U150-STW(P)(Black star), U150-STW(Black star), U150-STW(Black star)(R), U150-STW(Red star), U150-STW(Red star)(R), U350, U350-SSE(8H)(Light texture), U350-SSE(R)(White leather), U350-SSE(R)(Light texture), U350-SSE(R)(Lizard leather), U350-STW(H)(Charming black), U350-STW(H)(Champagne gold), U350-STW(H)(Vigor red), U450A-SNI, U450A-SSE, U450A-STW, U450	Lenovo IdeaPad U	
				Lenovo B450L-TFO(A), TTH(A)	Lenovo B450	
				MSI Classic CR400, CR420, CR500, CR600, CR610, CR700, CX420, CX500, CX600, CX605, CX620, CX700	MSI Classic	
				MSI Entertainment EX460, EX465, X350, X400, X420, X600, X600 pro, X610, X620	MSI Entertainment	
				MSI Wind12 U210, U230	MSI Wind Netbook	
				Toshiba Satellite A500-ST5607, A505-S6004, A505-S6005, A505-S6007, A505-S6012, A505-S6015, A505-S6016, A505-S6017, L455D-S5976, L455-S5000, L455-S5975, L455-S5980, L455-S5989, L500-ST5507, L505-ES5015, L505-ES5016, L505-ES5018, L505-ES5033, L505-ES5034, L505-GS5035, L505-GS5037, L505-GS5038, L505-GS6002, L505-L55017, L515-S4960, L525, L550-ST5707, L550-ST5708, L555-S7002, M500-ST5408, M505-S4020, M505-S4022, L450-137, L450-16Q, L450-181, L450-188, L450-18D, L500-1DT, L500-1WG, L500-1XC, L500-1XD, L500-1XJ, L500-1XL, L500-1XM, L500-207, L500-1UR, T110-107, T110-10J, T110-11U, T110-12T, T110-12U, T130-11H, T130-13M, T130-13Q, T130-16W, T130-170, U500-1EX, T110-121, T115D-S1120, T115D-S1120RD, T115D-S1125, T115D-S1125RD, T115-S1100, T115-S1105, T115-S1108, T135D-S1320, T135D-S1324, T135D-S1325, T135D-S1325RD, T135D-S1325WH, T135D-S1326, T135D-S1327, T135-S1300, T135-S1300RD, T135-S1300WH, T135-S1305, T135-S1305RD, T135-S1305WH, T135-S1307, T135-S1309, T135-S1310, T135-S1310RD, T135-S1300WH, U500-ST5307, U505-S2002, U505-S2005, U505-S2005RD, U505-S2005WH, U505-S2008, U505-S2950, U505-S2950WH, U505-S2960, U505-S2960PK, U505-S2961, U505-S2970, U505-S2975	Toshiba Satellite	
				Toshiba Satellite Pro L450-EZ1510, L450-EZ1541, L450-EZ1542, L450-EZ1543, L500-EZ1520, L500-EZ1530, L550-EZ1702, T110-13H, T130-14M, T130-14Q, T130-14U, T130-15F, U500-1DK, U500-1E4, U500-EZ1311	Toshiba Satellite Pro	
				Dell Inspiron 1000, 1200, 1300, 2200, B120, B130	Dell Inspiron	
Dell Latitude 110L, 120L	Dell Latitude					
Fujitsu LBP 8110	Fujitsu Lifebook P					
	6	19V	5.5/3.0 (1.0) x 12mm	Samsung P P410, P460, P560-AA01, P560-AA02, P560-AA03, P560-AA04, P560-AA05, P560-AA0A, P560-HS01	Samsung P	Centre+
				Samsung Q Q1, Q1U, Q1U-000, Q1U-A000, Q1U-AP01, Q1U-AY01, Q1-Ultra, Q1-Ultra-HSDPA, Q1U-SD1, Q1U-Y01, Q1V-000, Q1V-002, Q210, Q210-FA02, Q310, Q318, Q318-DS0N, Q318-DS0P, Q318-DSON, Q318-PSO1, Q318-PSOP, Q320, Q320-AS02, Q320-BS02, Q320-BS03, Q320E, Q320-EXT, Q320-FS01, Q320-FS05, Q320-FS08, Q320-FS09, Q320-JS01, Q320-JS02, Q320-JS43W, Q320-PS01, Q320-PS32S, Q320-PS3LA, Q320-PS55B	Samsung Q	
				Samsung R R408, R410, R410-FB02, R410-FB03, R418, R418-DA03, R418-DA04, R418-DA04TH, R420, R420-AA11S, R420-AA23D, R420-FA02, R420-JA12S, R420-JA41D, R420-JA43, R420-XA02, R420-XA03, R428-DA02, R428-DS01, R428-DS04, R428-DS05, R428-DS06, R428-DS07, R428-DS08, R428-DS09, R428-DS0A, R428-DS0D, R430, R430-JA01, R430-JA05, R430-JA12S, R430-JA42D, R430-JA43, R430-JS04, R430-JS05, R430-JS4DA, R430-JS4MA, R430-JS4SA, R430-PS3LA, R430-PS3MA, R458, R460, R460-AS02, R463-DS01, R466-DS09, R466-DS0A, R467-DT03, R467-DT08, R467-DT09, R467-DT0A, R467-DT0B, R467-DT0C, R467-DT0E, R467-DT0F, R468, R468-DS03, R469-JS01, R469-JS42D, R469-JT01, R469-JT02, R469-XS01, R469-XS02, R470, R470-AT02, R470-FT01, R470-FT02, R470-JA04, R519-FA01, R519-FA02, R519-FA03, R519-FA04, R519-JA06, R519-JA12S, R519-JA42, R519-JA43, R519-JS01, R519-JS02, R519-JS03, R519-JS04, R519-JS41D, R519-JS42S, R519-JS43L, R519-JS43M, R519-JS45M, R519-XA01, R519-XA02, R519-XA03, R519-XA07, R519-XA08, R519-XS01, R520, R520-FA01, R520-FA02, R520-FS01, R520-FS02, R520-FS03, R520-JA01, R520-JA02, R520-JA03, R520-JA42D, R520-JS01, R520-JS02, R520-PS32S, R520-PS53S, R520-XA03, R520-XA04, R520-XA05, R520-XA06, R520-XA07, R520-XA08, R520-XS01, R520-XS02, R520-XS03, R522, R522-AA02, R522-AS01, R522-AS02, R522-AS03, R522E, R522E-FS0C, R522-FA01, R522-FS01, R522-FS02, R522-FS03, R522-FS04, R522-FS05, R522-FS06, R522-FS07, R522-FS09, R522-FS0A, R522-FS0E, R522-FS0F, R522-JA01, R522-JS01, R522-JS02, R522-JS03, R522-JS04, R522-JS42J, R522-JS43, R522P R522-PS33M, R522-PS55, R522-XA02, R522-XA05, R522-XS02, R530, R530-JA03uk, R530-JA05, R530-JA12S, R530-JA42, R530-JA42S, R530-JA4DA, R530-JA4JA, R530-JS02, R530-JS03, R530-JS06, R530-JS42, R530-JS4DA, R530-PS3JA, R530-PS3LA, R530-PS3SA, R530-PS5MA, R580, R60E, R60-Ext, R60FE06/S, R60FE08/S, R60FE09/S, R60FE0A/S, R60FE0B/S, R60FS01/S, R60FS02/S, R60FS03/S, R60-Int, R60PLUS, R610, R620-64BR, R620-64G, R620-AS01, R620-FS02, R620-FS03, R620-JS01, R717-DA01, R717-DA02, R719-FA01, R719-JA01, R719-JA02, R719-JA03, R719-JS01, R719-JS02, R719-JS03, R719-JS04, R720, R720-EXT, R720-FS02, R720-FS03, R720-FS04, R720-FS05, R720-FS06, R720-JS02, R720-JS03, R720-PS01, R720-PS55S, R728-DS05, R728-DS06	Samsung R	
				Samsung X X360, X360-AA01, X360-AA02, X360-AA03, X360-AA04, X360-AA05, X360-AA06, X360-AA07, X360-AA31R, X460-41S, X460-42PW, X460-43P, X460-43PW, X460-AA01, X460-AS01, X460-AS02, X460-AS04, X460-AS05, X460-AS06, X460-AS0A, X460-AS31B, X460-WS0	Samsung X	
	7	19V	7.4/5.1 (0.6) x 12mm	HP Compaq 2710p, 610, 615, 6530b, 6730b GB987EA, 6730b, 6735b	HP Compaq	Centre+
				HP Compaq Presario CQ40-500(CQ40-506AU), CQ40-500(CQ40-507AU), CQ40-500(CQ40-522TU), CQ61-402EA, CQ61-401SA, CQ61-405SA, CQ61-406SA, CQ61-422SA, CQ61-425EA, CQ61-402SA, CQ71-402SA, G62-105SA	HP Compaq Presario	
				HP EliteBook 2530p, 6930p, 8530w mobile workstation, 8730w mobile workstation	HP EliteBook	
				HP Envy 13-1100	HP Envy	
				HP Mini 5101	HP Mini	
				HP Pavilion dv6-2112sa	HP Pavilion dv6	
				HP ProBook 4310s, 4510s, 4515s, 4710s, 5310m, 5310m(VT180PA), 5310m(VT181PA), 5310m(VT214PA), 5310m(WC634PA), 5310m(WC635PA)	HP ProBook	
	HP Touchsmart tm2-1000, tx2-1300	HP Touchsmart				
				Toshiba Portege A600-16N, R600-102, R600-10T, R600-11B, R600-12Z, R600-13X, R600-13Z, R600-140, R600-147, R600-149, R600-S4203, R600-S4211, R600-S4212, R600-S4213	Toshiba Portege	Centre+
	9	19V	7.9/5.5 (0.9) x 12mm	Lenovo ThinkPad X200 7454GHC, X200 74574UC, X200 7457AC1, X200 7457CH1, X200 7457CH2, X200 7458AJ2, X200 7458AJ3, X200 7458AJ4, X200 7458AJ5, X200 7458AJ6, X200 7458AJ8, X200 7458AJ9, X200 7458E48, X200 7458E49, X200 7458E51, X200 7458E69, X200 7458EA1, X200 7458EE7, X200 7458EE9, X200 7458EU6, X200 7458F16, X200 7458FA1, X200, X200s, X201, X201S, X200 tablet, X201 tablet, X100e, X301 2774HF2, X301 2774HF3, X301 2774HF4, X301 2774HF5, X301 2774HG1, X301 2774HH1, X301 2774HH2, X301 2774HH6, X301 2774HH7, X301 4182HE1, X301	Lenovo ThinkPad X	Centre+
				Lenovo ThinkPad Edge 13, 13 Glossy Red Cover, 13 Matte Black Cover	Lenovo ThinkPad Edge	
	10	19V	7.4/5.1 (0.6) x 12mm	Dell Adamo 13	Dell Adamo	Centre+
				Dell Inspiron 11z, 13, 13z, 1401, 1410, 1420, 14z, 15, 15 intel core i, 1501, 1520, 1521, 1525, 1526, 15z, 17 intel core i, 300m, 500m, 6000, 630m, 700m, 710m	Dell Inspiron	
				Dell Latitude 131L, 2100, D410, D420, D430, D530, D531, D620, D630, D631, D830, E4200, E4300, E5500 & Mini 9, XT, XT2, XT2 XFR, Z	Dell Latitude	
				Dell Precision M20 mobile workstation, M2300, M4300, M70 mobile workstation	Dell Precision	
				Dell Studio 14z, 15(LED), 1536, 1555, 1747, XPS 13	Dell Studio	
				Dell Vostro 1000, 1014, 1015, 1220, 1310, 1320, 1400, 1500, 1510, 1710, 2510, V13	Dell Vostro	
				Dell XPS M140	Dell XPS	

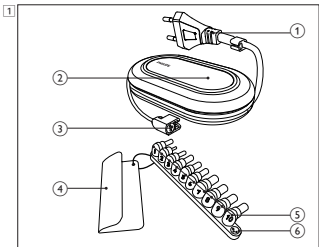

2

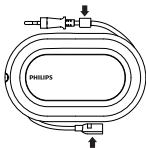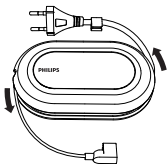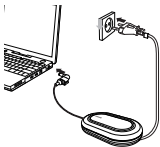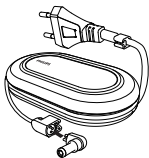    

1 Overview of the product (Fig. 1)

- ① AC power plug
- ② LED indicator
- ③ Notebook connector cable
- ④ Notebook tips list
- ⑤ Notebook connector tips
- ⑥ Connector tips holder

2 Get started (Fig. 2)

- 1 From the notebook tips list, select the tip that matches your notebook model.
- 2 Connect the connector tip to the notebook connector cable.
- 3 Connect the power adaptor cable to the power socket of your notebook and a AC power socket.
↳ The LED indicator lights up.

Disclaimers:

To prevent damage to the notebook, select the tip that matches the notebook model. Please refer to the Quick Start Guide (Notebook tips specification table), pamphlet at package or visit www.philips.com (Search > SPJ7100) for the correct tip selection

This product is intended only for sales outside the USA.

Only for sales outside the USA.

3 Troubleshooting

Problems	Causes	Solutions
The portable notebook power adapter does not work properly (or the LED indicator is on but your notebook is not charged properly).	The selected tip may not fit the notebook that you connect with.	Ensure you connect the right tip according to the notebook tips list at tips holder; pamphlet at package or www.philips.com (Search > SPJ7100) for the updated tip selections.
The portable notebook power adapter is hot and your notebook is not charged properly (or the LED indicator is blinking with AC power supplied).	The portable notebook power adapter is connected with higher input power notebook(>65W).	Your notebook is still being charged. The notebook power adapter will work again after it cools down.
I am not sure if the tip voltage fits my notebook.	N/A	There are voltages embossed at the tips, e.g. 16V, 19V, ...etc.

4 Recycling

 
 
 
 
 
Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.



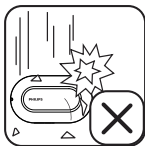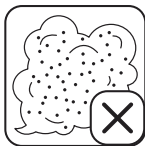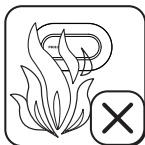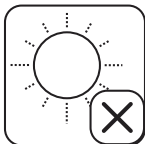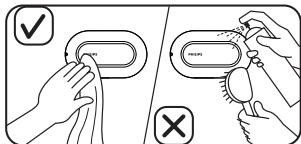

FCC - Notice of compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC - Remarques sur la conformité

L'appareil répond aux normes FCC, Part 15.

Fonctionnement soumis aux deux conditions suivantes:

1. Cet appareil ne doit pas provoquer d'interférences nuisibles, et
2. Cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement peu satisfaisant.

Remarque:

Cet équipement a été testé et a été certifié conforme aux limites imposées pour un appareil numérique de Classe B, conformément à la partie 15 des règlements FCC. Ces limites sont définies aux fins d'assurer une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et émet des fréquences radio qui, en cas d'une mauvaise installation ou d'une utilisation non-conforme aux instructions de ce manuel d'utilisation peuvent causer des interférences nuisibles aux communications radio. Il n'y a toutefois aucune garantie que des interférences nuisibles ne se produiront pas dans une installation donnée. Si cet équipement cause des interférences nuisibles avec votre poste radio ou de télévision, ce que vous pouvez déterminer en éteignant et en rallumant votre équipement, il est conseillé à l'utilisateur d'essayer de pallier à ces interférences nuisibles en prenant l'une ou l'autre des mesures suivantes:

- Changez la position de l'antenne de réception.
- Augmentez la séparation entre l'équipement et le récepteur.
- Branchez l'équipement sur une source d'alimentation différente de celle sur laquelle le récepteur est branché.
- Consultez votre distributeur ou un technicien qualifié en la matière pour assistance.



© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

Служба підтримки споживачів
тел.: 0-800-500-697
(дзвінки зі стаціонарних телефонів на території України безкоштовні)
для більш детальної інформації завітайте на www.philips.ua
Компанія Philips встановлює строк служби на даний виріб – не менше 3 років

Изготовитель
Хийжоу Скай Форчун Електроникс Ко.
Лтд Донжуань Индастриал Эстейт,
Шуилоу Стрит, ХийЖу, Гуаньдун, Китай

SPJ7100_10_V1.1



100% recycled paper
100% papier recyclé