

EN Read the instructions before use to avoid any danger due to misuse.

SAFETY INSTRUCTIONS

• This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

• **CAUTION:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Do not use the appliance:
- on any part of your body other than your face.
- on dry, chapped skin or when you suffer skin conditions such as eczema, inflamed skin or acne.
- on damage or infected skin.

Avoid direct contact with eyes and the hairline. Stop using if skin becomes red or irritated.

• Consult a doctor if your skin becomes very irritated or starts to bleed.

• Do not use the appliance on the same spot for longer than 3 minutes at a time.

• Do not exert excessive pressure on your skin.

• For reasons of hygiene we recommend you not to lend anyone your appliance, even those who are closest to you. • If you suffer from skin problems or other medical problems, consult your doctor before using the appliance.

• Do not insert objects in the appliance or disassemble the appliance.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

GUARANTEE

This appliance is designed for domestic use only. It is not intended for professional use. The guarantee will be null and void if the appliance is not used correctly.

PROTECTING THE ENVIRONMENT

• Your appliance contains valuable materials which can be recovered or recycled. Leave it at a waste collection point or an approved service centre so that it can be disposed of correctly.

These instructions are also available on our website www.rowenta.com

To buy your spare parts and accessories, go to the **Accessories Store** on the site www.rowenta.com

FR

Lisez les instructions avant d'utiliser l'appareil et évitez tout danger dû à une mauvaise utilisation.

CONSEILS DE SÉCURITÉ

• Cet appareil n'est pas prévu pour être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou des personnes démunies d'expérience ou de connaissance, sauf si elles ont pu bénéficier, par l'intermédiaire d'une personne responsable de leur sécurité, d'une surveillance ou d'instructions préalables concernant l'utilisation de l'appareil. Il convient de surveiller les enfants pour s'assurer qu'ils ne jouent pas avec l'appareil.

• **ATTENTION:** Cet appareil peut être utilisé par des enfants âgés de 8 ans et plus et des personnes ayant des capacités physiques, sensorielles ou mentales réduites ou un manque d'expérience et de connaissances, s'ils ont reçu un encadrement ou des instructions concernant l'utilisation de l'appareil en toute sécurité et comprennent les risques encourus. Les enfants ne doivent pas jouer avec l'appareil. Les enfants ne doivent ni nettoyer l'appareil ni s'occuper de son entretien sans surveillance. Il convient de surveiller les enfants pour s'assurer qu'ils ne jouent pas avec l'appareil.

• Ne pas utiliser l'appareil :
- sur une autre zone du corps que le visage.
- sur une peau sèche, gercée ou si vous souffrez d'affections cutanées (eczéma, inflammations, acné).

• Évitez le contact direct avec les yeux et à la naissance des cheveux. Si une irritation de la peau ou des rougeurs apparaissent, arrêtez l'utilisation.

• Si la peau devient très irritée ou saigne, consultez un médecin.

• Ne pas utiliser l'appareil plus de 3 minutes d'affilée sur la même zone.

• Ne pas exercer une trop forte pression sur la peau.

• Pour des raisons d'hygiène nous vous recommandons de ne pas prêter votre appareil même dans votre environnement proche.

• Si vous avez des problèmes de peau ou d'autres problèmes médicaux, consulter votre médecin avant utilisation.

• Ne pas insérer d'objet dans l'appareil, ou déssembler l'appareil.

• L'état de votre peau varie tout au long de l'année. Votre visage peut être plus sec durant l'hiver: dans ce cas, la durée du traitement doit être réduite.

• Pour de meilleurs résultats, veuillez remplacer la tête de brosse tous les 3 mois.

• Pour votre sécurité, cet appareil est conforme aux normes et réglementations applicables (Directives Base Tension, Compatibilité électromagnétique, Environnement...).

• **ATTENTION:** Cet appareil n'est pas prévu pour être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou des personnes démunies d'expérience ou de connaissance, sauf si elles ont pu bénéficier, par l'intermédiaire d'une personne responsable de leur sécurité, d'une surveillance ou d'instructions préalables concernant l'utilisation de l'appareil. Il convient de surveiller les enfants pour s'assurer qu'ils ne jouent pas avec l'appareil. Le nettoyage et l'entretien par l'utilisateur ne doivent pas être effectués par des enfants sans surveillance.

• Ne pas nettoyer avec des produits abrasifs ou corrosifs.

• Ne pas utiliser par température inférieure à 0°C et supérieure à 35°C.

• Conservez le produit dans un endroit sec et non exposé à la lumière du soleil.

• Les piles non rechargeables ne doivent pas être rechargées.

• Les différents types de piles ou piles neuves et usagées ne doivent pas être mélangées.

• Les piles doivent être insérées selon la polarité correcte.

• Les piles déchargées doivent être retirées de l'appareil et éliminées de façon sûre.

• Si l'appareil doit être entreposé sans être utilisé pendant une longue période, il convient de retirer les piles.

• Les bornes d'alimentation ne doivent pas être court-circuitées.

GUARANTEE

This appliance is designed for domestic use only. It is not intended for professional use. The guarantee will be null and void if the appliance is not used correctly.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

GUARANTEE

This appliance is designed for domestic use only. It is not intended for professional use. The guarantee will be null and void if the appliance is not used correctly.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

GUARANTEE

This appliance is designed for domestic use only. It is not intended for professional use. The guarantee will be null and void if the appliance is not used correctly.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

• **CAUTION:** This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

• Do not use the appliance at temperatures below 0°C or above 35°C.

• Store the product in a dry place away from direct sunlight.

• Do not attempt to recharge non-rechargeable batteries.

• Do not mix new and used batteries or different types of batteries.

• Ensure that the polarity is correct when inserting the batteries.

• Empty batteries must be removed from the device and disposed of in a safe manner.

• Remove batteries from a device if it is not intended to be used for a long period.

• Do not short-circuit the power supply terminal.

• Please note that the condition of the skin varies throughout the year. Facial skin can get dryer during the winter season: in that case you should reduce the treatment time.

• For best results, replace the brush head every 3 months.

• For your safety, this appliance complies with all applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental directives, etc.).

