## **Dell G3 17**

Setup and Specifications



i NOTE: A NOTE indicates important information that helps you make better use of your product.
CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.
⚠ WARNING: A WARNING indicates a potential for property damage, personal injury, or death.
© 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks
may be trademarks of their respective owners.
2018 - 03

Notes, cautions, and warnings

# Contents

1 Set up your computer	4
2 Create a USB recovery drive for Windows	6
3 Dell Visor headset	7
4 Views	8
Left	8
Right	9
Display	9
Base	10
Bottom	11
5 Specifications	12
Computer model	
Dimensions and weight	
System information	12
Operating system	12
Memory	12
Optane memory	13
Ports and connectors	13
Communications	
Wireless module	14
Camera	14
Video	
Audio	14
Storage	15
Media-card reader	
Keyboard	15
Touchpad	
Touchpad gestures	
Power adapter	16
Battery	17
Display	
Computer environment	18
6 Keyboard shortcuts	19
7 Getting help and contacting Dell	
Self-help resources	21
Contacting Dell	21



## Set up your computer

1 Connect the power adapter and press the power button.



- NOTE: To conserve battery power, the battery might enter power saving mode. Connect the power adapter and press the power button to turn on the computer.
- 2 Finish operating system setup.

#### For Ubuntu:

Follow the instructions on the screen to finish setup.

#### For Windows:

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

- · Connect to a network for Windows updates.
- NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- · If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.
- · On the **Support and Protection** screen, enter your contact details.
- 3 Locate and use Dell apps from the Windows Start menu—Recommended

#### Table 1. Locate Dell apps



#### **Dell Product Registration**

Register your computer with Dell.



#### Dell Help & Support

Access help and support for your computer.



#### **SupportAssist**

Proactively checks the health of your computer's hardware and software.



i NOTE: Renew or upgrade your warranty by clicking the warranty expiry date in SupportAssist.



#### **Dell Update**

Updates your computer with critical fixes and important device drivers as they become available.

#### **Dell Digital Delivery**

Download software applications including software that is purchased but not pre-installed on your computer.

4 Create recovery drive for Windows.

ONOTE: It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.

For more information, see Create a USB recovery drive for Windows.



## Create a USB recovery drive for Windows

Create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.

- (i) NOTE: This process may take up to an hour to complete.
- (i) NOTE: The following steps may vary depending on the version of Windows installed. Refer to the Microsoft support site for latest instructions.
- 1 Connect the USB flash drive to your computer.
- 2 In Windows search, type Recovery.
- 3 In the search results, click **Create a recovery drive**.
  - The **User Account Control** window is displayed.
- 4 Click **Yes** to continue.
  - The **Recovery Drive** window is displayed.
- 5 Select Back up system files to the recovery drive and click Next.
- 6 Select the **USB flash drive** and click **Next**.
  - A message appears, indicating that all data in the USB flash drive will be deleted.
- 7 Click Create.
- 8 Click Finish.

For more information about reinstalling Windows using the USB recovery drive, see the *Troubleshooting* section of your product's *Service Manual* at www.dell.com/support/manuals.



## **Dell Visor headset**


The Dell Visor headset is a head-mounted device that enables you to experience an immersive Virtual Reality and Windows Mixed Reality when connected to your computer.

(i) NOTE: Dell Visor headset is supported on computers shipping with NVIDIA GeForce GTX 1060 with Max-Q Design graphics card. For more information, see *Dell Visor User's Guide* at www.dell.com/support/manuals.



### **Views**

### Left

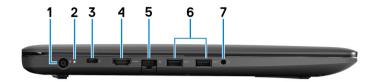

#### 1 Power-adapter port

Connect a power adapter to provide power to your computer and charge the battery.

#### 2 Battery-status light/hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.

ONOTE: Press Fn+H to toggle between the battery-status light and hard-drive activity light.

#### Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.

ONOTE: Hard-drive activity light is supported only on computers shipped with hard drive.

#### **Battery-status light**

Indicates the battery-charge status.

Solid white: Power adapter is connected and the battery has more than 5% charge.

Amber: Computer is running on battery and the battery has less than 5% charge.

#### Off:

- · Power adapter is connected and the battery is fully charged.
- · Computer is running on battery and the battery has more than 5% charge.
- · Computer is in sleep state, hibernation, or turned off.

#### 3 Thunderbolt 3 (USB Type-C) port (optional)

Supports USB 3.1 Gen 2, DisplayPort 1.2, Thunderbolt 3 and also enables you to connect to an external display using a display adapter.

Provides data transfer rates up to 10 Gbps for USB 3.1 Gen 2 and up to 40 Gbps for Thunderbolt 3.

NOTE: Adapters (sold separately) are require to connect standard USB and DisplayPort devices.

#### 4 HDMI port

Connect a TV or another HDMI-in enabled device. Provides video and audio output.

#### 5 Network port



Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

#### 6 USB 3.1 Gen 1 ports (2)

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

#### 7 **Headset port**

Connect headphones or a headset (headphone and microphone combo).

### Right



#### 1 SD-card slot

Reads from and writes to the SD card.

#### 2 **USB 2.0 port**

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

#### 3 Security-cable slot (for Noble locks)

Connect a security cable to prevent unauthorized movement of your computer.

## **Display**



#### 1 Left microphone

Provides digital sound input for audio recording and voice calls.

#### 2 Camera

Enables you to video chat, capture photos, and record videos.

#### 3 Camera-status light

Turns on when the camera is in use.



#### 4 Right microphone

Provides digital sound input for audio recording and voice calls.

### **Base**



#### 1 Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two finger tap to right-click.

#### 2 Left-click area

Press to left-click.

#### 3 Right-click area

Press to right-click.

#### 4 Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 4 seconds to force shut-down the computer.

If the power button has a fingerprint reader, place your finger on the power button to log in.

- NOTE: Before using the fingerprint reader, configure it in Windows to recognize your fingerprint as a passcode and enable access. For more information, see www.dell.com/support/windows.
- NOTE: You can customize power-button behavior in Windows. For more information, see *Me and My Dell* at www.dell.com/support/manuals.



## **Bottom**



#### 1 Left speaker

Provides audio output.

#### 2 Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

#### 3 Right speaker

Provides audio output.



## **Specifications**

## Computer model

Dell G3 3779

### Dimensions and weight

#### Table 2. Dimensions and weight

Height 25 mm (0.98 in)

Width 415.40 mm (16.35 in)

Depth 279.20 mm (11 in)

Weight (approximate) 2.81 kg (6.19 lb)

i NOTE: The weight of your computer varies depending on the configuration ordered and the manufacturing variability.

## **System information**

#### Table 3. System information

Processor 8th Generation Intel Core i5/i7

Chipset Mobile Intel HM370 chipset

### **Operating system**

- · Windows 10 Home (64-bit)
- · Windows 10 Professional (64-bit)
- Ubuntu

### Memory

#### Table 4. Memory specifications

Slots Two SODIMM slots

Type Dual-channel DDR4



Speed 2666MHz

Configurations supported:

Per memory module slot 4 GB, 8 GB, and 16 GB

Total memory 4 GB, 8 GB, 12 GB, 16 GB, and 32 GB

### **Optane memory**

#### Table 5. Optane memory specifications

Interface PCle 3x4, NVMe 2.0

Connector M.2 Card slot (2280)

Configurations supported • 16 GB

· 32 GB

### Ports and connectors

#### Table 6. External ports and connectors

External	
Network	One RJ-45 port
USB	<ul><li>Two USB 3.1 Gen 1 ports</li><li>One USB 2.0 port</li><li>One Thunderbolt 3 port (optional)</li></ul>
Audio/Video	<ul> <li>One HDMI 2.0 port</li> <li>One headset port (headphone and microphone combo) port</li> </ul>

#### Table 7. Internal ports and connectors

#### Internal

M.2 card

- · One M.2 slot for the 2230 Wi-Fi and Bluetooth combo card
- · One M.2 slot for the 2280 solid-state drive

### Communications

#### **Table 8. Supported communications**

Ethernet 10/100/1000 Mbps Ethernet controller integrated on system board

Wireless • Wi-Fi 802.11ac

· Bluetooth 4.1



### Wireless module

#### Table 9. Wireless module specifications

Transfer rate Up to 150 Mbps Up to 433 Mbps Up to 867 Mbps

Frequency bands 2.4 GHz only Dual band 2.4 GHz/5GHz Dual band 2.4 GHz/5GHz

supported Encryption

 $\cdot$  64-bit and 128-bit  $\cdot$  64-bit and 128-bit  $\cdot$  64-bit and 128-bit WEP

 WEP
 WEP
 CKIP

 CKIP
 CKIP
 TKIP

 TKIP
 AES-CCMP

· AES-CCMP · AES-CCMP

### Camera

#### Table 10. Camera specifications

Resolution . Still image: 1280 x 720 pixels

· Video: 1280 x 720 at 30 fps

Diagonal-viewing angle 74 degrees

### Video

#### Table 11. Video specifications

	Controller	Memory
Integrated	Not applicable	Not applicable
Discrete	<ul><li>NVIDIA GeForce GTX 1060 Max-Q</li><li>NVIDIA GeForce GTX 1050/1050Ti</li></ul>	<ul><li>6 GB</li><li>4 GB</li></ul>

### **Audio**

#### Table 12. Audio specifications

Controller Realtek ALC3204 with MaxxAudio Pro

Speakers Two

Speaker output

Average 2 W



Peak 2.5 W

Microphone Dual-array microphones

## **Storage**

#### Table 13. Storage specifications

Туре	Interface	Capacity
One 2.5-inch Hard Disk Drive (HDD)	SATA, up to 6 Gbps	Up to 2 TB
One 2.5-inch Solid-State Hybrid Drive (SSHD)	SATA, up to 6 Gbps	Up to 1 TB
One M.2 2280 solid-state drive (SSD)	PCle 3x4, up to 32 Gbps	Up to 512 GB

### Media-card reader

#### Table 14. Media-card reader specifications

Type One SD-card slot

Cards supported • Secure Digital (SD) card

Multimedia Card (MMC)

### Keyboard

Shortcut keys

#### Table 15. Keyboard specifications

Type 

• Standard keyboard

Backlit keyboard (optional)

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.

- (i) NOTE: Press Fn+Esc to switch the primary behavior of the function keys (F1-F12) between two modes multimedia key mode and function key mode.
- i NOTE: You can define the primary behavior of the function keys (F1-F12) by changing Function Key Behavior in BIOS setup program.

Keyboard shortcuts



## **Touchpad**

#### Table 16. Touchpad

Resolution:

1229 Horizontal

929 Vertical

Dimensions:

Width 105 mm (4.13 in)

80 mm (3.15 in) Height

### **Touchpad gestures**

For more information about touchpad gestures for Windows 10, see the Microsoft knowledge base article 4027871 at support.microsoft.com.

## Power adapter

#### Table 17. Power adapter specifications

Type 130 W (For computers shipped with 180 W (For computers shipped with NVIDIA 1060 graphics card) NVIDIA 1050 graphics card)

7.4 mm 7.4 mm Diameter (connector)

100 VAC-240 VAC 100 VAC-240 VAC Input voltage

Input frequency 50 Hz-60 Hz 50 Hz-60 Hz

1.80 A/2.34 A/2.50 A 1.80 A/2.34 A/2.50 A Input current (maximum)

6.70 A/9.23 A 6.70 A/9.23 A Output current (continuous)

Rated output voltage 19.50 VDC 19.50 VDC

Temperature range:

0°C to 40°C (32°F to 104°F) Operating

-40°C to 70°C (-40°F to 158°F) Storage



### **Battery**

#### Table 18. Battery specifications

Type 4-cell "smart" lithium-ion (56 WHr)

Voltage 11.40 VDC

Weight (maximum) 0.2 kg (0.44 lb)

Dimensions:

Height 5.90 mm (0.23 in)

Width 233.06 mm (9.18 in)

Depth 90.73 mm (3.57 in)

Temperature range:

Operating 0°C to 35°C (32°F to 95°F)

Storage -40°C to 65°C (-40°F to 149°F)

Operating time Varies depending on operating conditions and can significantly

reduce under certain power-intensive conditions.

Charging time (approximate) 4 hours (when the computer is off)

Life span (approximate) 300 discharge/charge cycles

Coin-cell battery CR-2032

Operating time Varies depending on operating conditions and can significantly

reduce under certain power-intensive conditions.

### **Display**

#### Table 19. Display specifications

Type 17.3-inch FHD non-touchscreen panel

Resolution (maximum) 1920x1080

Panel Technology In-Plane Switching (IPS)

Gsync/Freesync support No

Viewing angle 80/80/80

Pixel pitch 0.1989 mm

Dimensions (excluding bezel):

Height 381.89 mm (15.03 in)



Width 214.81 mm (8.46 in)

Diagonal 438.16 mm (17.25 in)

Refresh rate 60 Hz

Operating angle 0 degree (closed) to 135 degrees

Controls Brightness can be controlled using shortcut keys

## Computer environment

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

#### Table 20. Computer environment

	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	140 G†	160 G‡
Altitude (maximum)	0 m to 3048 m (0 ft to 10,000 ft)	0 m to 10,668 m (0 ft to 35,000 ft)

<sup>\*</sup> Measured using a random vibration spectrum that simulates user environment.



<sup>†</sup> Measured using a 2 ms half-sine pulse when the hard drive is in use.

<sup>‡</sup> Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

# **Keyboard shortcuts**

(i) NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

Table 21. List of keyboard shortcuts

Keys	Description
F1 <b>■</b> ×	Mute audio
F2 🕪	Decrease volume
F3 (1)	Increase volume
F4  ≼4	Play previous track/chapter
F5 ▶II	Play/Pause
F6 ▶₩	Play next track/chapter
F8 <b>_B</b>	Switch to external display
F9 p	Search
F10	Toggle keyboard backlight (optional)
F11 *	Decrease brightness
F12	Increase brightness
Fn + $\left(\begin{array}{c} PrtScr \\ \frac{0\sqrt{3}}{2} \end{array}\right)$	Turn off/on wireless
Fn + S	Toggle Scroll Lock
Fn + Esc	Toggle Fn-key lock
Fn + B	Pause/Break
Fn + Insert	Sleep
Fn + R	System request
Fn + Ctrl	Open application menu



Keys Description



Toggle between battery-status light and hard-drive activity light

NOTE: Hard-drive activity light is supported only on computers shipped with a hard drive.



## Getting help and contacting Dell

### Self-help resources

You can get information and help on Dell products and services using these self-help resources:

#### Table 22. Self-help resources

Information about Dell products and services

Dell Help & Support app

Tips

Contact Support

Online help for operating system

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.

Dell knowledge base articles for a variety of computer concerns.

Learn and know the following information about your product:

- · Product specifications
- · Operating system
- · Setting up and using your product
- Data backup
- · Troubleshooting and diagnostics
- · Factory and system restore
- BIOS information

www.dell.com





In Windows search, type Contact Support, and press Enter.

www.dell.com/support/windows www.dell.com/support/linux

www.dell.com/support

- 1 Go to www.dell.com/support.
- 2 Type the subject or keyword in the **Search** box.
- 3 Click **Search** to retrieve the related articles.

See Me and My Dell at www.dell.com/support/manuals.

To locate the *Me and My Dell* relevant to your product, identify your product through one of the following:

- · Select **Detect Product**.
- Locate your product through the drop-down menu under View Products.
- Enter the **Service Tag number** or **Product ID** in the search bar.

### **Contacting Dell**

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

- 1 NOTE: Availability varies by country and product, and some services may not be available in your country.
- NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

