

# Dell G3 15

## Service Manual



Identifier	GUID-5B8DE7B7-879F-45A4-88E0-732155904029
Status	Released

## Notes, cautions, and warnings

 | **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 | **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 | **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Identifier	GUID-089FFA4B-3A62-4B51-BDE1-309C58A451D9
Status	Released

© 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

# Contents

<b>1 Before working inside your computer</b> .....	<b>9</b>
Before you begin .....	9
Safety instructions.....	9
Recommended tools.....	10
Screw list.....	10
<b>2 After working inside your computer</b> .....	<b>12</b>
<b>3 Removing the base cover</b> .....	<b>13</b>
Procedure.....	13
<b>4 Replacing the base cover</b> .....	<b>16</b>
Procedure .....	16
<b>5 Removing the battery</b> .....	<b>19</b>
Prerequisites.....	19
Procedure.....	19
<b>6 Replacing the battery</b> .....	<b>20</b>
Procedure .....	20
Post-requisites.....	20
<b>7 Removing the memory modules</b> .....	<b>21</b>
Prerequisites.....	21
Procedure.....	21
<b>8 Replacing the memory modules</b> .....	<b>23</b>
Procedure .....	23
Post-requisites.....	23
<b>9 Removing the wireless card</b> .....	<b>24</b>
Prerequisites.....	24
Procedure.....	24
<b>10 Replacing the wireless card</b> .....	<b>26</b>
Procedure.....	26
Post-requisites.....	27
<b>11 Removing the coin-cell battery</b> .....	<b>28</b>
Prerequisites.....	28
Procedure.....	28
<b>12 Replacing the coin-cell battery</b> .....	<b>30</b>
Procedure.....	30



Post-requisites.....	30
<b>13 Removing the fan.....</b>	<b>31</b>
Prerequisites.....	31
Procedure.....	31
<b>14 Replacing the fan.....</b>	<b>33</b>
Procedure .....	33
Post-requisites.....	34
<b>15 Removing the processor fan.....</b>	<b>35</b>
Prerequisites.....	35
Procedure.....	35
<b>16 Replacing the processor fan.....</b>	<b>36</b>
Procedure.....	36
Post-requisites.....	36
<b>17 Removing the solid-state drive/Intel Optane.....</b>	<b>37</b>
Prerequisites.....	37
Procedure.....	37
<b>18 Replacing the solid-state drive/Intel Optane.....</b>	<b>39</b>
Procedure .....	39
Post-requisites.....	40
<b>19 Removing the hard drive.....</b>	<b>41</b>
Prerequisites.....	41
Procedure.....	41
<b>20 Replacing the hard drive.....</b>	<b>43</b>
Procedure .....	43
Post-requisites.....	44
<b>21 Removing the touchpad.....</b>	<b>45</b>
Prerequisites.....	45
Procedure.....	45
<b>22 Replacing the touchpad.....</b>	<b>47</b>
Procedure .....	47
Post-requisites.....	48
<b>23 Removing the power-adapter port.....</b>	<b>49</b>
Prerequisites.....	49
Procedure.....	49
<b>24 Replacing the power-adapter port.....</b>	<b>51</b>
Procedure .....	51



Post-requisites.....	52
<b>25 Removing the speakers.....</b>	<b>53</b>
Prerequisites.....	53
Procedure.....	53
<b>26 Replacing the speakers.....</b>	<b>54</b>
Procedure .....	54
Post-requisites.....	55
<b>27 Removing the heat sink.....</b>	<b>56</b>
Prerequisites.....	56
Procedure.....	56
<b>28 Replacing the heat sink.....</b>	<b>58</b>
Procedure .....	58
Post-requisites.....	59
<b>29 Removing the display assembly.....</b>	<b>60</b>
Prerequisites.....	60
Procedure.....	60
<b>30 Replacing the display assembly.....</b>	<b>63</b>
Procedure .....	63
Post-requisites.....	65
<b>31 Removing the I/O board.....</b>	<b>66</b>
Prerequisites.....	66
Procedure.....	66
<b>32 Replacing the I/O board.....</b>	<b>68</b>
Procedure .....	68
Post-requisites.....	69
<b>33 Removing the power-button board.....</b>	<b>70</b>
Prerequisites.....	70
Procedure.....	70
<b>34 Replacing the power-button board.....</b>	<b>72</b>
Procedure .....	72
Post-requisites.....	73
<b>35 Removing the system board.....</b>	<b>74</b>
Prerequisites.....	74
Procedure.....	74
<b>36 Replacing the system board.....</b>	<b>77</b>
Procedure .....	77



Post-requisites.....	79
Entering the Service Tag in the BIOS setup program.....	79
<b>37 Removing the power button with fingerprint reader.....</b>	<b>80</b>
Prerequisites.....	80
Procedure.....	80
<b>38 Replacing the power button with fingerprint reader.....</b>	<b>82</b>
Procedure .....	82
Post-requisites.....	83
<b>39 Removing the palm-rest and keyboard assembly.....</b>	<b>84</b>
Prerequisites.....	84
Procedure.....	84
<b>40 Replacing the palm-rest and keyboard assembly.....</b>	<b>86</b>
Procedure .....	86
Post-requisites.....	86
<b>41 Removing the display bezel.....</b>	<b>87</b>
Prerequisites.....	87
Procedure.....	87
<b>42 Replacing the display bezel.....</b>	<b>89</b>
Procedure .....	89
Post-requisites.....	90
<b>43 Removing the camera.....</b>	<b>91</b>
Prerequisites.....	91
Procedure.....	91
<b>44 Replacing the camera.....</b>	<b>93</b>
Procedure .....	93
Post-requisites.....	94
<b>45 Removing the display panel.....</b>	<b>95</b>
Prerequisites.....	95
Procedure.....	95
<b>46 Replacing the display panel.....</b>	<b>97</b>
Procedure .....	97
Post-requisites.....	98
<b>47 Removing the display hinges.....</b>	<b>99</b>
Prerequisites.....	99
Procedure.....	99
<b>48 Replacing the display hinges.....</b>	<b>101</b>



Procedure .....	101
Post-requisites.....	102
<b>49 Removing the display cable.....</b>	<b>103</b>
Prerequisites.....	103
Procedure.....	103
<b>50 Replacing the display cable.....</b>	<b>105</b>
Procedure .....	105
Post-requisites.....	106
<b>51 Removing the display back-cover and antenna assembly.....</b>	<b>107</b>
Prerequisites.....	107
Procedure.....	107
<b>52 Replacing the display back-cover and antenna assembly.....</b>	<b>109</b>
Procedure .....	109
Post-requisites.....	109
<b>53 Downloading drivers.....</b>	<b>110</b>
Downloading the audio driver.....	110
Downloading the graphics driver.....	110
Downloading the USB 3.0 driver.....	111
Downloading the Wi-Fi driver.....	111
Downloading the media-card reader driver.....	111
Downloading the chipset driver.....	112
Downloading the network driver.....	112
<b>54 System setup.....</b>	<b>113</b>
Boot Sequence.....	113
Navigation keys.....	113
BIOS overview.....	114
Entering BIOS setup program.....	114
Enabling or disabling the USB in BIOS setup program.....	114
Identifying the hard drive in BIOS setup program.....	115
Checking the system memory in BIOS setup program.....	115
System setup options.....	115
<b>55 System and setup password.....</b>	<b>121</b>
Assigning a system password and setup password.....	121
Deleting or changing an existing system setup password.....	122
Clearing CMOS settings.....	122
Clearing forgotten passwords.....	122
<b>56 Troubleshooting.....</b>	<b>123</b>
Flashing the BIOS.....	123
Flashing BIOS (USB key).....	123
Reinstall Windows using a USB recovery drive.....	124



Enhanced Pre-Boot System Assessment (ePSA) diagnostics.....	124
Running the ePSA diagnostics.....	125
System diagnostic lights.....	125
Wi-Fi power cycle.....	126
Flea power release.....	127
<b>57 Getting help and contacting Dell.....</b>	<b>128</b>
Self-help resources.....	128
Contacting Dell.....	128



Identifier	GUID-5D3B1051-9384-409A-8D5B-
Status	Released

## Before working inside your computer

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

Identifier	GUID-B2521C24-A407-4ABB-8022-6D88B53F0B94
Status	Released

### Before you begin

- 1 Save and close all open files and exit all open applications.
- 2 Shut down your computer. Click **Start** >  **Power** > **Shut down**.
  -  **NOTE:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.
- 3 Disconnect your computer and all attached devices from their electrical outlets.
- 4 Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
- 5 Remove any media card and optical disc from your computer, if applicable.

Identifier	GUID-71128823-CE64-4E17-9439-DEE95AF668C4
Status	Released

### Safety instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.

-  **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).
-  **WARNING:** Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the electrical outlet.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat and clean.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching pins and contacts.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that shipped with the product or at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.



**CAUTION:** When you disconnect a cable, pull on its connector or on its pull tab, not on the cable itself. Some cables have connectors with locking tabs or thumb-screws that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending any connector pins. When connecting cables, ensure that the ports and connectors are correctly oriented and aligned.

**CAUTION:** Press and eject any installed card from the media-card reader.

Identifier GUID-DEA55279-6FE6-4A1F-A152-21F8A5572B33  
 Status Released

## Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #1
- Plastic scribe

Identifier GUID-173E4E1D-3729-444F-A8D5-B59D3F94E9C9  
 Status Released

## Screw list

Table 1. Screw list

Component	Secured to	Screw type	Quantity	Screw image
Base cover	Palm rest and keyboard assembly	M2.5x6	8	
Battery	Palm rest and keyboard assembly	M2x3	5	
Display panel	Display back-cover and antenna assembly	M2x3	4	
Fan	Palm rest and keyboard assembly	M2.5x6	2	
Processor fan	Palm rest and keyboard assembly	M2.5x6	2	
Hard-drive assembly	Palm rest and keyboard assembly	M2x3	2	
Hard-drive bracket	Hard drive	M3x3	4	
Heat sink	System board	M2x3	4	
<p><b>NOTE:</b> Applicable only for computers shipped with discrete configuration.</p>				
Hinges	Palm rest and keyboard assembly	M2.5x6	6	
Hinge brackets	Display back-cover and antenna assembly	M2.5x2.5	8	

Component	Secured to	Screw type	Quantity	Screw image
Hinge brackets	Display back-cover and antenna assembly	M2x2	2	
I/O board	Palm rest and keyboard assembly	M2.5x2.5	2	
Power-adaptor port	Palm rest and keyboard assembly	M2x2	1	
Power-button board	Palm rest and keyboard assembly	M2x2	1	
Power button with fingerprint reader (optional)	Palm rest and keyboard assembly	M2x2	1	
Solid-state drive	Palm rest and keyboard assembly	M2x3	1	
<p><b>NOTE:</b> Applicable for computers shipped with M.2 SATA solid-state drive.</p>				
System board	Palm rest and keyboard assembly	M2.5x2.5	3	
Touchpad	Touchpad and palm rest	M2x2	4	
Wireless-card bracket	System board	M2x3	1	



Identifier	GUID-06588814-2678-4667-9FF9-C
Status	Released

## After working inside your computer

 **CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.

- 1 Replace all screws and ensure that no stray screws remain inside your computer.
- 2 Connect any external devices, peripherals, or cables you removed before working on your computer.
- 3 Replace any media cards, discs, or any other parts that you removed before working on your computer.
- 4 Connect your computer and all attached devices to their electrical outlets.
- 5 Turn on your computer.

Identifier	GUID-98068FC2-1C1C-46DE-B3FA
Status	Released

## Removing the base cover

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-1D538876-28D5-4187-9363-86269B713AA0
Status	Released

### Procedure


- 1 Remove the eight screws (M2.5x6) that secure the base cover to the palm rest and keyboard assembly.
- 2 Loosen the two captive screws (M2.5) on the base cover.



- 3 Pry the base cover starting from the left hinge.
- 4 Continue prying the base cover from the bottom of the computer base.




- 5 Pry the base cover from the right side and lift it off the palm rest and keyboard assembly.

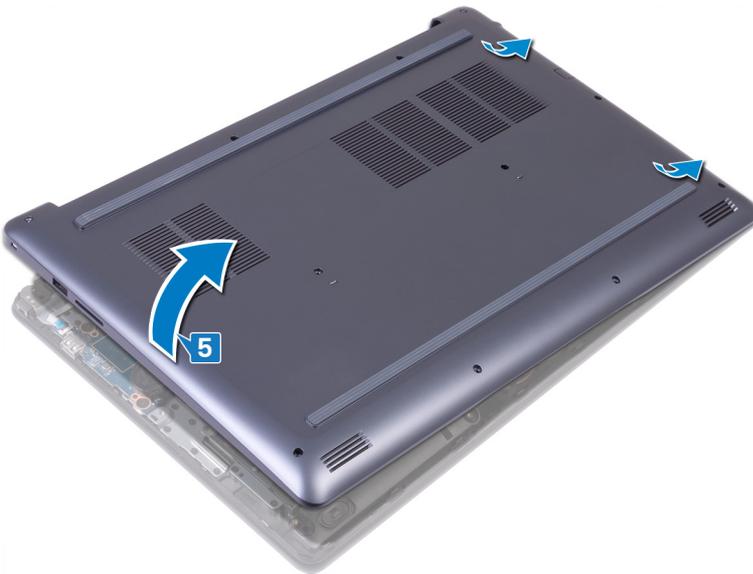

**NOTE:** The following steps are applicable only if you want to further remove any other component from your computer.

- 6 Peel the tape that secures the battery cable to the system board.
- 7 Disconnect the battery cable from the system board.

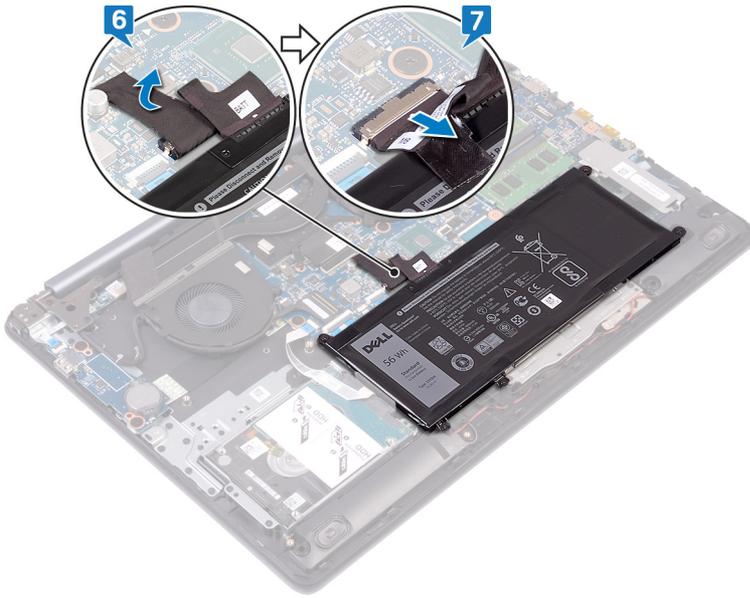

8 Press and hold the power button for 5 seconds to ground the computer and drain the flea power.

Identifier	GUID-27446428-82D7-4881-9220-9
Status	Released

## Replacing the base cover


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-AD2A7DAC-6C3E-4CCE-ADD0-FE0A298DC3C6
Status	Released

### Procedure

- 1 Connect the battery cable to the system board, if applicable.
- 2 Adhere the tape that secures the battery cable to the system board.

**⚠ CAUTION:** To avoid accidental damage to the power-adaptor port, do not press the base cover against the power-adaptor port when you snap the base cover to the computer base.

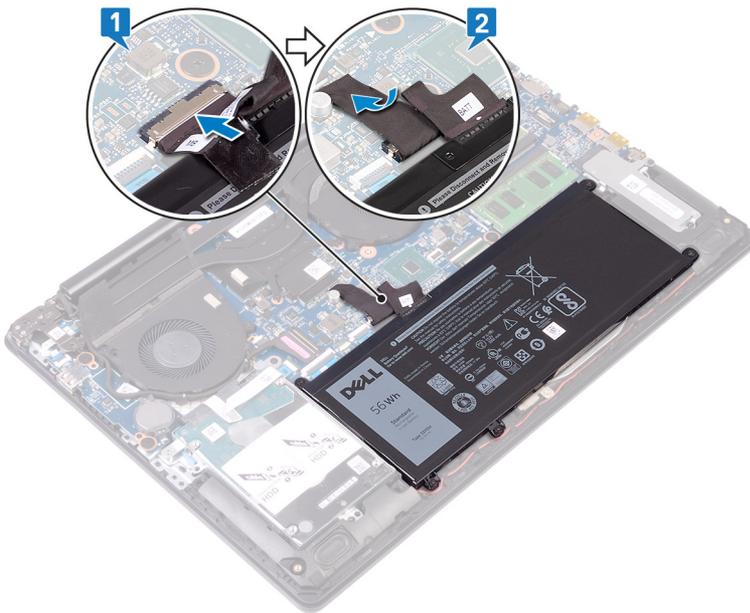

- 3 Place the base cover on the palm rest and keyboard assembly, and snap the base cover into place starting from the power-adaptor port.



- 4 Align the tabs on the base cover with the slots on the palm-rest assembly and snap it into place.



- 5 Tighten the two captive screws (M2.5) that secure the base cover to the palm rest and keyboard assembly.
- 6 Replace the eight screws (M2.5x6) that secure the base cover to the palm rest and keyboard assembly.



Identifier	GUID-D9015C06-6CEE-42EA-9215-
Status	Released

## Removing the battery

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-5BAAC44D-C63C-4E84-8264-5FBA1D4F995B
Status	Released


### Prerequisites

Remove the [base cover](#).

Identifier	GUID-319FF722-5961-48D1-B2E6-E992D0066220
Status	Released

### Procedure

- 1 Remove the five screws (M2x3) that secure the battery to the palm rest and keyboard assembly.
- 2 Lift the battery off the palm rest and keyboard assembly.

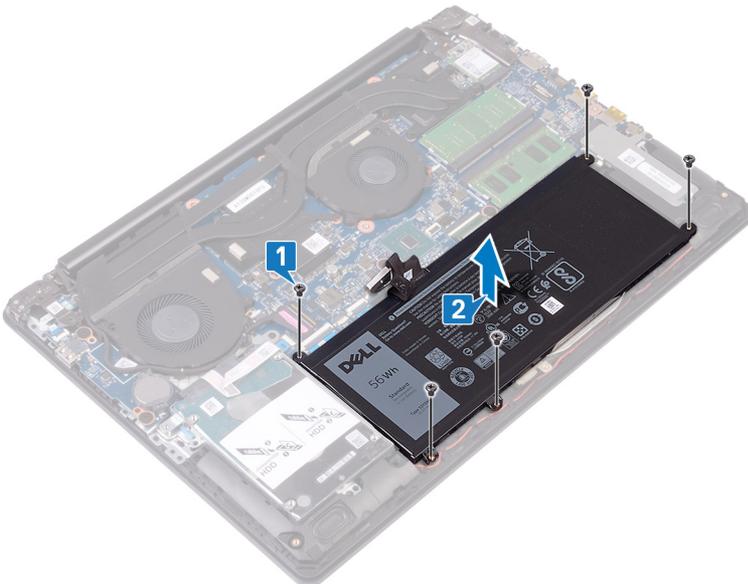

Identifier	GUID-E15EE482-44FD-4E71-91FC-
Status	Released


## Replacing the battery

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-BD896D94-E9E2-49E6-B834-306E85F82837
Status	Released

### Procedure

- 1 Align the screw holes on the battery with the screw holes on the palm rest and keyboard assembly.
- 2 Replace the four screws (M2x3) that secure the battery to the palm rest and keyboard assembly.

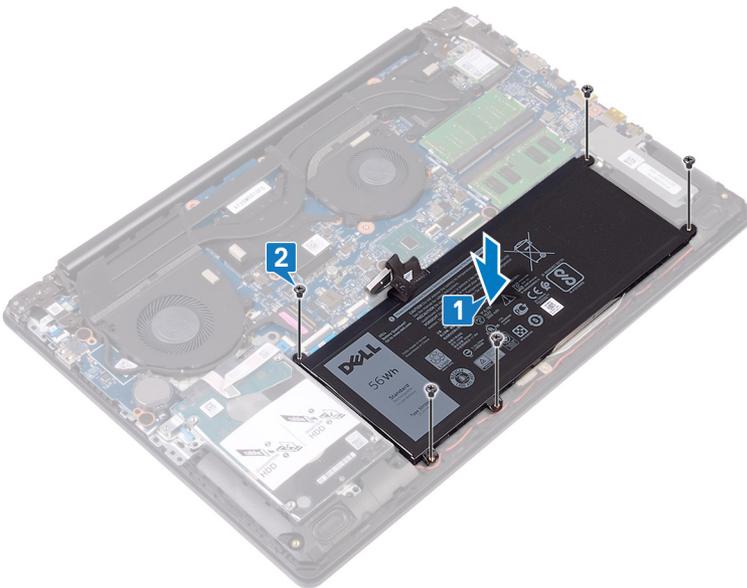

Identifier	GUID-742603A9-6883-4879-8F67-7C3DC7AFB5AD
Status	Released

### Post-requisites

Replace the [base cover](#).

Identifier	GUID-AAC0DC5A-1680-492D-804F
Status	Released

## Removing the memory modules

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-5BAAC44D-C63C-4E84-8264-5FBA1D4F995B
Status	Released


### Prerequisites

Remove the [base cover](#).

Identifier	GUID-67B57D9E-B8E0-4250-92E7-44D1733E3593
Status	Released


### Procedure

- 1 Locate the memory modules on your computer.

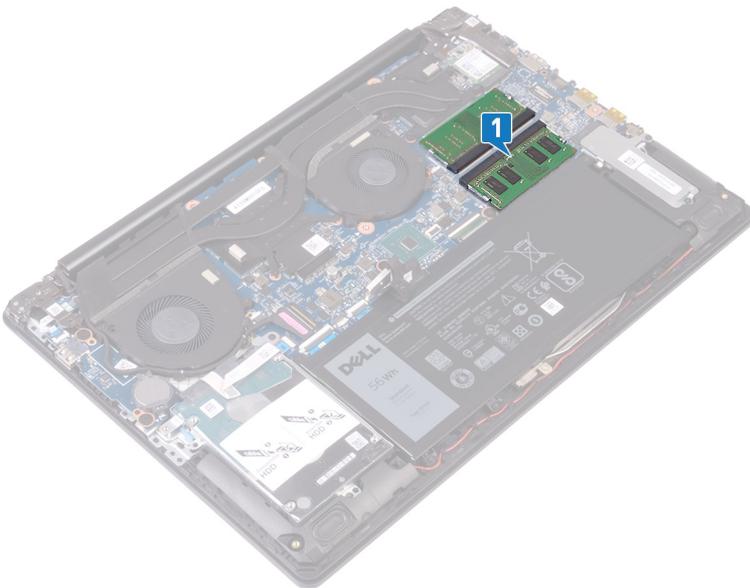

- 2 Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.
- 3 Remove the memory modules from the memory-module slot.



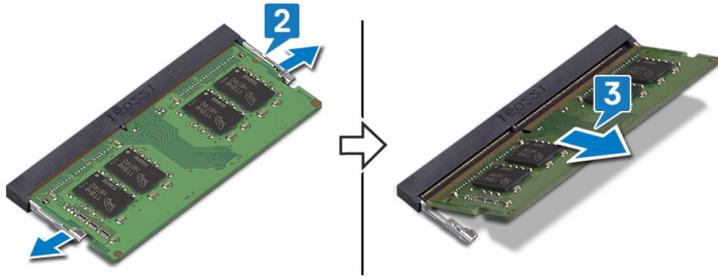

Identifier	GUID-1F5023F5-9868-4AAF-A9F5-1
Status	Released

## Replacing the memory modules


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-CDC47BC0-B367-45BE-B22B-CDD15737FB53
Status	Released

### Procedure

- 1 Align the notch on the memory module with the tab on the memory-module slot.
- 2 Slide the memory modules firmly into the slot at an angle.
- 3 Press the memory module down until it clicks into place.

**📌 NOTE:** If you do not hear the click, remove the memory module and reinstall it.

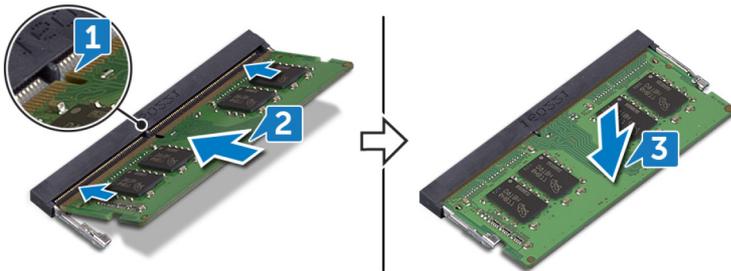

Identifier	GUID-742603A9-6883-4879-8F67-7C3DC7AFB5AD
Status	Released

### Post-requisites

Replace the [base cover](#).

Identifier	GUID-4AF7A7F4-79DC-43F4-A4DF
Status	Released

## Removing the wireless card

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-5BAAC44D-C63C-4E84-8264-5FBA1D4F995B
Status	Released


### Prerequisites

Remove the [base cover](#).

Identifier	GUID-00001E14-C7F9-44C4-AC8D-7F9EFA23B7C0
Status	Released


### Procedure

- 1 Locate the wireless card on your computer.

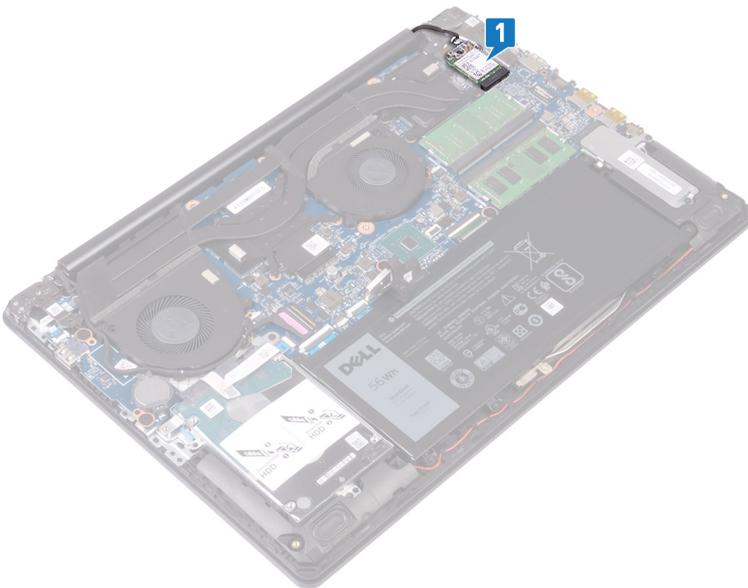

- 2 Remove the screw (M2x3) that secures the wireless-card bracket to the system board.
- 3 Slide and remove the wireless-card bracket from the wireless card.
- 4 Disconnect the antenna cables from the wireless card.

5 Slide and remove the wireless card from the wireless-card slot.

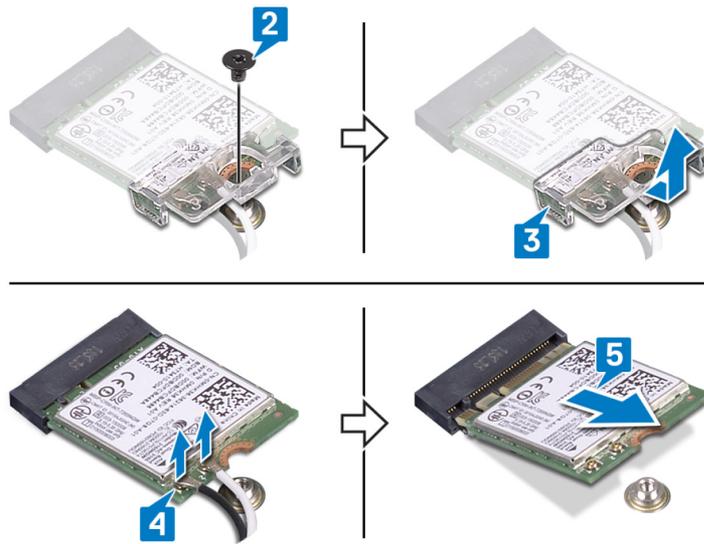

Identifier	GUID-94E88AEC-6F12-4B0E-AA6A
Status	Released

## Replacing the wireless card

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-C803C3FF-D235-4D06-BF4B-070CAF9D0349
Status	Released

### Procedure


**⚠ CAUTION:** To avoid damage to the wireless card, do not place any cables under it.

- 1 Connect the antenna cables to the wireless card.  
The following table provides the antenna-cable color scheme for the wireless card supported by your computer.

**Table 2. Antenna-cable color scheme**

Connectors on the wireless card	Antenna-cable color
Main (white triangle)	White
Auxiliary (black triangle)	Black

- 2 Slide and replace the wireless-card bracket on the wireless-card.
- 3 Align the notch on the wireless card with the tab on the wireless-card slot and insert the wireless card at an angle into the wireless-card slot.
- 4 Replace the screw (M2x3) that secures the wireless-card bracket to the wireless card and the palm rest and keyboard assembly.

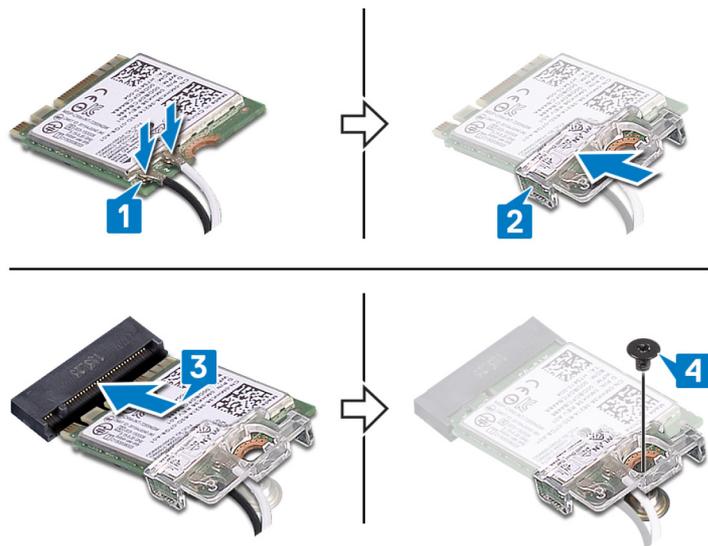

Identifier	GUID-742603A9-6883-4879-8F67-7C3DC7AFB5AD
Status	Released

## Post-requisites

Replace the [base cover](#).

Identifier	GUID-30EEBC49-DE3E-4C3F-8226
Status	Released

## Removing the coin-cell battery

- ⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).
- ⚠ CAUTION:** Removing the coin-cell battery resets the BIOS setup program's settings to default. It is recommended that you note the BIOS setup program's settings before removing the coin-cell battery.

Identifier	GUID-5BAAC44D-C63C-4E84-8264-5FBA1D4F995B
Status	Released

## Prerequisites


Remove the [base cover](#).

Identifier	GUID-D2A574CB-79BB-4B77-8675-11CD287982B5
Status	Released

## Procedure

- ⚠ CAUTION:** Removing the coin-cell battery resets the BIOS setup program's settings to default. Before removing the coin-cell battery, it is recommended to note the BIOS setup program's settings.

Using a plastic scribe, gently pry the coin-cell battery out of the battery socket on the I/O board.

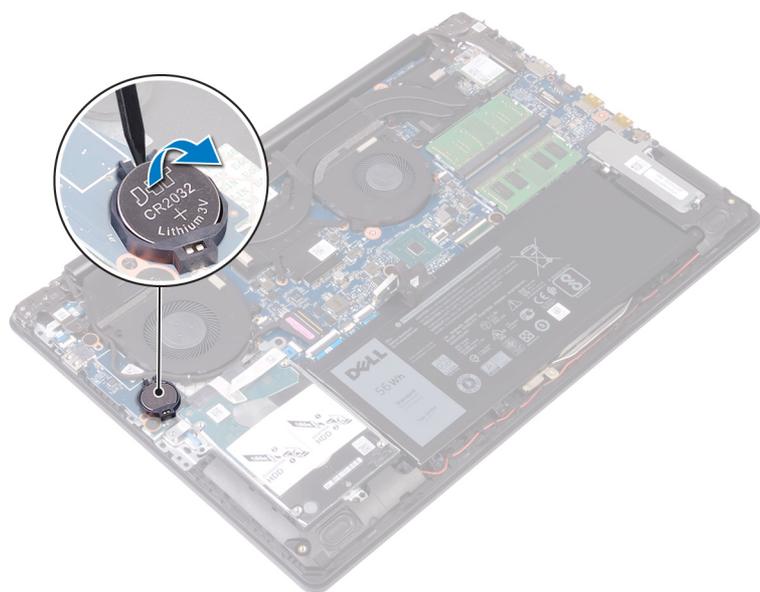

Identifier	GUID-5E22F4A0-F01F-4522-8155-E
Status	Released


## Replacing the coin-cell battery

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-867EB42D-52B8-436F-9BD2-24BD842EB9C7
Status	Released

### Procedure

With the positive-side facing up, snap the coin-cell battery into the battery socket on the I/O board.

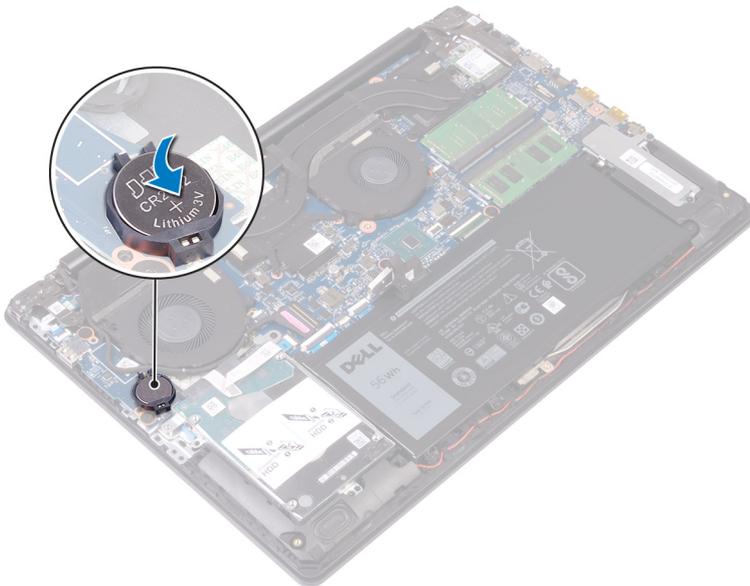

Identifier	GUID-742603A9-6883-4879-8F67-7C3DC7AFB5AD
Status	Released

### Post-requisites

Replace the [base cover](#).

Identifier	GUID-FAA962E5-AD4D-4E85-BCA3
Status	Released

## Removing the fan

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-5BAAC44D-C63C-4E84-8264-5FBA1D4F995B
Status	Released


### Prerequisites

Remove the [base cover](#).

Identifier	GUID-133C66B2-81AD-4EDB-864E-846508E83907
Status	Released

### Procedure


- 1 Open the latch and disconnect the display cable from the system board.
- 2 Remove the display cable from the routing guides on the fan.

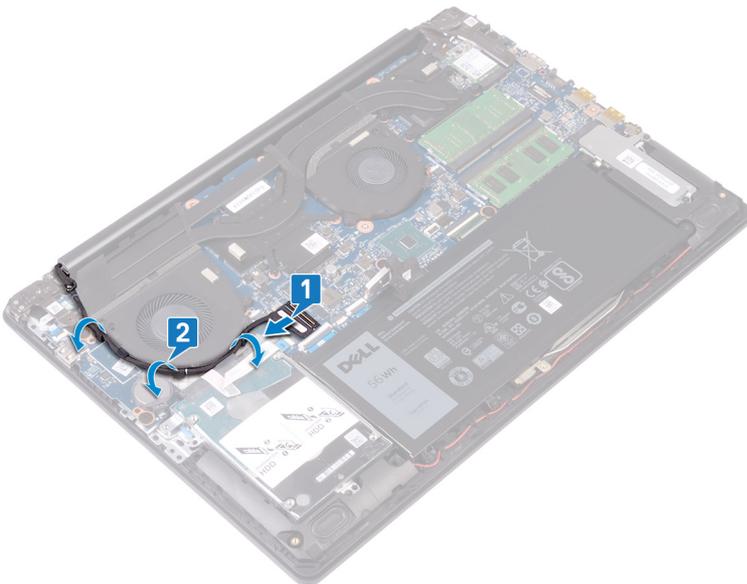

- 3 Disconnect the fan cable from the system board.
- 4 Remove the two screws (M2.5x6) that secure the fan to the palm rest and keyboard assembly.



- 5 Lift the fan off the palm rest and keyboard assembly.

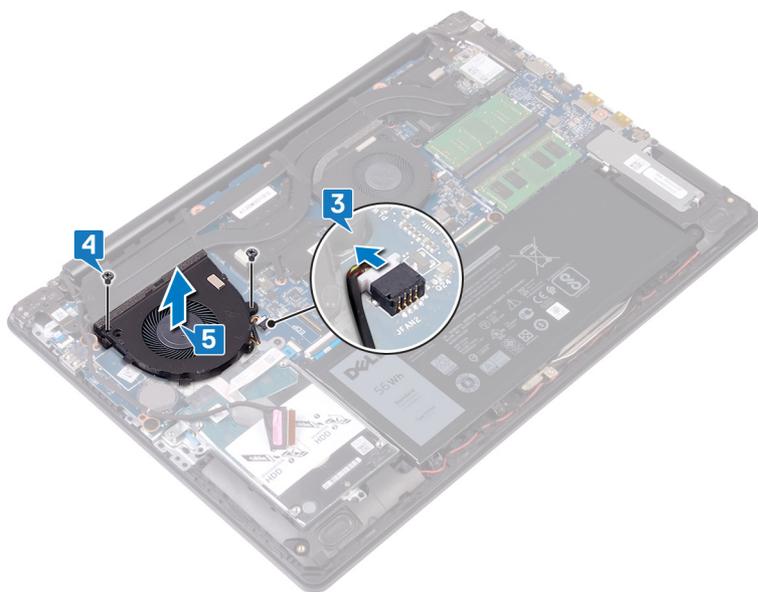

Identifier	GUID-2596AFC0-F1E8-4A0E-A603-
Status	Released


## Replacing the fan

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).


Identifier	GUID-802B3DCE-DB4A-4D01-960D-DAFAD77D93F1
Status	Released

### Procedure

- 1 Align the screw holes on the fan with the screw holes on to the palm rest and keyboard assembly.
- 2 Replace the two screws (M2.5x6) that secure the fan to the palm rest and keyboard assembly.
- 3 Connect the fan cable to the system board.

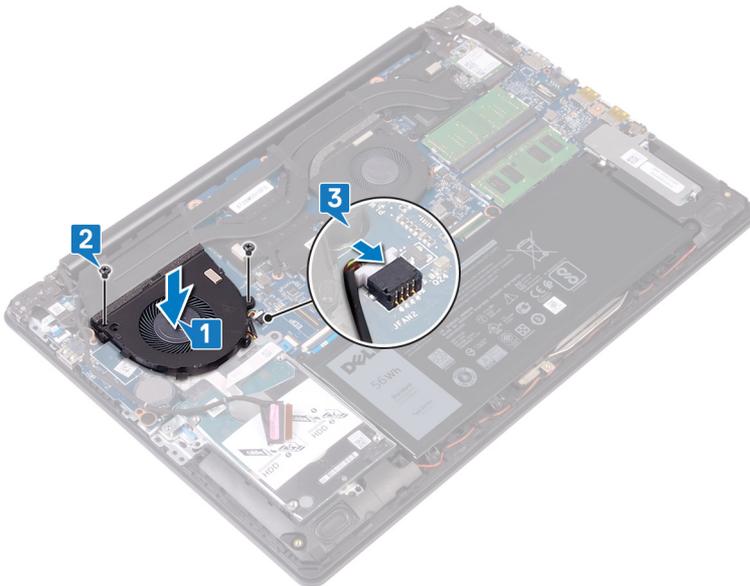

- 4 Route the display cable through the routing guides on the fan.
- 5 Connect the display cable to its connector on the system board and close the latch.

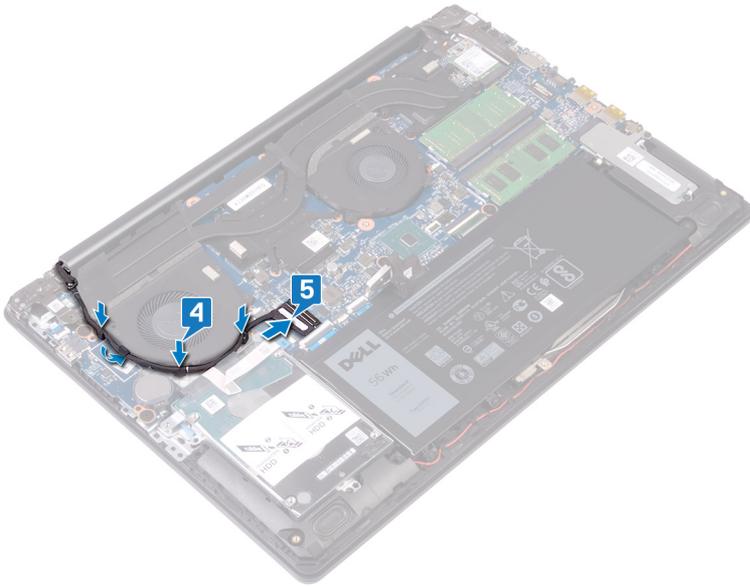

Identifier GUID-742603A9-6883-4879-8F67-7C3DC7AFB5AD

Status Released

## Post-requisites

Replace the [base cover](#).

Identifier	GUID-9D88E0F2-A7B3-454C-8EB2
Status	Released

## Removing the processor fan

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-5BAAC44D-C63C-4E84-8264-5FBA1D4F995B
Status	Released


### Prerequisites

Remove the [base cover](#).

Identifier	GUID-175B2DB7-40B9-4AB5-8C38-FACFA6002A82
Status	Released

### Procedure

- 1 Disconnect the processor-fan cable from the system board.
- 2 Remove the two screws (M2.5x6) that secure the processor fan to the palm rest and keyboard assembly.
- 3 Lift the processor fan from the heat-sink.

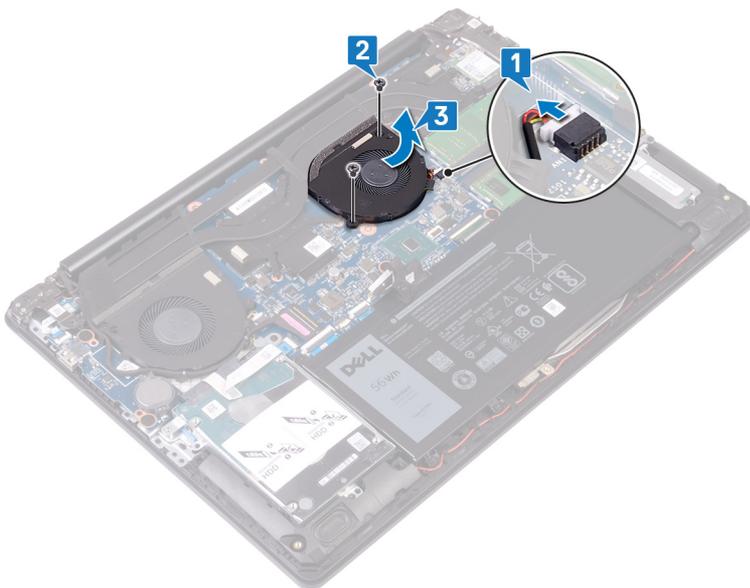

Identifier	GUID-2FF685C4-775F-4421-B5A2-
Status	Released


## Replacing the processor fan

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-29BDC32B-A0D0-4B0E-A0D1-6266AF234F5E
Status	Released

### Procedure

- 1 Align the screw holes on the processor fan with the screw holes on the palm rest and keyboard assembly.
- 2 Replace the two screws (M2.5x6) that secure the processor fan to the palm rest and keyboard assembly.
- 3 Slide and connect the processor-fan cable into the connector on the system board.

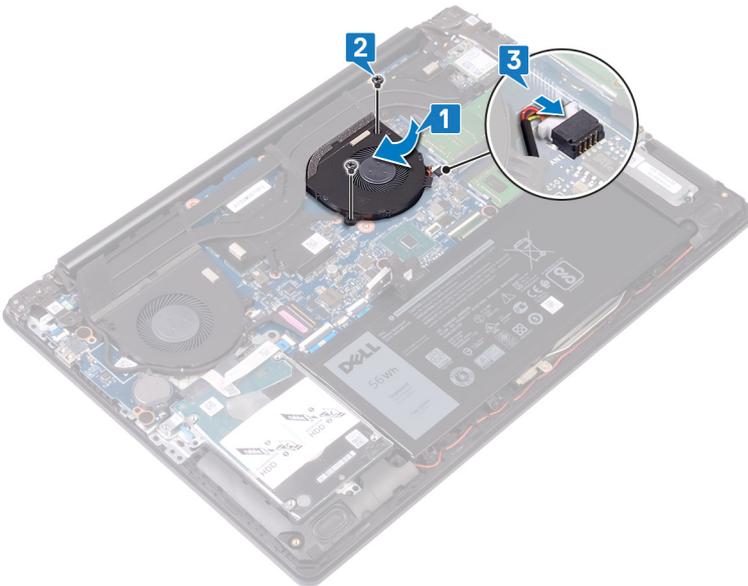

Identifier	GUID-742603A9-6883-4879-8F67-7C3DC7AFB5AD
Status	Released

### Post-requisites

Replace the [base cover](#).

Identifier	GUID-EFFE3DA7-AFC7-4BB0-92C9
Status	Released

## Removing the solid-state drive/Intel Optane

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-5BAAC44D-C63C-4E84-8264-5FBA1D4F995B
Status	Released


### Prerequisites

Remove the [base cover](#).

Identifier	GUID-14019E80-3BC4-4DA7-AC79-3E2EEE35266E
Status	Released

### Procedure

- Loosen the captive screw that secures the solid-state drive shield/Intel Optane shield and solid-state drive/Intel Optane to the palm rest and keyboard assembly.
  - ⓘ NOTE:** Solid-state drive shield is available only on computers shipped with NVMe solid-state drive.
- In computers shipped with mSATA solid-state drive/Intel Optane, remove the screw (M2x3) that secures the solid-state drive/Intel Optane to the palm rest and keyboard assembly.
- Slide the solid-state drive shield/Intel Optane shield and lift the solid-state drive shield/Intel Optane shield off the palm rest and keyboard assembly.
- Slide and remove the solid-state drive/Intel Optane from the slot.

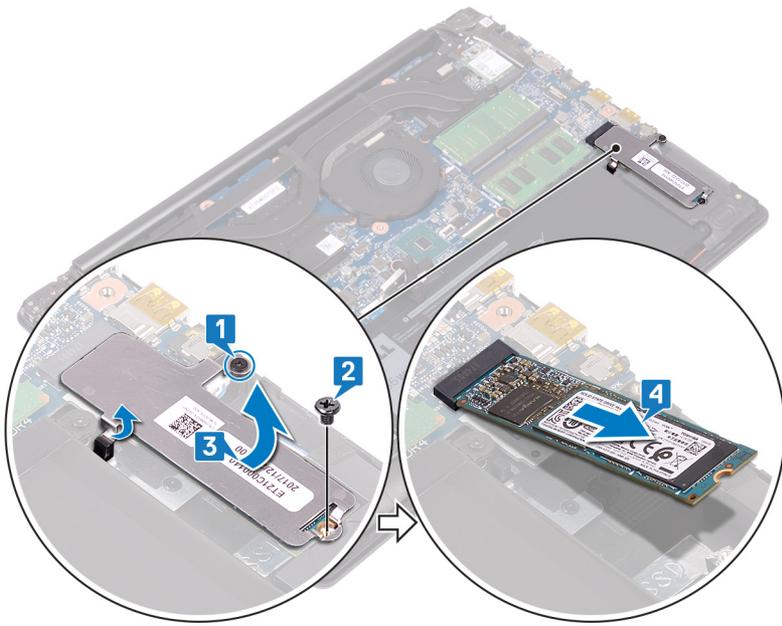

Identifier	GUID-1876A74B-D56A-47F2-8EDF-
Status	Released

## Replacing the solid-state drive/Intel Optane

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

**⚠ CAUTION:** Solid-state drives are fragile. Exercise care when handling the solid-state drive.


Identifier	GUID-3E4F2D2F-771A-491C-9B49-0BF825D980C7
Status	Released

### Procedure

- 1 Align the notch on the solid-state drive/Intel Optane with the tab on the slot and slide the solid-state drive/Intel Optane into the slot.

**ⓘ NOTE:** Solid-state drive shield is available only on computers shipped with NVMe solid-state drive.

- 2 Slide the solid-state drive shield/Intel Optane shield into the tabs and replace the solid-state drive shield/Intel Optane shield on the palm rest and keyboard assembly.
- 3 Replace the screw (M2x3) that secures the solid-state drive/Intel Optane to the palm rest and keyboard assembly.
- 4 Tighten the captive screw that secures the solid-state drive shield/Intel Optane shield and solid-state drive/Intel Optane to the palm rest and keyboard assembly.

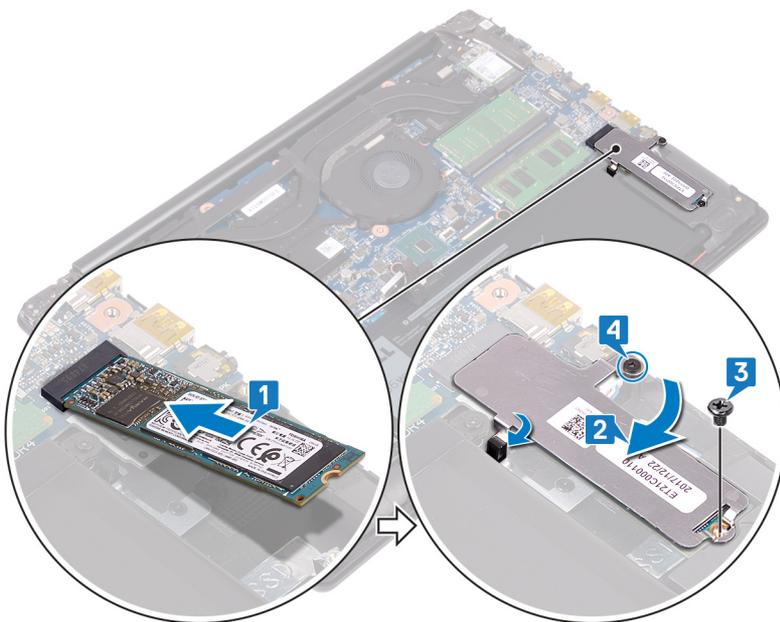

Identifier	GUID-742603A9-6883-4879-8F67-7C3DC7AFB5AD
Status	Released

## Post-requisites

Replace the [base cover](#).



Identifier	GUID-5DE1E07B-4633-4536-ACBF
Status	Released

## Removing the hard drive

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

**⚠ CAUTION:** Hard drives are fragile. Exercise care when handling the hard drive.

**⚠ CAUTION:** To avoid data loss, do not remove the hard drive while the computer is in sleep or on state.

Identifier	GUID-37921292-743B-4ABF-A66A-D7C2C75AAA32
Status	Released


### Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).


Identifier	GUID-B6FB0CEF-C100-4A99-AF73-751FACDBE71F
Status	Released

### Procedure


- 1 Open the latch and using the pull tab, disconnect the hard-drive cable from the system board.
- 2 Remove the two screws (M2x3) that secure the hard-drive assembly to the palm rest and keyboard assembly.
- 3 Lift the hard-drive assembly along with its cable off the palm rest and keyboard assembly.

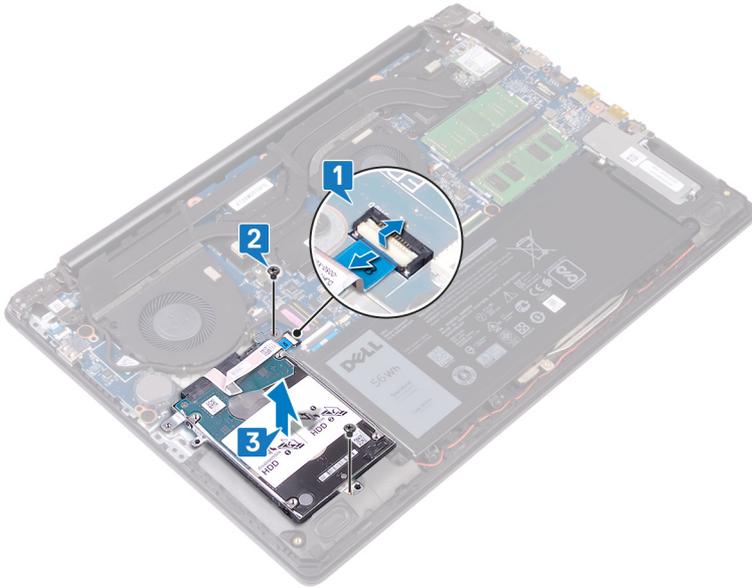

- 4 Disconnect the interposer from the hard-drive assembly.

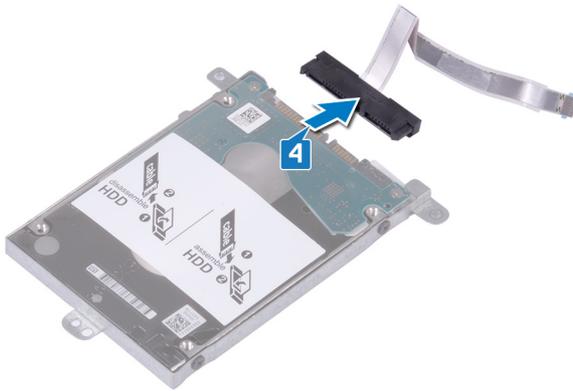

- 5 Remove the four screws (M3x3) that secure the hard-drive bracket to the hard drive.
- 6 Lift the hard drive off the hard-drive bracket.

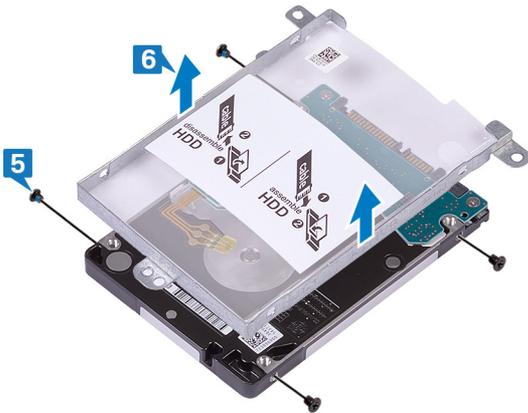

Identifier	GUID-8D72BB77-0F8B-428E-A98E
Status	Released

## Replacing the hard drive


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

**⚠ CAUTION:** Hard drives are fragile. Exercise care when handling the hard drive.


Identifier	GUID-B737A382-638B-4E17-B2B9-8498A738C11B
Status	Released

### Procedure


- 1 Place the hard-drive bracket on the hard drive and align the screw holes on the hard-drive bracket with the screw holes on the hard drive.
- 2 Replace the four screws (M3x3) that secure the hard-drive bracket to the hard drive.

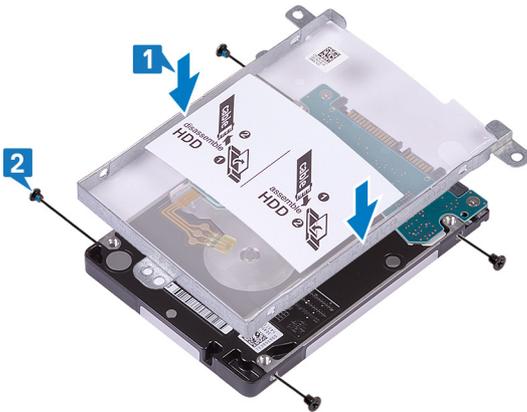

- 3 Connect the interposer to the hard-drive assembly.

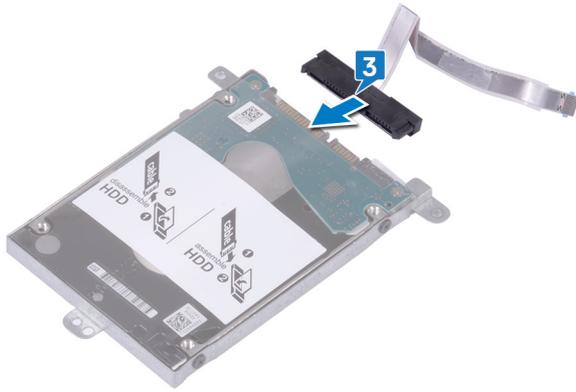

- 4 Align the screw holes on the hard-drive assembly with the screw holes on the palm rest and keyboard assembly.
- 5 Replace the two screws (M2x3) that secure the hard-drive assembly to the palm rest and keyboard assembly.
- 6 Fold the hard-drive cable and connect it to the system board.
- 7 Slide the hard-drive cable into the connector on the system board and close the latch.

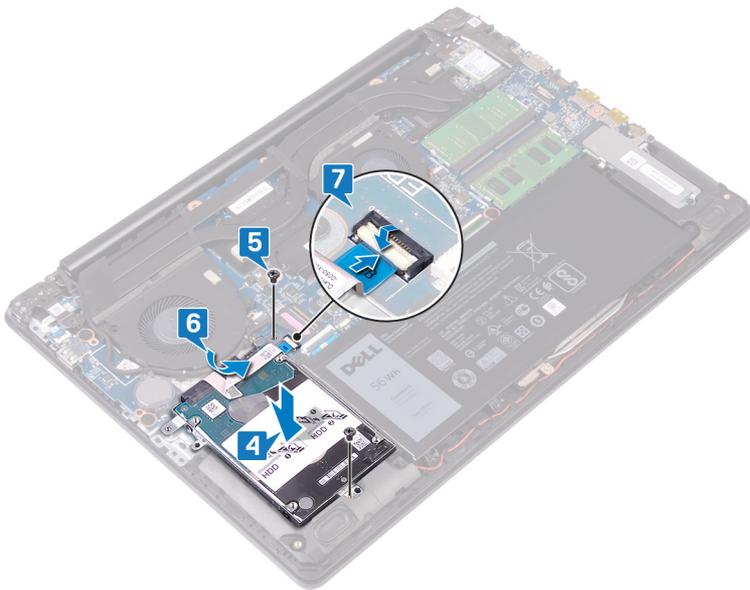

Identifier GUID-56AA2BC3-6EFC-43DA-A65A-1B08AC611390

Status Released

## Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Identifier	GUID-8D2AE471-594B-46FC-808B-
Status	Released

## Removing the touchpad

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-37921292-743B-4ABF-A66A-D7C2C75AAA32
Status	Released

### Prerequisites


- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Identifier	GUID-742101FC-6FE6-4658-A36F-EB460D240680
Status	Released

### Procedure

- 1 Open the latch and disconnect the touchpad cable from the system board.
- 2 Gently peel the tape that secures the touchpad to the palm rest and keyboard assembly.
- 3 Remove the four screws (M2x2) that secure the touchpad to the palm rest and keyboard assembly.
- 4 Slide the touchpad along with its cable at an angle and lift the touchpad off the palm rest and keyboard assembly.



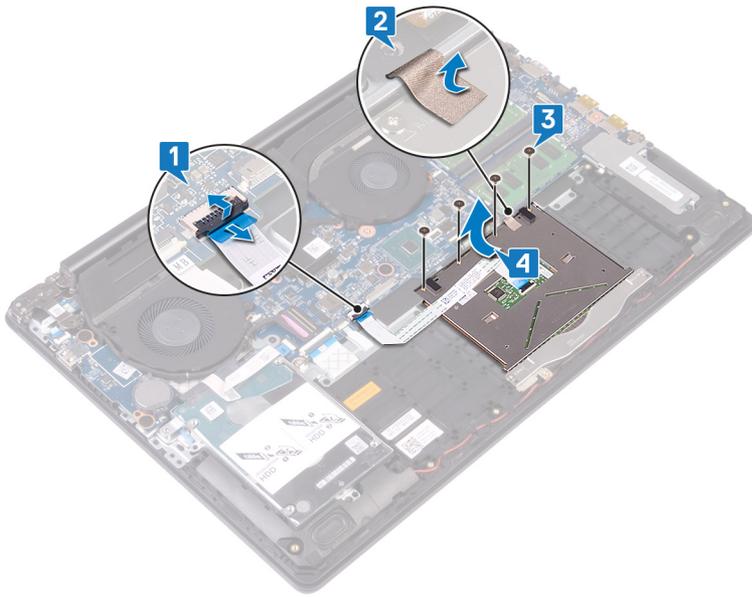

Identifier	GUID-B55423C5-03BB-46A2-9B5F-
Status	Released

## Replacing the touchpad


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-3248553A-D3A1-4E32-88A2-825373A26BFA
Status	Released

### Procedure

**ⓘ NOTE:** Ensure that the touchpad is aligned with the guides available on the palm-rest and keyboard assembly, and the gap on either sides of the touchpad is equal.

- 1 Slide and place the touchpad into the slot on the palm rest and keyboard assembly.
- 2 Replace the four screws (M2x2) that secure the touchpad to the palm rest and keyboard assembly.
- 3 Adhere the tape that secures the touchpad to the palm rest and keyboard assembly.
- 4 Slide the touchpad cable into the connector on the system board and close the latch.

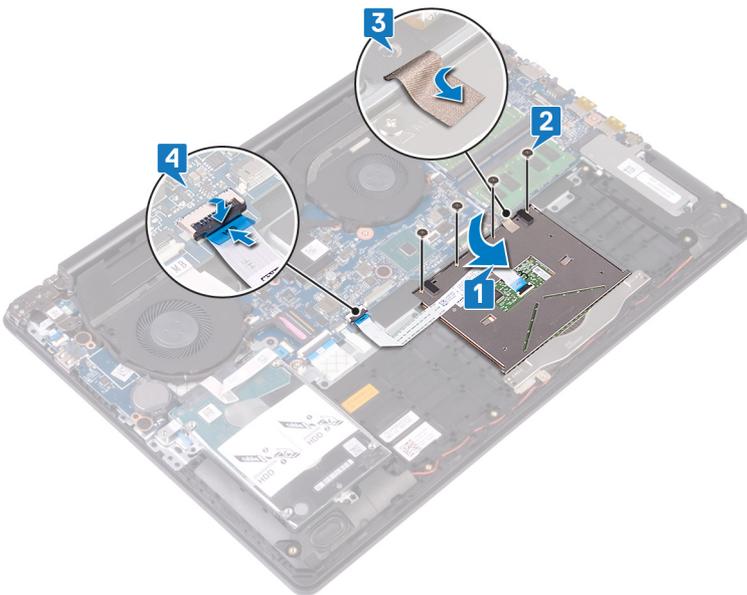

Identifier	GUID-56AA2BC3-6EFC-43DA-A65A-1B08AC611390
Status	Released

## Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).



Identifier	GUID-35D5032D-9652-403C-9A8A-
Status	Released

## Removing the power-adapter port

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-7E5DC50B-52E4-450D-A406-E41951E197AB
Status	Released

### Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [wireless card](#).


Identifier	GUID-ACE3C9FD-E00F-4031-8DCA-A234DFD9F1D3
Status	Released

### Procedure

**Applicable on computers that are shipped with power button only.**

- 1 Remove the three screws (M2.5x6) that secure the right hinge to the system board and palm rest assembly.
- 2 Lift the right hinge.
- 3 Disconnect the power-adapter port cable from the system board.
- 4 Peel and lift the power-adapter port along with its cable off the palm rest and keyboard assembly.



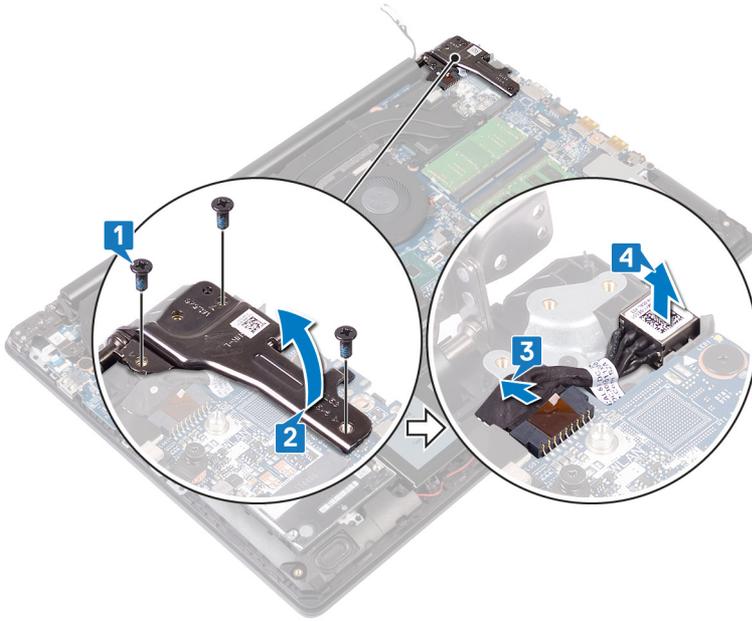

Identifier	GUID-A99140DB-7AF3-4218-B305-
Status	Released


## Replacing the power-adapter port

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-A3DB25AE-B77D-4A85-AAA2-026F8D8C69B0
Status	Released

### Procedure

- 1 Place the power-adapter port into the slot and adhere the power-adapter port on the palm rest and keyboard assembly.
- 2 Connect the power-adapter port cable to the system board.
- 3 Close the right hinge.
- 4 Replace the three screws (M2.5x6) that secure the right hinge to the system board and palm rest assembly.

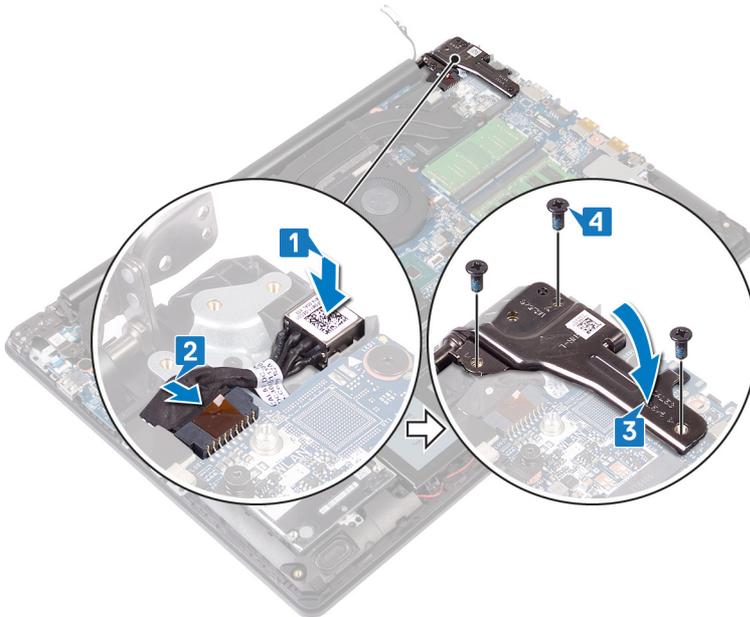

Identifier	GUID-7E4864CB-4C76-44E2-930F-B18E23FB1761
Status	Released

## Post-requisites

- 1 Replace the [wireless card](#).
- 2 Replace the [base cover](#).



Identifier	GUID-BF7F1ECA-BC62-4949-B1BE
Status	Released

## Removing the speakers

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-EE347C11-7D84-4316-9704-CCB5EC75A7AB
Status	Released


### Prerequisites

Remove the [base cover](#).

Identifier	GUID-C73777E2-6E66-451D-96CB-9FF67A98DAB9
Status	Released

### Procedure

- 1 Disconnect the speaker cable from the system board and lift the right speaker off the palm rest and keyboard assembly.
- 2 Note the speaker cable routing and remove it from the routing guides on palm rest and key board assembly.
- 3 Lift the left speaker, along with the cable, off the palm rest and keyboard assembly.

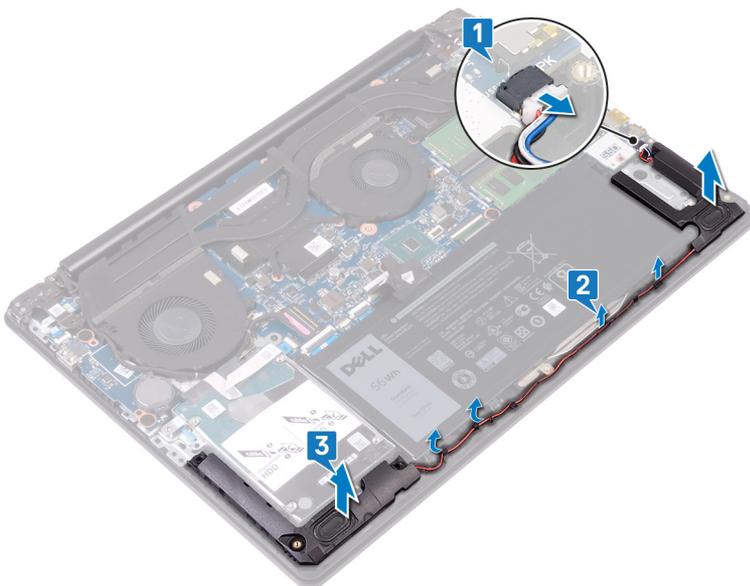

Identifier	GUID-40DC76F7-B3EC-450A-848E
Status	Released

## Replacing the speakers


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-C595C617-CDCC-46E9-98BB-0E782D53A7CF
Status	Released

### Procedure

**ⓘ NOTE:** If the rubber grommets are pushed out of the speakers when removing the speakers, push them back in place before replacing the speakers.

- 1 Using the alignment posts and rubber grommets, place the left speaker in the slots on the palm rest and keyboard assembly.
- 2 Route the speaker cable through the routing guides on the palm rest and keyboard assembly.
- 3 Replace the right speaker.
- 4 Connect the speaker cable to the system board.

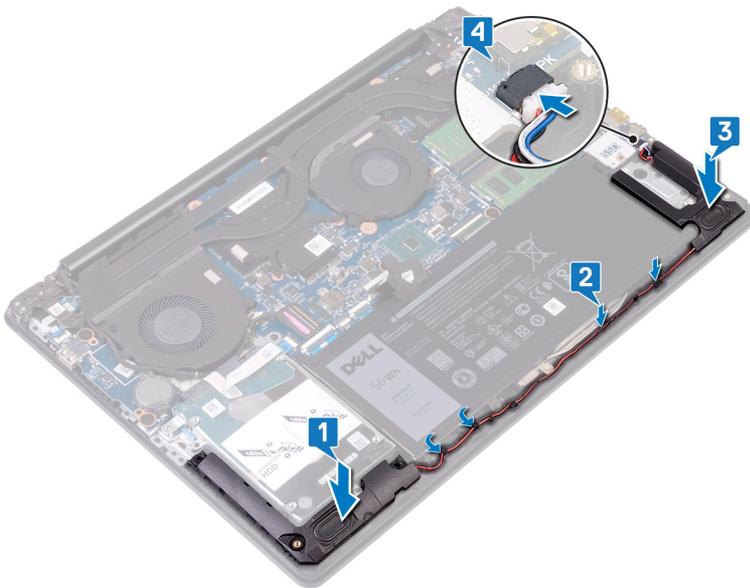

Identifier	GUID-90AC810E-8499-45B3-836C-CC771A88897B
Status	Released

## Post-requisites

Replace the [base cover](#).



Identifier	GUID-3AE08A92-614C-4411-90FB-
Status	Released

## Removing the heat sink

- ⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).
- ⚠ WARNING:** The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.
- ⚠ CAUTION:** For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

Identifier	GUID-E4E528A9-505B-4FF1-9556-9713AC5FEC9C
Status	Released


## Prerequisites

Remove the [base cover](#).

Identifier	GUID-C1C066DC-126D-4EB2-B8A7-ED177883D127
Status	Released

## Procedure

- 1 Remove the four (M2x3) screws in the reverse sequential order (8>7>6>5) that secure the heat sink to the system board.
- 2 In the reverse sequential order (4>3>2>1), loosen the four captive screws that secure the heat sink to the system board.
- 3 Lift the heat sink off the system board.

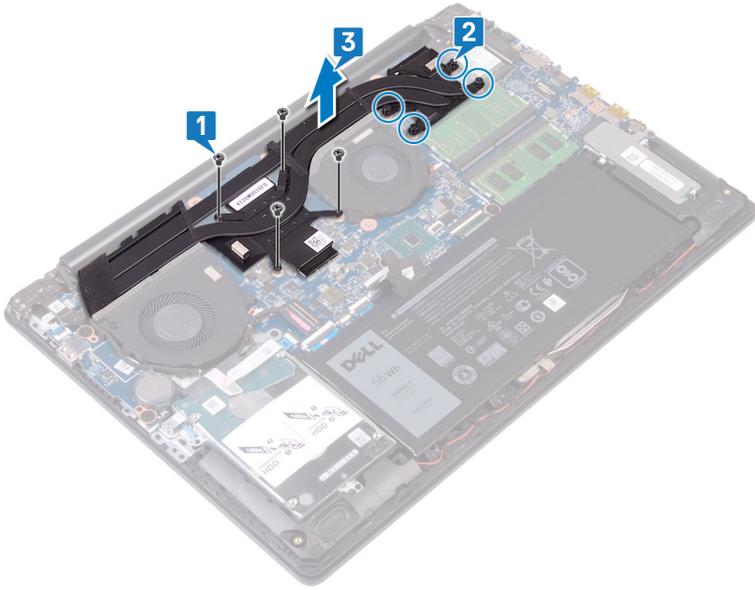

Identifier	GUID-69332260-F504-4C70-A535-1
Status	Released

## Replacing the heat sink

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).


**⚠ CAUTION:** Incorrect alignment of the heat sink can damage the system board and processor.

**ⓘ NOTE:** If either the system board or the heat sink is replaced, use the thermal pad provided in the kit to ensure that thermal conductivity is achieved.

Identifier	GUID-B63B95C5-B492-4CA4-AC8E-9C805870C5BB
Status	Released

### Procedure

- 1 Place the heat sink on the system board and align the screw holes on the heat sink with the screw holes on the system board.
- 2 Tighten the captive screws in the sequential order (1>2>3>4) to secure the heat sink to the system board.
- 3 Replace the four (M2x3) screws in the sequential order (5>6>7>8) that secure the heat sink to the system board.

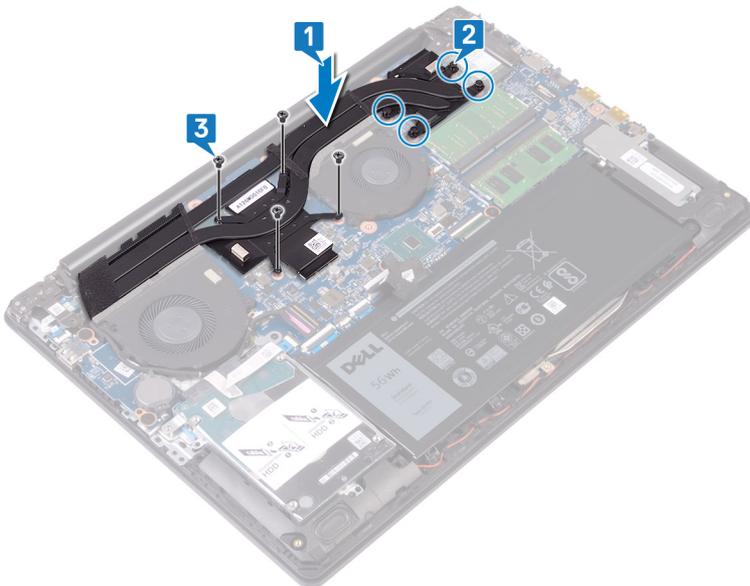

Identifier	GUID-CA6E4297-774B-4E7D-803E-E0B85664B945
Status	Released

## Post-requisites

Replace the [base cover](#).



Identifier	GUID-AB1F153B-621B-42FC-89BE
Status	Released

## Removing the display assembly

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-7E5DC50B-52E4-450D-A406-E41951E197AB
Status	Released


### Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [wireless card](#).


Identifier	GUID-0DB1BB01-F8CB-4790-BA6D-6B2665AE0DA1
Status	Released

### Procedure

- 1 Open the latch and disconnect the display cable from the system board.
- 2 Note the routing of the display cable and remove the cable from its routing guides on the fan and palm rest and keyboard assembly.
- 3 Remove the six screws (M2.5x6) that secure the left and right hinges to the system board and palm rest and keyboard assembly.

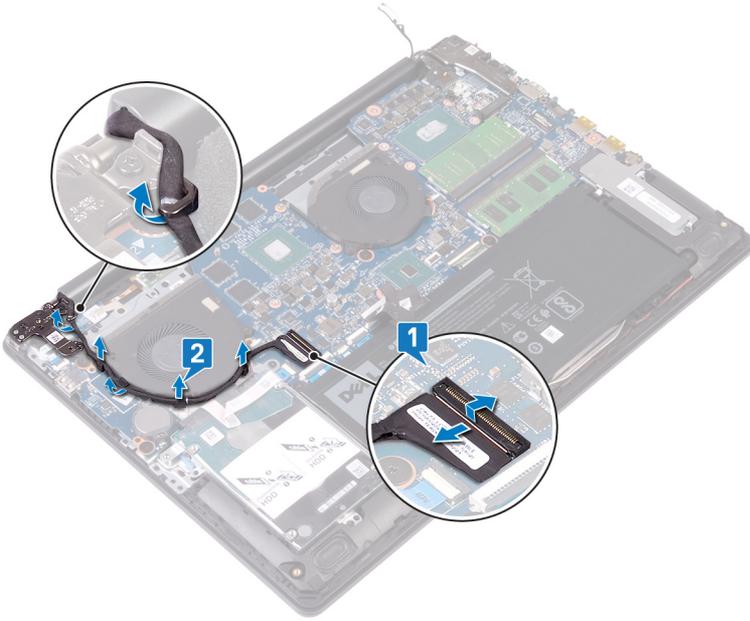

4 Open the hinges.

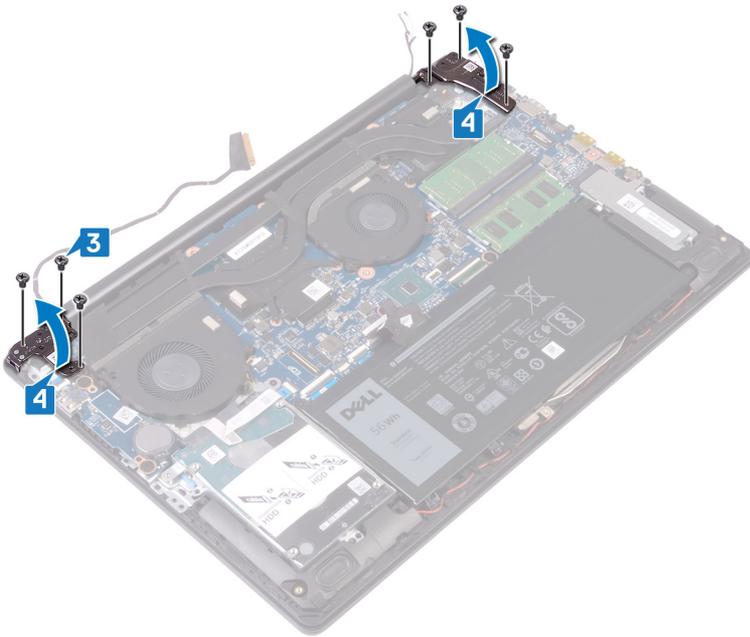

5 Lift the palm rest and keyboard assembly at an angle.

6 Slide and remove the palm rest and keyboard assembly off the display assembly.



7 After performing all these steps, you are left with the display assembly.



Identifier	GUID-2DF70EB1-9D26-4051-8B7C-
Status	Released

## Replacing the display assembly


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-C139CA56-4144-4D70-91C4-DB20FFDD1213
Status	Released

### Procedure

**ⓘ NOTE:** Ensure that the hinges are opened to the maximum before replacing the display assembly on palm rest and keyboard assembly.


- 1 Slide the palm rest and keyboard assembly at an angle under the hinges on the display assembly.
- 2 Place the palm rest and keyboard assembly on the display assembly.

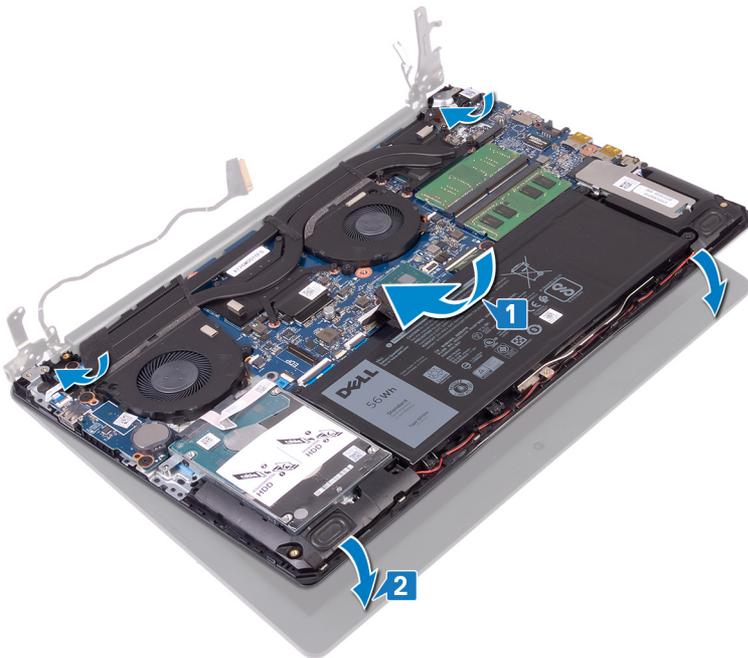


- 3 Using the alignment posts, press the hinges down on the system board and the palm rest and keyboard assembly.



- 4 Replace the six screws (M2.5x6) that secure the left and right hinges to the system board and palm rest and keyboard assembly.

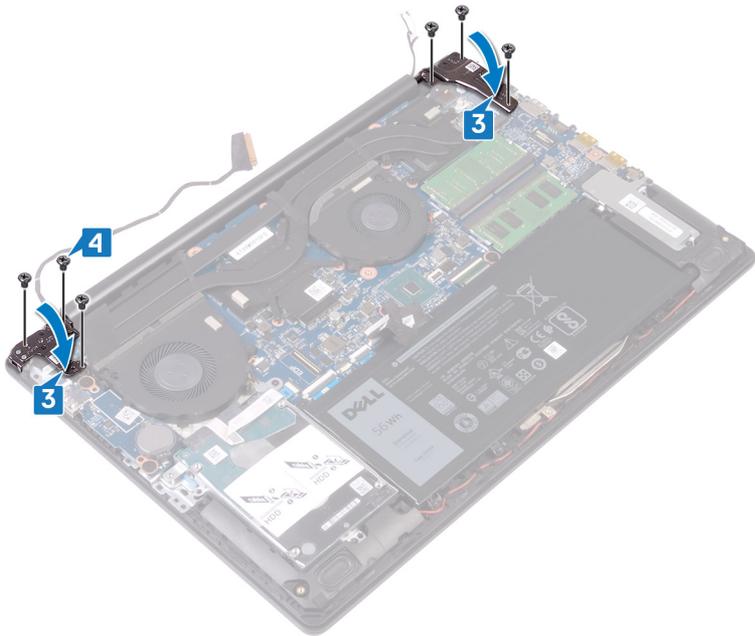

- 5 Route the display cable through the routing guides on the fan and the palm rest and keyboard assembly.
- 6 Slide the display cable into the connector on the system board and close the latch to secure the cable.

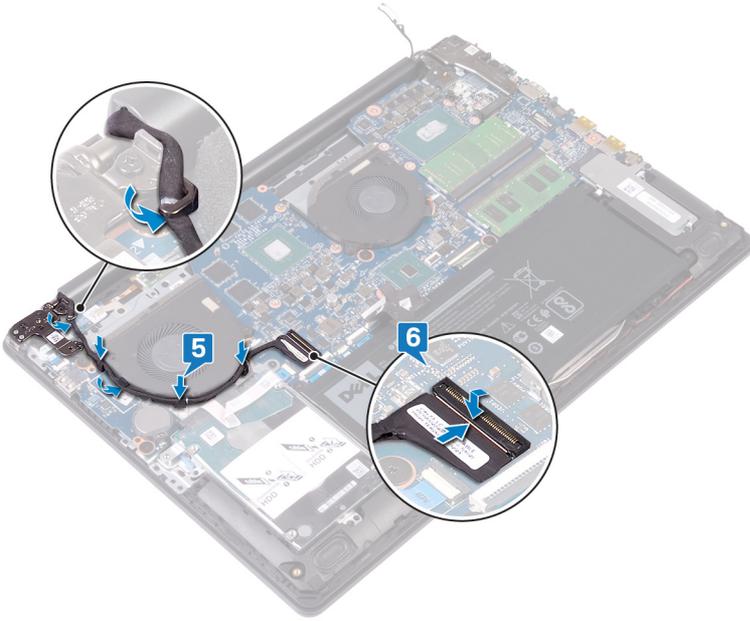

Identifier	GUID-7E4864CB-4C76-44E2-930F-B18E23FB1761
Status	Released

## Post-requisites

- 1 Replace the [wireless card](#).
- 2 Replace the [base cover](#).

Identifier	GUID-DC61C8F1-86D0-49DE-B8D8
Status	Released

## Removing the I/O board

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-0B7E1783-C342-48E1-BC79-9E29A39A1F23
Status	Released

### Prerequisites


**⚠ CAUTION:** Removing the coin-cell battery resets the BIOS setup program's settings to default. Before removing the I/O board along with the coin-cell battery, it is recommended to note the BIOS setup program's settings.

Remove the [base cover](#).

Identifier	GUID-20A1E8D3-45CD-40C7-B6D0-CBD2137BDEF1
Status	Released

### Procedure

- 1 Open the latch and disconnect the power-button board cable from the system board.
- 2 Remove the two screws (M2.5x2.5) that secures the I/O board to the palm rest and keyboard assembly.
- 3 Turn the I/O-board over.
- 4 Open the latch and disconnect the I/O-board cable from the I/O-board.
- 5 Lift the I/O board off the palm rest and keyboard assembly.

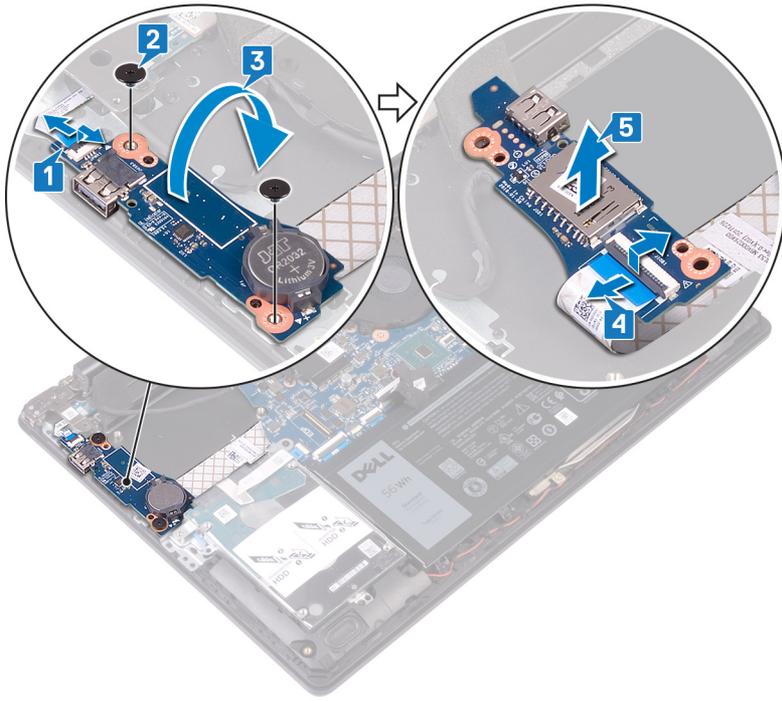

Identifier	GUID-98F27B1C-9F09-48EC-83D7-
Status	Released


## Replacing the I/O board

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-D1F5899C-5B2E-4F62-BA14-4AB4DE315831
Status	Released

### Procedure

- 1 Connect the I/O-board cable to the I/O board and close the latch.
- 2 Turn over the I/O board.
- 3 Using the alignment posts, place the I/O board on the palm rest and keyboard assembly.
- 4 Replace the two screws (M2.5x2.5) that secure the I/O board to the palm rest and keyboard assembly.
- 5 Connect the power-button board cable to the system board and close the latch.

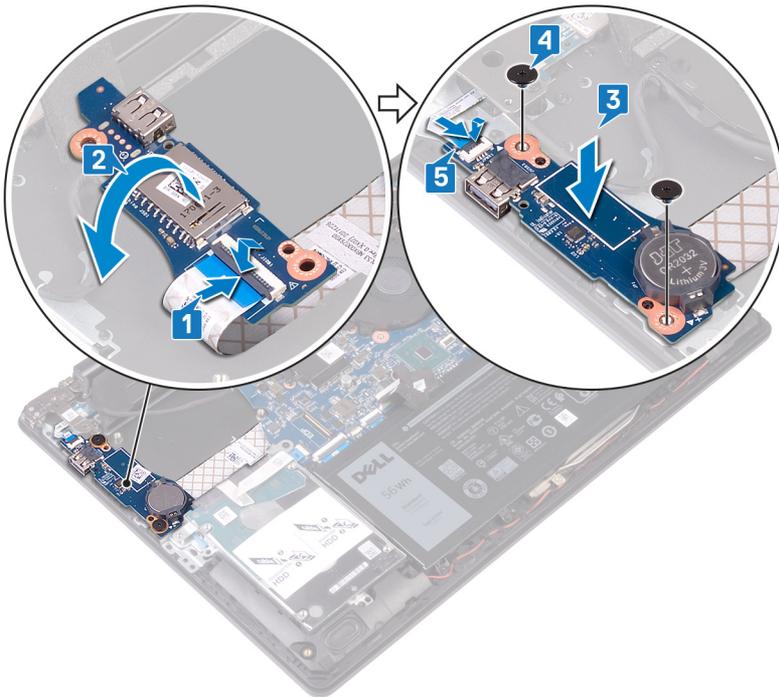

Identifier	GUID-48E7A735-384E-4A1F-80BB-16E6DCDC6E41
Status	Released

## Post-requisites

Replace the [base cover](#).



Identifier	GUID-A35BD2D5-B3B3-4708-AF10
Status	Released

## Removing the power-button board

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-4676A113-655C-485B-92B7-D5464610812F
Status	Released


### Prerequisites

Remove the [base cover](#).


Identifier	GUID-DF89C161-5997-4629-B78C-F2388A2980A6
Status	Released

### Procedure

- 1 Open the latch and disconnect the display-assembly cable from the system board.
- 2 Note the routing of the display cable and remove the cable from its routing guides on the fan and palm rest and keyboard assembly.
- 3 Remove the three screws (M2.5x6) that secure the left hinge to palm rest and keyboard assembly.
- 4 Open the left hinge.

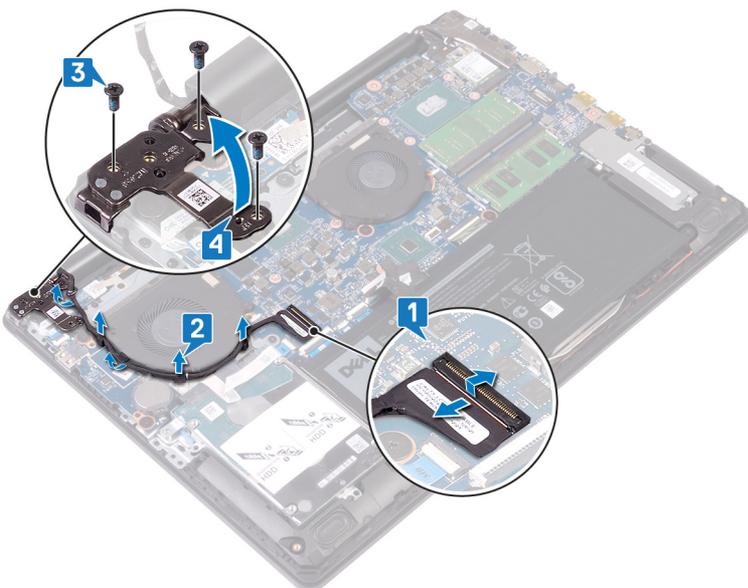

- 5 Open the latch and disconnect the power-button board cable from the I/O board.
- 6 Gently peel off the tape that secures the power-button board to the palm rest and keyboard assembly.
- 7 Remove the screw (M2x2) that secures the power-button board to the palm rest and keyboard assembly.
- 8 Release the power-button board from the tabs and lift the power-button board along with the cable off the palm rest and keyboard assembly.

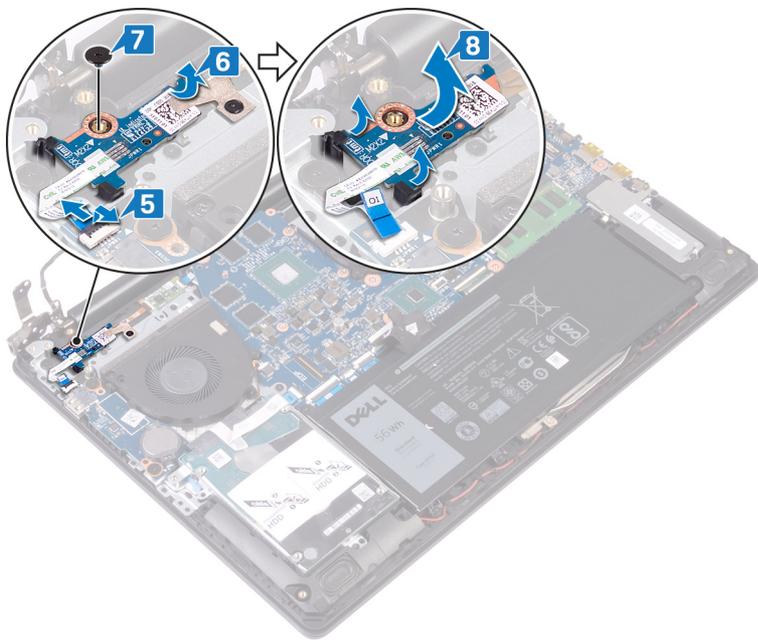

Identifier	GUID-FBA68EE4-1E13-4F28-9B84-
Status	Released


## Replacing the power-button board

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in **Before working inside your computer**. After working inside your computer, follow the instructions in **After working inside your computer**. For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).


Identifier	GUID-88A21DFC-F030-4884-9D76-EBD5F738E187
Status	Released

### Procedure

- 1 Slide the power-button board into the tabs on the palm rest and keyboard assembly and then align the screw hole on the power-button board with the screw hole on the palm rest and keyboard assembly.
- 2 Replace the screw (M2x2) that secures the power-button board to the palm rest and keyboard assembly.
- 3 Adhere the tape that secures the power-button board to the palm rest and keyboard assembly.
- 4 Slide the power-button cable to the I/O board and close the latch.

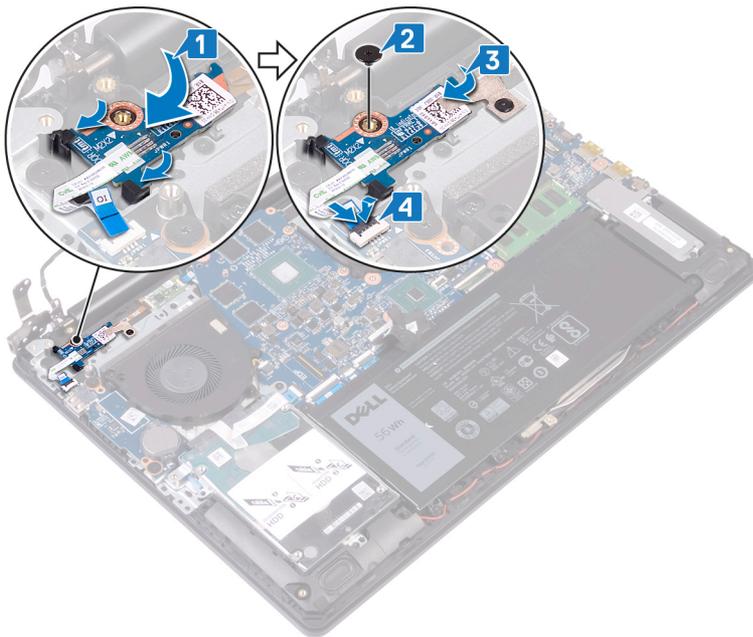

- 5 Close the left hinge.
- 6 Replace the three screws (M2.5x6) that secure the left hinge to palm rest and keyboard assembly.
- 7 Route the display cable through the routing guides on the fan and the palm rest and keyboard assembly.
- 8 Slide the display cable to the connector on the system board and close the latch.

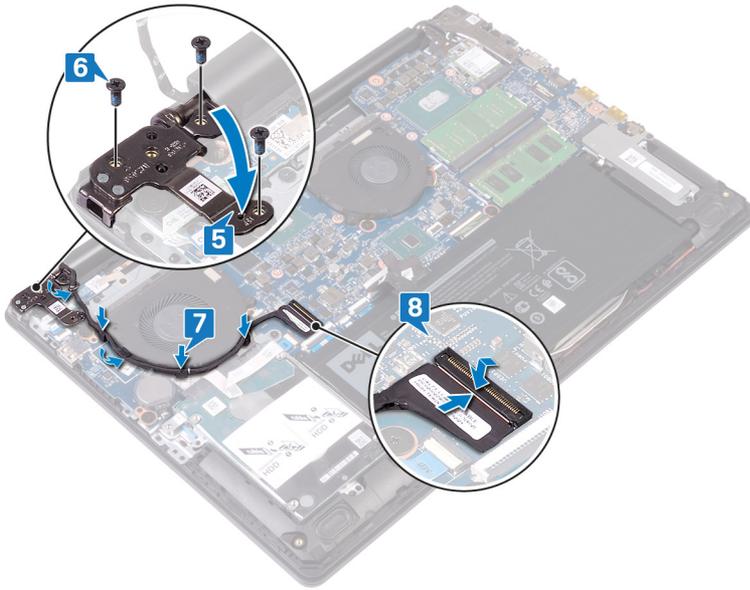

Identifier

GUID-376955B5-EF33-42B9-80FD-747E85CBFF8F

Status

Released

## Post-requisites

Replace the [base cover](#).

Identifier	GUID-B54497E8-5AD5-4FF9-AD4A
Status	Released

## Removing the system board

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

- ⓘ NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.
- ⓘ NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.
- ⓘ NOTE:** Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect the cables correctly after you replace the system board.

Identifier	GUID-427504E6-68FA-4426-A9A5-7B8411756416
Status	Released


### Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [memory modules](#).
- 4 Remove the [wireless card](#).
- 5 Remove the [solid-state drive/Intel Optane](#).
- 6 Remove the [heat sink](#).


Identifier	GUID-E608354B-1E88-4F97-9415-3D182D1377BD
Status	Released

### Procedure


- 1 Remove the three screws (M2.5x6) that secure the right hinge to the system board.
- 2 Open the right hinge.

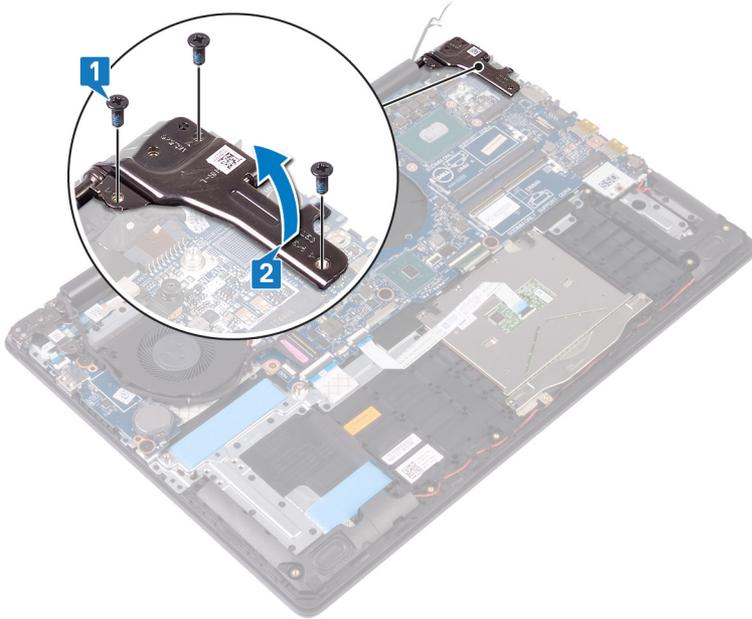

- 3 Disconnect the graphics-card fan cable.
- 4 Open the latch and disconnect the display-assembly cable.
- 5 Open the latch and disconnect the hard-drive cable.
- 6 Open the latch and disconnect the I/O-board cable.
- 7 Open the latch and disconnect the fingerprint-reader cable.
- 8 Open the latch and disconnect the touchpad cable.
- 9 Open the latch and disconnect the keyboard back-light cable.
- 10 Open the latch and disconnect the keyboard cable.
- 11 Disconnect the speaker cable.
- 12 Disconnect the power-adaptor port cable.

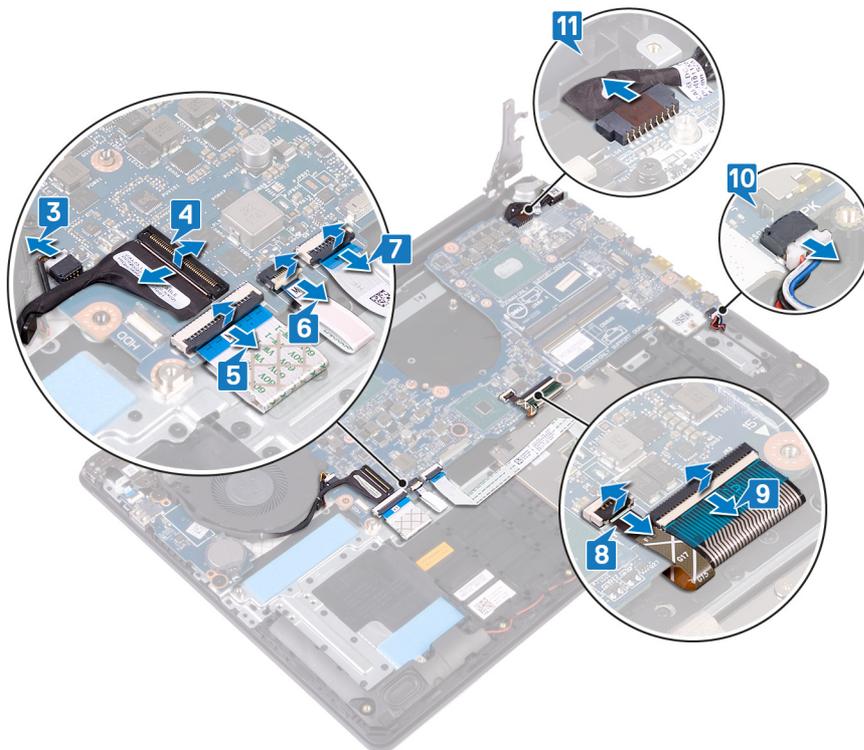

- 13 Remove the three screws (M2.5x2.5) that secure the system board to palm rest and keyboard assembly.
- 14 Lift the system board off the palm rest and keyboard assembly.

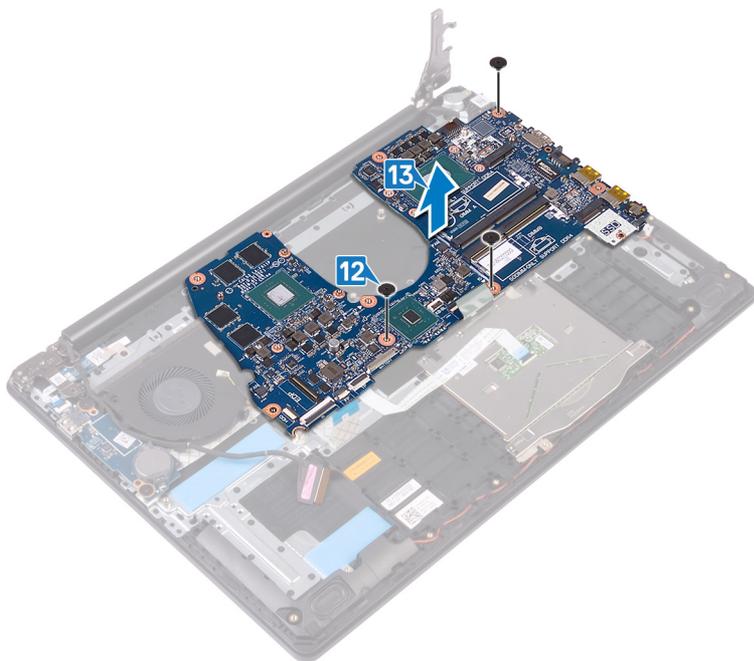

Identifier	GUID-67274E98-E2F1-4B7B-A903-
Status	Released

## Replacing the system board

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).


**ⓘ NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.

**ⓘ NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.

Identifier	GUID-9CB2E97D-04D5-41DA-9AB0-41B04C52410E
Status	Released

## Procedure


- 1 Align the screw hole on the system board with the screw hole on the palm rest and keyboard assembly.
- 2 Replace the three screws (M2.5x2.5) that secure the system board to the palm rest and keyboard assembly.

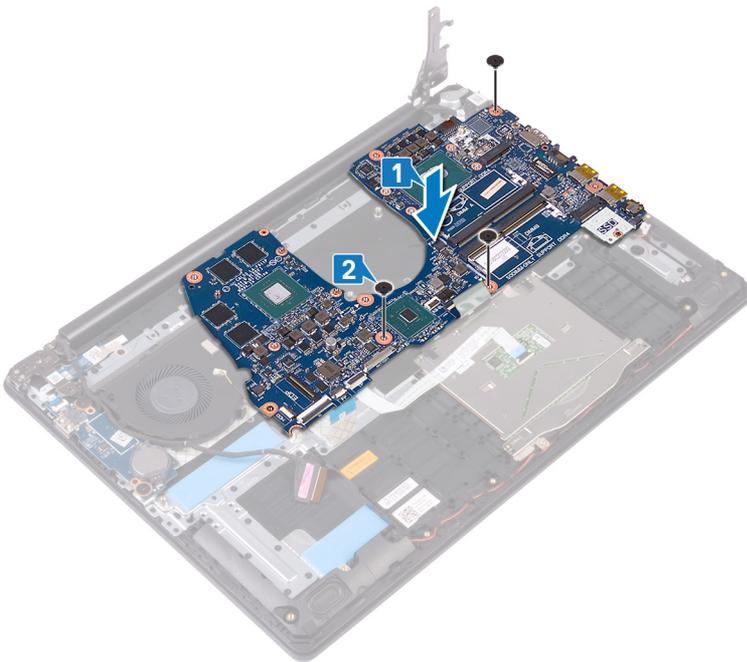


- 3 Connect the power-adaptor port cable.
- 4 Connect the speaker cable.
- 5 Close the latch and disconnect the keyboard cable.



- 6 Close the latch and disconnect the keyboard back-light cable.
- 7 Close the latch and disconnect the touchpad cable.
- 8 Close the latch and disconnect the fingerprint-reader.
- 9 Close the latch and disconnect the I/O-board cable.
- 10 Close the latch and disconnect the hard-drive cable.
- 11 Close the latch and disconnect the display-assembly cable.
- 12 Connect the graphics-card fan cable from the system board.

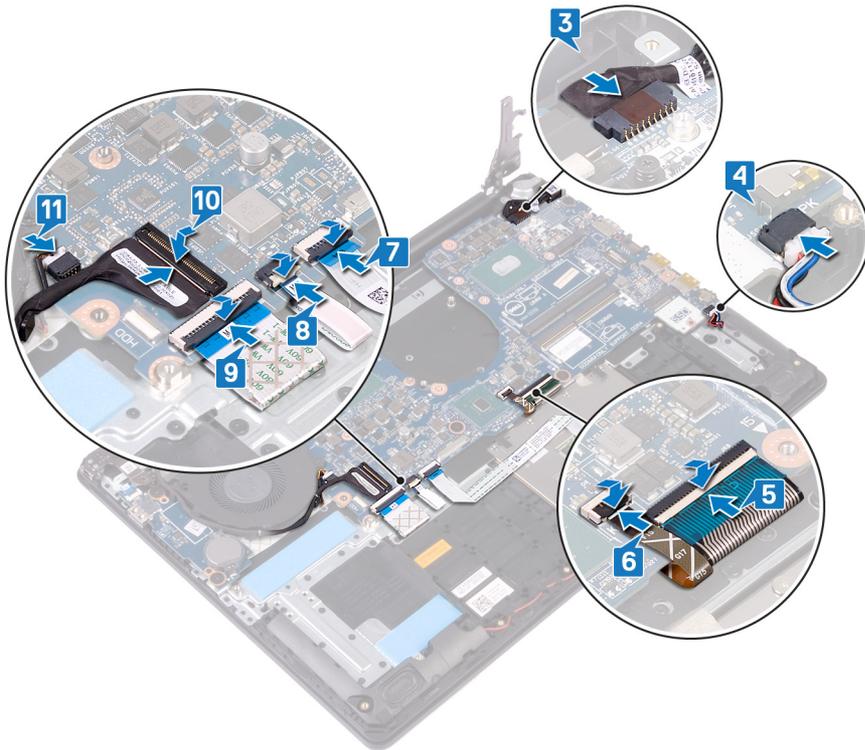

- 13 Close the right display hinge.
- 14 Replace the three screws (M2.5x6) that secure the right hinge to the system board.

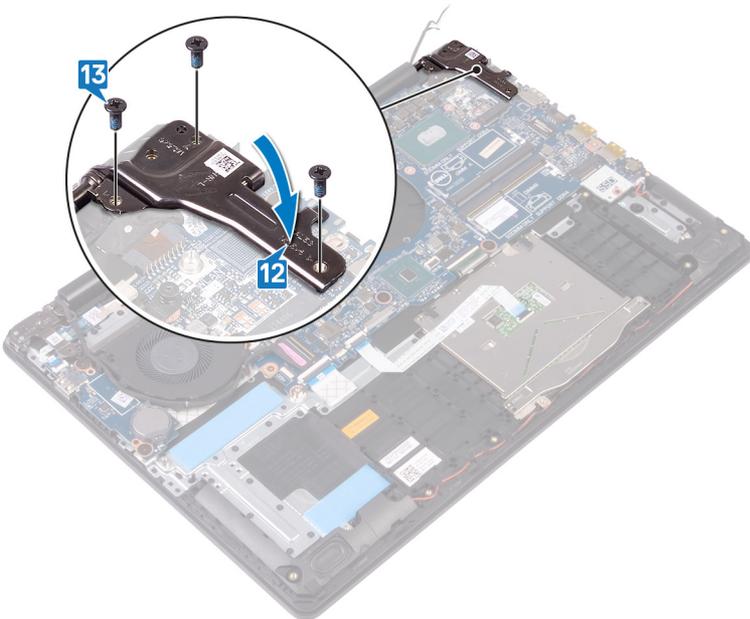

Identifier	GUID-18CFC8C9-F89F-4550-BE1C-0EC7DDF681AE
Status	Released

## Post-requisites

- 1 Replace the [heat sink](#).
- 2 Replace the [solid-state drive/Intel Optane](#).
- 3 Replace the [wireless card](#).
- 4 Replace the [memory modules](#).
- 5 Replace the [battery](#).
- 6 Replace the [base cover](#).

Identifier	GUID-C264FC4F-B5CD-4F08-9183-CB9FC26A5E6A
Status	Released

## Entering the Service Tag in the BIOS setup program

- 1 Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed to enter the BIOS setup program.
- 3 Navigate to the **Main** tab and enter the Service Tag in the **Service Tag Input** field.

 **NOTE:** Service tag is the alphanumeric identifier located at the back side of your computer.

Identifier	GUID-43423BFB-7BAA-4C7E-BA7A
Status	Released

# Removing the power button with fingerprint reader

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

**ℹ NOTE:** Applicable only for computers that are shipped with fingerprint reader.

Identifier	GUID-0FDACDDE-9CD6-418D-ABA7-AB8694DDACF0
Status	Released


## Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [solid-state drive/Intel Optane](#).
- 4 Remove the [fan](#).
- 5 Remove the [heat sink](#).
- 6 Remove the [wireless card](#).
- 7 Remove the [power-button board](#).
- 8 Remove the [system board](#).
- 9 Remove the [display assembly](#).

Identifier	GUID-EAF2DAD2-3A48-4CE0-B127-8F007A30D0F2
Status	Released

## Procedure

- 1 Peel the fingerprint reader cable off the palm rest and keyboard assembly.
- 2 Remove the screw (M2x2) that secures the power button to the palm rest and keyboard assembly.
- 3 Using a plastic scribe, release the fingerprint-reader board from the palm rest and keyboard assembly.
- 4 Lift the power button, along with its cable, off the palm rest and keyboard assembly.

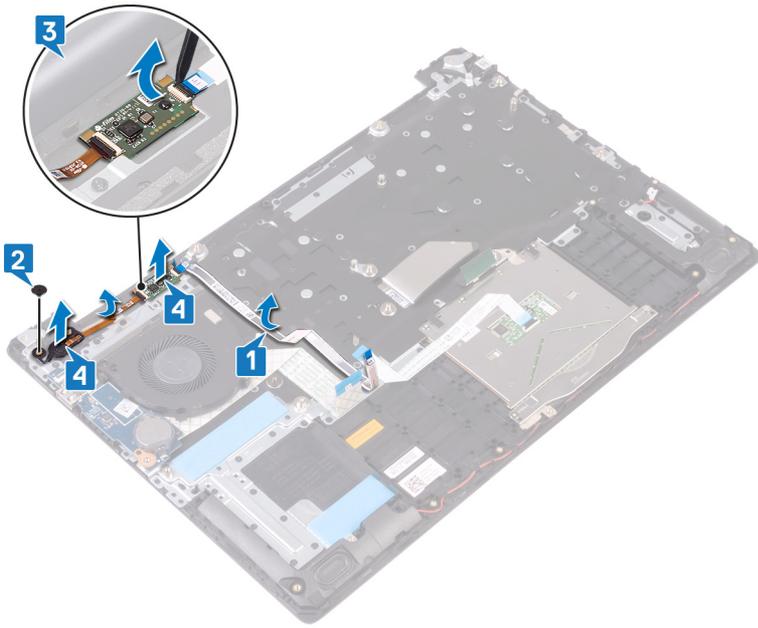

Identifier	GUID-0C3EE813-46D4-4A46-9435-8
Status	Released

# Replacing the power button with fingerprint reader


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

**ℹ NOTE:** Applicable only for computers that are shipped with fingerprint reader.

Identifier	GUID-7149B903-B51D-44C2-A6F0-66161E60EC30
Status	Released

## Procedure

- 1 Using the alignment posts, align the power button on the palm rest and keyboard assembly.
- 2 Slide and place the power button into the slots on the palm rest and keyboard assembly.
- 3 Replace the screw (M2x2) that secures the power button to the palm rest and keyboard assembly.
- 4 Adhere the fingerprint reader cable on the palm rest and keyboard assembly.

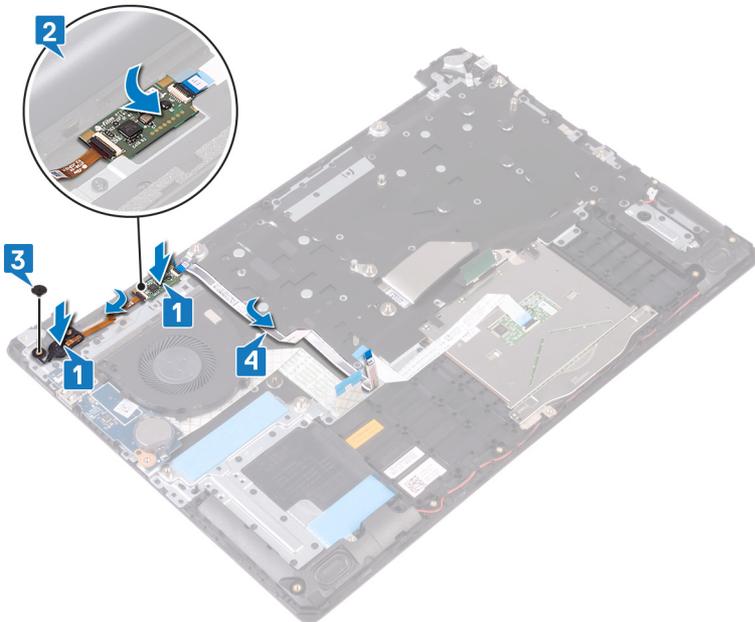

Identifier	GUID-01ABBE32-7D49-4B23-B28D-8E54668E70F5
Status	Released

## Post-requisites

- 1 Replace the [display assembly](#).
- 2 Replace the [system board](#).
- 3 Replace the [power-button board](#).
- 4 Replace the [wireless card](#).
- 5 Replace the [heat sink](#).
- 6 Replace the [fan](#).
- 7 Replace the [solid-state drive/Intel Optane](#).
- 8 Replace the [battery](#).
- 9 Replace the [base cover](#).



Identifier	GUID-631184FE-18D9-4002-8F9F-D
Status	Released

## Removing the palm-rest and keyboard assembly

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-E459B79D-0A2F-49A7-9E66-2D8B2A9FBBBA
Status	Released


### Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [fan](#).
- 4 Remove the [solid-state drive/Intel Optane](#).
- 5 Remove the [wireless card](#).
- 6 Remove the [speakers](#).
- 7 Remove the [hard drive](#).
- 8 Remove the [touchpad](#).
- 9 Remove the [power-adaptor port](#).
- 10 Remove the [display assembly](#).
- 11 Remove the [I/O board](#).
- 12 Remove the [power-button board](#) (optional).
- 13 Remove the [system board](#).
- 14 Remove the [power button with fingerprint reader](#) (optional).

Identifier	GUID-B3043768-45EF-4B85-A0FF-BFD91E7799FD
Status	Released

### Procedure

After performing the above steps, we are left with the palm rest and keyboard assembly.

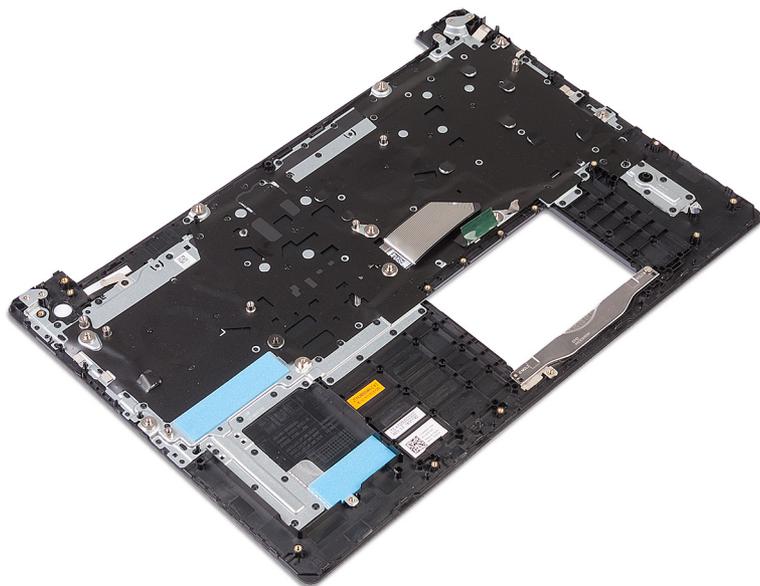

Identifier	GUID-A7F798E1-C24C-44A0-9D6E
Status	Released

## Replacing the palm-rest and keyboard assembly

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-CACCF417-6678-4C23-8898-014D62DDE1C2
Status	Released

### Procedure

Place the palm rest and keyboard assembly on a flat surface.

Identifier	GUID-65085855-278E-45CA-BCA6-C963F4F2C410
Status	Released

### Post-requisites

- 1 Replace the [power button with fingerprint reader](#) (optional).
- 2 Replace the [system board](#).
- 3 Replace the [power-button board](#).
- 4 Replace the [I/O board](#).
- 5 Replace the [display assembly](#).
- 6 Replace the [power-adaptor port](#) (optional).
- 7 Replace the [touchpad](#).
- 8 Replace the [hard drive](#).
- 9 Replace the [speakers](#).
- 10 Replace the [wireless card](#).
- 11 Replace the [solid-state drive/Intel Optane](#).
- 12 Replace the [fan](#).
- 13 Replace the [battery](#).
- 14 Replace the [base cover](#).

Identifier	GUID-5C27B5F7-0EC4-42CD-AB68
Status	Released

## Removing the display bezel

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-3ADA74FC-0336-48F2-A5E7-1385A56028DF
Status	Released


### Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [wireless card](#).
- 3 Remove the [display assembly](#).

Identifier	GUID-391B7834-8C24-4A43-8CB8-09042087AF7E
Status	Released

### Procedure

- 1 Using your fingertips, carefully pry up the display bezel from the top-left outer edge of the display back-cover and antenna assembly.
- 2 Remove the display bezel off the display back-cover and antenna assembly.

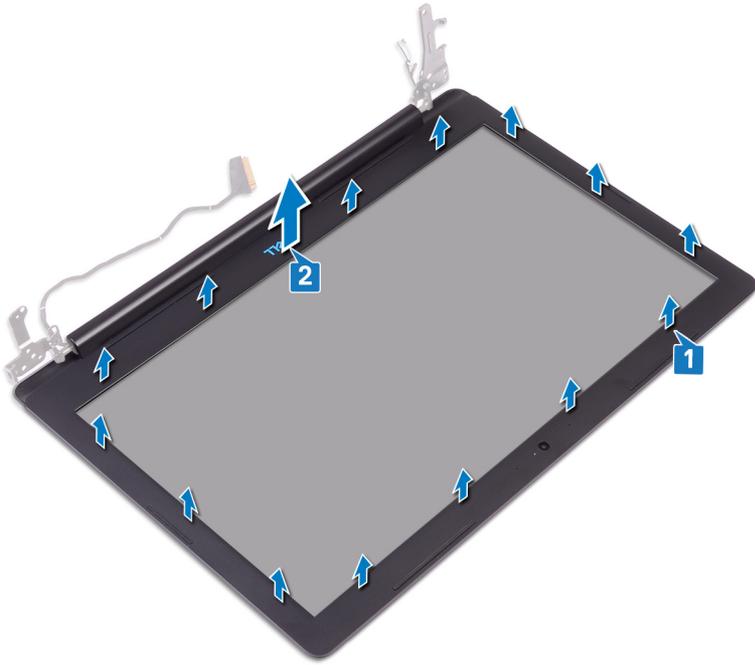

Identifier	GUID-619F529E-294B-4F0D-BB9D-
Status	Released


## Replacing the display bezel

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-B0D7E0A3-C12A-4388-9852-7DB9C3F29C6C
Status	Released

### Procedure

- 1 Align the display bezel with the display back-cover and antenna assembly.
- 2 Gently snap the display bezel into place.

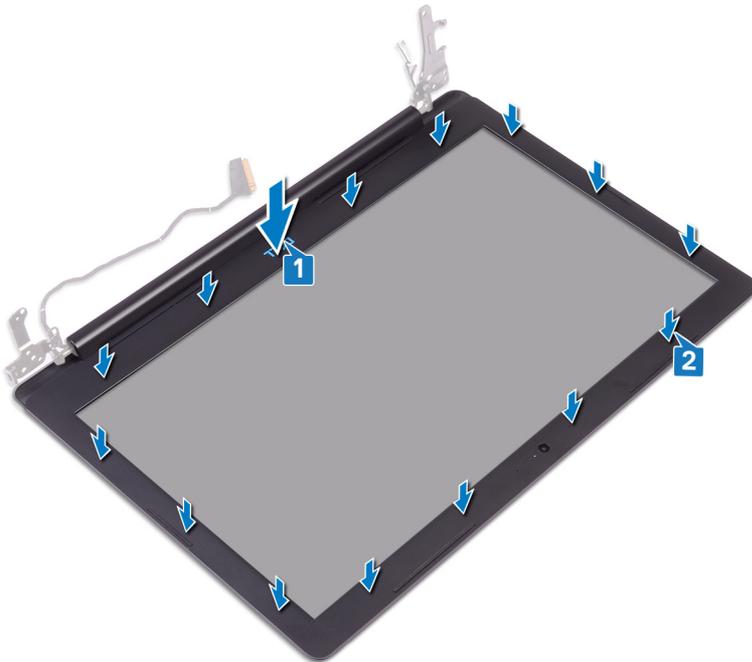

Identifier	GUID-5D275DB5-69D4-4104-BA19-317A6B3443F8
Status	Released

## Post-requisites

- 1 Replace the [display assembly](#).
- 2 Replace the [wireless card](#).
- 3 Replace the [base cover](#).



Identifier	GUID-1FB16E7C-AF0C-4FA0-8736-
Status	Released

## Removing the camera

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-22AAB711-4CCD-44DD-B876-829AAE1B90EF
Status	Released


### Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [wireless card](#).
- 3 Remove the [display assembly](#).
- 4 Remove the [display bezel](#).

Identifier	GUID-722FC5F4-09AE-4FDA-9FCC-31F499BE306D
Status	Released

### Procedure

- 1 Using a plastic scribe, gently pry the camera off the display back-cover and antenna assembly.
- 2 Disconnect the camera cable from the camera module.
- 3 Lift the camera module from the display back-cover and antenna assembly.

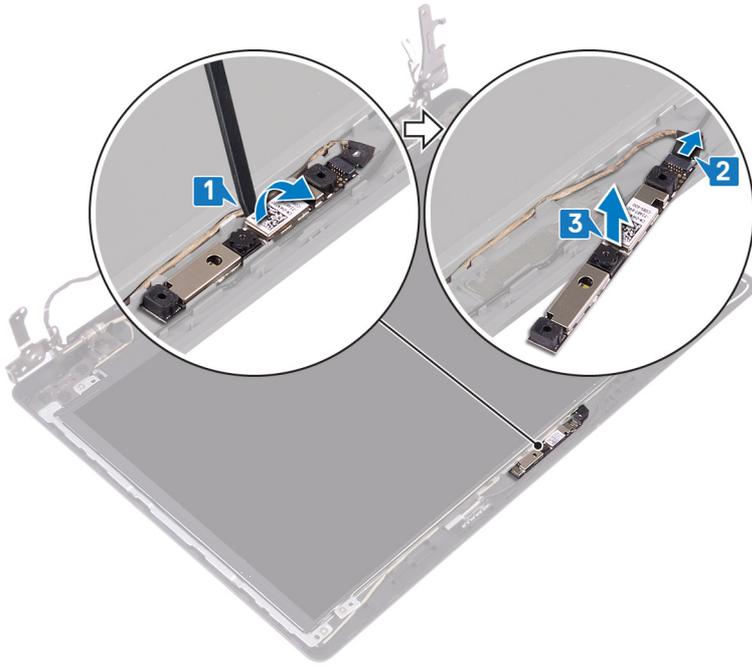

Identifier	GUID-690FF12D-2581-4326-8270-C
Status	Released


## Replacing the camera

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-3FE8CEAC-ACCD-42A6-8F56-34909B62A7F4
Status	Released

### Procedure

- 1 Connect the camera cable to the camera module.
- 2 Using the alignment post adhere the camera module on the display back-cover and antenna assembly.

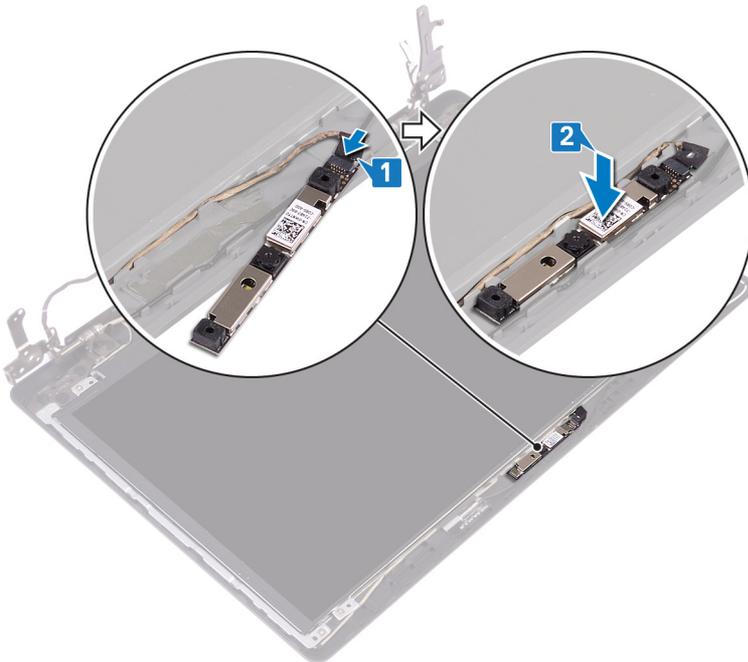

Identifier	GUID-2AA7C97E-B719-4F48-B14D-AD810B65E34C
Status	Released

## Post-requisites

- 1 Replace the [display bezel](#).
- 2 Replace the [display assembly](#).
- 3 Replace the [wireless card](#).
- 4 Replace the [base cover](#).



Identifier	GUID-7D2CEA1B-1FC0-4606-86EB
Status	Released

## Removing the display panel

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-83CA62F7-7DC8-484B-AA8D-79D7A29DA7C5
Status	Released

### Prerequisites


- 1 Remove the [base cover](#).
- 2 Remove the [wireless card](#).
- 3 Remove the [display assembly](#).
- 4 Remove the [display bezel](#).

Identifier	GUID-2C2B8143-67B3-40C2-87A3-6248DA1AB486
Status	Released


### Procedure

- 1 Remove the four screws (M2x3) that secure the display panel to the display back-cover and antenna assembly.
- 2 Lift the display panel and turn it over.



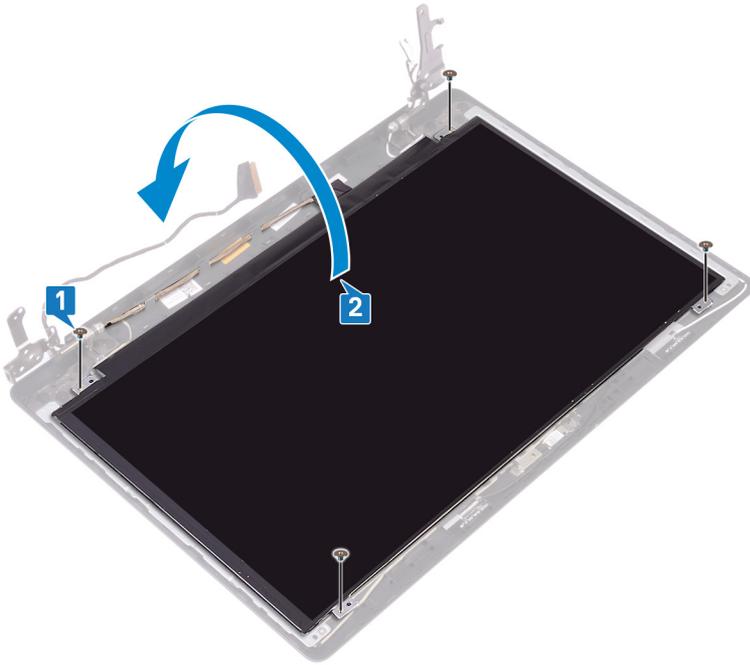

- 3 Peel the tape adhering the display cable to the back of the display panel.
- 4 Open the latch and disconnect the display cable from the display-panel cable connector.
- 5 Lift the display panel away from the display back-cover and antenna assembly.

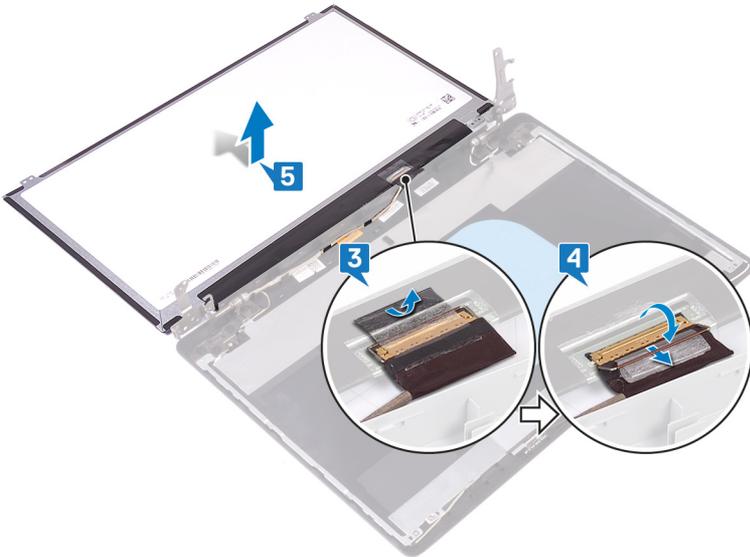

Identifier	GUID-6FD32244-34F4-4843-983D-E
Status	Released


## Replacing the display panel

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in **Before working inside your computer**. After working inside your computer, follow the instructions in **After working inside your computer**. For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).


Identifier	GUID-CB954CD8-AAD1-4820-8408-E2EC517EAC7F
Status	Released

### Procedure

- 1 Place the display panel on a flat and clean surface.
- 2 Connect the display cable to the connector at the back of the display panel and close the latch to secure the cable.
- 3 Adhere the tape that secures the display cable to the back of the display panel.

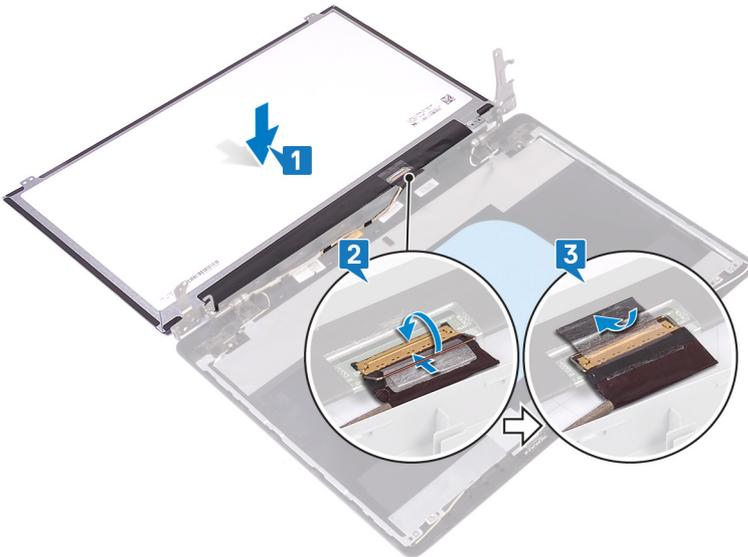

- 4 Place the display panel on the display back-cover and antenna assembly.
- 5 Align the screw holes on the display panel with the screw holes on the display back-cover and antenna assembly.
- 6 Replace the four screws (M2x3) that secure the display panel to the display back-cover and antenna assembly.

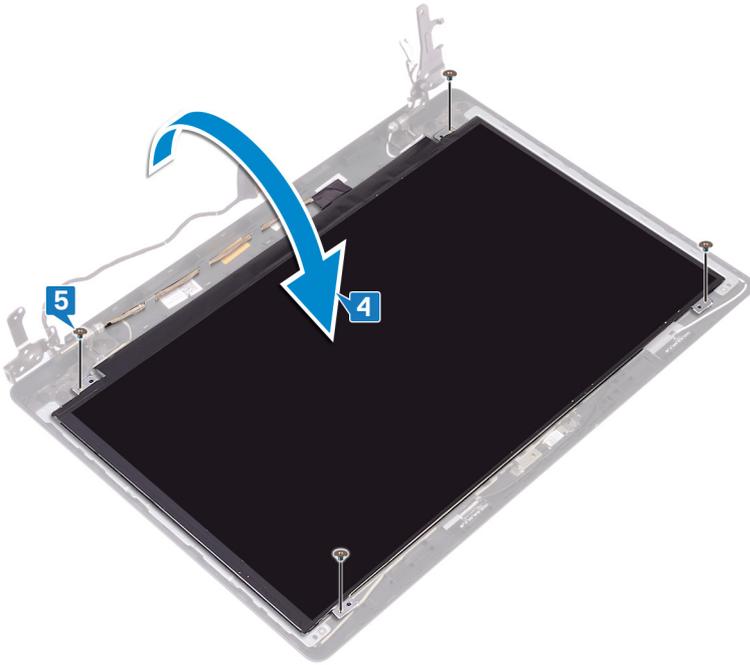

Identifier	GUID-CF2F5E74-3DE6-49C4-83D3-C56C290B5FF8
Status	Released

## Post-requisites

- 1 Replace the [display bezel](#).
- 2 Replace the [display assembly](#).
- 3 Replace the [wireless card](#).
- 4 Replace the [base cover](#).

Identifier	GUID-6C4E9746-B780-409D-B703-4
Status	Released

## Removing the display hinges

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-5F89BAD7-9F49-462B-8CD0-9CD45C3725DA
Status	Released


### Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [wireless card](#).
- 3 Remove the [display assembly](#).
- 4 Remove the [display bezel](#).
- 5 Remove the [display panel](#).

Identifier	GUID-95FC0CF5-6784-46E3-B890-462819018526
Status	Released

### Procedure

- 1 Remove the eight screws (M2.5x2.5) that secure the hinges to the display back-cover and antenna assembly.
- 2 Remove the two screws (M2x2) that secure the hinge brackets to the display back-cover and antenna assembly.
- 3 Lift the hinges and brackets off the display back-cover and antenna assembly.

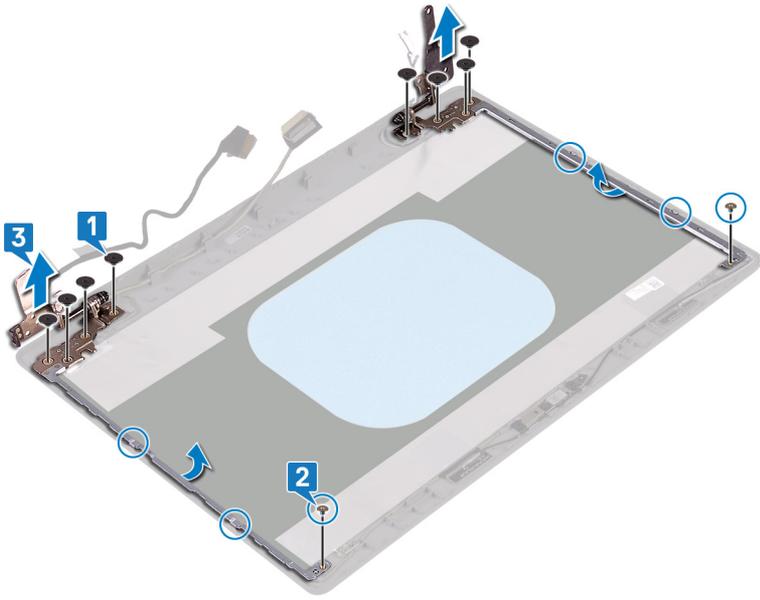

Identifier	GUID-E3D5A4DB-BAB5-4F6F-B7B
Status	Released


## Replacing the display hinges

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-C679EB8D-99A6-467B-B7A5-7E6AB5C19274
Status	Released

### Procedure

- 1 Align the screw holes on the hinges and brackets with the screw holes on the display back-cover and antenna assembly.
- 2 Replace the two screws (M2x2) that secure the hinges to the display back-cover and antenna assembly.
- 3 Replace the eight screws (M2.5x2.5) that secure the hinges to the display back-cover and antenna assembly .

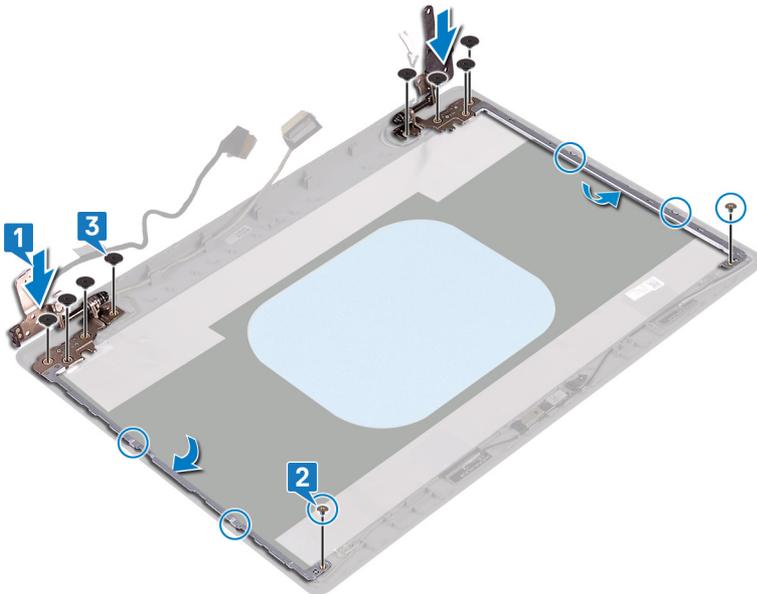

Identifier	GUID-E12C65B4-C57D-4534-B53B-81EAFBA5213E
Status	Released

## Post-requisites

- 1 Replace the [display panel](#).
- 2 Replace the [display bezel](#).
- 3 Replace the [display assembly](#).
- 4 Replace the [wireless card](#).
- 5 Replace the [base cover](#).



Identifier	GUID-166DA787-661F-4E60-8975-5
Status	Released

## Removing the display cable

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-C5882CF8-CD60-4AE0-B416-A26D761E0B1A
Status	Released


### Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [wireless card](#).
- 3 Remove the [display assembly](#).
- 4 Remove the [display bezel](#).
- 5 Remove the [display panel](#).
- 6 Remove the [display hinges](#).

Identifier	GUID-39016EFB-2CF5-44BD-8218-B2B64C01A161
Status	Released

### Procedure

- 1 Disconnect the camera cable from the camera module.
- 2 Note the display cable routing and remove the cable from the routing guides on the display back-cover and antenna assembly.
- 3 Remove the display cable from the display back-cover and antenna assembly.

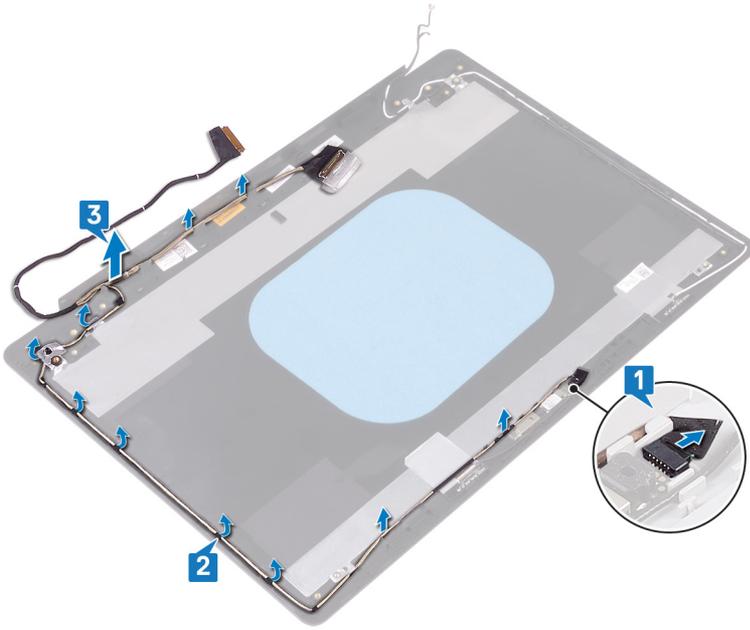

Identifier	GUID-57172914-AB24-4DCE-BD70
Status	Released


## Replacing the display cable

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-D0FEE68C-6D4E-477C-B1F8-00D31B8A3B8D
Status	Released

### Procedure

- 1 Route the display cable on the display back-cover and antenna assembly.
- 2 Route the camera cable through the routing guides on the display back-cover and antenna assembly.
- 3 Slide the camera cable into the connector on the camera module to secure the cable.

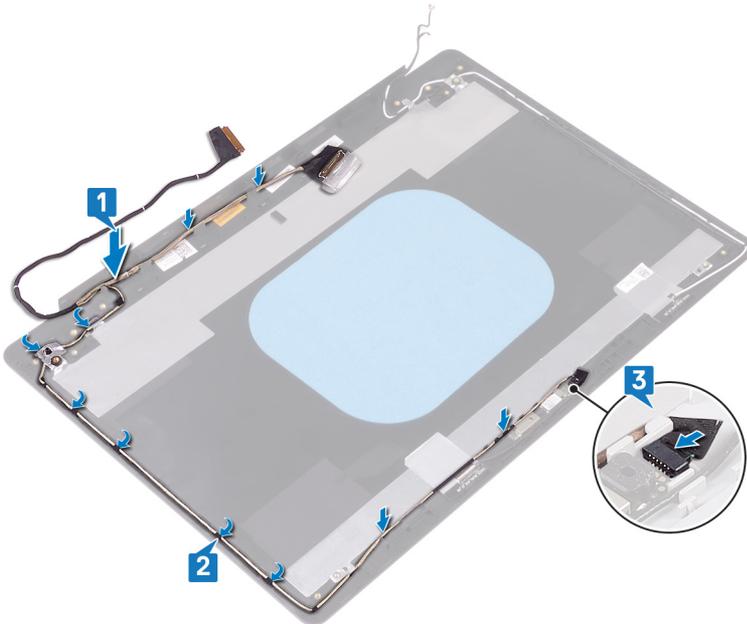

Identifier	GUID-F31279BD-04A7-49B4-8E38-680078DEA57D
Status	Released

## Post-requisites

- 1 Replace the [display hinges](#).
- 2 Replace the [display panel](#).
- 3 Replace the [display bezel](#).
- 4 Replace the [display assembly](#).
- 5 Replace the [wireless card](#).
- 6 Replace the [base cover](#).



Identifier	GUID-2850CA15-9CEF-415A-ADAA
Status	Released

# Removing the display back-cover and antenna assembly

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-195AE64C-4CE2-4C04-A408-7F28D99144DE
Status	Released

## Prerequisites


- 1 Remove the [base cover](#).
- 2 Remove the [wireless card](#).
- 3 Remove the [display assembly](#).
- 4 Remove the [display bezel](#).
- 5 Remove the [camera](#).
- 6 Remove the [display panel](#).
- 7 Remove the [display hinges](#).
- 8 Remove the [display cable](#).

Identifier	GUID-EF391771-6BFB-4435-9ADD-5DAEABDFA0D7
Status	Released

## Procedure

After performing all the above steps, we are left with the display back-cover and antenna assembly.



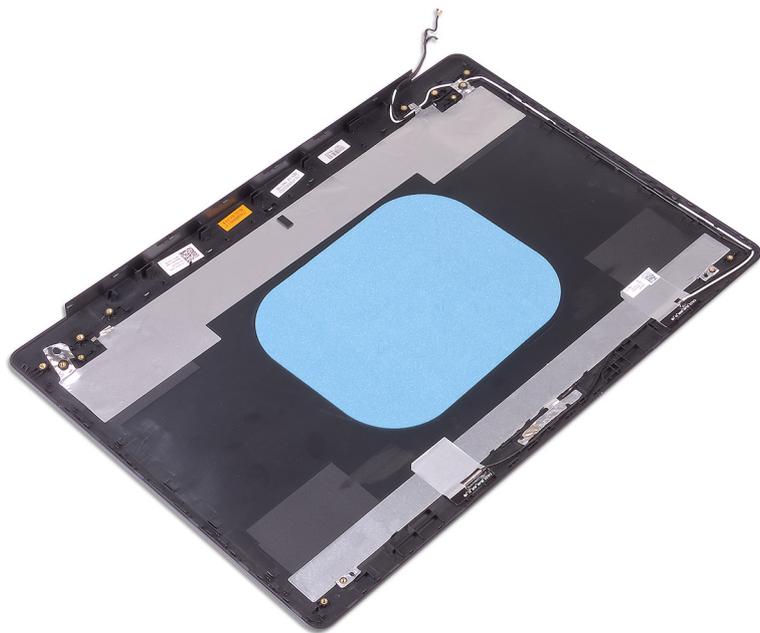

Identifier	GUID-2EF50600-2483-40F4-A773-0
Status	Released

# Replacing the display back-cover and antenna assembly

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-E07A33F5-D1A8-41AF-B807-94A4EAD85400
Status	Released

## Procedure

Place the display back-cover and antenna assembly on a clean and flat surface.

Identifier	GUID-EFACD89C-58B4-4A75-A689-DAF5980F6BF2
Status	Released

## Post-requisites

- 1 Replace the [display cable](#).
- 2 Replace the [display hinges](#).
- 3 Replace the [display panel](#).
- 4 Replace the [camera](#).
- 5 Replace the [display bezel](#).
- 6 Replace the [display assembly](#).
- 7 Replace the [wireless card](#).
- 8 Replace the [base cover](#).



Identifier	GUID-F4DA2E4B-976A-4AE4-A9ED
Status	Released

## Downloading drivers

Identifier	GUID-12B30261-93E4-44D4-A012-67BD153014E4
Status	Released

### Downloading the audio driver

- 1 Turn on your computer.
- 2 Go to [www.dell.com/support](http://www.dell.com/support).
- 3 Click **Product support**, enter the Service Tag of your computer, and then click **Submit**.  
*i* **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click **Drivers & downloads > Find it myself**.
- 5 Scroll down the page, and expand **Audio**.
- 6 Click **Download** to download the audio driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the audio driver file.
- 8 Double-click the audio driver file icon and follow the instructions on the screen to install the driver.


Identifier	GUID-5CF63349-E90E-4B7F-BE2A-4E4733E5F372
Status	Released

### Downloading the graphics driver

- 1 Turn on your computer.
- 2 Go to [www.dell.com/support](http://www.dell.com/support).
- 3 Click **Product support** enter the Service Tag of your computer, and then click **Submit**.  
*i* **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click **Drivers & downloads > Find it myself**.
- 5 Scroll down the page, and expand **Video**.
- 6 Click **Download** to download the graphics driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the graphics driver file.
- 8 Double-click the graphics driver file icon, and follow the instructions on the screen.

**Table 3. Display adapter in device manager**

#### Before driver installation

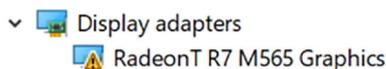

#### After driver installation



Identifier	GUID-E3F7C849-5CFF-4C72-A5D9-8F0D2C5064D6
Status	Released

## Downloading the USB 3.0 driver

- 1 Turn on your computer.
- 2 Go to [www.dell.com/support](http://www.dell.com/support).
- 3 Click **Product support** enter the Service Tag of your computer, and then click **Submit**.  
**NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click **Drivers & downloads > Find it myself**.
- 5 Scroll down the page and expand **Chipset**.
- 6 Click **Download** to download the USB 3.0 driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the USB 3.0 driver file.
- 8 Double-click the driver file icon and follow the instructions on screen.

Identifier	GUID-73835175-61CD-4B0F-B327-4639D18AE75D
Status	Released

## Downloading the Wi-Fi driver

- 1 Turn on your computer.
- 2 Go to [www.dell.com/support](http://www.dell.com/support).
- 3 Click **Product support** enter the Service Tag of your computer, and then click **Submit**.  
**NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click **Drivers & downloads > Find it myself**.
- 5 Scroll down the page, and expand **Network**.
- 6 Click **Download** to download the Wi-Fi driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the Wi-Fi driver file.
- 8 Double-click the driver file icon and follow the on-screen instructions to install the driver.

Identifier	GUID-999EA7AC-0586-412D-A302-553395895AD1
Status	Released

## Downloading the media-card reader driver

- 1 Turn on your computer.
- 2 Go to [www.dell.com/support](http://www.dell.com/support).
- 3 Click **Product support**, enter the Service Tag of your computer, and then click **Submit**.  
**NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click **Drivers & downloads > Find it myself**.
- 5 Scroll down the page, and expand **Chipset**.
- 6 Click **Download** to download the media-card reader driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the card reader driver file.
- 8 Double-click the card reader driver file icon, and follow the instructions on the screen.



Identifier	GUID-B061B81A-A900-4490-A2EE-45DF9621E181
Status	Released

## Downloading the chipset driver

- 1 Turn on your computer.
- 2 Go to [www.dell.com/support](http://www.dell.com/support).
- 3 Click **Product support**, enter the Service Tag of your computer, and then click **Submit**.  
 **NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.**
- 4 Click **Drivers & downloads > Find it myself**.
- 5 Scroll down the page and expand **Chipset**.
- 6 Click **Download** to download the chipset driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the chipset driver file.
- 8 Double-click the chipset driver file icon and follow the instructions on the screen.

Identifier	GUID-3A6AFAD3-EFF5-4A2B-9415-81360EFFF7AB
Status	Released

## Downloading the network driver

- 1 Turn on your computer.
- 2 Go to [www.dell.com/support](http://www.dell.com/support).
- 3 Click **Product support** enter the Service Tag of your computer and click **Submit**.  
 **NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.**
- 4 Click **Drivers & downloads > Find it myself**.
- 5 Scroll down the page and expand **Network**.
- 6 Click **Download** to download the network driver for your computer.
- 7 Save the file, and after the download is complete, navigate to the folder where you saved the network driver file.
- 8 Double-click the network driver file icon and follow the instructions on screen.

Identifier	GUID-4D6759B1-4017-4F54-87E6-9
Status	Released

## System setup

**NOTE:** Depending on the computer and its installed devices, the items listed in this section may or may not be displayed.

Identifier	GUID-39EA0288-9174-49B6-ABA2-37C542A11FC5
Status	Released

## Boot Sequence

Boot Sequence allows you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive

**NOTE:** XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

**NOTE:** Choosing Diagnostics, will display the ePSA diagnostics screen.

The boot sequence screen also displays the option to access the System Setup screen.

Identifier	GUID-7A7EB30A-4A48-422B-AE30-B8DC236A1790
Status	Released

## Navigation keys

**NOTE:** For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.



Keys	Navigation
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
	 <b>NOTE: For the standard graphics browser only.</b>
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

Identifier	GUID-E8E05C46-BC9D-4CF1-AC84-34B87FDCCFB7
Status	Released

## BIOS overview

 **CAUTION:** Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

 **NOTE:** Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

Identifier	GUID-1432A924-49E9-4080-961D-2AFBDAF42039
Status	Released

## Entering BIOS setup program

- 1 Turn on (or restart) your computer.
- 2 During POST, when the DELL logo is displayed, watch for the F2 prompt to appear, and then press F2 immediately.

 **NOTE:** The F2 prompt indicates that the keyboard is initialized. This prompt can appear very quickly, so you must watch for it, and then press F2. If you press F2 before the F2 prompt, this keystroke is lost. If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

Identifier	GUID-993C6943-13A1-4FE1-99C4-80A9AD86FF46
Status	Released

## Enabling or disabling the USB in BIOS setup program

- 1 Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed on the screen to enter the BIOS setup program.  
The BIOS setup program is displayed.
- 3 On the left pane, select **Settings > System Configuration > USB Configuration**.  
The USB configuration is displayed on the right pane.
- 4 Select or clear the **Enable External USB Port** check box to enable or disable it respectively.
- 5 Save the BIOS setup program settings and exit.

Identifier	GUID-597AD25C-F728-4254-8597-E23761743996
Status	Released

## Identifying the hard drive in BIOS setup program

- 1 Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed on the screen to enter the BIOS setup program.  
A list of hard drives is displayed under the **System Information** in the **General** group.

Identifier	GUID-62B237DD-0D71-4196-837A-5835AB695413
Status	Released

## Checking the system memory in BIOS setup program

- 1 Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed on the screen to enter the BIOS setup program.
- 3 On the left pane, select **Settings > General > System Information**.  
The memory information is displayed on the right pane.

Identifier	GUID-7D1BADE6-6E0B-4EA8-BADE-71592F9FA8CD
Status	Released

## System setup options

**NOTE:** Depending on this computer and its installed devices, the items listed in this section may or may not appear.

**Table 4. System setup options—System information menu**

### General-System Information

#### System Information

BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.
Ownership Tag	Displays the ownership tag of the computer.
Manufacture Date	Displays the manufacture date of the computer.
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the express service code of the computer.

#### Memory Information

Memory Installed	Displays the total computer memory installed.
Memory Available	Displays the total computer memory available.
Memory Speed	Displays the memory speed.
Memory Channel Mode	Displays single or dual channel mode.
Memory Technology	Displays the technology used for the memory.



## General-System Information

---

DIMM A Size Displays the DIMM A memory size.

DIMM B Size Displays the DIMM B memory size.

### Processor Information

Processor Type Displays the processor type.

Core Count Displays the number of cores on the processor.

Processor ID Displays the processor identification code.

Current Clock Speed Displays the current processor clock speed.

Minimum Clock Speed Displays the minimum processor clock speed.

Maximum Clock Speed Displays the maximum processor clock speed.

Processor L2 Cache Displays the processor L2 Cache size.

Processor L3 Cache Displays the processor L3 Cache size.

HT Capable Displays whether the processor is HyperThreading (HT) capable.

64-Bit Technology Displays whether 64-bit technology is used.

### Device Information

Primary HDD Displays the primary hard drive information of the computer.

M.2 SATA SSD Displays the M.2 SATA SSD device information of the computer.

M.2 PCIe SSD-0 Displays the M.2 PCIe SSD information of the computer.

LOM MAC Address Displays the LOM MAC address of the computer.

Video Controller Displays the video controller type of the computer.

dGPU Video Controller Displays the discrete graphics information of the computer.

Video BIOS Version Displays the video BIOS version of the computer.

Video Memory Displays the video memory information of the computer.

Panel Type Displays the Panel Type of the computer.

Native Resolution Displays the native resolution of the computer.

Audio Controller Displays the audio controller information of the computer.

Wi-Fi Device Displays the wireless device information of the computer.

Bluetooth Device Displays the bluetooth device information of the computer.

Battery Information Displays the battery health information.

### Boot Sequence

Boot Sequence Displays the boot sequence.

Boot List Option Displays the available boot options.

### Advanced Boot Options

Enable Legacy Option ROMs Enable or disable the Legacy Option ROMs.

Enable Attempt Legacy Boot Enable or disable Legacy Boot.

### UEFI Boot Path Security

Enable or disable the system to prompt the user to enter the Admin password when booting a UEFI boot path from the F12 boot menu.

### Date/Time

Displays the current date in MM/DD/YY format and current time in HH:MM:SS AM/PM format.

**Table 5. System setup options—System Configuration menu**

<b>System Configuration</b>	
<b>Integrated NIC</b>	Controls the on-board LAN controller.
Enable UEFI Network Stack	Enable or disable UEFI Network Stack.
<b>SATA Operation</b>	Configure operating mode of the integrated SATA hard drive controller.
<b>Drives</b>	Enable or disable various drives on board.
<b>SMART Reporting</b>	Enable or disable SMART Reporting during system startup.
<b>USB Configuration</b>	
Enable Boot Support	Enable or disable booting from USB mass storage devices such as external hard drive, optical drive, and USB drive.
Enable External USB Port	Enable or disable booting from USB mass storage devices connected to external USB port.
<b>Thunderbolt Adapter Configuration</b>	Enable or disable Thunderbolt technology support.
<b>Audio</b>	Enable or disable the integrated audio controller.
<b>Keyboard Illumination</b>	Enables you to choose the operating mode of the keyboard illumination feature.
<b>Keyboard Backlight Timeout on AC</b>	When the backlight is enabled, this feature defines the timeout value for the keyboard backlight when an AC adapter is plugged into the computer.
<b>Keyboard Backlight Timeout on Battery</b>	When the backlight is enabled, this feature defines the timeout value for the keyboard backlight when the computer is running only on battery power.
<b>Miscellaneous Devices</b>	Enable or disable various onboard devices.

**Table 6. System setup options—Video menu**

<b>Video</b>	
LCD Brightness	Set the panel brightness independently for Battery and AC power.

**Table 7. System setup options—Security menu**

<b>Security</b>	
Admin Password	Set, change, or delete the administrator password.
System Password	Set, change, or delete the system password.
Internal HDD-0 Password	Set, change, or delete the internal hard-disk drive password.
Strong Password	Enable or disable strong passwords.
Password Configuration	Control the minimum and maximum number of characters allowed for Admin and System passwords.
Password Bypass	Bypass the System (Boot) Password and the internal HDD password prompts during a system restart.
Password Change	Enable or disable changes to the System and Hard Disk passwords when an administrator password is set.
Non-Admin Setup Changes	Determines whether changes to the setup option are permitted when an administrator password is set.
UEFI Capsule Firmware Updates	Enable or disable BIOS updates through UEFI capsule update packages.
PTT Security	Enable or disable Platform Trust Technology (PTT) visibility to the operating system.



## Security

Computrace(R)	Enable or disable the BIOS module interface of the optional Computrace(R) Service from Absolute Software.
Admin Setup Lockout	Enable to prevent users from entering Setup when an Admin Password is set.
Master Password Lockout	Disables the master password support. Hard Disk passwords need to be cleared before changing the setting.

**Table 8. System setup options—Secure Boot menu**

### Secure Boot

Secure Boot Enable	Enable or disable the secure boot feature.
Secure Boot Mode	Modifies the behavior of Secure Boot to allow evaluation or enforcement of UEFI driver signatures.

### Expert Key Management

Expert Key Management	Enable or disable Expert Key Management.
Custom Mode Key Management	Select the custom values for expert key management.

**Table 9. System setup options—Intel Software Guard Extensions menu**

### Intel Software Guard Extensions

Intel SGX Enable	Enable or disable Intel Software Guard Extensions.
Enclave Memory Size	Set the Intel Software Guard Extensions Enclave Reserve Memory Size.

### Performance

Multi Core Support	Enable multiple cores. Default: Enabled.
Intel SpeedStep	Enable or disable Intel Speedstep Technology. Default: Enabled.

**NOTE:** If enabled, the processor clock speed and core voltage are adjusted dynamically based on the processor load.

C-States Control	Enable or disable additional processor sleep states. Default: Enabled.
Intel TurboBoost	Enable or disable Intel TurboBoost mode of the processor. Default: Enabled.
HyperThread control	Enable or disable HyperThreading in the processor. Default: Enabled.

### Power Management

AC Behavior	Enables the system to turn on automatically, when AC power is supplied.
Enable Intel Speed Shift Technology	Enable or disable Intel Speed Shift Technology.
Auto On Time	Enable to set the computer to turn on automatically every day or on a preselected date and time. This option can be configured only if the Auto On Time is set to Everyday, Weekdays or Selected Days. Default: Disabled.
USB Wake Support	Enable the USB devices to wake the computer from Standby.

## Intel Software Guard Extensions

Advanced Battery Charge Configuration	Enable Advanced Battery Charge Configuration from the beginning of the day to a specified work period.
Primary Battery Charge Configuration	Set the primary battery charge settings with a preselected custom charge start and stop. Default: Adaptive.

## POST Behavior

Adapter Warnings	Enable adapter warnings. Default: Enabled.
Numlock Enable	Enables the NumLock function when computer boots.
Fn Lock Options	Enable or disable the Fn lock mode.
Fastboot	Enable to set the speed of the boot process. Default: Thorough.
Extend BIOS POST Time	Configure additional pre-boot delay.
Full Screen Logo	Enable or disable to display full screen logo.
Warnings and Errors	Sets the boot process to pause when Warnings or Errors are detected.
Sign of Life Indication	Enable or disable to indicate during POST time that the power button press is acknowledged in a manner the user can either hear or feel.

**Table 10. System setup options—Virtualization Support menu**

## Virtualization Support

Virtualization	Specify whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel Virtualization Technology.
VT for Direct I/O	Specify whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel Virtualization Technology for Direct I/O.

**Table 11. System setup options—Wireless menu**

## Wireless

Wireless Switch	Determine which wireless devices can be controlled by the Wireless Switch.
Wireless Device Enable	Enable or disable internal wireless devices.

**Table 12. System setup options—Maintenance menu**

## Maintenance

Service Tag	Display the system's Service Tag.
Asset Tag	Create a system Asset Tag.
BIOS Downgrade	Control flashing of the system firmware to previous revisions.
Data Wipe	Enable to securely erase data from all internal storage devices.
BIOS Recovery	Enable the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB key.



**Table 13. System setup options—System Logs menu**

**System Logs**

---

BIOS Events	Display BIOS events.
Thermal Events	Display Thermal events.
Power Events	Display Power events.

**Table 14. System setup options—SupportAssist System Resolution menu**

**SupportAssist System Resolution**

---

Auto OS Recovery Threshold	Control the automatic boot flow for SupportAssist System Resolution Console and for Dell OS Recovery tool.
SupportAssist OS Recovery	Enable or disable the boot flow for SupportAssist OS Recovery tool in the even of certain system errors.



Identifier	GUID-859887F0-B1B4-4530-855E-1
Status	Released

## System and setup password

**Table 15. System and setup password**

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

**⚠ CAUTION:** The password features provide a basic level of security for the data on your computer.

**⚠ CAUTION:** Anyone can access the data stored on your computer if it is not locked and left unattended.

**📌 NOTE:** System and setup password feature is disabled.

Identifier	GUID-D91DBF33-F0AB-477E-A22D-D6CD2D066BBE
Status	Released

## Assigning a system password and setup password

You can assign a new **System Password** only when the status is in **Not Set**.

To enter the system setup, press F2 immediately after a power-on or re-boot.

- In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.  
The **Security** screen is displayed.
- Select **System Password** and create a password in the **Enter the new password** field.  
Use the following guidelines to assign the system password:
  - A password can have up to 32 characters.
  - The password can contain the numbers 0 through 9.
  - Only lower case letters are valid, upper case letters are not allowed.
  - Only the following special characters are allowed: space, ("), (+), (.), (-), (.), (/), (:), ([), (\), (]), (`).
- Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
- Press Esc and a message prompts you to save the changes.
- Press Y to save the changes.  
The computer reboots.



Identifier	GUID-3D32F643-EE78-4538-9D89-34BDFB68E9F1
------------	-------------------------------------------

Status	Released
--------	----------

## Deleting or changing an existing system setup password

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked. To enter the System Setup, press F2 immediately after a power-on or reboot.

- 1 In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.  
The **System Security** screen is displayed.
- 2 In the **System Security** screen, verify that **Password Status** is **Unlocked**.
- 3 Select **System Password**, alter or delete the existing system password and press Enter or Tab.
- 4 Select **Setup Password**, alter or delete the existing setup password and press Enter or Tab.

**NOTE:** If you change the System and/or Setup password, re-enter the new password when promoted. If you delete the System and/or Setup password, confirm the deletion when promoted.

- 5 Press Esc and a message prompts you to save the changes.
- 6 Press Y to save the changes and exit from System Setup.  
The computer reboot.

Identifier	GUID-7188A6F4-7718-4C97-AC95-579507EE6C8D
------------	-------------------------------------------

Status	Released
--------	----------

## Clearing CMOS settings

**CAUTION:** Clearing CMOS settings will reset the BIOS settings on your computer.

- 1 Remove the [base cover](#).
- 2 Disconnect the battery cable from the system board.
- 3 Remove the [coin-cell battery](#).
- 4 Wait for one minute.
- 5 Replace the [coin-cell battery](#).
- 6 Connect the battery cable to the system board.
- 7 Replace the [base cover](#).

Identifier	GUID-98AF1E97-58A2-476B-8969-E9659328AED7
------------	-------------------------------------------

Status	Released
--------	----------

## Clearing forgotten passwords

Contact Dell technical support to clear the forgotten passwords, see [www.dell.com/contactdell](http://www.dell.com/contactdell).

Identifier	GUID-F93F7E34-BE30-464B-886E-
Status	Released

## Troubleshooting

Identifier	GUID-F5899359-C2E1-41C0-9663-4C79969506EB
Status	Released

### Flashing the BIOS

You may need to flash (update) the BIOS when an update is available or when you replace the system board. Follow these steps to flash the BIOS:

- 1 Turn on your computer.
- 2 Go to [www.dell.com/support](http://www.dell.com/support).
- 3 Click **Product support**, enter the Service Tag of your computer, and then click **Submit**.

**NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- 4 Click **Drivers & downloads > Find it myself**.
- 5 Select the operating system installed on your computer.
- 6 Scroll down the page and expand **BIOS**.
- 7 Click **Download** to download the latest version of the BIOS for your computer.
- 8 After the download is complete, navigate to the folder where you saved the BIOS update file.
- 9 Double-click the BIOS update file icon and follow the instructions on the screen.

Identifier	GUID-060D210F-C287-462B-AC38-81183D440A9D
Status	Released

### Flashing BIOS (USB key)

- 1 Follow the procedure from step 1 to step 7 in "[Flashing the BIOS](#)" to download the latest BIOS setup program file.
- 2 Create a bootable USB drive. For more information see the knowledge base article [SLN143196](#) at [www.dell.com/support](http://www.dell.com/support).
- 3 Copy the BIOS setup program file to the bootable USB drive.
- 4 Connect the bootable USB drive to the computer that needs the BIOS update.
- 5 Restart the computer and press **F12** when the Dell logo is displayed on the screen.
- 6 Boot to the USB drive from the **One Time Boot Menu**.
- 7 Type the BIOS setup program filename and press **Enter**.
- 8 The **BIOS Update Utility** appears. Follow the instructions on the screen to complete the BIOS update.



Identifier	GUID-3E5E47A3-671E-4E01-8949-53F6F26DA1D2
------------	-------------------------------------------

Status	Released
--------	----------

## Reinstall Windows using a USB recovery drive

**CAUTION:** This process formats the hard drive and removes all data on your computer. Ensure that you back up data on your computer before beginning this task.

**NOTE:** Before reinstalling Windows, ensure your computer has more than 2 GB of memory and more than 32 GB of storage space.

**NOTE:** This process may take up to an hour to complete and your computer will restart during the recovery process.

- 1 Connect the USB recovery drive to your computer.
- 2 Restart your computer.
- 3 Press F12 after the Dell logo is displayed on the screen to access the boot menu.  
A **Preparing one-time boot menu** message appears.
- 4 After the boot menu loads, select the USB recovery device under **UEFI BOOT**.  
The system reboots and a screen to **Choose the keyboard layout** is displayed.
- 5 Choose your keyboard layout.
- 6 In the **Choose an option** screen, click **Troubleshoot**.
- 7 Click **Recover from a drive**.
- 8 Choose one of the following options:
  - **Just remove my files** to do a quick format.
  - **Fully clean the drive** to do a complete format.
- 9 Click **Recover** to start the recovery process.

Identifier	GUID-EE9A5D95-88BE-4EE7-983E-D97C680BDECD
------------	-------------------------------------------

Status	Released
--------	----------

## Enhanced Pre-Boot System Assessment (ePSA) diagnostics

**CAUTION:** Use the ePSA diagnostics to test only your computer. Using this program with other computers may cause invalid results or error messages.

The ePSA diagnostics (also known as system diagnostics) performs a complete check of your hardware. The ePSA is embedded with the BIOS and is launched by the BIOS internally. The embedded system diagnostics provides a set of options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode
- Repeat tests
- Display or save test results
- Run thorough tests to introduce additional test options to provide extra information about the failed device(s)
- View status messages that inform you if tests are completed successfully
- View error messages that inform you of problems encountered during testing

**NOTE:** Some tests for specific devices require user interaction. Always ensure that you are present at the computer terminal when the diagnostic tests are performed.

For more information, see [Dell ePSA Diagnostic 3.0](#).

Identifier	GUID-0B893EED-EFBC-4831-A9C4-7298A7A9F619
Status	Released

## Running the ePSA diagnostics

- 1 Turn on your computer.
- 2 As the computer boots, press the F12 key as the Dell logo appears.
- 3 On the boot menu screen, select the **Diagnostics** option.
- 4 Click the arrow at the bottom left corner.  
Diagnostics front page is displayed.
- 5 Click the arrow in the lower-right corner to go to the page listing.  
The items detected are listed.
- 6 To run a diagnostic test on a specific device, press Esc and click **Yes** to stop the diagnostic test.
- 7 Select the device from the left pane and click **Run Tests**.
- 8 If there are any issues, error codes are displayed.  
Note the error code and validation number and contact Dell.

Identifier	GUID-49261555-0DC7-4909-8B7B-4F03F2141B04
Status	Released

## System diagnostic lights

### Power and battery-status light/hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.

**NOTE:** Press Fn+H to toggle this light between power and battery-status light and hard-drive activity light.

#### Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.

**NOTE:** Hard-drive activity light is supported only on computers shipped with hard drive.

#### Power and battery-status light

Indicates the power and battery-charge status

**Solid white** — Power adapter is connected and the battery has more than 5 percent charge.

**Amber** — Computer is running on battery and the battery has less than 5 percent charge.

#### Off

- Power adapter is connected and the battery is fully charged.
- Computer is running on battery and the battery has more than 5 percent charge.
- Computer is in sleep state, hibernation, or turned off

**NOTE:** Hard-drive activity light is supported only on computers shipped with hard drive.

The power and battery-status light blinks amber along with beep codes indicating failures.



For example, the power and battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off indicating no memory or RAM is detected.

The following table shows different light patterns and describes what they indicate.

**Table 16. Diagnostics**

Light pattern	Problem description
2,1	CPU failure
2,2	System board: BIOS and ROM failure
2,3	No memory or RAM detected
2,4	Memory or RAM failure
2,5	Invalid memory installed
2,6	System board or chipset error
2,7	LCD failure
3,1	CMOS battery failure
3,2	PCI or video card or chip failure
3,3	Recovery image not found
3,4	Recovery image found but invalid

**Camera status light:** Indicates whether the camera is in use.

- Solid white — Camera is in use.
- Off — Camera is not in use.

**Caps Lock status light:** Indicates whether Caps Lock is enabled or disabled.

- Solid white — Caps Lock enabled.
- Off — Caps Lock disabled.

Identifier	GUID-7D2143EA-2C62-498E-97AF-DCEF3DA56624
Status	Released

## Wi-Fi power cycle

If your computer is unable to access the internet due to Wi-Fi connectivity issues a Wi-Fi power cycle procedure may be performed. The following procedure provides the instructions on how to conduct a Wi-Fi power cycle:

**NOTE:** Some ISPs (Internet Service Providers) provide a modem/router combo device.

- 1 Turn off your computer.
- 2 Turn off the modem.
- 3 Turn off the wireless router.
- 4 Wait for 30 seconds.
- 5 Turn on the wireless router.
- 6 Turn on the modem.
- 7 Turn on your computer.

Identifier	GUID-8CEF1F7A-1327-43EB-9E2E-8EC169AEFE4A
Status	Released

## Flea power release

Flea power is the residual static electricity that remains on the computer even after it has been powered off and the battery has been removed. The following procedure provides the instructions on how to conduct flea power release:

- 1 Turn off your computer.
- 2 Disconnect the power adapter from your computer.
- 3 Press and hold the power button for 15 seconds to drain the flea power.
- 4 Connect the power adapter to your computer.
- 5 Turn on your computer.



Identifier	GUID-AF18382F-D265-43C2-85DA-
Status	Released

# Getting help and contacting Dell

## Self-help resources

You can get information and help on Dell products and services using these self-help resources:

**Table 17. Self-help resources**

Information about Dell products and services	<a href="http://www.dell.com">www.dell.com</a>
Dell Help & Support app	
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	<a href="http://www.dell.com/support/windows">www.dell.com/support/windows</a> <a href="http://www.dell.com/support/linux">www.dell.com/support/linux</a>
Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.	<a href="http://www.dell.com/support">www.dell.com/support</a>
Dell knowledge base articles for a variety of computer concerns.	<ol style="list-style-type: none"> <li>1 Go to <a href="http://www.dell.com/support">www.dell.com/support</a>.</li> <li>2 Type the subject or keyword in the <b>Search</b> box.</li> <li>3 Click <b>Search</b> to retrieve the related articles.</li> </ol>
Learn and know the following information about your product:	See <i>Me and My Dell</i> at <a href="http://www.dell.com/support/manuals">www.dell.com/support/manuals</a> .
<ul style="list-style-type: none"> <li>• Product specifications</li> <li>• Operating system</li> <li>• Setting up and using your product</li> <li>• Data backup</li> <li>• Troubleshooting and diagnostics</li> <li>• Factory and system restore</li> <li>• BIOS information</li> </ul>	<p>To locate the <i>Me and My Dell</i> relevant to your product, identify your product through one of the following:</p> <ul style="list-style-type: none"> <li>• Select <b>Detect Product</b>.</li> <li>• Locate your product through the drop-down menu under <b>View Products</b>.</li> <li>• Enter the <b>Service Tag number</b> or <b>Product ID</b> in the search bar.</li> </ul>

## Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [www.dell.com/contactdell](http://www.dell.com/contactdell).

 **NOTE:** Availability varies by country and product, and some services may not be available in your country.

 **NOTE:** If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

