

Galaxy VS

Maintenance Bypass Cabinet Installation

07/2018



Legal Information

The Schneider Electric brand and any registered trademarks of Schneider Electric Industries SAS referred to in this guide are the sole property of Schneider Electric SA and its subsidiaries. They may not be used for any purpose without the owner's permission, given in writing. This guide and its content are protected, within the meaning of the French intellectual property code (Code de la propriété intellectuelle français, referred to hereafter as "the Code"), under the laws of copyright covering texts, drawings and models, as well as by trademark law. You agree not to reproduce, other than for your own personal, noncommercial use as defined in the Code, all or part of this guide on any medium whatsoever without Schneider Electric's permission, given in writing. You also agree not to establish any hypertext links to this guide or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the guide or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

As standards, specifications, and designs change from time to time, please ask for confirmation of the information given in this publication.

Table of Contents

Important Safety Instructions — SAVE THESE	
INSTRUCTIONS	5
FCC Statement	6
Safety Precautions	6
Additional Safety Precautions After Installation.....	8
Electrical Safety	8
Battery Safety	9
Specifications	10
Maximum Input Short-Circuit Withstand.....	10
Specifications for 480 V Systems	10
Trip Settings for 480 V	10
Recommended Upstream Protection 480 V	10
Recommended Cable Sizes 480 V	11
Specifications for 208 V Systems	12
Trip Settings for 200/208/220 V	12
Recommended Upstream Protection 200/208/220 V	12
Recommended Cable Sizes 200/208/220 V	13
Specifications for 400 V Systems	14
Trip Settings for 400/415 V	14
Recommended Upstream Protection 400/415 V	14
Recommended Cable Sizes 400/415 V.....	15
Recommended Bolt and Lug Sizes	16
Torque Specifications.....	16
Maintenance Bypass Cabinet Weights and Dimensions.....	17
Clearance	17
Environment.....	17
System Overview	18
Overview of Installation Kits	19
Optional Seismic Kit GVSOPT003	21
Optional Kirk Key Kit GVSOPT004.....	22
Installation Procedure for Top Cable Entry	23
Installation Procedure for Bottom Cable Entry	24
Prepare the Maintenance Bypass Cabinet and the UPS for	
Cables.....	25
Install the Seismic Anchoring (Option)	30
Connect the Power Cables in a 10–80 kW Top Cable Entry	
System.....	32
Connect the Power Cables in a 100–150 kW Top Cable Entry	
System.....	34
Restrain the Cables	36
Connect the Power Cables in a Bottom Cable Entry System.....	38
Connect the Internal Power Cables	39
Interconnect the UPS and the Maintenance Bypass Cabinet	42
Connect the Signal Cables	46
Final Installation	50

Important Safety Instructions — SAVE THESE INSTRUCTIONS

Read these instructions carefully and look at the equipment to become familiar with it before trying to install, operate, service or maintain it. The following safety messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety message indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages with this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in death or serious injury**.

Failure to follow these instructions will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in death or serious injury**.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in minor or moderate injury**.

Failure to follow these instructions can result in injury or equipment damage.

NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol shall not be used with this type of safety message.

Failure to follow these instructions can result in equipment damage.

Please Note

Electrical equipment should only be installed, operated, serviced, and maintained by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Safety Precautions

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Read all instructions in the installation manual before installing or working on this product.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not install the product until all construction work has been completed and the installation room has been cleaned.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The product must be installed according to the specifications and requirements as defined by Schneider Electric. It concerns in particular the external and internal protections (upstream breakers, battery breakers, cabling, etc.) and environmental requirements. No responsibility is assumed by Schneider Electric if these requirements are not respected.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The UPS system must be installed according to local and national regulations. Install the UPS according to:

- IEC 60364 (including 60364-4-41 - protection against electric shock, 60364-4-42 - protection against thermal effect, and 60364-4-43 - protection against overcurrent), **or**
- NEC NFPA 70, **or**
- Canadian Electrical Code (C22.1, Part 1)

depending on which one of the standards apply in your local area.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Install the product in a temperature controlled indoor environment free of conductive contaminants and humidity.
- Install the product on a non-flammable, level and solid surface (e.g. concrete) that can support the weight of the system.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The product is not designed for and must therefore not be installed in the following unusual operating environments:

- Damaging fumes
- Explosive mixtures of dust or gases, corrosive gases, or conductive or radiant heat from other sources
- Moisture, abrasive dust, steam or in an excessively damp environment
- Fungus, insects, vermin
- Salt-laden air or contaminated cooling refrigerant
- Pollution degree higher than 2 according to IEC 60664-1
- Exposure to abnormal vibrations, shocks, and tilting
- Exposure to direct sunlight, heat sources, or strong electromagnetic fields

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not drill or cut holes for cables or conduits with the gland plates installed and do not drill or cut holes in close proximity to the UPS.

Failure to follow these instructions will result in death or serious injury.

WARNING

HAZARD OF ARC FLASH

Do not make mechanical changes to the product (including removal of cabinet parts or drilling/cutting of holes) that are not described in the installation manual.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTICE

RISK OF OVERHEATING

Respect the space requirements around the product and do not cover the ventilation openings when the product is in operation.

Failure to follow these instructions can result in equipment damage.

Additional Safety Precautions After Installation

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not install the UPS system until all construction work has been completed and the installation room has been cleaned. If additional construction work is needed in the installation room after this product has been installed, turn off the product and cover the product with the protective packaging bag the product was delivered in.

Failure to follow these instructions will result in death or serious injury.

Electrical Safety

This manual contains important safety instructions that should be followed during the installation and maintenance of the UPS system.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Electrical equipment must be installed, operated, serviced, and maintained only by qualified personnel.
- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- Disconnection devices for AC and DC must be provided by others, be readily accessible, and the function of the disconnect device marked for its function.
- Turn off all power supplying the UPS system before working on or inside the equipment.
- Before working on the UPS system, check for hazardous voltage between all terminals including the protective earth.
- The UPS contains an internal energy source. Hazardous voltage can be present even when disconnected from the mains supply. Before installing or servicing the UPS system, ensure that the units are OFF and that mains and batteries are disconnected. Wait five minutes before opening the UPS to allow the capacitors to discharge.
- The UPS must be properly earthed/grounded and due to a high leakage current, the earthing/grounding conductor must be connected first.

Failure to follow these instructions will result in death or serious injury.

When the UPS input is connected through external isolators that, when opened, isolate the neutral or when the automatic backfeed isolation is provided external to the equipment or is connected to an IT power distribution system, a label must be fitted at the UPS input terminals, and on all primary power isolators installed remotely from the UPS area and on external access points between such isolators and the UPS, by the user, displaying the following text (or equivalent in a language which is acceptable in the country in which the UPS system is installed):

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Risk of voltage backfeed. Before working on this circuit: Isolate the UPS and check for hazardous voltage between all terminals including the protective earth.

Failure to follow these instructions will result in death or serious injury.

Battery Safety

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery circuit breakers must be installed according to the specifications and requirements as defined by Schneider Electric.
- Servicing of batteries must only be performed or supervised by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect charging source prior to connecting or disconnecting battery terminals.
- Do not dispose of batteries in a fire as they can explode.
- Do not open, alter, or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Batteries can present a risk of electric shock and high short-circuit current. The following precautions must be observed when working on batteries

- Remove watches, rings, or other metal objects.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or metal parts on top of batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.
- Determine if the battery is inadvertently grounded. If inadvertently grounded, remove source from ground. Contact with any part of a grounded battery can result in electric shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

When replacing batteries, always replace with the same type and number of batteries or battery packs.

Failure to follow these instructions will result in death or serious injury.

NOTICE

RISK OF EQUIPMENT DAMAGE

- Wait until the system is ready to be powered up before installing batteries in the system. The time duration from battery installation until the UPS system is powered up must not exceed 72 hours or 3 days.
- Batteries must not be stored more than six months due to the requirement of recharging. If the UPS system remains de-energized for a long period, Schneider Electric recommends that you energize the UPS system for a period of 24 hours at least once every month. This charges the batteries, thus avoiding irreversible damage.

Failure to follow these instructions can result in equipment damage.

Specifications

Maximum Input Short-Circuit Withstand

The maximum input short-circuit withstand for the maintenance bypass cabinet is I_{cu} 65 kA RMS symmetrical.

Specifications for 480 V Systems

Trip Settings for 480 V

Rating (kW)	Breaker		I _r	tr at 6 I _r ¹	I _i (x I _n) ¹
	Unit input breaker UIB / Static switch input breaker SSIB	Maintenance bypass breaker MBB / Unit output breaker UOB			
20	HJF36150CU31X	HJF36150CU31X	50	0.5	1.5
30	HJF36150CU31X	HJF36150CU31X	50	0.5	1.5
40	HJF36150CU31X	HJF36150CU31X	70	0.5	1.5
50	HJF36150CU31X	HJF36150CU31X	80	0.5	1.5
60	HJF36150CU31X	HJF36150CU31X	100	0.5	1.5
80	HJF36150CU31X	HJF36150CU31X	125	0.5	1.5
100	LJF36400CU31X	JJF36250CU31X	175	0.5	1.5
120	LJF36400CU31X	JJF36250CU31X	200	0.5	1.5
150	LJF36400CU31X	JJF36250CU31X	250	0.5	1.5

Recommended Upstream Protection 480 V

Rating	20 kW		30 kW		40 kW		50 kW	
	Input	Bypass	Input	Bypass	Input	Bypass	Input	Bypass
Breaker	HJF36100CU31X							
I _r (A)	40	35	60	50	80	70	100	80
Tr at 6 I _r (A)	0.5							
I _i (x I _n) (A)	1.5							

Rating	60 kW		80 kW		100 kW		120 kW		150 kW	
	Input	Bypass	Input	Bypass	Input	Bypass	Input	Bypass	Input	Bypass
Breaker	HJ-F36150-CU31X	HJ-F36100-CU31X	JJ-F36250-CU31X	HJ-F36150-CU31X	JJF36250CU31X				LJ-F36400-CU31X	JJ-F36250-CU31X
I _r (A)	125	100	175	125	200	175	250	200	300	250
Tr at 6 I _r (A)	0.5									
I _i (x I _n) (A)	1.5									

1. tr and I_i must be set during installation. The default setting is marked on the breaker.

Recommended Cable Sizes 480 V

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

All wiring must comply with all applicable national and/or electrical codes. The maximum allowable cable size is 4/0 AWG.

Failure to follow these instructions will result in death or serious injury.

NOTE: Overcurrent protection is to be provided by others.

Cable sizes in this manual are based on Table 310.15 (B)(16) of the National Electrical Code (NEC) with the following assertions:

- 90 °C (194 °F) conductors (75 °C (167 °F) termination)
- An ambient temperature of 30 °C (86 °F)
- Use of copper conductors

If the ambient temperature is greater than 30 °C (86 °F), larger conductors are to be selected in accordance with the correction factors of the NEC.

Equipment grounding conductors (PE in this manual) are sized in accordance with NEC Article 250.122 and Table 250.122.


Copper		20 kW	30 kW	40 kW	50 kW	60 kW	80 kW	100 kW	120 kW	150 kW
Input	Input phases (AWG/kcmil)	8	6	4	3	1	2/0	2 x 1/0	2 x 1/0	2 x 1/0
	Input PE (AWG/kcmil)	10	8	8	6	6	6	4	2 x 4	2 x 3
Bypass/ Output	Bypass/output phases (AWG/kcmil)	10	8	6	4	3	1	2/0	2 x 1/0	2 x 1/0
	Bypass PE/output PE (AWG/kcmil)	10	10	8	8	8	6	6	2 x 6	2 x 4
Neutral (AWG/kcmil) ²		6	4	2	1/0	2/0	2 x 1/0	2 x 1/0	4 x 1/0	4 x 1/0
DC	DC +/- (AWG/kcmil)	4 ³	2 ³	1/0 ³	1/0 ⁴	2/0 ⁴	4/0 ⁴	2 x 1/0 ⁴	2 x 3/0	2 x 4/0
	DC PE (AWG/kcmil)	8	6	6	6	6	4	4	3	2 x 2

NOTE: The DC cable sizes given here are recommendations — Always follow the specific instructions in the battery solution documentation for DC +/- and DC PE cable sizes.

NOTE: For 120 kW, use two separate conduits for each of the input, bypass, and output cable sets. Organize cables as illustrated in each conduit to avoid eddy currents (heating).

NOTE: For 150 kW, use two separate conduits for each of the input, bypass, output, and DC cable sets. Organize cables as illustrated in each conduit to avoid eddy currents (heating).

Cable Organization in Separate Conduits for Input/Bypass/Output and DC

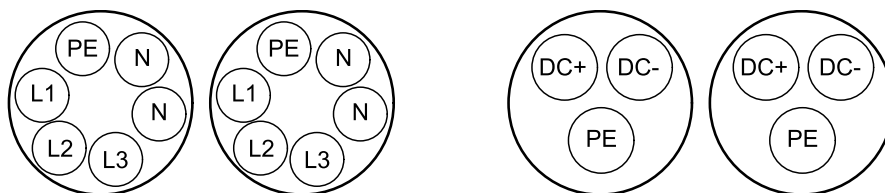

- Neutral conductor is sized to handle 1.73 times phase current in case of high harmonic content from non-linear loads. If low or no harmonic currents are expected, neutral conductor can be sized as phase conductor.
- 20–40 kW: battery cables are sized according to 32 blocks.
- 50 kW and higher: battery cables are sized according to 40 blocks.

Specifications for 208 V Systems

Trip Settings for 200/208/220 V

Rating (kW)	Breaker		I _r		tr at 6 I _r ⁵	I _i (x I _n) ⁵
	Unit input breaker UIB / Static switch input breaker SSIB	Maintenance bypass breaker MBB / Unit output breaker UOB	Unit input breaker UIB	Static switch input breaker SSIB / Maintenance bypass breaker MBB / Unit output breaker UOB		
10	HJF36150CU31X	HJF36150CU31X	50	50	0.5	1.5
15	HJF36150CU31X	HJF36150CU31X	60	60	0.5	1.5
20	HJF36150CU31X	HJF36150CU31X	80	80	0.5	1.5
25	HJF36150CU31X	HJF36150CU31X	100	100	0.5	1.5
30	HJF36150CU31X	HJF36150CU31X	125	110	0.5	1.5
40	HJF36150CU31X	HJF36150CU31X	150	150	0.5	1.5
50	LJF36400CU31X	JJF36250CU31X	200	200	0.5	1.5
60	LJF36400CU31X	JJF36250CU31X	250	225	0.5	1.5
75	LJF36400CU31X	JJF36250CU31X	300	250	0.5	1.5

Recommended Upstream Protection 200/208/220 V

Rating	10 kW		15 kW		20 kW		25 kW	
	Input	Bypass	Input	Bypass	Input	Bypass	Input	Bypass
Breaker	HJF36100CU31X						HJF36150C-U31X	HJF36100C-U31X
I _r (A)	50	40	80	60	100	80	125	100
tr at 6 I _r (A)	0.5							
I _i (x I _n) (A)	1.5							

Rating	30 kW		40 kW		50 kW		60 kW		75 kW	
	Input	Bypass	Input	Bypass	Input	Bypass	Input	Bypass	Input	Bypass
Breaker	HJF36150CU31X		JJ-F36250-CU31X	HJ-F36150-CU31X	JJF36250CU31X		LJ-F36400-CU31X	JJ-F36250-CU31X	LJF36400CU31X	
I _r (A)	150	110	200	150	250	200	300	225	350	300
tr at 6 I _r (A)	0.5									
I _i (x I _n) (A)	1.5									

5. tr and I_i must be set during installation. The default setting is marked on the breaker.

Recommended Cable Sizes 200/208/220 V

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

All wiring must comply with all applicable national and/or electrical codes. The maximum allowable cable size is 4/0 AWG.

Failure to follow these instructions will result in death or serious injury.

NOTE: Overcurrent protection is to be provided by others.

Cable sizes in this manual are based on Table 310.15 (B)(16) of the National Electrical Code (NEC) with the following assertions:

- 90 °C (194 °F) conductors (75 °C (167 °F) termination)
- An ambient temperature of 30 °C (86 °F)
- Use of copper conductors

If the ambient temperature is greater than 30 °C (86 °F), larger conductors are to be selected in accordance with the correction factors of the NEC.


Equipment grounding conductors (PE in this manual) are sized in accordance with NEC Article 250.122 and Table 250.122.

Copper		10 kW	15 kW	20 kW	25 kW	30 kW	40 kW	50 kW	60 kW	75 kW
Input	Input phases (AWG/kcmil)	8	4	3	2	1/0	2 x 1/0	2 x 1/0	2 x 1/0	2 x 2/0
	Input PE (AWG/kcmil)	10	8	8	6	6	6	2 x 4	2 x 4	2 x 3
Bypass/output	Bypass/output phases (AWG/kcmil)	8	6	4	3	2	1/0	2 x 1/0	2 x 1/0	2 x 1/0
	Bypass PE/output PE (AWG/kcmil)	10	10	8	8	6	6	2 x 6	2 x 4	2 x 4
Neutral (AWG/kcmil) ⁶		6	3	1	2/0	2 x 1/0	2 x 1/0	2 x 2/0	4 x 1/0	4 x 1/0
DC	DC +/- (AWG/kcmil)	10	6	4	4	2	1/0	2/0	4/0	2 x 1/0
	DC PE (AWG/kcmil)	10	10	8	8	6	6	6	4	4

NOTE: The DC cable sizes given here are recommendations — Always follow the specific instructions in the battery solution documentation for DC +/- and DC PE cable sizes.

NOTE: For 50 kW, 60 kW, and 75 kW, use two separate conduits for each of the input, bypass, and output cable sets. Organize cables as illustrated in each conduit to avoid eddy currents (heating).

Cable Organization in Separate Conduits for Input/Bypass/Output and DC

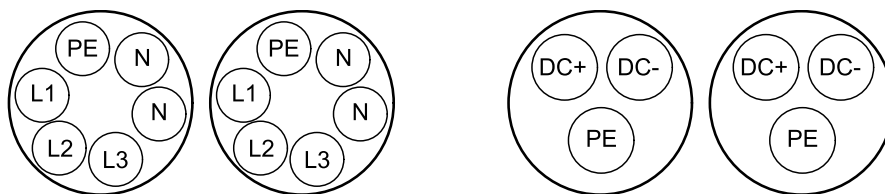

6. Neutral conductor is sized to handle 1.73 times phase current in case of high harmonic content from non-linear loads. If non or less harmonic currents are expected, neutral conductor can be sized as phase conductor.

Specifications for 400 V Systems

Trip Settings for 400/415 V

Rating (kW)	Breaker		Ir		tr at 6 Ir ⁷	li (x In) ⁷
	Unit input breaker UIB / Static switch input breaker SSIB	Maintenance bypass breaker MBB / Unit output breaker UOB	Unit input breaker UIB	Static switch input breaker SSIB / Maintenance bypass breaker MBB / Unit output breaker UOB	All breakers	
20	HJF36150CU31X	HJF36150CU31X	50	50	0.5	1.5
30	HJF36150CU31X	HJF36150CU31X	60	60	0.5	1.5
40	HJF36150CU31X	HJF36150CU31X	80	80	0.5	1.5
50	HJF36150CU31X	HJF36150CU31X	100	100	0.5	1.5
60	HJF36150CU31X	HJF36150CU31X	125	110	0.5	1.5
80	HJF36150CU31X	HJF36150CU31X	150	150	0.5	1.5
100	LJF36400CU31X	JJF36250CU31X	200	200	0.5	1.5
120	LJF36400CU31X	JJF36250CU31X	225	225	0.5	1.5
150	LJF36400CU31X	JJF36250CU31X	300	250	0.5	1.5

Recommended Upstream Protection 400/415 V

Rating	20 kW		30 kW		40 kW		50 kW	
	Input	Bypass	Input	Bypass	Input	Bypass	Input	Bypass
Breaker	HJF36100CU31X						HJF36150C-U31X	HJF36100C-U31X
Ir (A)	50	40	70	60	100	80	125	100
Tr at 6 Ir (A)	0.5							
li (x In) (A)	1.5							

Rating	60 kW		80 kW		100 kW		120 kW		150 kW	
	Input	Bypass	Input	Bypass	Input	Bypass	Input	Bypass	Input	Bypass
Breaker	HJF36150CU31X		JJ-F36250-CU31X	HJ-F36150-CU31X	JJF36250CU31X		LJ-F36400-CU31X	JJ-F36250-CU31X	LJF36400CU31X	
Ir (A)	150	110	200	150	250	200	300	225	350	300
Tr at 6 Ir (A)	0.5									
li (x In) (A)	1.5									

7. tr and li must be set during installation. The default setting is marked on the breaker.

Recommended Cable Sizes 400/415 V

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

All wiring must comply with all applicable national and/or electrical codes. The maximum allowable cable size is 4/0 AWG.

Failure to follow these instructions will result in death or serious injury.

NOTE: Overcurrent protection is to be provided by others.

Cable sizes in this manual are based on Table 310.15 (B)(16) of the National Electrical Code (NEC) with the following assertions:

- 90 °C (194 °F) conductors (75 °C (167 °F) termination)
- An ambient temperature of 30 °C (86 °F)
- Use of copper conductors

If the ambient temperature is greater than 30 °C (86 °F), larger conductors are to be selected in accordance with the correction factors of the NEC.

Equipment grounding conductors (PE in this manual) are sized in accordance with NEC Article 250.122 and Table 250.122.


Copper		20 kW	30 kW	40 kW	50 kW	60 kW	80 kW	100 kW	120 kW	150 kW
Input	Input phases (AWG/kcmil)	8	4	3	2	1/0	2 x 1/0	2 x 1/0	2 x 1/0	2 x 2/0
	Input PE (AWG/kcmil)	10	8	8	6	6	6	2 x 4	2 x 4	2 x 3
Bypass/output	Bypass/output phases (AWG/kcmil)	8	6	4	3	2	1/0	2 x 1/0	2 x 1/0	2 x 1/0
	Bypass PE/output PE (AWG/kcmil)	10	10	8	8	6	6	2 x 6	2 x 4	2 x 4
Neutral (AWG/kcmil) ⁸		6	3	1	2/0	2 x 1/0	2 x 1/0	2 x 2/0	4 x 1/0	4 x 1/0
DC	DC +/- (AWG/kcmil)	4	2	1/0	1/0	2/0	4/0	2 x 1/0	2 x 3/0	2 x 4/0
	DC PE (AWG/kcmil)	8	6	6	6	6	4	4	3	2 x 2

NOTE: The DC cable sizes given here are recommendations — Always follow the specific instructions in the battery solution documentation for DC +/- and DC PE cable sizes.

NOTE: For 100 and 120 kW, use two separate conduits for each of the input, bypass, and output cable sets. Organize cables as illustrated in each conduit to avoid eddy currents (heating).

NOTE: For 150 kW, use two separate conduits for each of the input, bypass, output, and DC cable sets. Organize cables as illustrated in each conduit to avoid eddy currents (heating).

Cable Organization in Separate Conduits for Input/Bypass/Output and DC

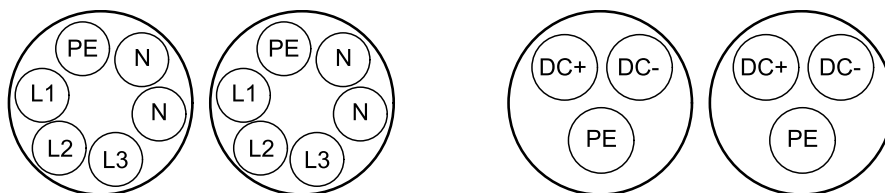

8. Neutral conductor is sized to handle 1.73 times phase current in case of high harmonic content from non-linear loads. If non or less harmonic currents are expected, neutral conductor can be sized as phase conductor.

Recommended Bolt and Lug Sizes

NOTICE

RISK OF EQUIPMENT DAMAGE

Use only UL approved compression cable lugs.

Failure to follow these instructions can result in equipment damage.

Copper — One Hole Cable Lugs

Cable size	Bolt size	Cable lug type	Crimping tool	Die
10 AWG	M8 x 35 mm	LCA10-56-L	NA	NA
8 AWG	M8 x 35 mm	LCA8-56-L	CT-720	CD-720-1 Red P21
6 AWG	M8 x 35 mm	LCA6-56-L	CT-720	CD-720-1 Blue P24
4 AWG	M8 x 35 mm	LCA4-56-L	CT-720	CD-720-1 Gray P29
3 AWG	M8 x 35 mm	LCA4-56-L	CT-720	CD-720-1 Gray P29
2 AWG	M8 x 35 mm	LCA2-56-Q	CT-720	CD-720-1 Brown P33
1 AWG	M8 x 35 mm	LCA1-56-E	CT-720	CD-720-2 Green P37
1/0 AWG	M8 x 35 mm	LCA1/0-56-X	CT-720	CD-720-2 Pink P42
2/0 AWG	M8 x 35 mm	LCA2/0-56-X	CT-720	CD-720-2 Black P45
3/0 AWG	M8 x 35 mm	LCA3/0-56-X	CT-720	CD-720-2 Orange P50
4/0 AWG	M8 x 35 mm	LCA4/0-56-X	CT-720	CD-720-3 Purple P54

Copper — Two Hole Cable Lugs

Cable size	Bolt size	Cable lug type	Crimping tool	Die
6 AWG	M10 x 35 mm	LCC6-12-L	CT-930	CD-920-6 Blue P24
4 AWG	M10 x 35 mm	LCC4-12-L	CT-930	CD-920-4 Gray P29
3 AWG	M10 x 35 mm			
2 AWG	M10 x 35 mm	LCC2-12-Q	CT-930	CD-920-2 Brown P33
1 AWG	M10 x 35 mm	LCC1-12-E	CT-930	CD-920-1 Green P37
1/0 AWG	M10 x 35 mm	LCC1/0-12-X	CT-930	CD-920-1/0 Pink P42
2/0 AWG	M10 x 35 mm	LCC2/0-12-X	CT-930	CD-920-2/0 Black P45
3/0 AWG	M10 x 35 mm	LCC3/0-12-X	CT-930	CD-920-3/0 Orange P50
4/0 AWG	M10 x 35 mm	LCC4/0-12-X	CT-930	CD-920-4/0 Purple P54

Torque Specifications

Bolt size	Torque
M4	1.7 Nm (1.25 lb-ft)
M6	5 Nm (3.69 lb-ft)
M8	17.5 Nm (12.91 lb-ft)
M10	30 Nm (22 lb-ft)


Maintenance Bypass Cabinet Weights and Dimensions

	Weight kg (lbs)	Height mm (in)	Width mm (in)	Depth mm (in)
10–80 kW maintenance bypass cabinet	110 (242.5)	1485 (58.47)	318 (12.52)	850 (33.46)
100–150 kW maintenance bypass cabinet	120 (264.6)	1485 (58.47)	318 (12.52)	850 (33.46)

Clearance

NOTE: Clearance dimensions are published for airflow and service access only. Consult with the local safety codes and standards for additional requirements in your local area.

Front View of the UPS and the Maintenance Bypass Cabinet

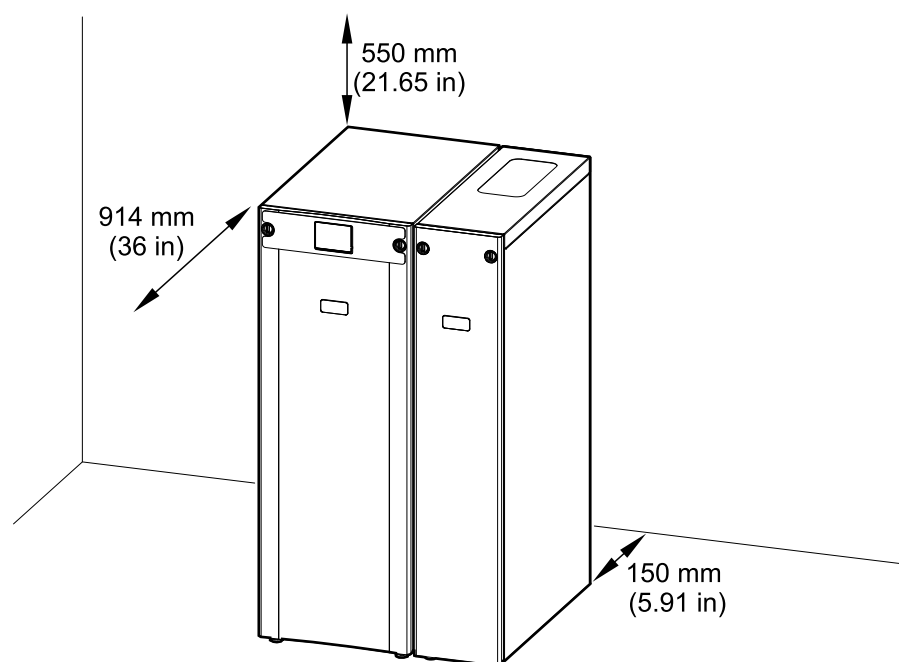

Environment


	Operating	Storage
Temperature	0 °C to 40 °C (32 °F to 104 °F)	-25 °C to 55 °C (-13 °F to 131 °F)
Relative humidity	0 – 95% non-condensing	0 – 95% non-condensing
Protection class	IP20	
Color	RAL 9003 white	

System Overview


UIB	Unit input breaker
SSIB	Static switch input breaker
MBB	Maintenance bypass breaker
IMB	Internal maintenance breaker
UOB	Unit output breaker
BB	Battery breaker

NOTE: The internal maintenance breaker IMB* in the UPS cannot be used with a maintenance bypass cabinet and must be padlocked in the open position.

Single Mains UPS System



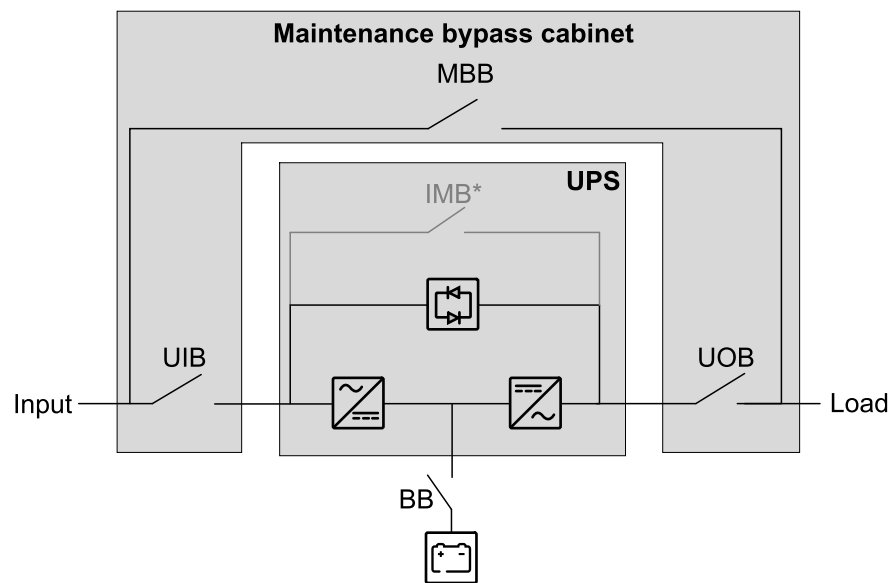


Dual Mains UPS System






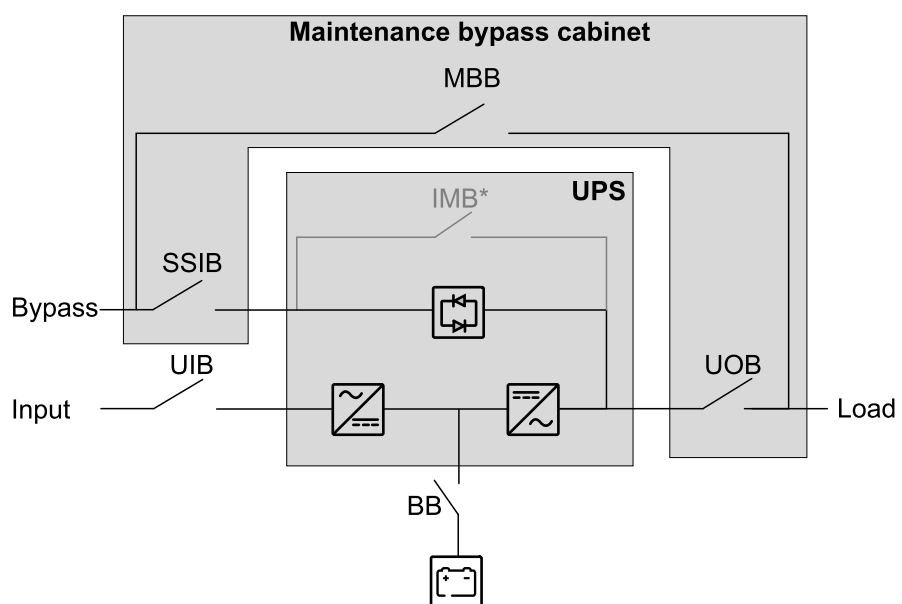


Overview of Installation Kits

 
Installation Kit 0M-100265 for 10–80 kW Maintenance Bypass Cabinet

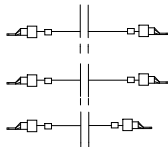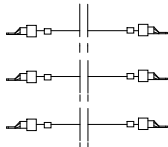Part	Used in	Number of units
0W49284 signal cable	Connect the Signal Cables, page 46.	1 
0W49283 signal cable		1 
0W99053 UPS PE cable	Connect the Power Cables in a 10–80 kW Top Cable Entry System, page 32 or Connect the Power Cables in a Bottom Cable Entry System, page 38.	1 
0W99055 UPS output cables		1 
0W99056 UPS input/UPS bypass cables		1 
0W99054 UPS neutral cable		1 
M8 nut with washer		10 
M8 x 25 mm bolt with washer		10 
Cable ties		10 

   Installation Kit 0M-100264 for 100–150 kW Maintenance Bypass Cabinet

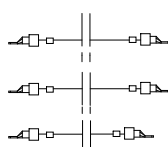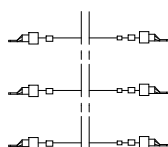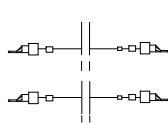
Part	Used in	Number of units
0W49284 signal cable	<i>Connect the Signal Cables, page 46.</i>	1 
0W49283 signal cable		1 
0W99057 UPS PE cable	<i>Connect the Power Cables in a 100–150 kW Top Cable Entry System, page 34, or Connect the Power Cables in a Bottom Cable Entry System, page 38.</i>	1 
0W12375 UPS output cables		
0W99058 UPS input/UPS bypass cables		1 
0W99052 UPS neutral cable		1 
M8 nut with washer		11 
M8 x 25 mm bolt with washer		11 
Cable ties		10 

Installation Kit 0M-100247 for 100–150 kW Maintenance Bypass Cabinet

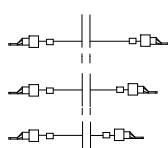Part	Used in	Number of units
0W49195 UPS input cables (for dual mains)	<i>Connect the Power Cables in a 100–150 kW Top Cable Entry System, page 34.</i>	1 
M8 nut with washer		6 

Part	Used in	Number of units
M8 x 25 mm bolt with washer		6 
Cable ties		10 


Installation Kit 0M-100250 for 100–150 kW Maintenance Bypass Cabinet

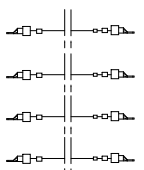Part	Used in	Number of units
0W49194 UPS DC-cables	<i>Connect the Power Cables in a 100–150 kW Top Cable Entry System, page 34</i>	1 
M8 nut with washer		6 
M8 x 25 mm bolt with washer		6 
Cabel ties		10 

Optional Seismic Kit GVSOPT003


Part	Used in	Number of units
Rear anchor	<i>Install the Seismic Anchoring (Option), page 30 and Final Installation, page 50.</i>	1 
Front anchoring bracket		1 
Rear anchoring bracket		1 
M8 x 20 mm bolt		6 

 Optional Kirk Key Kit GVSOPT004


Part	Used in	Number of units
Support plate	The optional kirk key kit will be installed by the Schneider Electric representative during start-up of your system.	2 
Flathead screw		8 
Push-button		1 
Top support plate		1 
Electromechanical key interlock (SKRU)		1 
Mechanical key interlock		2 
Label		1 Push this button to release the key
M6 nut with washer		2 
0W12675 signal cable		1 
0W49239 signal cable		1 

Installation Procedure for Top Cable Entry

Single Mains

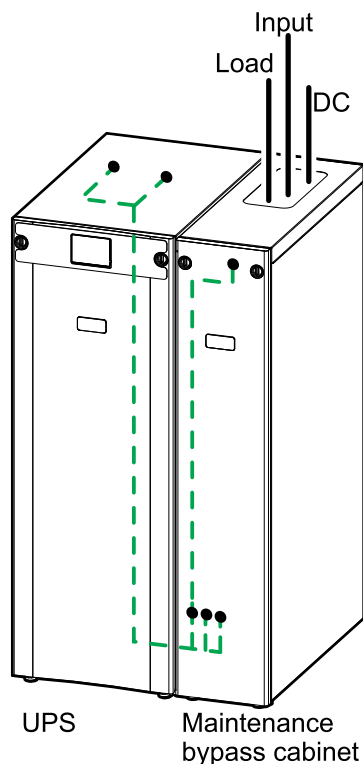

Dual Mains

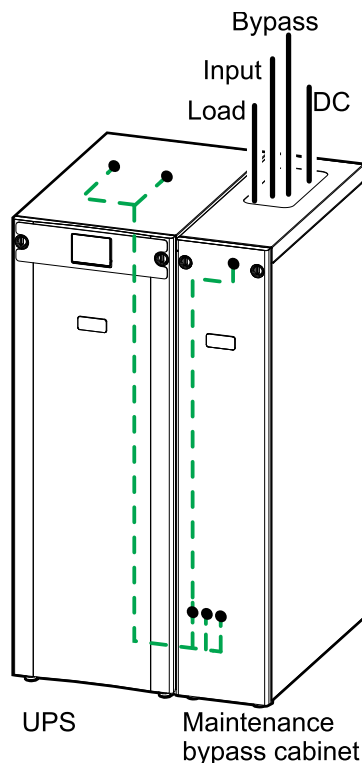

— Signal cable
— Power cable

⚠ CAUTION

TIP HAZARD


Do not remove the transportation brackets from the maintenance bypass cabinet until it is time to anchor it to the floor or interconnect it with the UPS.

Failure to follow these instructions can result in injury or equipment damage.


1. *Prepare the Maintenance Bypass Cabinet and the UPS for Cables, page 25.*
2. *Install the Seismic Anchoring (Option), page 30.*
3. Perform one of the following:
 - *Connect the Power Cables in a 10–80 kW Top Cable Entry System, page 32, or*
 - *Connect the Power Cables in a 100–150 kW Top Cable Entry System, page 34.*
4. *Connect the Internal Power Cables, page 39.*
5. *Interconnect the UPS and the Maintenance Bypass Cabinet, page 42.*
6. *Connect the Signal Cables, page 46.*
7. *Final Installation, page 50.*
8. Connect all power cables in the UPS – follow the UPS installation manual.

Installation Procedure for Bottom Cable Entry

Single Mains

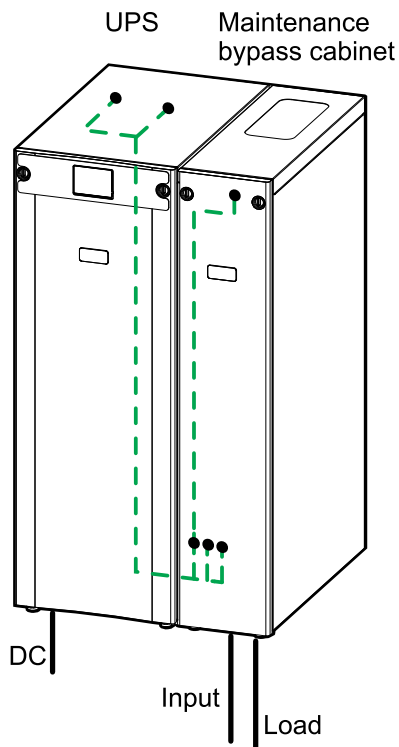

Dual Mains

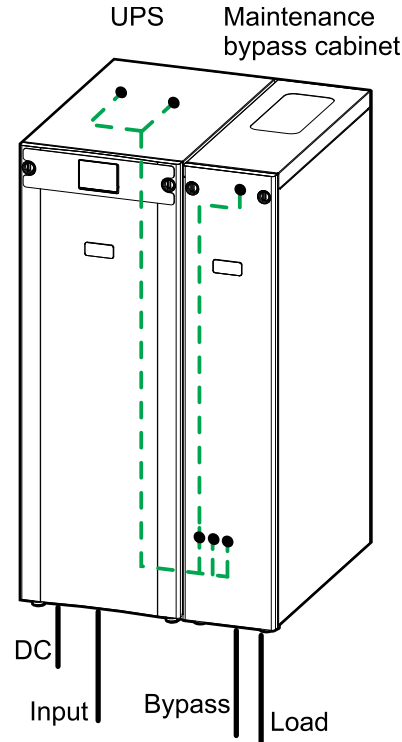

— Signal cable
— Power cable

⚠ CAUTION

TIP HAZARD

Do not remove the transportation brackets from the maintenance bypass cabinet until it is time to anchor it to the floor or interconnect it with the UPS.

Failure to follow these instructions can result in injury or equipment damage.

1. *Prepare the Maintenance Bypass Cabinet and the UPS for Cables, page 25.*
2. *Install the Seismic Anchoring (Option), page 30.*
3. *Connect the Power Cables in a Bottom Cable Entry System, page 38.*
4. *Connect the Internal Power Cables, page 39.*
5. *Interconnect the UPS and the Maintenance Bypass Cabinet, page 42.*
6. *Connect the Signal Cables, page 46.*
7. *Final Installation, page 50.*
8. Connect all power cables in the UPS – follow the UPS installation manual.

Prepare the Maintenance Bypass Cabinet and the UPS for Cables

⚠ DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not drill or cut holes for power cables or conduits with the gland plate installed and do not drill or cut holes in close proximity to the maintenance bypass cabinet.

Failure to follow these instructions will result in death or serious injury.

1. Remove the front panel from the maintenance bypass cabinet.


Front View of the Maintenance Bypass Cabinet

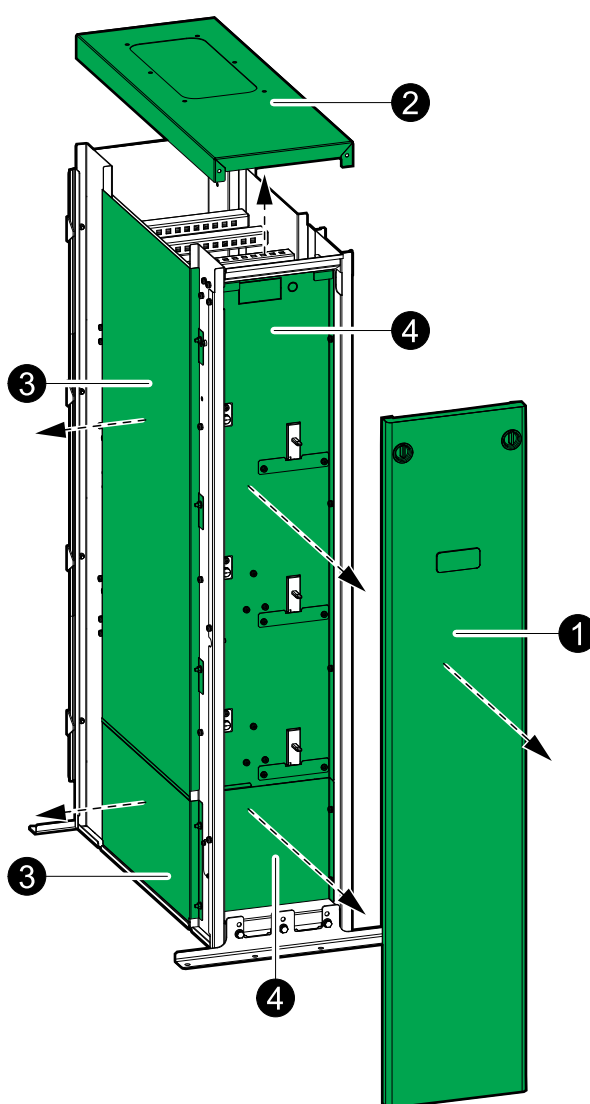

2. Remove the top cover from the maintenance bypass cabinet.
3. Remove the upper and lower left side plate from the maintenance bypass cabinet. Save the upper left side plate for later.
4. Remove the lower and upper front plate from the maintenance bypass cabinet.


5. Remove the transparent plate above the top breaker.

Front View of the Maintenance Bypass Cabinet

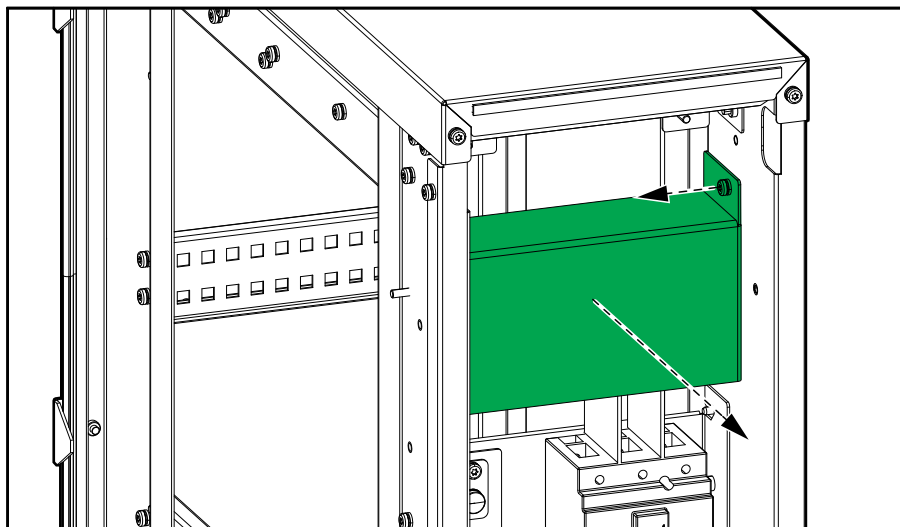


6. **Only for bottom cable entry in 100–150 kW maintenance bypass cabinet:** Remove the indicated busbars and insulators in the maintenance bypass cabinet for more cable routing space.

Left Side View of the 100–150 kW Maintenance Bypass Cabinet

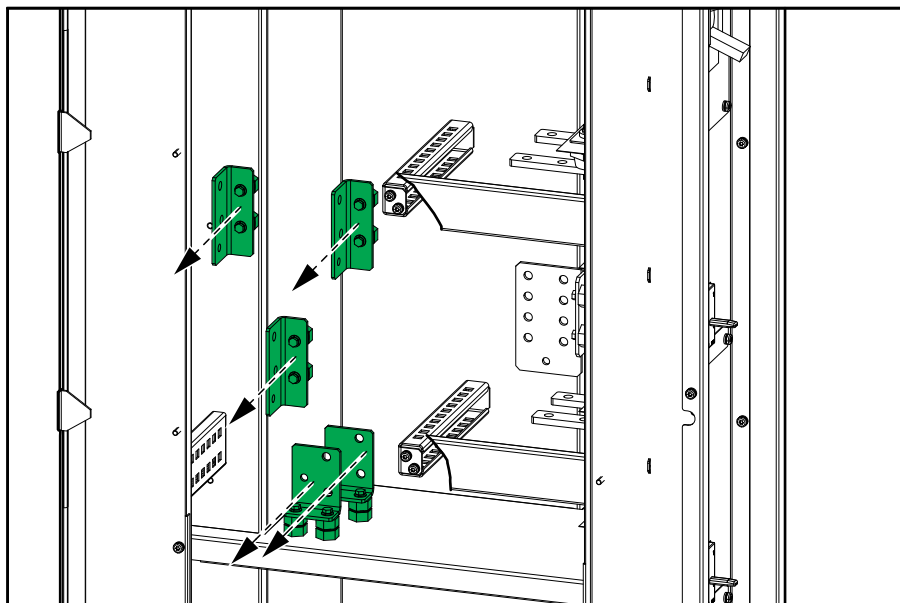


7. Remove the front panel from the UPS.

Front View of the UPS and the Maintenance Bypass Cabinet

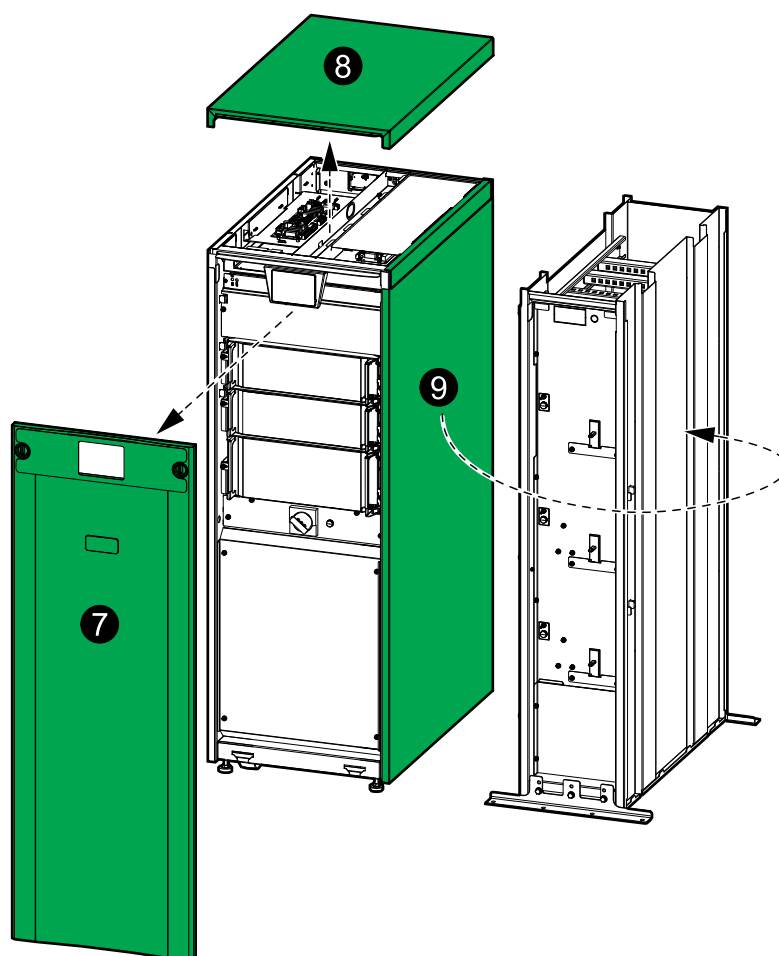


8. Remove the top cover from the UPS:
 - a. Remove the screws and tilt the front of the top cover upwards.
 - b. Slide the top cover towards the rear to remove it. Taps in the rear of the top cover must disconnect from the slots in the rear of the UPS.
9. Remove the right side panel from the UPS and reinstall the side panel on the right side of the maintenance bypass cabinet.
10. Remove the front plate from the UPS.

Front View of the UPS

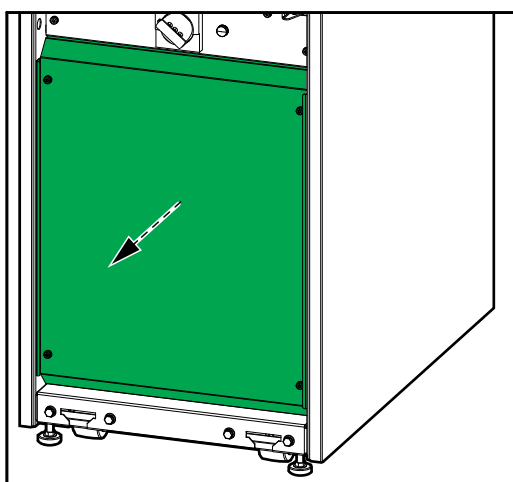


11. Remove the transparent plate from the UPS.

Front View of the UPS

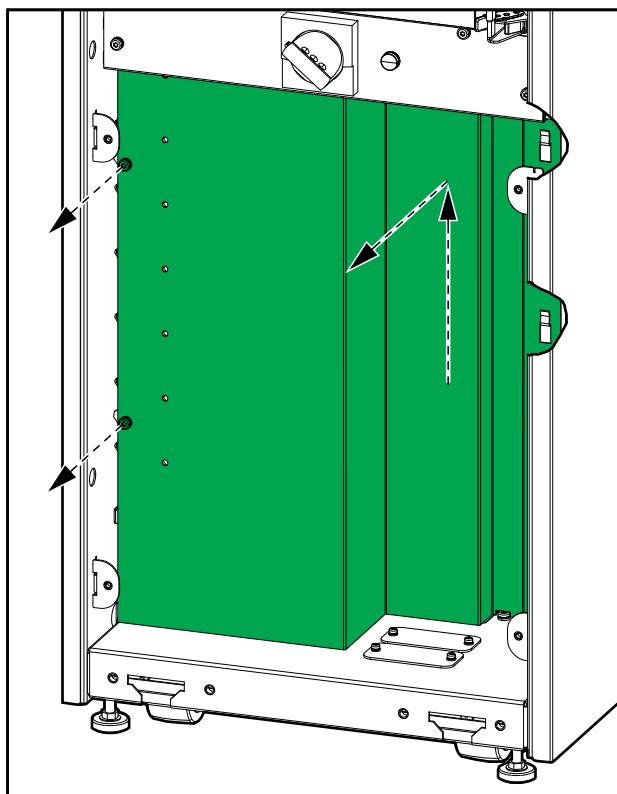

12. Remove the lower right side plate from the UPS.

Front View of the UPS

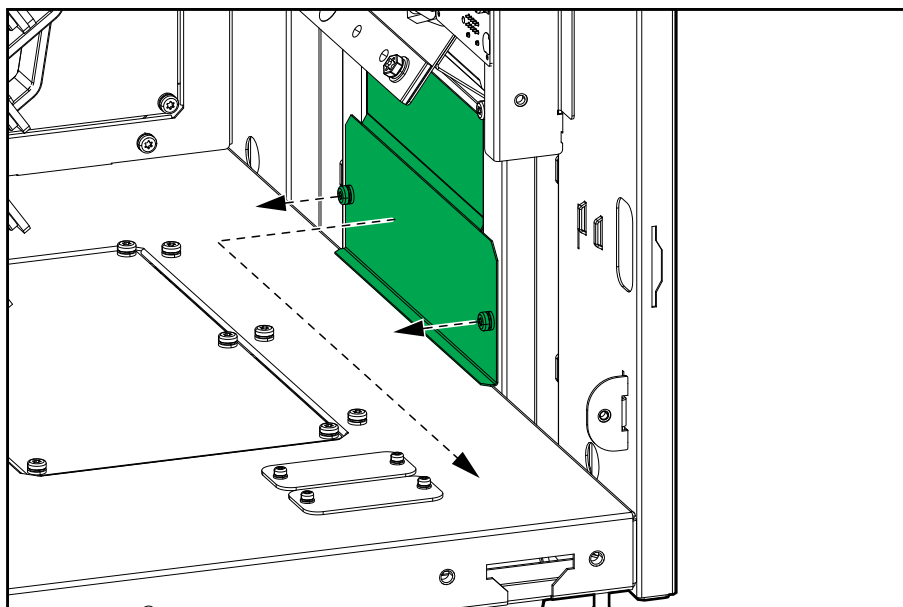

13. **Only for top cable entry system:**
- Remove the gland plate from the top cover of the maintenance bypass cabinet.
 - Drill or punch holes for power cables or conduits in the gland plate. Conduits are not provided.
 - Reinstall the gland plate in the top cover of the maintenance bypass cabinet.

14. Only for bottom cable entry system:


- a. Remove the gland plate from the bottom of the maintenance bypass cabinet.
- b. Drill or punch holes for power cables or conduits in the gland plate. Conduits are not provided.
- c. Reinstall the gland plate in the bottom of the maintenance bypass cabinet

15. Reinstall the top cover on the maintenance bypass cabinet with four screws.

Install the Seismic Anchoring (Option)


Use the optional installation kits GVSOPT002 (shipped with the UPS) and GVSOPT003 for this procedure.

1. Interconnect the rear anchors for the UPS (on the left) and the maintenance bypass cabinet (on the right) with the interconnection plate and four M8 bolts (provided).
2. Mount the rear anchor assembly to the floor with M10 expansion bolts (not provided).

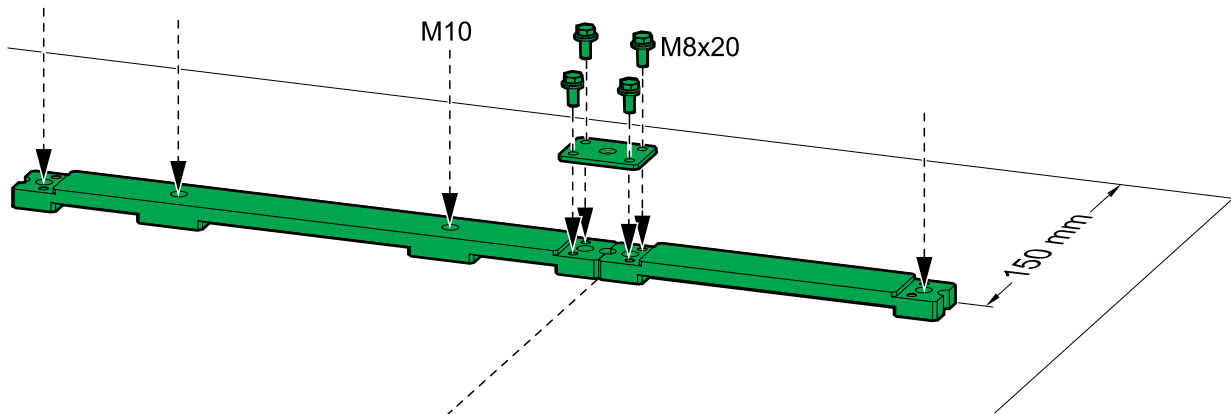

3. Remove the transportation brackets from the maintenance bypass cabinet.
4. Install the rear anchoring brackets on the UPS and the maintenance bypass cabinet with the M8 bolts (provided).


Rear View of the Maintenance Bypass Cabinet

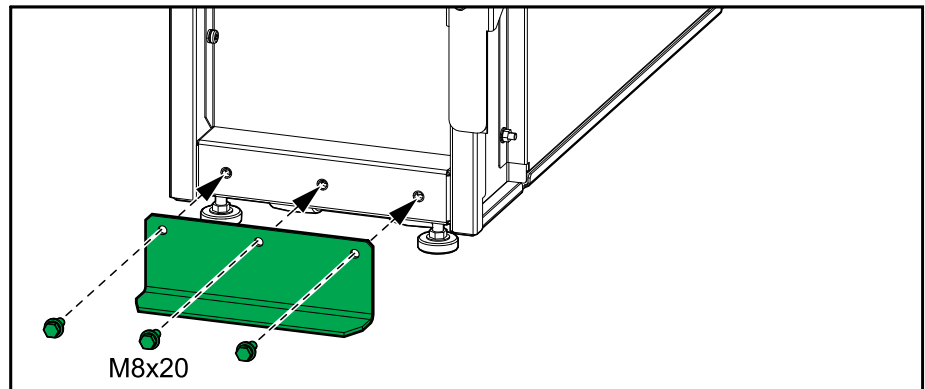

5. Push the maintenance bypass cabinet into position so the rear anchoring bracket connects to the rear anchor. The front anchoring bracket is installed in the final installation steps.

NOTE: Do not push the UPS into position yet.


Rear View of the Maintenance Bypass Cabinet

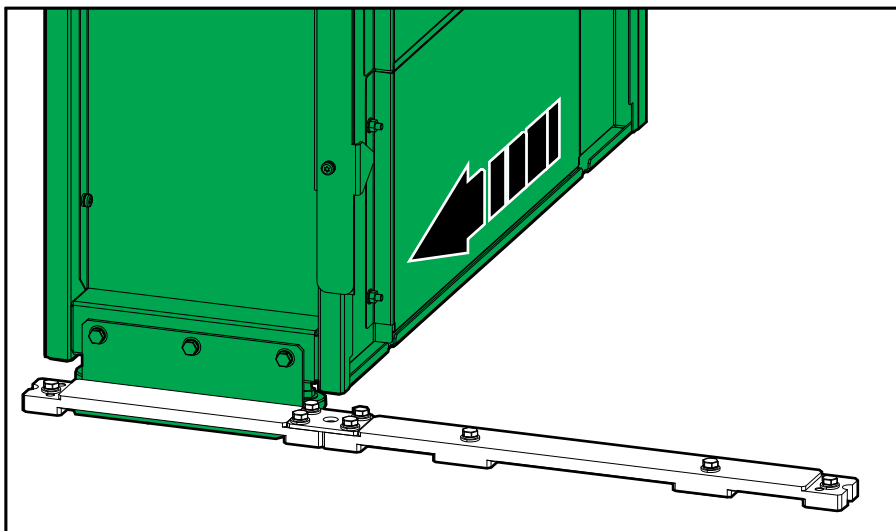


Connect the Power Cables in a 10–80 kW Top Cable Entry System

1. The power cables must be restrained with 3/8 nylon rope:
 - a. Tie the power cables to the beams with rope as illustrated. Make sure that the rope holds the cables tightly in place. Note that L2 is routed under the beam and L1 and L3 is routed over the beam in front of the busbars.
 - b. Tie the power cables together with rope as illustrated halfway between the two beams. See *Restrain the Cables*, page 36 for restrain method.

Left Side View of the Maintenance Bypass Cabinet
– Single Mains

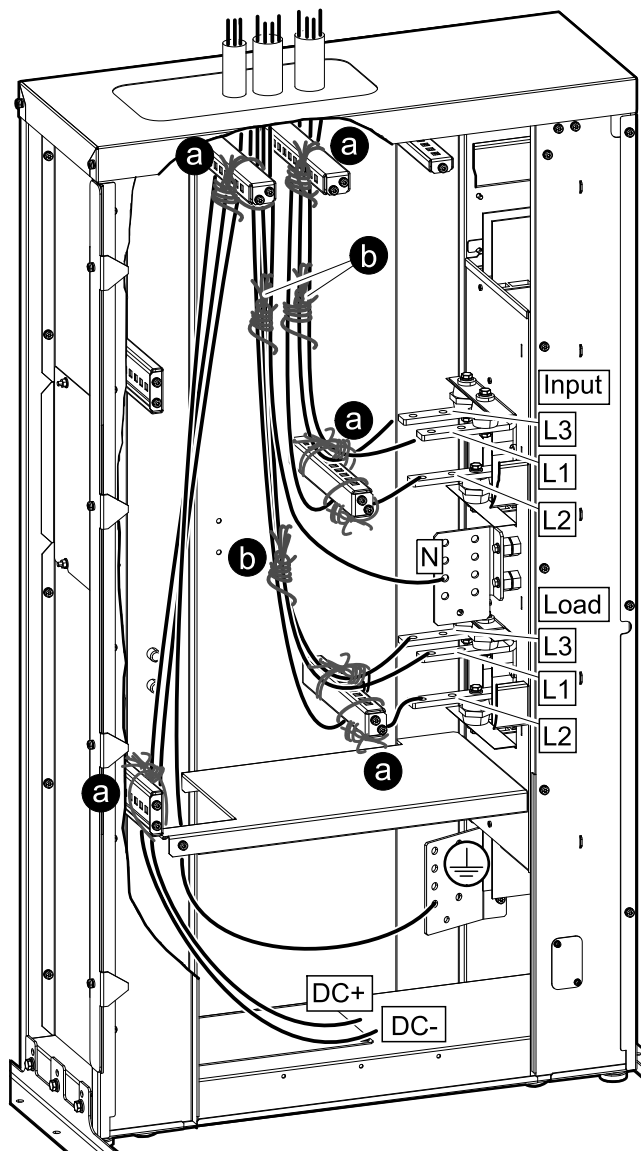

Left Side View of the Maintenance Bypass Cabinet
– Dual Mains

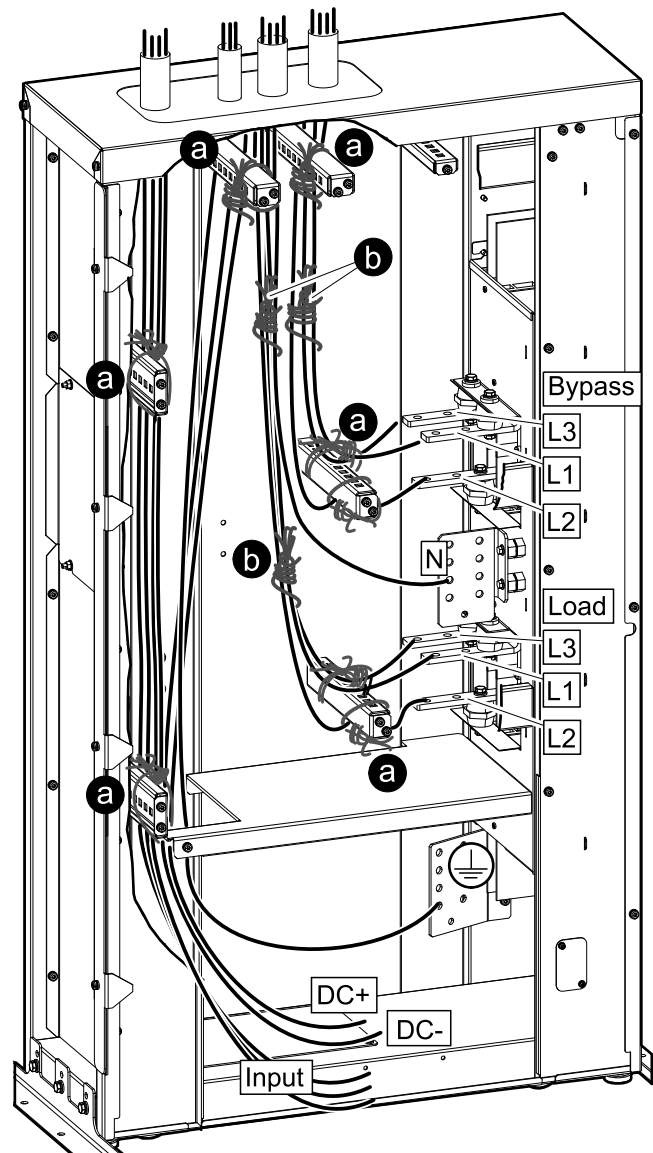


2. Perform one of the following:
 - **Only for single mains system:** Route the input cables and load cables through the top of the maintenance bypass cabinet and connect to the input busbars, the load busbars, and the PE-busbar.
 - **Only for dual mains system:** Route the bypass cables and load cables through the top of the maintenance bypass cabinet and connect to the bypass busbars, the load busbars, and the PE-busbar.

3. **Only for dual mains system:** Route the input cables through the top of the maintenance bypass cabinet and out through the left side of the maintenance bypass cabinet.
4. Route the DC-cables through the top of the maintenance bypass cabinet and out through the left side of the maintenance bypass cabinet.


Connect the Power Cables in a 100–150 kW Top Cable Entry System

1. The power cables must be restrained with 3/8 nylon rope:
 - a. Tie the power cables to the beams with rope as illustrated. Make sure that the rope holds the cables tightly in place. Note that L2 is routed under the beam and L1 and L3 is routed over the beam in front of the busbars.
 - b. Tie the power cables together with rope as illustrated halfway between the two beams. See *Restrain the Cables*, page 36 for restrain method.

Left Side View of the Maintenance Bypass Cabinet – Single Mains

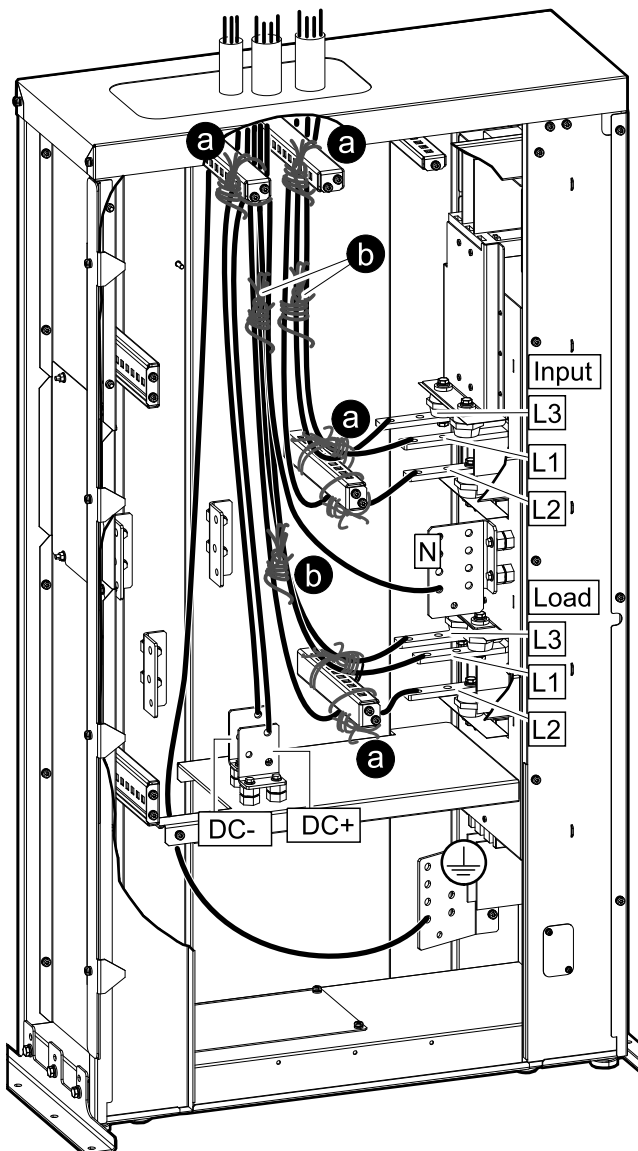


Left Side View of the Maintenance Bypass Cabinet – Dual Mains

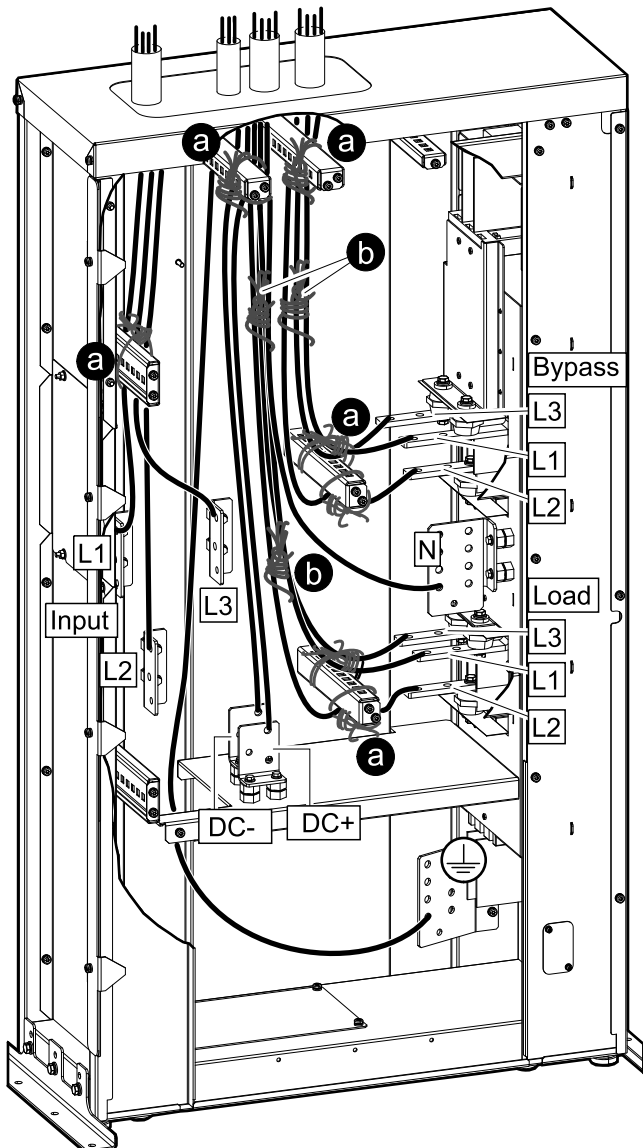

2. Perform one of the following:
 - **Only for single mains system:** Route the input cables and the load cables through the top of the maintenance bypass cabinet and connect to the input busbars, the load busbars, and the PE-busbar.
 - **Only for dual mains system:** Route the input cables, the bypass cables and the load cables through the top of the maintenance bypass cabinet and connect to the input busbars, the bypass busbars, the load busbars, and the PE-busbar.

3. Route the DC-cables through the top of the maintenance bypass cabinet and connect to the DC-busbars (DC+, DC–) and the PE-busbar.
4. Connect the provided UPS DC-cables to the DC-busbars (DC+, DC–) and route the cables out through the left side of the maintenance bypass cabinet. Fasten the cables to the beam with cable ties.
5. **Only for dual mains system:** Connect the provided UPS input cables to the input busbars and route the cables out through the left side of the maintenance bypass cabinet. Fasten the cables to the beam with cable ties.


Left Side View of the Maintenance Bypass Cabinet

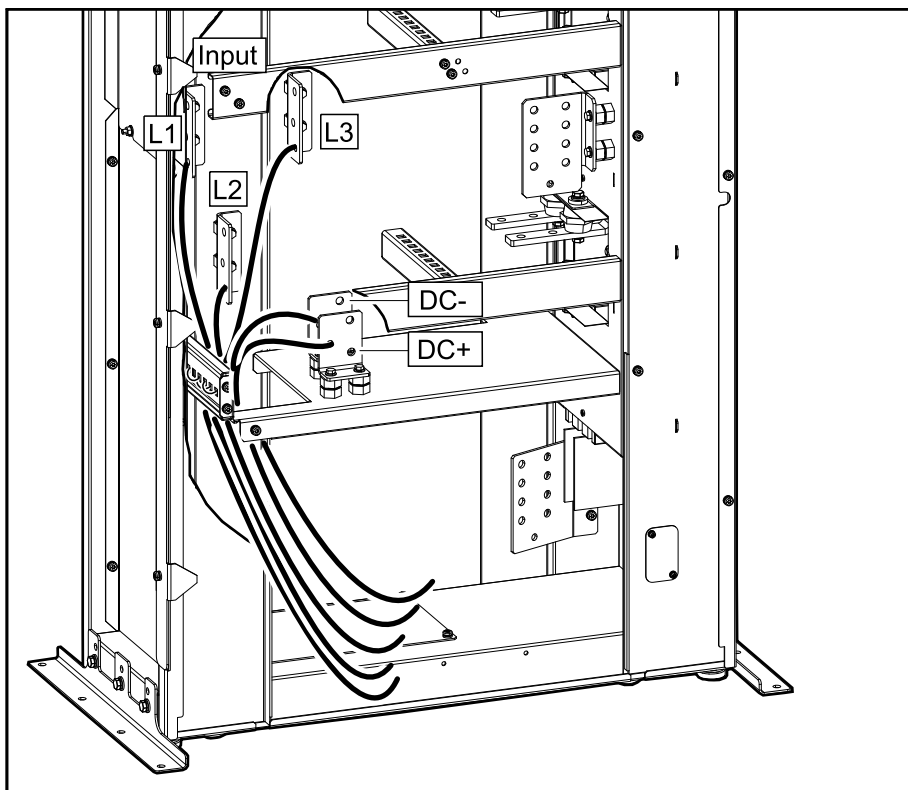

Restrain the Cables


Use 3/8 in nylon rope to restrain the cables.

1. Wrap the rope around the cables (a). Wrap the cables four times leaving 1 m (3 ft) of excess rope at the first end (b). Pull rope (c) taut.

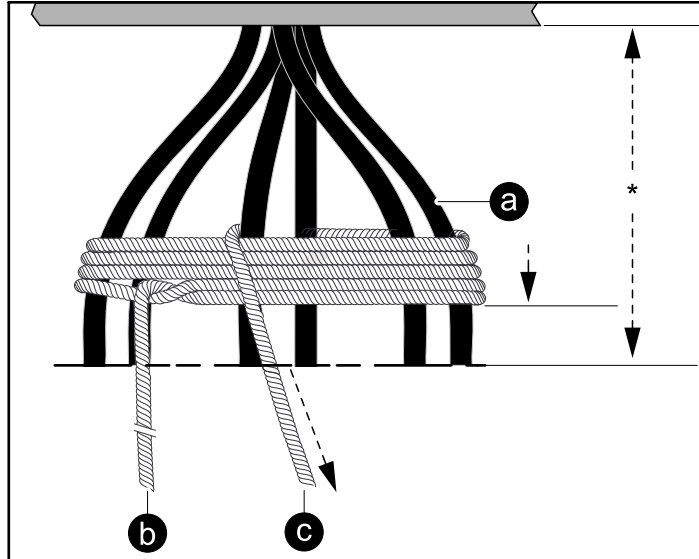


* Unsupported cable length.


2. Wrap rope (a) several times until the space between the first two sets of cables is completely filled. Weave final rope loop underneath the previous loop (b). Bring rope (c) through the other open area and pull the rope taut.

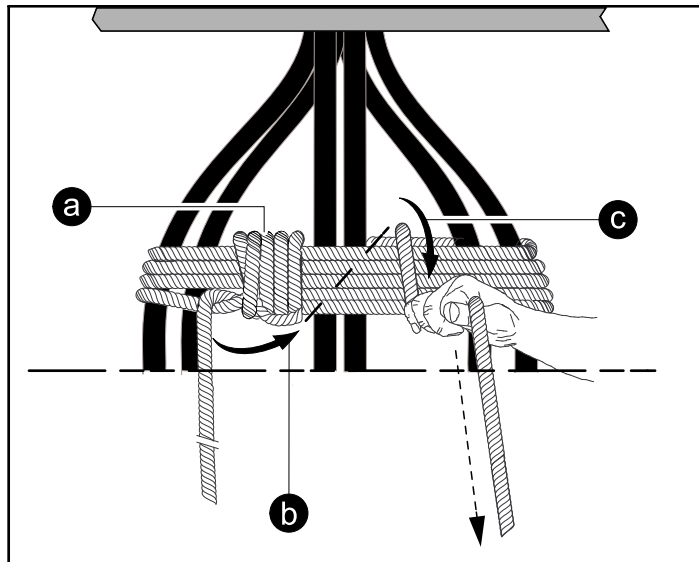

3. Wrap rope (a) several times until the space between the second and the third set of cables is completely filled. Wave the final rope loop (b) underneath the previous loop as shown. Pull the rope taut.

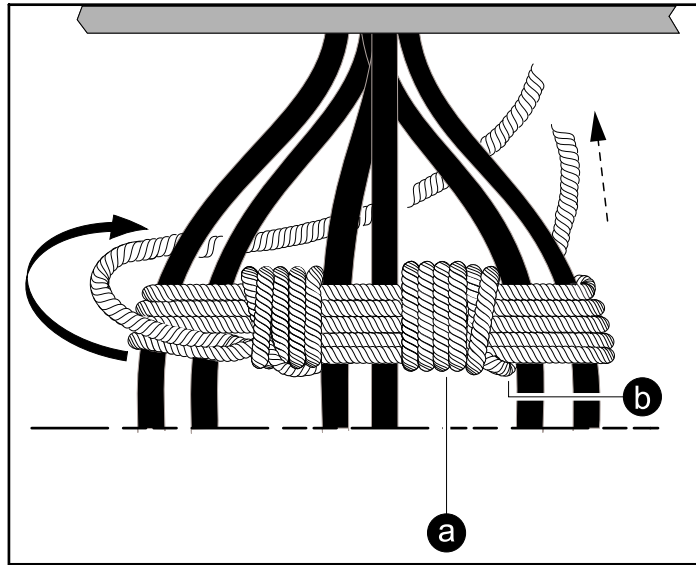

4. Tie rope End 1 and End 2 together as shown. The rope must be taut. Cut off excess rope and tape ends to prevent fraying.

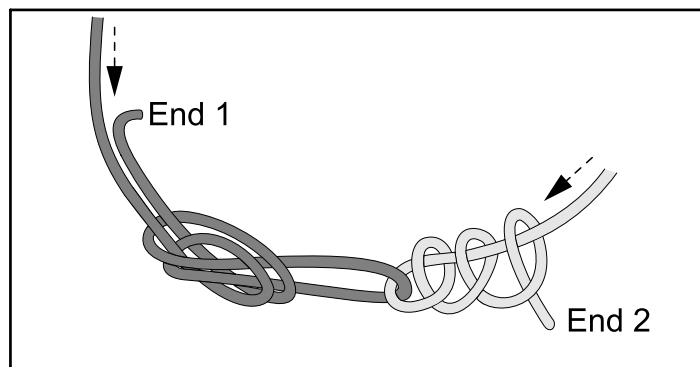

5. Repeat the procedure where needed.


Connect the Power Cables in a Bottom Cable Entry System

NOTE: DC-cables are routed through the bottom of the UPS. Follow the UPS installation manual to install the DC-cables.


NOTE: Input cables in dual mains systems are routed through the bottom of the UPS. Follow the UPS installation manual to install the input cables.

1. Perform one of the following:
 - **Only for single mains system:** Route the input cables and the load cables through the bottom of the maintenance bypass cabinet and connect to the input busbars, the load busbars, and the PE-busbar.
 - **Only for dual mains system:** Route the bypass cables and the load cables through the bottom of the maintenance bypass cabinet and connect to the bypass busbars, the load busbars, and the PE-busbar.
2. The power cables must be restrained with 3/8 nylon rope:
 - a. Tie the power cables to the beams with rope as illustrated. Make sure that the rope holds the cables tightly in place. Note that L2 is routed under the beam and L1 and L3 is routed over the beam in front of the busbars.

**Left Side View of the Maintenance Bypass Cabinet
– Single Mains**

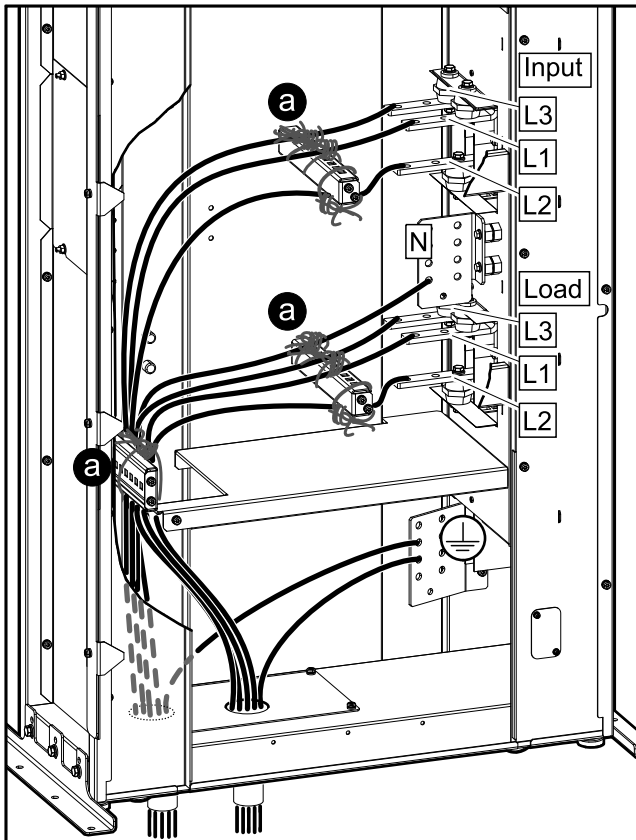


**Left Side View of the Maintenance Bypass Cabinet
– Dual Mains**

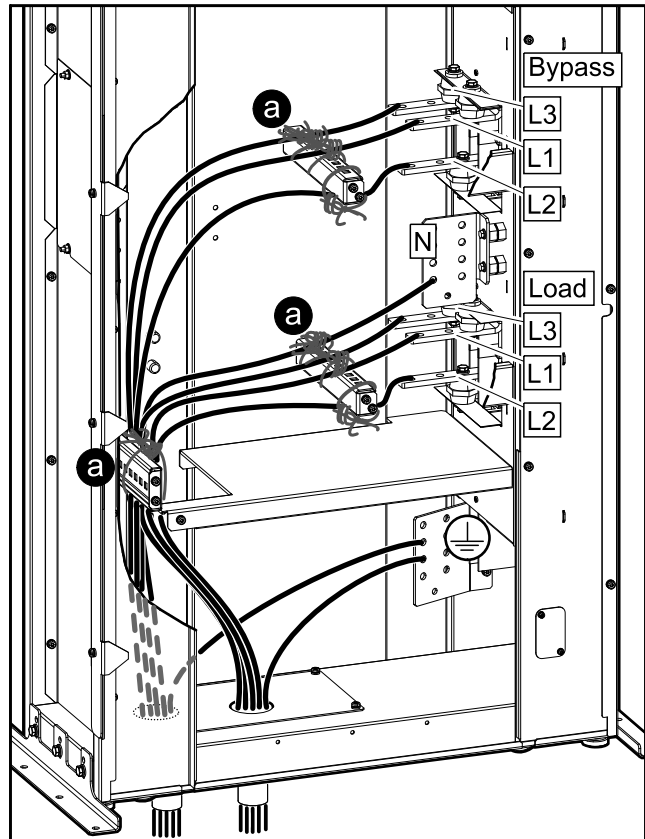

Connect the Internal Power Cables

1. Connect the provided UPS PE cable to the PE busbar and route the cable out through the left side of the maintenance bypass cabinet.
2. Connect the provided UPS N cable to the N busbar and route the cable out through the left side of the maintenance bypass cabinet. Fasten the N cable to the beam with a cable tie.


Left Side View of the Maintenance Bypass Cabinet

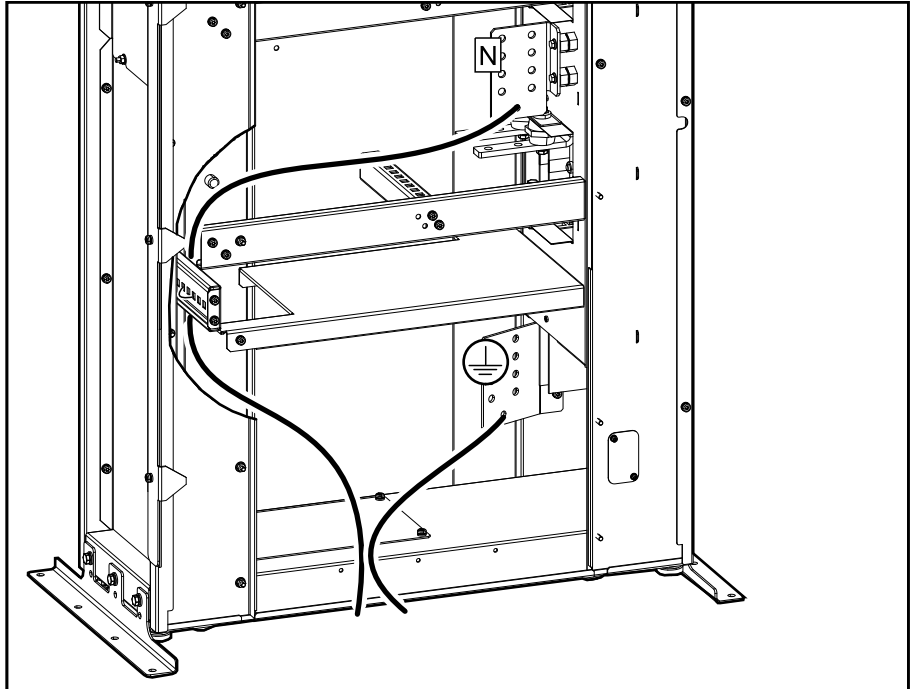


3. Perform one of the following:

- **Only for single mains system:** Connect the provided UPS input cables to the unit input breaker UIB (L1, L2, L3) and route the cables out through the left side of the maintenance bypass cabinet. Fasten the cables to the beams with cable ties.
- **Only for dual mains system:** Connect the provided UPS bypass cables to the static switch input breaker SSIB (L1, L2, L3) and route the cables out through the left side of the maintenance bypass cabinet. Fasten the cables to the beams with cable ties.

Front View of the Maintenance Bypass Cabinet – Single Mains

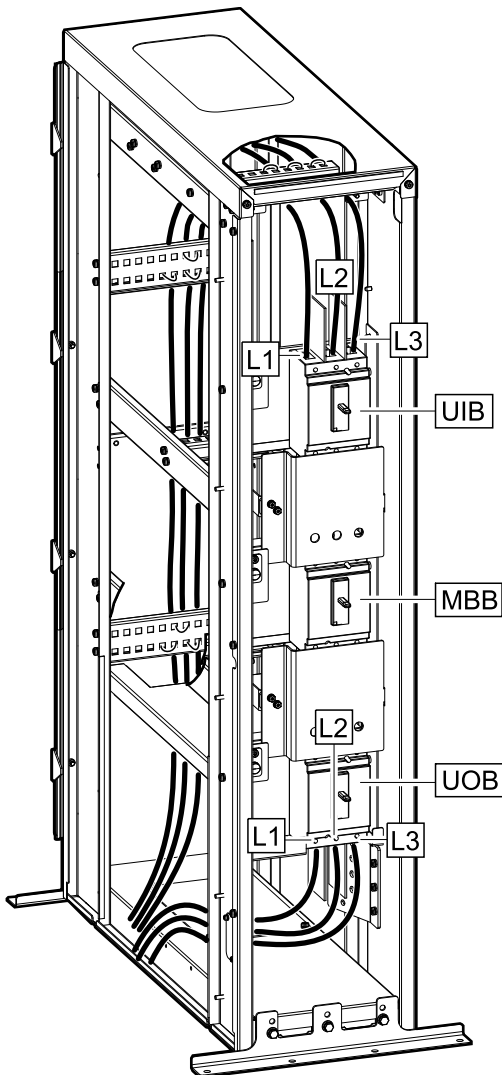


Front View of the Maintenance Bypass Cabinet – Dual Mains

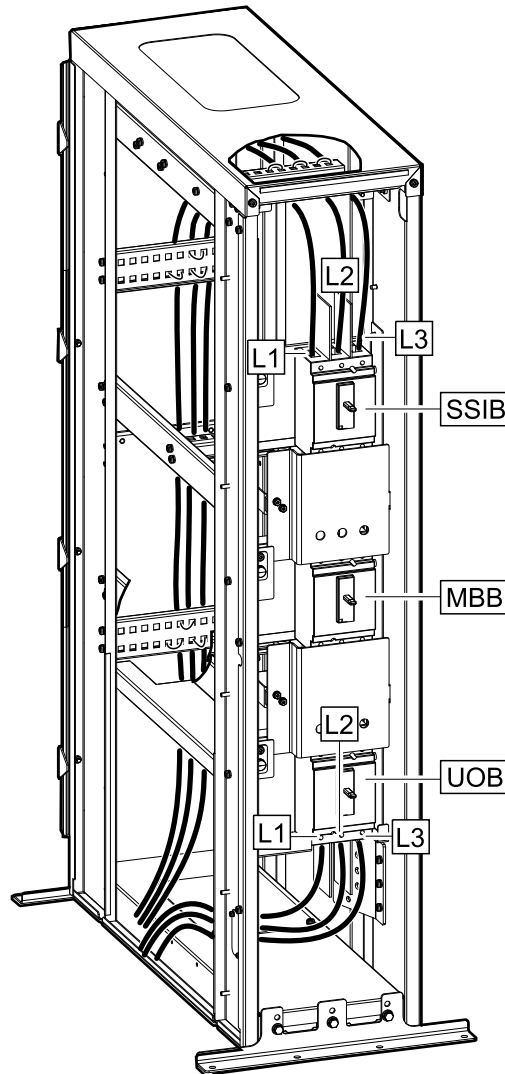

4. Connect the provided UPS output cables to the unit output breaker UOB (L1, L2, L3) and route the cables out through the left side of the maintenance bypass cabinet.

5. Reinstall the left upper side plate and the transparent plate on the maintenance bypass cabinet.


Left Side View of the Maintenance Bypass Cabinet

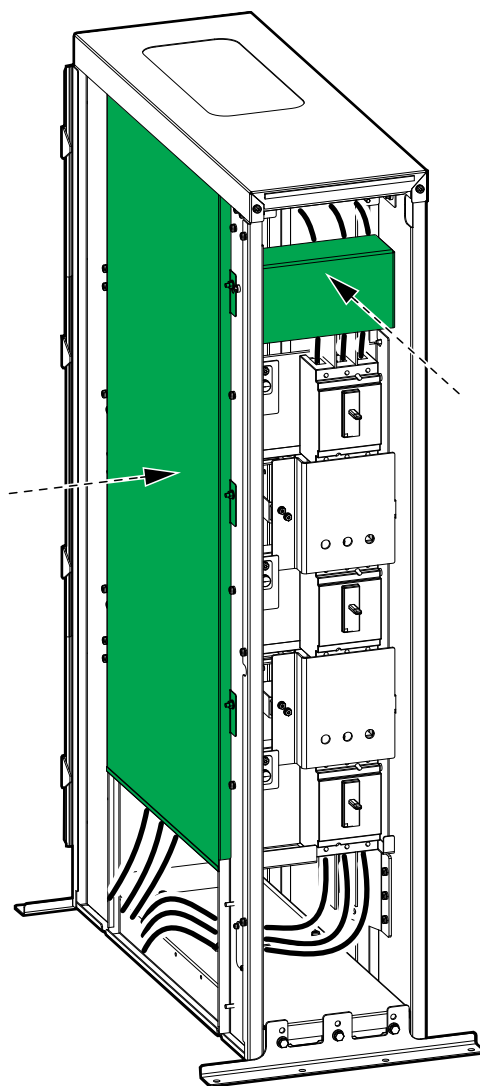

Interconnect the UPS and the Maintenance Bypass Cabinet


1. Remove the transportation brackets from the maintenance bypass cabinet, if not already removed for seismic anchoring.
2. Remove the three M6 x 16 mm interconnection screws from the left side of the maintenance bypass cabinet. Save for interconnection.
3. Position the UPS close to the maintenance bypass cabinet with a little free space between the cabinets.
4. Route the internal power cables from the maintenance bypass cabinet into the UPS.

Front View of the UPS and the Maintenance Bypass Cabinet

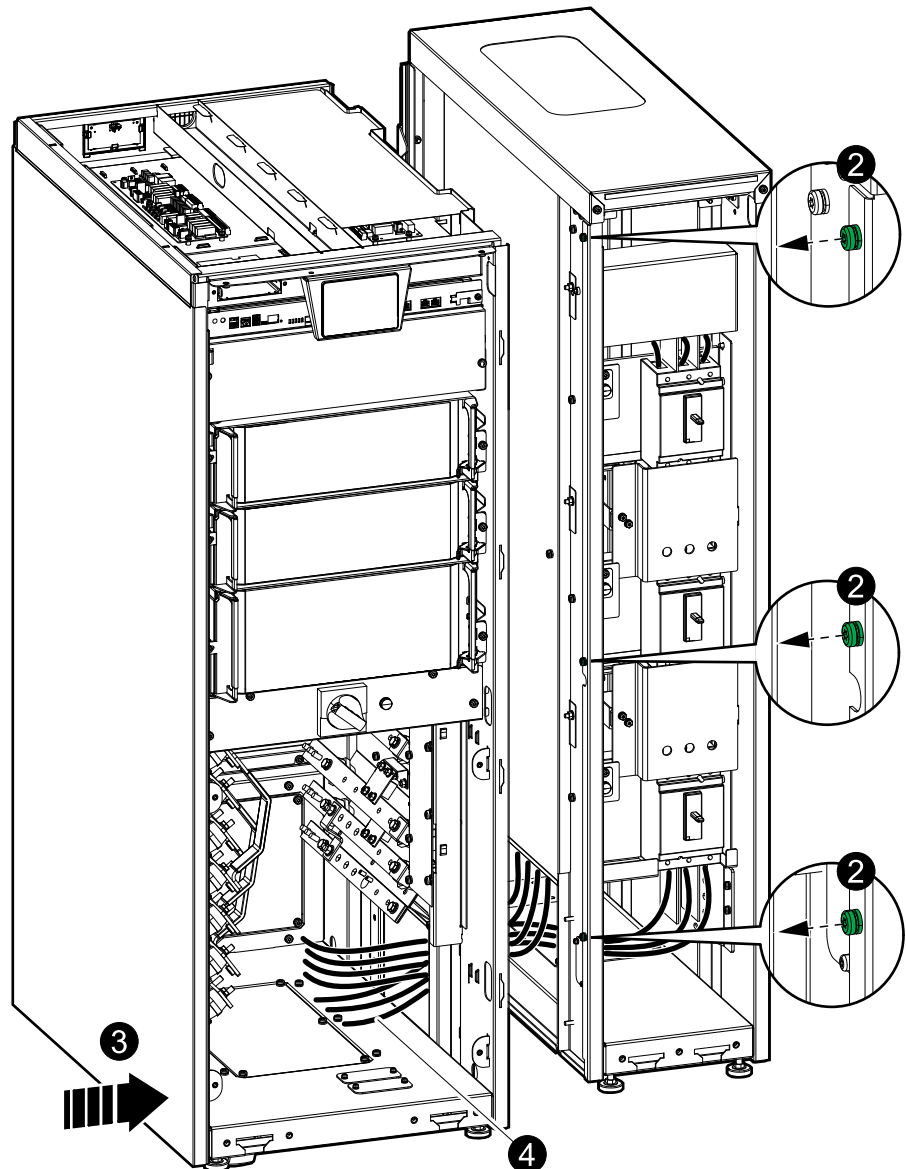


5. Push the UPS into place up against the maintenance bypass cabinet. The rear bracket on the maintenance bypass cabinet must connect to the UPS.

Rear View of the Maintenance Bypass Cabinet and the UPS

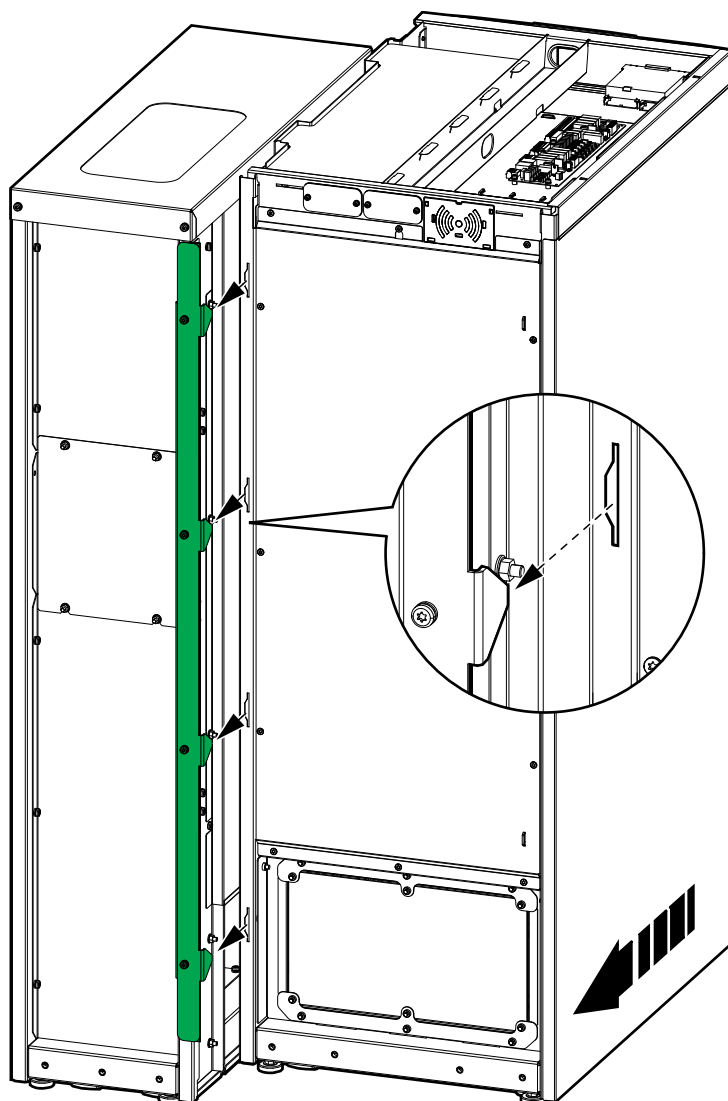


6. Install the three M6 x 16 mm interconnection screws between the UPS and the maintenance bypass cabinet as shown.

Front View of the UPS and the Maintenance Bypass Cabinet

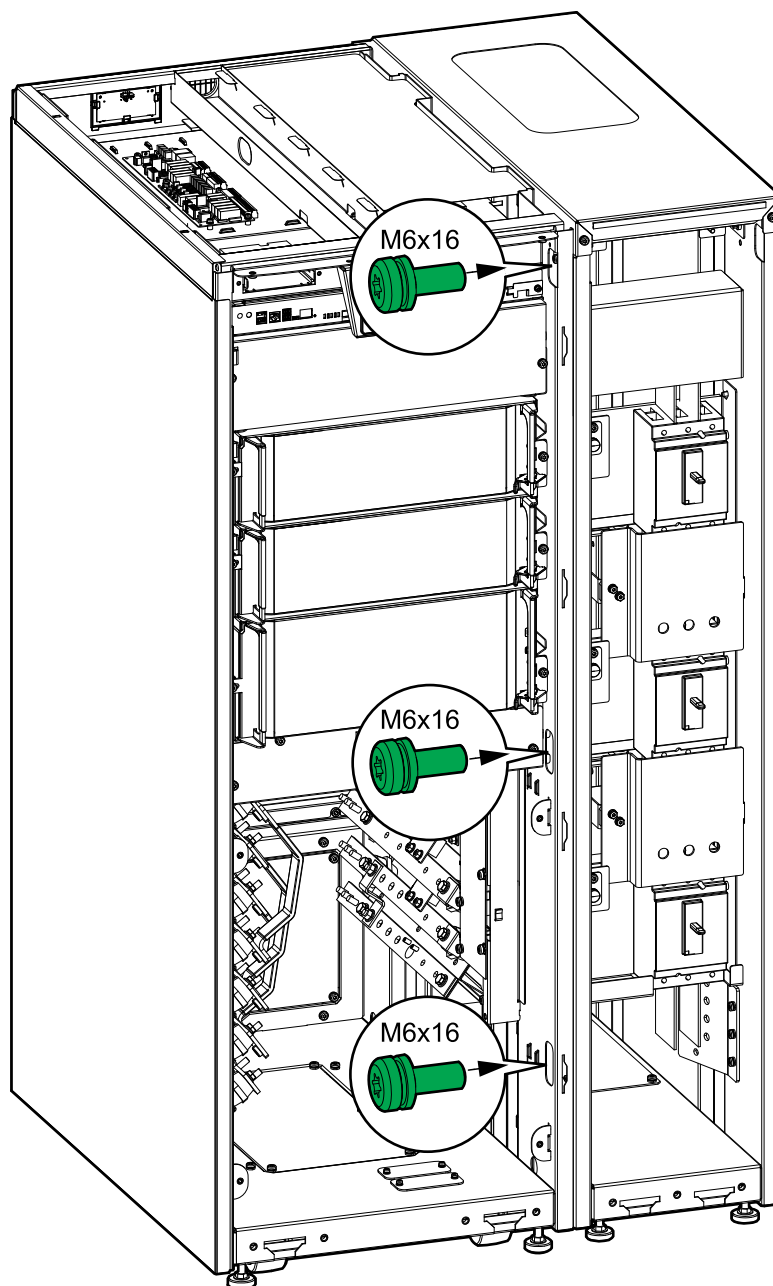

7. Lower the front and rear leveling feet on the UPS and the maintenance bypass cabinet with a wrench until they connect with the floor. Use a bubble-leveler to check that the UPS and maintenance bypass cabinet are level.

Front View of the UPS

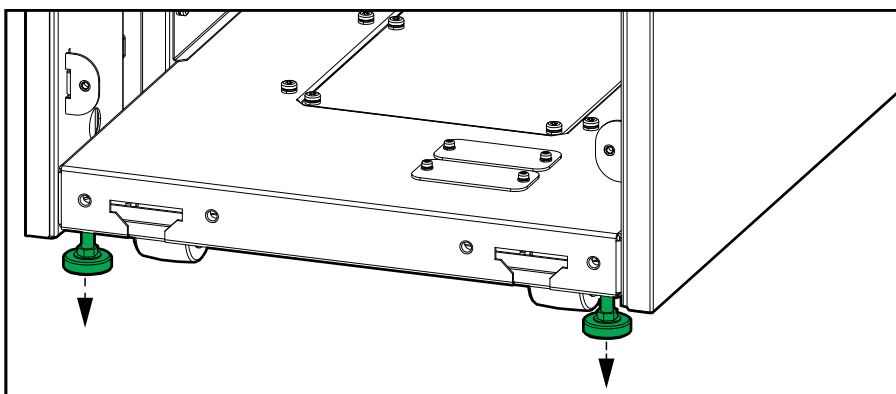

⚠ CAUTION

TIP HAZARD


Do not move the cabinet after the leveling feet have been lowered.

Failure to follow these instructions can result in injury or equipment damage.


Connect the Signal Cables

1. Connect the provided Class 2/SELV signal cable 0W49283 to board 640-4864 in the UPS as shown.


Front View of the UPS and the Maintenance Bypass Cabinet

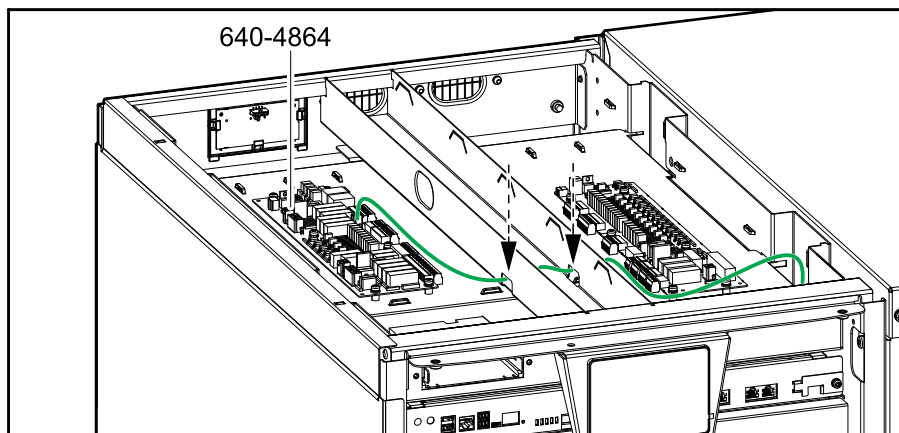

Single Mains System

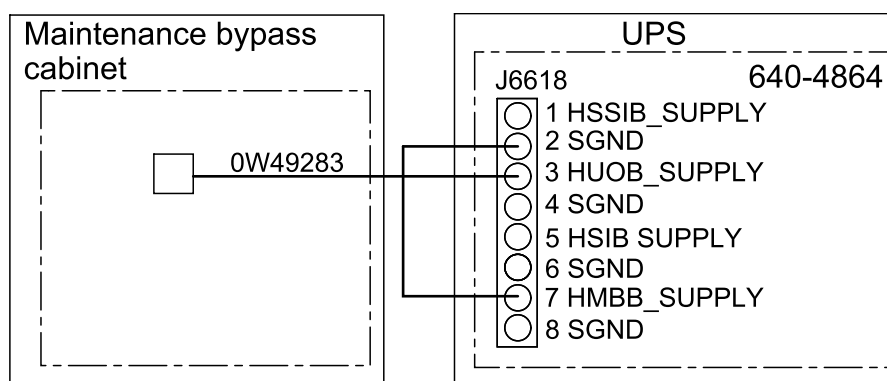


Dual Mains System

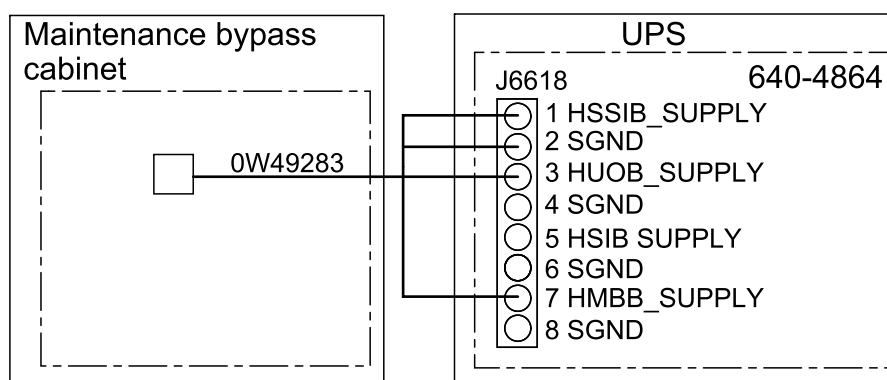


- 2. Connect the non-Class 2/non-SELV signal cable 0W49284 to board 640-4843 in the UPS as shown.


Front View of the UPS and the Maintenance Bypass Cabinet

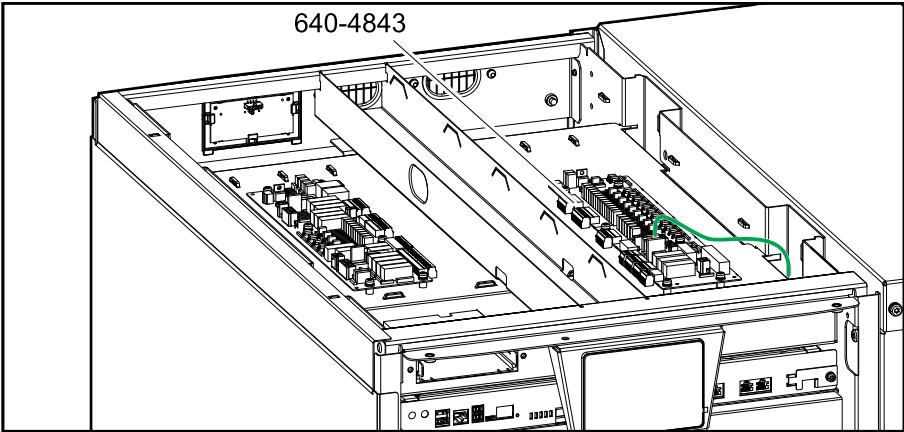

Single Mains System

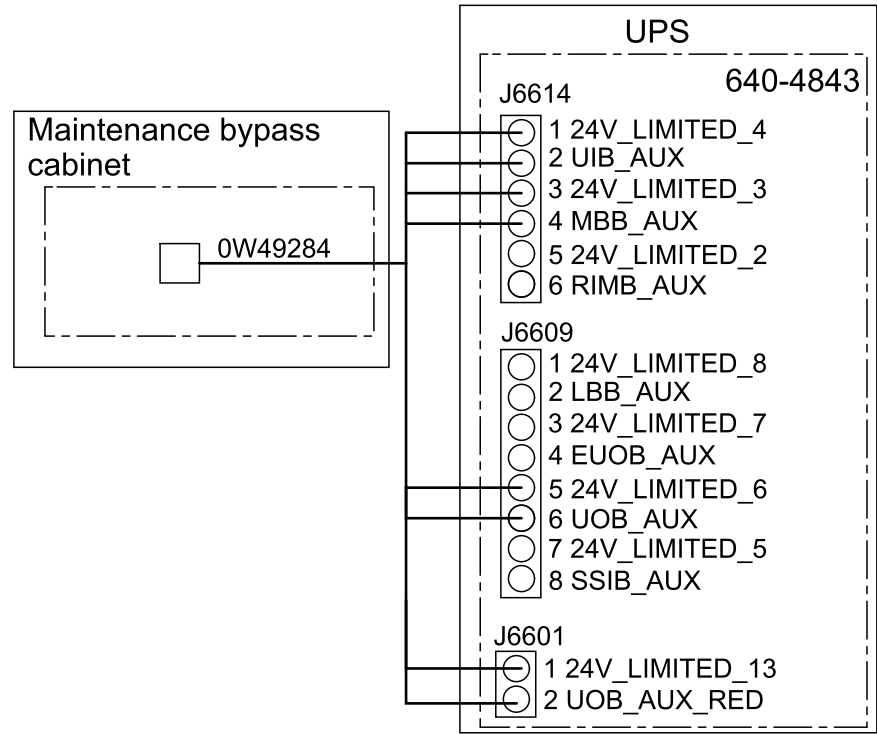


Dual Mains System

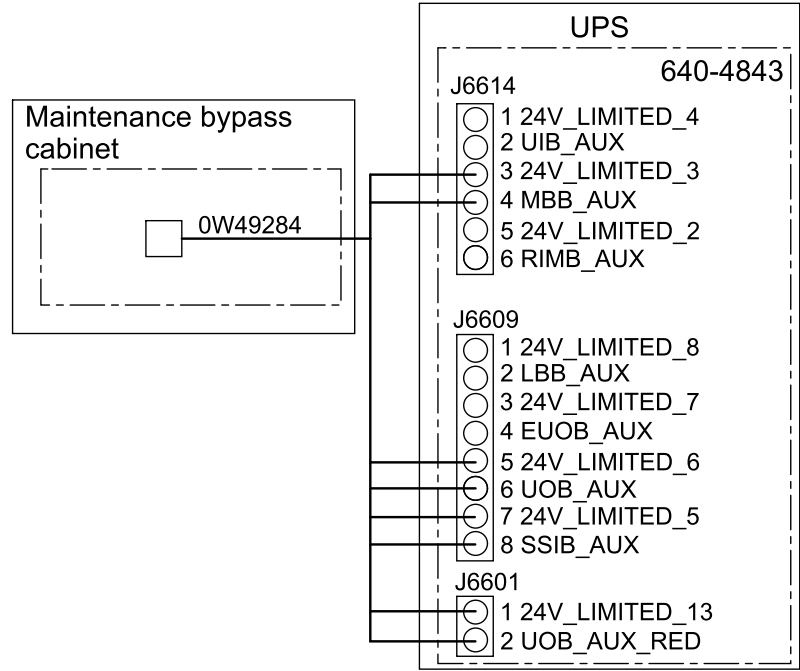

3. Route the signal cables down through the cable channel in the right side of the UPS and into the maintenance bypass cabinet through the cable entry opening.


4. Connect the signal cables at the cable connection point in the maintenance bypass cabinet.

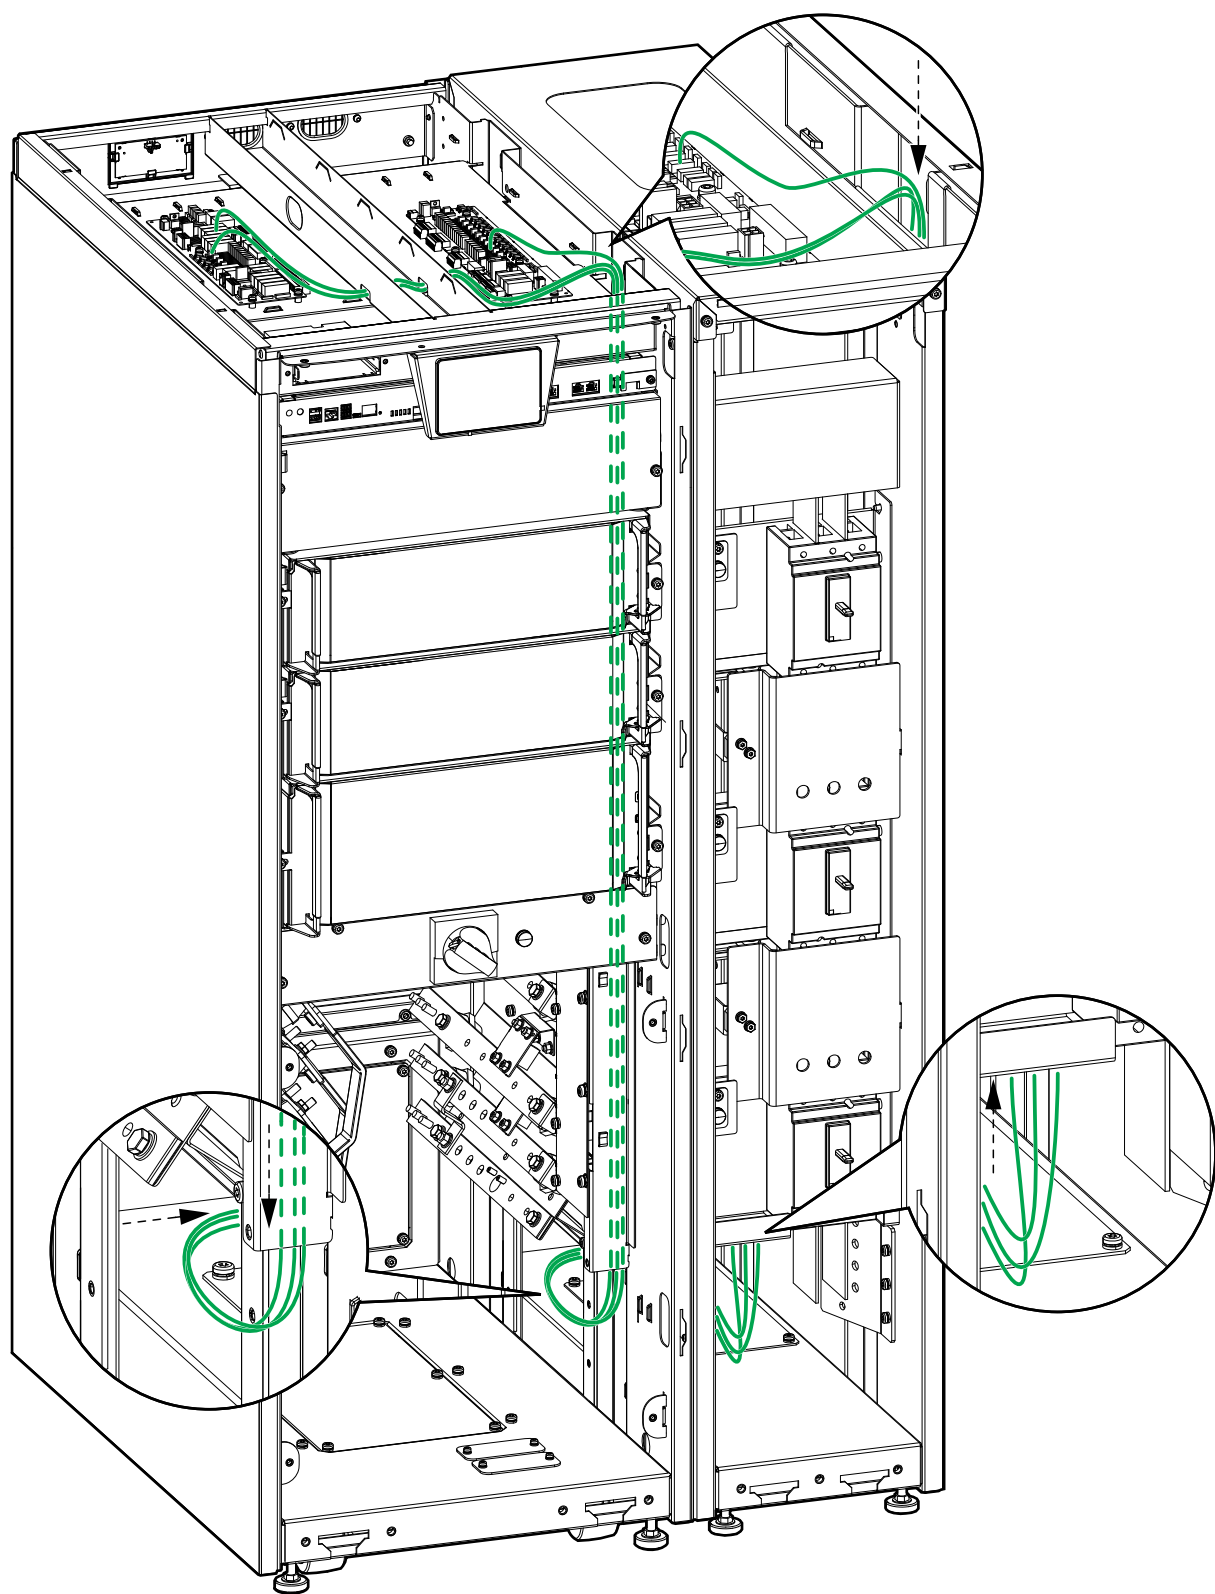

Final Installation


1. Reinstall the upper and lower front plate.

Front View of the Maintenance Bypass Cabinet

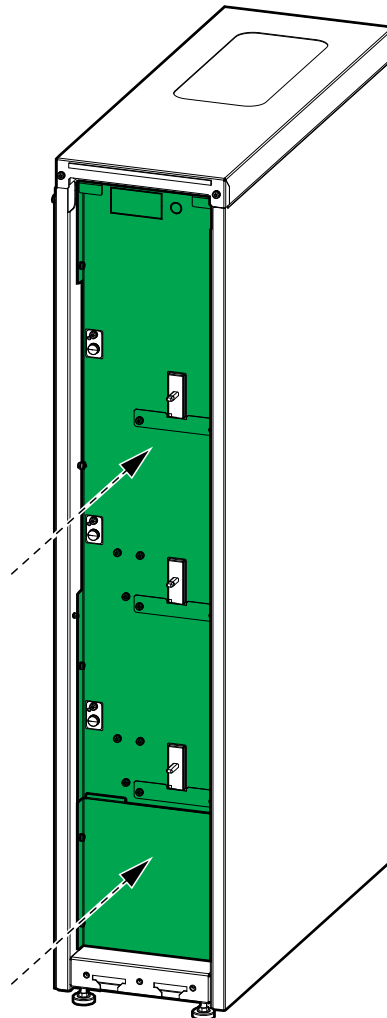


2. **Only for dual mains:** Add the labels SSIB, HSSIB, and the diagram label on the upper front plate. The labels are provided with this manual.

Front View of the Maintenance Bypass Cabinet – Single Mains

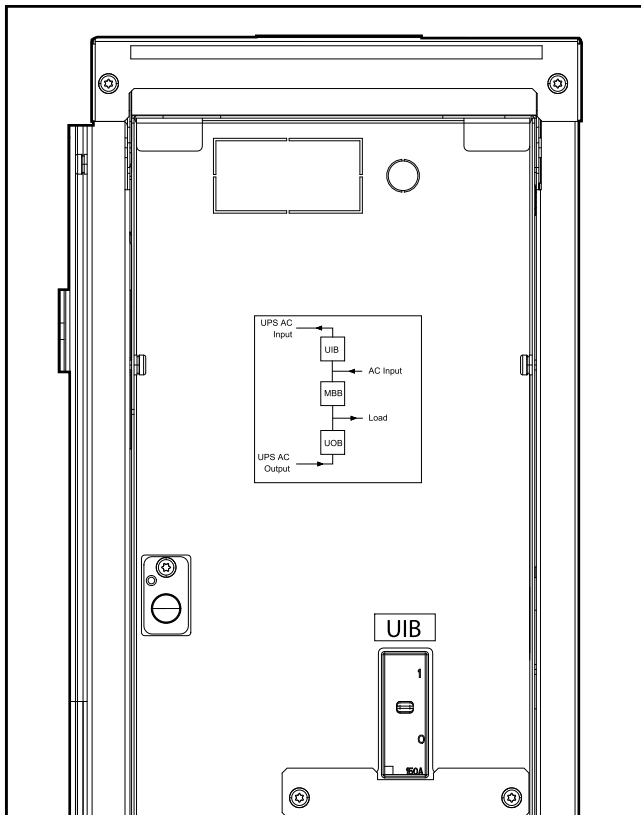


Front View of the Maintenance Bypass Cabinet – Dual Mains

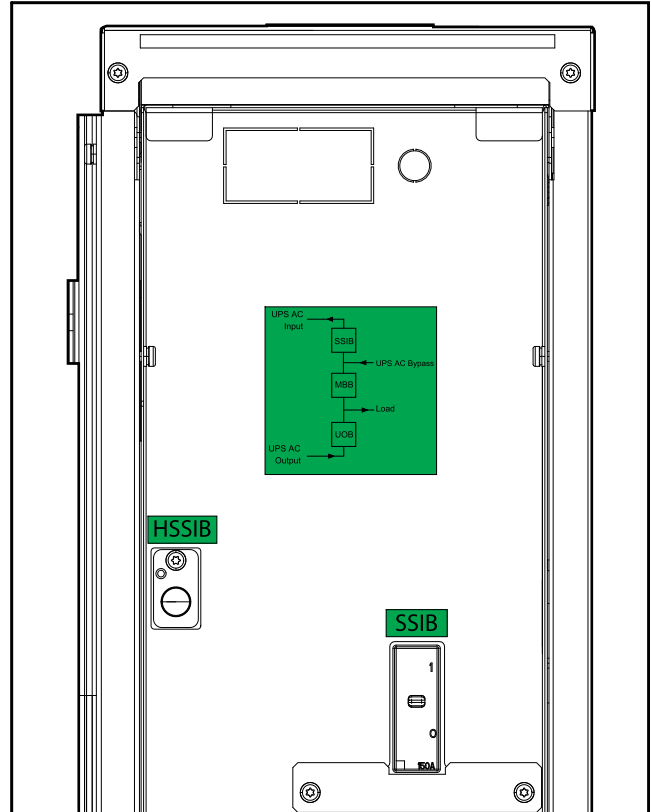

3. **Only for seismic anchoring:**


- Install the seismic front anchoring bracket on the maintenance bypass cabinet with the provided M8 bolts.
- Mount the seismic front anchoring bracket on the maintenance bypass cabinet to the floor with M10 expansion bolts (not provided).

Front View of the Maintenance Bypass Cabinet

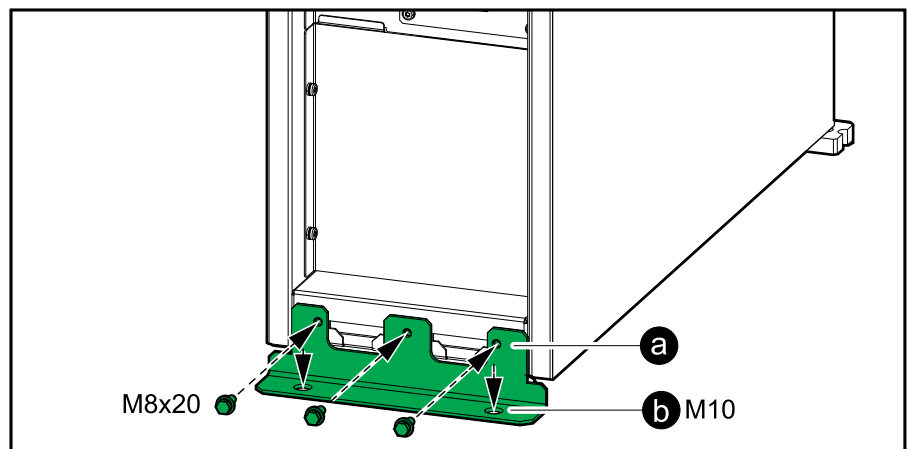

4. Reinstall the front panel on the maintenance bypass cabinet:
 - a. Insert the two taps in the bottom of the front panel in the maintenance bypass cabinet at a tilted angle.
 - b. Reconnect the front panel strap to the maintenance bypass cabinet.
 - c. Close the front panel and lock with the two locking knobs.

Front Right View of the Maintenance Bypass Cabinet

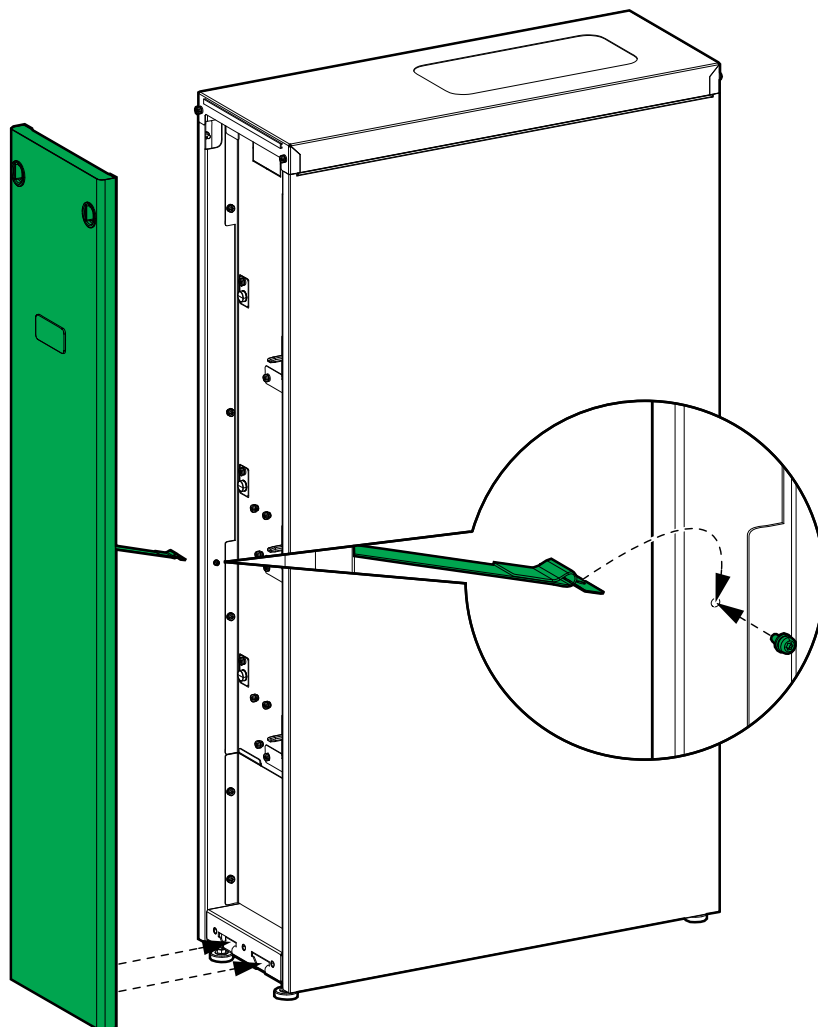

5. Follow the UPS installation manual to connect the internal power cables in the UPS.

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

+ 33 (0) 1 41 29 70 00

www.schneider-electric.com

As standards, specifications, and design change from time to time,
please ask for confirmation of the information given in this publication.

© 2018 – 2018 Schneider Electric. All rights reserved.

990-5909-001