



# OWNER'S MANUAL

# DVD MINI

# HI-FI AUDIO

---

Please read this manual carefully before operating your set and retain it for future reference.

MODEL

OL55D



MFL71422008

[www.lg.com](http://www.lg.com)  
Copyright © 2019 LG Electronics Inc. All Rights Reserved.

## Safety Information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

**CAUTION:** No naked flame sources, such as lighted candles, should be placed on the apparatus.



**CAUTION:** This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

**NOTICE:** For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

## CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

**CAUTION:** Be careful to make sure children do not put their hands or any objects into the \*speaker duct

\* speaker duct: A hole for plentiful bass sound on speaker cabinet. (enclosure)

## Symbols

	Refers to alternating current (AC).
	Refers to direct current (DC).
	Refers to class II equipment.
	Refers to stand-by.
	Refers to "ON" (power).
	Refers to dangerous voltage.

# Table of Contents

## 1 Getting Started

---

- 2 Safety Information
- 6 Unique Features
- 7 Introduction
  - 7 – Playable Discs
  - 7 – About the “Ø” Symbol Display
  - 7 – Symbols Used in this Manual
  - 7 – Regional Codes
- 8 Playable file Requirement
  - 8 – Music file requirement
  - 8 – Photo file requirement
  - 9 – Video file requirement
  - 9 – Compatible USB Devices
  - 9 – USB device requirement
- 10 Remote control
- 12 Top panel
- 14 Front panel / Rear panel

## 2 Connecting

---

- 16 Connections to Your TV
  - 16 – HDMI Out Connection
  - 17 – Resolution Setting
- 18 AC Power Cord Connection
- 18 Optional Equipment Connection
  - 18 – AUX IN 1 Connection
  - 19 – AUX IN 2 Connection
- 20 – USB Connection
- 20 – Antenna Connection

## 3 System Setting

---

- 21 Adjust the setup settings
  - 21 – OSD Initial language settings - Optional
  - 21 – To display and exit the Setup menu
- 22 – Language
- 22 – Display
- 23 – Audio
- 24 – Lock (Parental Control)

## 4 Operating

---

- 25 Using the Home Menu
- 26 Basic Operations on Disc
- 27 Advanced Operations on Disc
  - 27 – Displaying Disc Information on-screen
  - 27 – To display the DVD Menu
  - 27 – To display the DVD title
  - 27 – 1.5 times speed playback
  - 27 – Screen Saver
  - 28 – Starting play from selected time
  - 28 – Resume playback
  - 28 – Changing subtitle code page
  - 29 – Marked Playback
  - 30 – Viewing a PHOTO file
  - 31 Basic Operations on USB
  - 32 – Selecting a folder and an MP3/WMA file
  - 33 – Deleting a file/folder or format
  - 34 Advanced Operations on USB
  - 34 – JUKE BOX Playback
  - 35 Playback Effect
    - 35 – DJ EFFECT
    - 35 – DJ SCRATCHER
  - 35 – AUTO DJ
  - 36 – DJ PAD
  - 36 – DJ LOOP
  - 36 – PARTY ACCELERATOR
  - 37 – PARTY KICK STARTER
  - 38 Using BLUETOOTH® wireless technology
    - 38 – Listening to music stored on the Bluetooth devices

41 Using the LG XBOOM App  
41 – About “LG XBOOM” App  
41 – Install “LG XBOOM” App onto Your  
    Bluetooth Device  
42 – Activate Bluetooth with “LG XBOOM” App  
43 Radio Operations  
43 – Listening to the radio  
43 – Improving poor FM reception  
43 – Presetting the Radio Stations  
43 – Deleting all the saved stations  
44 Sound adjustment  
44 – Setting the sound mode  
44 – Setting the USER EQ  
45 Recording to USB  
46 Other Operations  
46 – Turn off the sound temporarily  
46 – DEMO  
46 – Resume stop  
46 – CHILDSAFE Mode  
46 – Last Scene Memory  
46 – Power Resume - Optional  
46 – System Select - Optional  
47 – Using Microphone  
49 – LIGHTING  
50 – Sleep Timer Setting  
50 – Dimmer  
50 – Auto power down  
50 – AUTO POWER On  
51 – Auto function change  
52 Setting the Clock  
52 – Setting the Clock through “LG XBOOM” App  
52 – Using your player as an alarm clock  
53 LG Sound Sync  
54 WIRELESS PARTY LINK Connection

## 5 Troubleshooting

56 Troubleshooting  
56 – General  
57 – NOTES to release Demo mode

## 6 Appendix

58 Controlling a TV with the Supplied Remote  
    Control  
58 – Setting up the remote to control your TV  
59 Area Code List  
60 Language code List  
61 Trademarks and Licenses  
62 Maintenance  
62 – Notes on Discs  
62 – Handling the Unit  
63 General specifications

1

2

3

4

5

6

## Unique Features

### **BLUETOOTH®**

Listens to music stored on your **Bluetooth** device.

### **Playback effects**

Listens to music with various sound and playback effects.

### **USB Direct Recording**

Records music to your USB device.

### **LG XBOOM**

LG XBOOM is an app designed to let you take control of some of LG's latest audio devices.

(Page 41 - 42)

### **LG Sound Sync**

Controls volume level of this unit by the remote control of your LG TV that is compatible with LG Sound Sync.

### **Full HD up-scaling**

Views Full HD picture quality with simple setup.

# Introduction

## Playable Discs

This unit plays DVD±R/RW and CD-R/RW that contains audio titles, MP3, WMA and/or JPEG files. Some DVD±RW/DVD±R or CD-RW/CD-R cannot be played on this unit due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software.



DVD-VIDEO (8 cm/12 cm disc)

Discs such as movies that can be purchased or rented.



DVD±R (8 cm/12 cm disc)

Video mode and finalized only.



DVD-RW (8 cm/12 cm disc)

Video mode and finalized only.



DVD+R: Video mode only

Supports the double layer disc also.



DVD+RW (8 cm/12 cm disc)

Video mode and finalized only.



Audio CD: Music CDs or CD-R/CD-

RW in music CD format that can be purchased.

## Symbols Used in this Manual



DVD-Video, DVD±R/RW in Video mode or VR mode and finalized



Audio CDs



Video files contained in the Disc



Audio files contained in the Disc



Photo files contained in the Disc



### Note

Indicates special notes and operating features.



### Caution

Indicates cautions for preventing possible damages from abuse.

## Regional Codes

This unit has a regional code printed on the rear of the unit. This unit can play only DVD discs labeled same as the rear of the unit or "ALL".

- Most DVD discs have a globe with one or more numbers in it clearly visible on the cover. This number must match your unit's regional code or the disc cannot play.
- If you try to play a DVD with a different regional code from your unit, the message "Check Regional Code" appears on the TV screen.

## About the "Ø" Symbol Display

"Ø" may appear on your TV display during operation and indicates that the function explained in this owner's manual is not available on that specific media.

# Playable file Requirement

## Music file requirement

MP3/WMA file compatibility with this unit is limited as follows.

- Sampling frequency: within 32 to 48 kHz (MP3), within 32 to 48 kHz (WMA)
- Bit rate: within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- Support Version: v2, v7, v8, v9
- Maximum files: Disc: 999 / USB: 2,000
- Maximum folders: Disc: 99 / USB: 200
- File extensions: ".mp3"/ ".wma"
- Certain MP3/WMA files may not be played depending on the type or format of the file.
- CD-ROM file format: ISO 9660/ JOLIET
- We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.
- The DTS disc is not supported.

You have to set the disc format option to [Mastered] in order to make the discs compatible with the LG players when formatting rewritable discs. When setting the option to Live File System, you cannot use it on LG players.

(Mastered/Live File System: Disc format system for Windows Vista)

## Photo file requirement

Photo file compatibility with this unit is limited as follows:

- Max pixel in width: 2760 x 2048 pixel
- Maximum files: Under 999
- Some discs may not operate due to a different recording format or the condition of disc.
- File extensions: ".jpg"
- CD-ROM file format: ISO9660/ JOLIET

## Video file requirement

Video file compatibility with this unit is limited as follows:

- Available resolution: within 720 x 576 (W x H) pixels.
- The file name of the Video subtitle should be entered within 45 characters.
- If there is impossible code to express in the Video file, it may be displayed as “\_” mark on the display.
- Frame rate: less than 30 fps.
- If the video and audio structure of recorded files is not interleaved, either video or audio is outputted.
- Playable Video file: “.avi”, “.mpg”, “.mpeg”
- Playable Subtitle format: SubRip (\*.srt/ \*.txt), SAMI (\*.smi), SubStation Alpha (\*.ssa/ \*.txt), MicroDVD (\*.sub/ \*.txt), SubViewer 2.0 (\*.sub/ \*.txt), Vobsub (\*.sub)
- Playable Codec format: “Xvid”, “MPEG-1”, “MPEG-2”
- Playable Audio format: “AC3”, “PCM”, “MP3”, “WMA”
- Sampling frequency: within 32 to 48 kHz (MP3), within 32 to 48 kHz (WMA)
- Bit rate: within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- For Discs formatted in Live file system, you can not it on this unit.
- If the name of movie file is different from that of the subtitle file, during playback of a Video file, subtitle may not be display.
- If you play a Xvid file differ from Xvid spec, it may not operate normally.

If you play GMC video file which is more than 1-warp point, video playback screen will not smooth


## Compatible USB Devices

- MP3 Player: Flash type MP3 player
- USB Flash Drive: Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support all USB devices.

## USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/32) file system is supported.)
- This unit recognizes up to 2,000 files.
- External HDD, Card readers, Locked devices, or hard type USB devices are not supported.
- USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device.
- Some USB may not work with this unit.

## Remote control

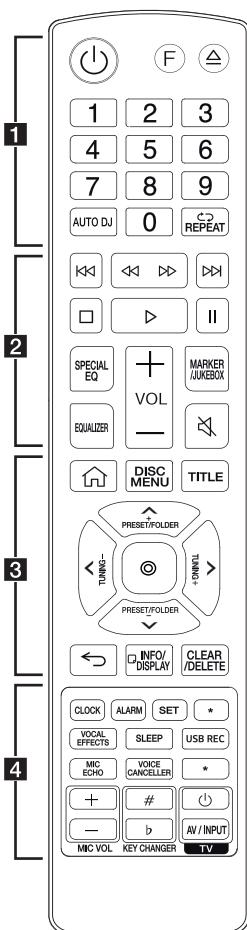

### Replacement of battery



Remove the battery cover on the rear of the remote control, and insert the battery with **+** and **-** matched correctly.

.....1.....

⌚ (Standby): Turns the power on or off.

F (Function): Selects the function and input source.

Input source / Function	Display
Disc	DVD/CD
USB	USB
AUX (3.5 mm) input	AUX 1
AUX input	AUX 2
<b>Bluetooth</b>	BT
LG Sound Sync (Wireless)	LG TV
Radio	FM

△ (Open/Close): Opens and closes the disc tray.

0-9 numerical buttons: Selects numbered options in a menu.

**AUTO DJ**: Selects the AUTO DJ mode. (Page 35)

⟳ REPEAT: Listens to your files/tracks/chapters repeatedly or randomly.

.....2.....

◀◀/▶▶ (Skip): Skips backward or forward.

◀◀/▶▶ (Scan): Scans for a section within a track/file/chapter.

□ (Stop):

- Stops playback.
- Cancels DELETE function.

▷ (Play):

- Starts playback.
- Selects stereo/mono.

II (Pause): Pauses playback.

**SPECIAL EQ**: Chooses special equalizer.

**VOL** (Volume) +/ -: Adjusts speaker volume.

**MARKER/JUKEBOX**:

- Marks play list. (Page 29)
- Selects JUKE BOX mode. (Page 34)
- Makes JUKE BOX list.

**EQUALIZER**: Chooses sound impressions.

🔇 (Mute): Mutes the sound.

**3**

Ⓐ (Home): Displays the [Home Menu] on a DVD/CD function.

**DISC MENU:** Accesses the menu on a DVD disc.

**TITLE:** If the current DVD title has a menu, the title menu appears on the screen. Otherwise, the disc menu may not appear.

Ⓐ/V/ (up/ down/ left/ right): Used to navigate on-screen displays.

**PRESET/FOLDER +/ -:**

- Chooses a preset number for a radio station. (Page 43)
- Searches for a folder of MP3/WMA files. When a USB containing MP3/WMA files in several folders is being played, press **PRESET/FOLDER +/ -** to select the folder you want to play.

**TUNING +/ -:** Tunes in the desired radio station.

Ⓐ (Select):

- Acknowledges menu selection.
- Presetting the radio stations.

⟲ (Close): Moves backwards in the menu or exits the setup menu.

□ **INFO/DISPLAY**

- Accesses On-Screen Display.
- Sees information about your music (USB). An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees **Bluetooth** device name of the unit in BT READY.
- Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
- When these units are successfully connected each other in WIRELESS PARTY LINK mode, each of connected device names appears in the each unit.

**CLEAR/DELETE:**

- Removes a number when setting the password.
- Deletes MP3/WMA files. (USB only). (Page 33)
- Deletes a song on the JUKE BOX list.
- Deletes all the saved stations.

**4**

**CLOCK:** Sets a clock and checks a time.

**ALARM:** With the ALARM function you can turn on Discs, USB play and tuner reception at a desired time.

**SET:** Confirms the setting.

★: This button is not available.

**VOCAL EFFECTS:** Selects various vocal effects mode.

**SLEEP:** Sets the system to turn off automatically at a specified time.

(Dimmer: The display window will be darkened by half.)

**USB REC:**

- Records to USB.
- Stops recording.

**MIC ECHO:** Selects ECHO mode.

**VOICE CANCELLER:** You can reduce the vocal tones during music playback from various input sources.


★: This button is not available.

**MIC VOL -/+ (Microphone Volume):** Adjusts microphone volume.

**KEY CHANGER (#/b):** Changes the key to suit your vocal range.

**TV Control buttons:** Controls the TV. (page 58)  
You can control the TV on or off and input source.

## Top panel

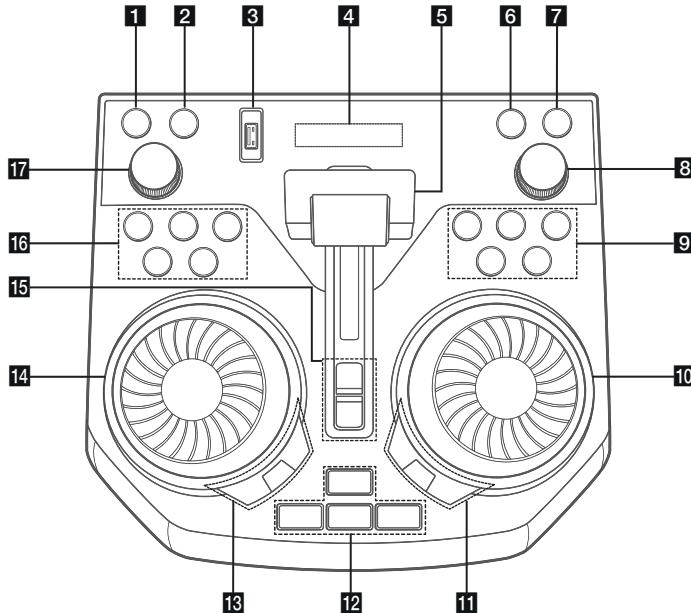

### 1 (Standby)

Turns the power on or off.

### 2 USB REC / DEMO

- Records to USB.
- Stops recording.
- In power off status, if you press **USB REC / DEMO**, show demo mode.

### 3 USB Port

You can play sound files by connecting the USB device.

### 4 Display window

### 5 PARTY ACCELERATOR lever

Slide the lever to create a party atmosphere.

### 6 (Function)

Selects the function and input source.

Input source / Function	Display
Disc	DVD/CD
USB	USB
AUX (3.5 mm) input	AUX 1
AUX input	AUX 2
<b>Bluetooth</b>	BT
LG Sound Sync (Wireless)	LG TV
Radio	FM

**7 ④TWIN**  
Connects two speakers for TWIN mode in WIRELESS PARTY LINK.

**8 MASTER VOL. (Volume) -/+**  
Adjusts speaker volume.

**9 KK / KK (Skip/Scan)**

- Skips backward or forward.
- Scans for a section within a track/file/chapter.
- Selects the radio stations.

**▮▮ (Play/Pause)**

- Starts or pauses playback.
- Selects stereo/mono.

**□ (Stop)**  
Stops playback or cancels DELETE function.

**△ (Open/Close)**  
Opens and closes the disc tray.

**10 DJ SCRATCHER / SEARCH & MULTI**

- Turns clockwise or counterclockwise to make scratch sound.
- Searches a folder or a file (USB only).

**11 SPECIAL EQ / BASS BLAST (or BASS BLAST+)**

- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.

**SEARCH**  
Moves to folder or file in selection mode (USB only).

**OK**  
Selects a folder when searching a file.

**12 PARTY STARTER**

- In power off state, this function turns on the unit with Party Kick Starter sound.
- In power on state, this function mixes the music with Party Kick Starter sound.

**CLUB, DRUM, USER (DJ PAD)**  
Selects CLUB, DRUM or USER sound effect to mix.  
(If you want to use USER, you have to register a source with "LG XBOOM" app.)

**1, 2, 3 (DJ PAD)**  
Press a desired sound pad.

**13 DJ EFFECT**  
Selects a desired DJ effect.

**USER EQ**  
Selects the equalizer created by your own. (Page 44)

**LIGHTING**  
Selects the lighting mode.

**14 DJ SCRATCHER / LEVEL CONTROL**

- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Adjust DJ EFFECT level.
- Selects the vocal effects.
- Selects the lighting effects.

**15 PARTY ACCELERATOR MODE**  
Selects PARTY ACCELERATOR MODE.

**DJ LOOP**  
Selects DJ LOOP mode.  
(DJ LOOP mode can use during USB playback.)

**16 KEY CHANGER (b/#)**  
Changes the key to suit your vocal range.


**VOICE CANCELLER**  
You can reduce the vocal tones during music playback from various input sources.

**VOCAL EFFECTS**  
Selects various vocal effects mode.

**MIC ECHO**  
Selects ECHO mode.

**17 MIC VOL. (Microphone Volume)-/+**  
Adjust microphone volume.

## Front panel / Rear panel

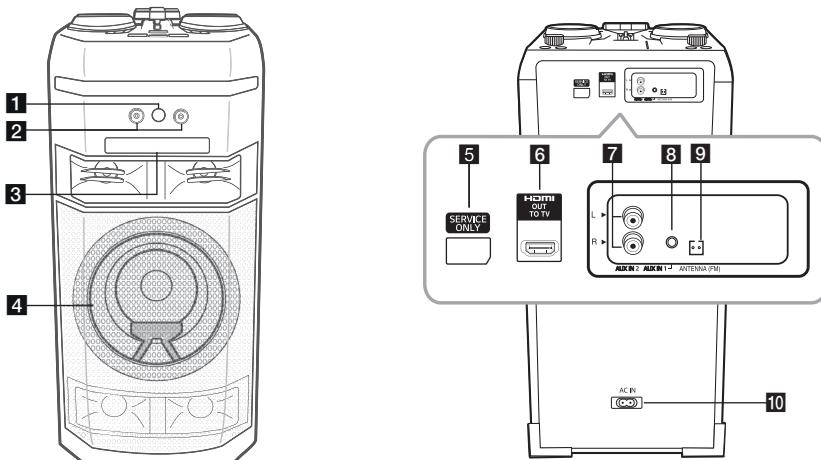

**1** (Remote sensor)

**2** MIC (Microphone) 1/2 jack

**3** Disc tray

**4** Lighting



### Caution

Place the speaker at a safe distance from the child's reach. Otherwise it may result in the speaker falling down and causing personal injury and/or property damage.

**5** SERVICE ONLY: S/W download connector

**6** HDMI OUT TO TV: Connect to TV

**7** AUX IN 2 (L/R): Connect an auxiliary device.

**8** AUX IN 1: Connect a portable device.

**9** ANTENNA (FM)

**10** AC IN socket



### Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

## Useful functions for using the unit

Function	Description	To do	Do this
BT Lock On/Off (Page 40)	It allows you to connect a <b>Bluetooth</b> device only on BT ( <b>Bluetooth</b> ) and LG TV functions.  Initial setting of this function was set to off.	ON	Press and hold <b>▷</b> on the remote control or <b>▷II</b> on the unit for 5 seconds in BT ( <b>Bluetooth</b> ) function.
		OFF	Press and hold <b>▷</b> on the remote control or <b>▷II</b> on the unit for 5 seconds in BT ( <b>Bluetooth</b> ) function.
Auto Power On (Page 50)	It allows the unit to turn on automatically by input signals: BT ( <b>Bluetooth</b> ) or LG TV	ON	Turn off the unit by pressing <b>⊕</b> on the unit for 5 seconds.
		OFF	Turn off the unit by pressing <b>⊕</b> on the unit for 5 seconds.


# Connections to Your TV

## HDMI Out Connection

If you have a HDMI TV or monitor, you can connect it to this unit using a HDMI cable (Type A, High Speed HDMI™ Cable).

Connect the HDMI OUT jack on the unit to the HDMI IN jack on a HDMI compatible TV or monitor.

Set the TV's source to HDMI (refer to TV's Owner's manual).

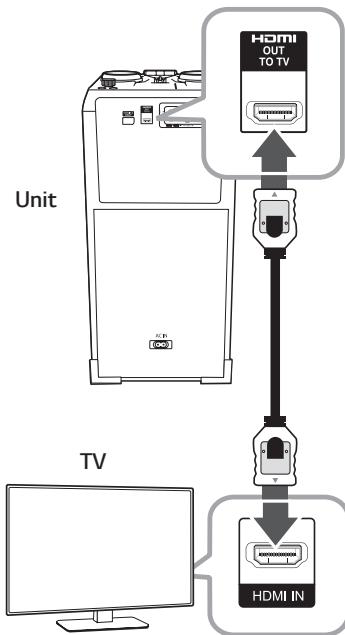

### Caution

- Changing the resolution when the connection has already been established may result in malfunctions. To solve the problem, turn off the unit and then turn it on again.
- When the HDMI connection with HDCP is not verified, TV screen is changed to black or green screen or the snow noise may occur on the screen. In this case, check the HDMI connection, or disconnect the HDMI cable.
- Make sure the unit is connected directly to the TV. Tune the TV to the correct video input channel.



### Note

- You can fully enjoy digital audio and video signals together with this HDMI connection.
- When you use HDMI connection, you can change the resolution for the HDMI output. (Page 17)

### ! Note

- If a connected HDMI device does not accept the audio output of the unit, the HDMI device's audio sound may be distorted or may not output.
- When you connect a HDMI or DVI compatible device make sure of the following:
  - Try switching off the HDMI/DVI device and this unit. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this unit.
  - The connected device's video input is set correctly for this unit.
  - The connected device is compatible with 720 x 480i (or 576i), 720 x 480p (or 576p), 1280 x 720p, 1920 x 1080i or 1920 x 1080p video input.
- Not all HDCP-compatible HDMI or DVI devices will work with this unit.
  - The picture will not be displayed properly with non-HDCP device.
  - This unit does not playback and TV screen is changed to black or green screen or the snow noise may occur on the screen.
- If there is noise or lines on the screen, please check the HDMI cable and use a higher version cable than High Speed HDMI™ Cable.
- The HDMI sounds output only DVD/CD function (Except playback effect).

## Resolution Setting

The unit provides several output resolutions for HDMI.

You can change the resolution using [Setup] menu.

1. Press **Setup** on the remote control.
2. Use **▲/▼/◀/▶** on the remote control to select the [Setup] and press **OK** on the remote control.

The [Setup] menu appears.




3. Use **▲/▼** on the remote control to select [Display] option then press **>** on the remote control to move to the second level.
4. Use **▲/▼** on the remote control to select the [Resolution] option then press **>** on the remote control to move to the third level.
5. Use **▲/▼** on the remote control to select the desired resolution then press **OK** on the remote control to confirm your selection.

### ! Note

- If your TV does not accept the resolution you have set on the player, you can set resolution to 480p (or 576p) as follows: Press **OK** for more than 5 seconds.
- [Home Menu] appears only on DVD/CD function.

## AC Power Cord Connection

1. Connect one end of the AC power cord (included) to the **AC IN** socket.

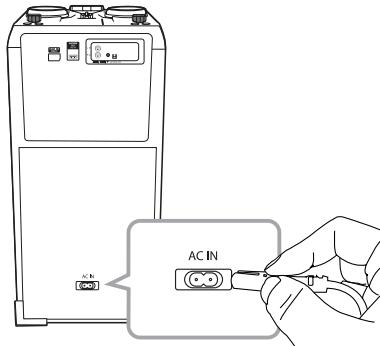

2. Plug the other end into the wall outlet.


### **! Note**

Unplug the AC power cord from the wall outlet if you do not use for an extended period of time.

## Optional Equipment Connection

### AUX IN 1 Connection

Connect an output (earphone or line out) of portable device (MP3 or PMP etc) to the **AUX IN 1** (3.5 mm) connector.

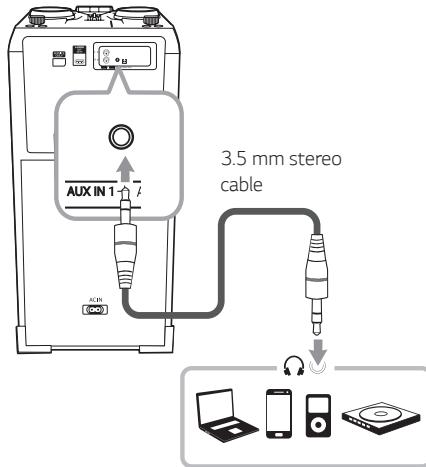


MP3 player etc.

## AUX IN 2 Connection

Connect an output of auxiliary device (Camcorder, TV, Player, etc) to the **AUX IN 2 (L/R)** connector.

If your device has only one output for audio (mono), connect it to the left(white) audio jack on the unit.

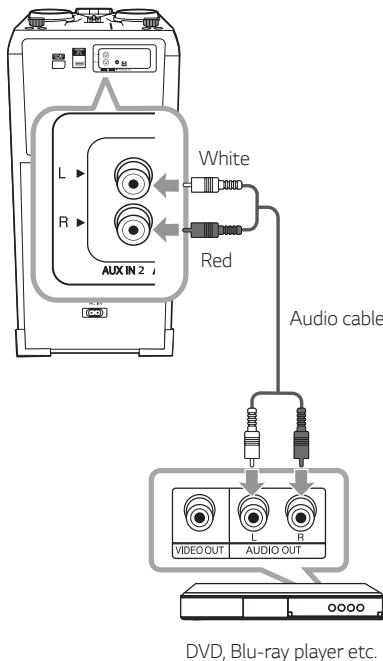

## Listening to music from your portable player or external device

The unit can be used to play the music from many types of portable player or external device.

1. Connect the portable player to the **AUX IN 1** connector of the unit.

Or

Connect the external device to the **AUX IN 2** connector of the unit.


2. Turn the power on by pressing .
3. Press **F** to select AUX 1 or AUX 2 function.
4. Turn on the portable player or external device and start it playing.

### Note

Automatically switches to the AUX 1 function when you connect the portable device to the **AUX IN 1** connector.


## USB Connection

Connect a USB device (or MP3 player, etc.) to the USB ports on the unit.

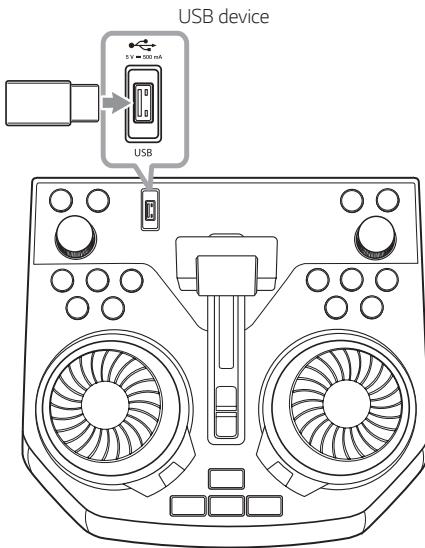

## Antenna Connection

Connect the supplied FM antenna for listening to the radio.

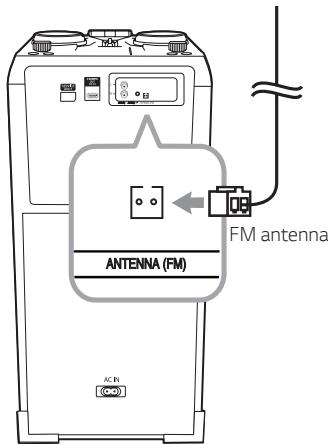

### Note

Be sure to fully extend the FM wire antenna.

### Note

Removing the USB device from the unit:

1. Choose a different function mode or press  twice in a row.
2. Remove the USB device from the unit.

# Adjust the setup settings

By using the Setup menu, you can make various adjustments to items such as picture and sound.

You can also set a language for the subtitles and the Setup menu, among other things. For details on each Setup menu item, see pages 21 to 24.

## OSD Initial language settings - Optional

During the first use of this unit, the initial language setup menu appears on your TV screen. You must complete initial language selection before using the unit. English will be selected as the initial language.

1. Press  to turn the unit on. The language setup menu will appear on the screen.
2. Use  on the remote control to select a language then press  on the remote control.

The confirm menu will appear.



3. Use  on the remote control to select the [Enter] then  on the remote control to finish the language setup.

## To display and exit the Setup menu

1. Press  on the remote control.  
Displays the [Home Menu].



2. Select an [Setup] by using  on the remote control.  
Displays the [Setup].
3. Press  on the remote control.  
Displays the [Setup].
4. Press  on the remote control or  on the remote control to exit in the [Setup] Menu.

### About help menu for Setup

Menu	Buttons	Operation
 /  Move	 /  Move	Moving to another menu.
 /  Move	 /  Move	Moving to previous level.
 /  Move	 /  Move	Moving to next level or selecting menu.
 /  Close	 /  Close	To exit the [Setup] menu.
 /  Select	 /  Select	To confirm menu.



### Note

[Home Menu] appears only on DVD/CD function.

## Language

### Menu Language

Select a language for the Setup menu and on screen display.

### Disc Audio / Disc Subtitle / Disc Menu

Select the language you prefer for the audio track (disc audio), subtitles, and the disc menu.

#### [Original]

Refers to the original language in which the disc was recorded.

#### [Other]

To select another language, press numeric buttons and then **◎** on the remote control to enter the corresponding 4-digit number according to the language code list on the page 60.

If you enter the wrong language code, press **CLEAR/DELETE** on the remote control.

#### [Off (for Disc Subtitle)]

Turns off Subtitle.

## Display

### TV Aspect

Select the screen aspect to use based on the shape of your TV screen.

#### [4:3]

Select when a standard 4:3 TV is connected.

#### [16:9]

Select when a 16:9 wide TV is connected.

### Display Mode

The Display Mode setting works only when the TV Aspect mode is set to 4:3.

#### [Letterbox]

Displays a wide picture with bands on the upper and lower portions of the screen.

#### [Panscan]

Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit. (If the disc/file is not compatible with Pan Scan, the picture is displayed at Letterbox ratio.)

### Resolution

Sets the output resolution of HDMI video signal. Refer to "Resolution Setting" for details about the resolution (page 17).

#### [Auto]

If the HDMI jack is connected to TVs providing display information (EDID), automatically selects the resolution best suited to the connected TV.

#### [1080p]

Outputs 1080 lines of progressive video.

#### [1080i]

Outputs 1080 lines of interlaced video.

#### [720p]

Outputs 720 lines of progressive video.

#### [480p (or 576p)]

Outputs 480 (or 576) lines of progressive video.

#### [480i (or 576i)]

Outputs 480 (or 576) lines of interlaced video.

## Audio

### DRC (Dynamic Range Control)

Make the sound clear when the volume is turned down and prevent a sudden sound increase (Dolby Digital only). Set to [On] for this effect.

### HD AV Sync

Sometimes Digital TV encounters a delay between picture and sound. If this happens you can compensate by setting a delay on the sound so that it effectively 'waits' for the picture to arrive: this is called HD AV Sync. Use **Λ / V** on the remote control to scroll up and down through the delay amount, which you can set at anything between 0 and 300ms.

## Lock (Parental Control)

### Initial Setting the Area Code

When you use this unit for the first time, you have to set the Area Code.

1. Select the [Lock] menu and then press **>** on the remote control.
2. Press **>** on the remote control.  
To access the [Lock] options, you must input the password you have created.  
Input a password and press **○** on the remote control. Enter it again and press **○** on the remote control to verify.  
If you make a mistake before pressing **○** on the remote control, press **CLEAR/DELETE** on the remote control.
3. Select the first character using **Λ / Β** on the remote control.
4. Press **○** on the remote control and select the second character using **Λ / Β** on the remote control.
5. Press **○** on the remote control to confirm your Area code selection.

### Rating

Blocks playback of rated DVDs based on their contents. Not all discs are rated.

1. Select [Rating] on the [Lock] menu then press **>** on the remote control.
2. Input a password and press **○** on the remote control.
3. Select a rating from 1 to 8 using the **Λ / Β** on the remote control.

#### [Rating 1-8]

Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.

#### [Unlock]

If you select unlock, parental control is not active and the disc plays in full.

4. Press **○** on the remote control to confirm your rating selection.

### Password

You can enter or change password.

1. Select [Password] on the [Lock] menu and then press **>** on the remote control.
2. Press **○** on the remote control.
3. Input a password and press **○** on the remote control.  
To change the password, press **○** on the remote control when the [Change] option is highlighted.  
Input a password and press **○** on the remote control.  
Enter it again and press **○** on the remote control to verify.
4. Press **Λ** on the remote control to exit the menu.

#### ! Note

If you forget your password, you can clear it using the following steps:

1. Select the [Setup] menu on the [Home Menu].
2. Input the 6-digit number "210499" and press **○** on the remote control.  
The password is cleared.

### Area Code

Enter the code of the area whose standards were used to rate the DVD video disc, based on the list on page 59.

1. Select [Area Code] on the [Lock] menu then press **>** on the remote control.
2. Input a password and press **○** on the remote control.
3. Select the first character using **Λ / Β** on the remote control.
4. Press **○** on the remote control and select the second character using **Λ / Β** on the remote control.
5. Press **○** on the remote control to confirm your Area code selection.

## Using the Home Menu

1. Press  on the remote control.

Displays the [Home Menu].



2. Select an option by using  on the remote control.
3. Press  on the remote control then selected option menu.

[Music] – Displays [MUSIC] menu.

[Movie] – Start video media's playback or displays the [MOVIE] menu.

[Photo] – Displays [PHOTO] menu.

[Setup] – Displays the [SETUP] menu.



### Note

- [Home Menu] appears only on DVD/CD function.
- USB function is only available on music playback.

## Basic Operations on Disc

1. Insert the disc by using the .
2. Press  on the remote control.  
Displays the [Home Menu].
3. Select an option by using  on the remote control.
4. Press  on the remote control then selected option menu.

To	Do this
Stop	Press  .
Playback	Press  on the remote control or  on the unit.
Pause	Press  on the remote control or  on the unit.
Frame-by-Frame playback	Press  on the remote control repeatedly to play title Frame-by-Frame. (DVD Movie title, Movie file only)
Skipping to the next/ previous chapter/ track/ file	<p>During playback, press  to go to the next chapter/ track/ file or to return to the beginning of the current chapter/ track/ file.</p> <p>Press  twice briefly to step back to the previous chapter/ track/ file.</p>
Locating a point quickly by playing a file in fast forward or fast reverse	<p>During playback, press  on the remote control or press and hold  on the unit repeatedly to select the required scan speed.</p> <p>To return to normal speed, press  on the remote control or  on the unit.</p>

To	Do this
Playing repeatedly or randomly	<p>Press  <b>REPEAT</b> on the remote control repeatedly, and the current title, chapter or track will be played back repeatedly or randomly.</p> <ul style="list-style-type: none"> <li>- DVD: Chapter/ Title/ Off</li> <li>- Video(MOVIE): Title/ All/ Off</li> <li>- Audio CD/ MP3/ WMA: Track/ All/ Random/ Off</li> </ul>
Slowing down the playing speed	<p>In the pause mode, Press   on the remote control or press and hold   on the unit repeatedly to select the required speed. (DVD Movie title only)</p>
	<p>In the pause mode, press  on the remote control or press and hold  on the unit repeatedly to select the required speed. (Movie file only)</p>
Selecting a track/file directly	Press <b>0</b> to <b>9</b> numerical buttons on the remote control to go to the desired file or track directly.

# Advanced Operations on Disc

## Displaying Disc Information on-screen

You can display various information about the disc loaded on-screen.

1. Press **INFO/DISPLAY** on the remote control to show various playback information.  
The displayed items differ depending on the disc type or playing status.
2. You can select an item by pressing **▲/▼** on the remote control and change or select the setting by pressing **</>** on the remote control.

Title – Current title number/ total number of titles.

Chapter – Current chapter number/ total number of chapters.

Time – Elapsed playing time.

Audio – Selected audio language or channel.

Subtitle – Selected subtitle.

Angle – Selected angle/ total number of angles.



### Note

If any button is not pressed for a few seconds, the on-screen display disappears.

## To display the DVD Menu

### DVD

When you play a DVD which contains several menu, you can select the menu you want using the Menu.

1. Press **DISC MENU** on the remote control.  
The disc's menu appears.
2. Select the menu by using **▲/▼/⟨⟩** on the remote control.
3. Press **OK** on the remote control to confirm.

## To display the DVD title

### DVD

When you play a DVD which contains several title, you can select the title you want using the Menu.

1. Press **TITLE** on the remote control.  
The disc's title appears.
2. Select the menu by pressing **▲/▼/⟨⟩** on the remote control.
3. Press **OK** on the remote control to confirm.

## 1.5 times speed playback

### DVD

The 1.5 speed allows you to watch the pictures and listen to the sound quicker than playing at a normal speed.

1. During playback, press **▶** on the remote control to play at 1.5 times speed.  
"▶X1.5" appears on the screen.
2. Press **▶** on the remote control again to exit.

## Starting play from selected time

**DVD** **MOVIE**

To start playing at any chosen time on the file or title.

1. Press **□ INFO/DISPLAY** on the remote control during playback.
2. Press **Λ / Β** on the remote control to select the time clock icon and “---:---” appears.
3. Input the required start time in hours, minutes, and seconds from left to right.  
If you enter the wrong numbers, press **CLEAR/DELETE** on the remote control to remove the numbers you entered.  
Then input the correct numbers.  
For example, to find a scene at 1 hour, 10 minutes, and 20 seconds, enter “11020” by using numerical buttons on the remote control.
4. Press **◎** on the remote control to confirm.  
Playback starts from the selected time.

## Resume playback

**DVD** **MOVIE** **MUSIC** **ACD**

The unit records the point where you pressed the **□** depending on the disc.

If “**II** (Resume Stop)” appears on the screen briefly, press **▷** on the remote control or **II** on the unit to resume playback (from the scene point).

If you press **□** twice or unload the disc, “**■**”(Complete Stop) appears on the screen.  
The unit will clear the stopped point.



### Note

- The resume point may be cleared when a button is pressed (for example; **⊖**, **△**, etc).
- This function may not work on some disc or title/track.

## Changing subtitle code page

**MOVIE**

If the subtitle is not displayed properly, you can change the subtitle code page to view the subtitle file properly.

1. During playback, press **□ INFO/DISPLAY** on the remote control to display the On-Screen display.
2. Use **Λ / Β** on the remote control to select the [Code Page] option.
3. Use **</>** on the remote control to select desired code option.
4. Press **↔** on the remote control to exit the On-Screen display.

## Marked Playback

**MUSIC ACD**

The mark function enables you to store your favourite files from any disc in the unit memory.

1. Select [Music] on the [Home Menu].

Returning to the upper folder.  
(MP3/ WMA only)

File information will be displayed according to the ID3 TAG information on the appropriate music file. (MP3 only)



Selecting all tracks/files.

Deselecting all tracks/files.

Moving to the previous or next file list.

2. Select a desired music on the [List] by using the **Λ / Β** on the remote control then press **MARKER/JUKEBOX** on the remote control to appears the mark on the list.
3. Press **◎** on the remote control.  
Displays the play mode.
4. Select the play mode by using the **Λ / Β** on the remote control and press **◎** on the remote control.

### [Mark Play]

Marked playback.

### [Current Play]

Normal playback.

## To delete a Marker

1. Use **Λ / Β** on the remote control to select the track that you wish to erase from the marked file.
2. Press **MARKER/JUKEBOX** on the remote control.

## To delete all Markers

Use **Λ / Β / </>** on the remote control to select [Deselect All] then press **◎** on the remote control in program edit mode.



### Note

The markers are also cleared when the disc is removed, the unit is switched to power off or the function is switched to others.



### Note

If you want to select all files on the list, select [Select All] and press **◎** on the remote control.

## Viewing a PHOTO file

### PHOTO

This unit can play discs with photo files.

1. Select [Photo] on the [Home Menu] and press **◎** on the remote control

Moving to the previous or next file list.



2. Press **Λ/V** on the remote control to select a folder, and then press **◎** on the remote control.
3. If you want to view a slide show, press **Λ/V** on the remote control to highlight a file and press **▷** on the remote control.

### About help menu in the [Photo] menu

Menu	Buttons	Operation
► Slide Show	▷	Viewing a slide show.
Λ/V/ </> Move	Λ/V/ </>	Moving to another file or content.
◎ Select	◎	Viewing a particular file.
↔ Close	↔	Returning to the [Home Menu].

### About help menu in the full screen

Menu	Buttons	Operation
□ Menu	□ INFO/ DISPLAY	Displaying the Option menu.
◀/▶ Prev./ Next	</>	Moving to another file.
↔ List	↔	Returning to the [Photo] menu.

### Options while viewing a photo

You can use various options during viewing a photo in full screen.

1. While viewing a photo in full screen, press **□ INFO/DISPLAY** on the remote control to display the option menu.
2. Select an option using **Λ/V/ </>** on the remote control.



- 1 **Current photo/ Total number of photos** – Use **</>** on the remote control to view previous/next photo.
- 2 **Slide Show ▷/II** – Press **◎** on the remote control to start or pause slide show.
- 3 **Speed x3/ x2/ x1** – Use **◎** on the remote control to select a delaying speed between photos in a slide show.
- 4 **Rotate** – Press **◎** on the remote control to rotate the photo.
- 5 **Go to list** – Press **◎** on the remote control to return [Photo] menu.

## Basic Operations on USB

1. Connect the USB device to the USB port.
2. Select USB function by pressing **F**.

To	Do this
Stop	Press <b>□</b> .
Playback	Press <b>▷</b> on the remote control or <b>▷II</b> on the unit
Pause	Press <b>II</b> on the remote control or <b>▷II</b> on the unit.
Scanning for a section within a file	Press and hold <b>KKI/▷KI</b> or <b>KKI/▷DPI</b> on the remote control during playback and release it at the point you want to listen to.
Selecting a file directly	Press <b>0</b> to <b>9</b> numerical buttons on the remote control to go to the desired file directly.
Skipping to the next/ previous file	<ul style="list-style-type: none"> <li>- In stop status, Press <b>KKI/▷KI</b> to go to the next/ previous file.</li> <li>- During playback,           <ol style="list-style-type: none"> <li>(1) By using <b>KKI/▷KI</b> buttons: Press <b>▷KI</b> to go to the next file.</li> <li>(2) By using <b>SEARCH</b>: Rotate <b>DJ SCRATCHER / SEARCH &amp; MULTI</b> or <b>KKI/▷KI</b> and press <b>▷</b> on the remote control or <b>▷II</b> on the unit to play the file.</li> </ol> </li> </ul>
Playing repeatedly or randomly	Press <b>▷▷ REPEAT</b> on the remote control repeatedly. Refer to the note for details about the display change.

### Note

- Repeat/Shuffle playback operates as follows.

On Display	Description
OFF	Plays songs in order, and stops the playback.
ONE	Plays a same song repeatedly.
FOLDER	Plays songs in a folder repeatedly.
ALL	Plays all the songs repeatedly.
SHUFFLE	Plays all the songs once randomly, and stops the playback.

- When you play JUKE BOX list, only ONE and ALL are available.
- Even after restarting the unit or switching one function to another, you can listen to music from the point where it's last been played.
- USB function is only available on music playback.

## Selecting a folder and an MP3/WMA file

### On the unit


1. Press **SEARCH** and rotate **DJ SCRATCHER / SEARCH & MULTI** or **KK/DK** until a desired file appears. You can also search a folder if you press **SEARCH** again.
2. Press **OK** or **DK** to play the selected file. When you search a folder, press **OK** to select a file in the folder, then press **OK** or **DK** again. The selected file is played.

### On the remote control

1. Press **PRESET/FOLDER +/-** on the remote control repeatedly until a desired folder appears.
2. Select the file you want by using **KK/DK**.
3. Press **▷** on the remote control.

### Note

- USB Folders/Files are recognized as below.

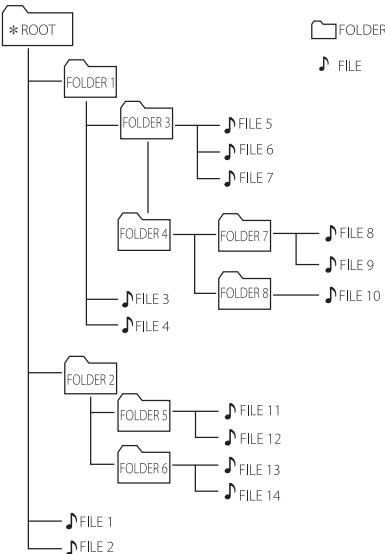

- If there is no file in a folder, the folder will not appear.
- Folders will be presented as the following order,  
 ROOT → FOLDER 1 → FOLDER 3 → →  
 FOLDER 7 → FOLDER 8 → FOLDER 5 → →  
 FOLDER 6
- File will be played from ♪ file No.1 to ♪ file No.14 one by one.
- Files and folders will be presented in order recorded and may be presented differently according to the record circumstances.

\*ROOT: The first screen you can see when a computer recognize the USB is "ROOT".

## Deleting a file/folder or format

You can delete file, folder on your USB or format the USB.

1. Select USB function by pressing **F**.
2. Press **CLEAR/DELETE** on the remote control repeatedly, the display changes as followings.  
**DEL FILE** → **DEL DIR** → **FORMAT**

On Display	Description
DEL FILE	Select the file you want to delete
DEL DIR	Select the folder you want to delete
FORMAT	Select to format the USB device.

If you want to exit the current mode, press **□**.

3. To delete file/folder or format, press and hold **CLEAR/DELETE** on the remote control.



### Caution

- Do not extract the USB device during operation. (play, delete, etc.)
- Regular back up is recommended to prevent data loss.
- The delete function may not be supported according to the USB status. (lock, etc.)

# Advanced Operations on USB

## JUKE BOX Playback

JUKE BOX function enables you to make a playlist of your favorite files from a USB. A playlist of up to 100 files can be entered.

### Making JUKE BOX list

1. Press and hold **MARKER/JUKEBOX** on the remote control to enter the edit mode.  
(Playing will be stopped when you press **MARKER/JUKEBOX** on the remote control)
2. Select a file by pressing **KKI/DMI** on the remote control.
3. Press **MARKER/JUKEBOX** on the remote control to save the file.
4. Repeat steps 2 - 3 to store other files.  
(You can modify the list by pressing **PRESET/FOLDER +/-** on the remote control to select the JUKE BOX program number.)
5. Press **MARKER/JUKEBOX** on the remote control once again.

To play the JUKE BOX list, press **▷** on the remote control after you make the list.



### Note

When making or modifying the JUKE BOX list, REPEAT mode is off.

## Enjoying JUKE BOX

Press **MARKER/JUKEBOX** on the remote control once. "ON - JUKE BOX" appears on the display window.

To play JUKE BOX list, press **▷** on the remote control.

To cancel it, press **MARKER/JUKEBOX** on the remote control once.

"OFF - JUKE BOX" appears on the display window.

## Editing JUKE BOX

1. Press and hold **MARKER/JUKEBOX** on the remote control to enter the edit mode.  
(Playing will be stopped when you press **MARKER/JUKEBOX** on the remote control)
2. Press **PRESET/FOLDER +/-** on the remote control to select a file to edit.
3. Press **KKI/DMI** on the remote control.
4. Press **MARKER/JUKEBOX** on the remote control.
5. Repeat 2 to 4 to store the other files.
6. Press **MARKER/JUKEBOX** on the remote control once again.

To play the JUKE BOX list, press **▷** on the remote control after you edit the list.

## Deleting JUKE BOX list

Deleting function only works in the edit mode.

1. Press and hold **MARKER/JUKEBOX** on the remote control to enter the edit mode.  
Or  
Press **CLEAR/DELETE** on the remote control while JUKE BOX is played to enter the edit mode.
2. Select a song by pressing **PRESET/FOLDER +/-** on the remote control repeatedly.
3. Press **CLEAR/DELETE** on the remote control while a song is selected.



### Note

- If there is no JUKE BOX list, "NO PROG" appears on the display window when you press **MARKER/JUKEBOX** on the remote control.
- JUKE BOX is switched off in the case below.
  - Changing to a different function.
  - Turning off and on the unit.
  - Operating the numerical buttons on the remote control.
  - Playing a file by using **SEARCH** and **DJ SCRATCHER / SEARCH & MULTI** on the unit.
- JUKE BOX list is cleared in the case below.
  - Removing the USB device.
  - Deleting or recording music files in the USB device.

## Playback Effect

The unit supports various sound and playback effects: DJ EFFECT, DJ SCRATCHER, DJ PAD, AUTO DJ, DJ LOOP, PARTY ACCELERATOR, PARTY KICK STARTER.

### DJ EFFECT

It allows you to enjoy DJ EFFECT such as FLANGER/PHASER/ WAH/ DELAY sound effect.

1. Press **DJ EFFECT** on the unit to select a desired DJ EFFECT (FLANGER, PHASER, WAH, DELAY, OFF).
2. Turn **DJ SCRATCHER / LEVEL CONTROL** on the unit clockwise or counterclockwise to adjust the DJ EFFECT level between 0 to 15.



#### Note

- The DJ EFFECT mode is displayed for 3 seconds when a **DJ EFFECT** key on the unit is inputted.
- The current gage level is displayed when adjusting gage.
- If the function changed or the unit is turned off and on, DJ EFFECT mode with DJ EFFECT is turned off.
- According to effect level and application time, the DJ EFFECT may not effect when the DJ effect cover the original sound.

### DJ SCRATCHER

You can output and mix the sound effects of the DJ SCRATCHER.

Rotating **DJ SCRATCHER / SEARCH & MULTI** or **DJ SCRATCHER / LEVEL CONTROL** on the unit to mix the scratch sound.

- You can hear effect of scratch sound depending on the direction in which you rotate **DJ SCRATCHER / SEARCH & MULTI** or **DJ SCRATCHER / LEVEL CONTROL** on the unit.

### AUTO DJ

Auto DJ blends the end of one song into the beginning of another for seamless playback. It equalizes volume across tracks/files for uninterrupted playback.

Press **AUTO DJ** on the remote control repeatedly, the display changes as followings.

RANDOM (SHUFFLE) → SEQUENTIAL → OFF

On Display	Description
OFF	-
RANDOM (SHUFFLE)	The music is played randomly on this mode.
SEQUENTIAL	The music is played repeatedly on this mode.



#### Note

- AUTO DJ mode does not support searching for a section within a track/file or to play repeatedly or randomly.
- If you move to other functions or stop the music using □ on AUTO DJ mode, AUTO DJ will be disabled.
- AUTO DJ is not supported in the music file whose length is less than 60 seconds.
- Only SEQUENTIAL is selected when played JUKE BOX list.
- In USB function, SHUFFLE displays instead of RANDOM.

## DJ PAD

It allows you to mix CLUB, DRUM or USER sound effect. Each mode has up to 3 sounds effect.

1. Press and hold **DJ PAD (CLUB, DRUM or USER)** on the unit to select a desired DJ PAD sound effect.
2. Press a **DJ PAD (1, 2, 3)** of desired sound on the unit.



### Note

- If you want to use USER, you have to register a source with "LG XBOOM" app. If the source is not register to USER, "EMPTY" or "NO SOUND" appears on the display window.
- Initial DJ PAD mode is CLUB sound effect.
- DJ PAD mode is displayed for 3 seconds when you press **DJ PAD (CLUB, DRUM or USER)** on the unit.
- The DJ PAD sound is mixed when you press a **DJ PAD (1, 2, 3)** on the unit.
- The currently playing DJ PAD sound is stopped and the selected DJ PAD sound outputs if you press a different **DJ PAD (1, 2, 3)** on the unit while DJ PAD sound is playing.

## DJ LOOP

The certain section (about 1 sec) of sound is repeatedly played. (USB Only)

During playback, press and hold **DJ LOOP** on the unit at the point you want. And you can cancel DJ LOOP function by releasing it.



### Note

This function is released after operating 10 times or releasing **DJ LOOP** on the unit.

## PARTY ACCELERATOR

It allows you to create a party atmosphere.

1. Select the mode by pressing **PARTY ACCELERATOR MODE** on the unit.  
The sound effect will react differently according to the mode.  
MODE 1 → MODE 2 → USER
2. After selecting the mode, slide up the lever of **PARTY ACCELERATOR** on the unit to create a party atmosphere.  
The sound effect will react according to moving the lever of **PARTY ACCELERATOR** on the unit.  
OFF → ACCEL 1 → ACCEL 2 → CLIMAX



### Note

If you want to use USER, you have to register a source with "LG XBOOM" app. If the source is not register to USER, "EMPTY" or "NO SOUND" appears on the display window.

## PARTY KICK STARTER

In power off state, this function turns on the unit with Party Kick Starter sound.

In power on state, this function mixes the music with Party Kick Starter sound.

### In the power off state

1. Press **PARTY STARTER** on the unit
2. "COME ON" appears on the display window with Party Kick Starter sound. Then volume level and function will appear before the power off.

### In the power on state

1. Press **PARTY STARTER** on the unit
2. "COME ON" appears on the display window with Party Kick Starter sound.



#### Note

- If you want to change sound effect, you have to record a sound effect with "LG XBOOM" app.
- In case of CHILDSAFE mode, Party Kick Starter sound is not output.

# Using BLUETOOTH® wireless technology

## About Bluetooth

**Bluetooth** is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the **Bluetooth** in the other rooms.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

- Available Devices: Smart phone, MP3, Notebook, etc.
- Version: 4.0
- Codec: SBC, AAC

## Bluetooth Profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

## Listening to music stored on the Bluetooth devices

### Pairing your unit and Bluetooth device

Before you start the pairing procedure, make sure the **Bluetooth** feature is activated on your **Bluetooth** device. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

1. Turn on the unit.

### ! Note

When Bluetooth connection lock is activated, you can search **Bluetooth** device in BT function.

2. Operate the **Bluetooth** device and perform the pairing operation. When searching for this unit with the **Bluetooth** device, a list of the devices found may appear in the **Bluetooth** device display depending on the type of **Bluetooth** device. Your unit appears as "LG OL55D (XX)".

### ! Note

- XX means the last two digits of **Bluetooth** address. For example, if your unit has a **Bluetooth** address such as 9C:02:98:4A:F7:08, you will see "LG OL55D (08)" on your **Bluetooth** device.
- Depending on the **Bluetooth** device type, some devices have a different pairing way. For details about **Bluetooth** pairing, refer to your **Bluetooth** device manual.
- You can connect this unit with up to 3 **Bluetooth** devices simultaneously using the same method as described above, only in the **Bluetooth** function.
- The multi phone pairing connection is only supported on Android devices. (Multi phone pairing connection may not be supported depending on the connected device specifications.)
- Removable/detachable **Bluetooth** devices (Ex: Dongle etc.) will not support multi phone pairing.

3. When this unit is successfully connected with your **Bluetooth** device, "PAIRED" appears on the display window and change to **Bluetooth** device name soon. Then "BT" will appear on the display window.

### ! Note

- "PAIRED" will momentarily appear on the display when you connect other devices for multi phone pairing.
- If the device name is unavailable, "\_" will be displayed.

4. Listen to music.

To play a music stored on your **Bluetooth** device, refer to your **Bluetooth** device's user guide.

### ! Note

- When using **Bluetooth** technology, you have to make a connection between the unit and the **Bluetooth** device as close as possible and keep the distance.

However, it may not work well in certain situations as described below:

- There is an obstacle between the unit and the **Bluetooth** device.
- There is a device using same frequency with **Bluetooth** technology such as a medical equipment, a microwave or a wireless LAN device.
- If **Bluetooth** connection does not work well, try pairing it again.
- Even if this unit is connected to up to 3 **Bluetooth** devices in the **Bluetooth** mode, you can play and control music by using only one of the connected devices.

### ! Note

- The sound may be interrupted when the connection has interference from other electronic devices.
- Depending on the type of the device, you may not be able to use the **Bluetooth** function.
- You can enjoy wireless system using phone, MP3, Notebook, etc.
- The more distance between the unit and the **Bluetooth** device, the lower the sound quality becomes.
- **Bluetooth** connection will be disconnected when the unit is turned off or the **Bluetooth** device gets too far from the unit.
- When **Bluetooth** connection is disconnected, connect the **Bluetooth** device to the unit again.
- When a **Bluetooth** device is not connected, "BT READY" appears on the display window.
- When you use the **Bluetooth** function, adjust the volume to a proper level on the **Bluetooth** device.
- When you connect **Bluetooth** device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.
- **Bluetooth** connection will be disconnected when you change the **Bluetooth** function to some other function. In "LG XBOOM" app connection, only one device which you are playing keeps **Bluetooth** connection. You can control the **Bluetooth** device with this unit but you cannot use sound output.
- When entering the **Bluetooth** function, this unit automatically connects to the last connected **Bluetooth** device or the device which played back last.  
(Auto connection may not be supported depending on the connected device specifications.)

## Controls connected Bluetooth device

You can control connected Bluetooth device by the unit; play, pause, stop, skip.

### ! Note

- Only Android OS and iOS is available to use this function.
- This function may not be supported depending on the **Bluetooth** device, or operated differently.

## Bluetooth connection lock (BT LOCK)

4

Operating

You can limit **Bluetooth** connection to only BT (**Bluetooth**) and LG TV function to prevent unintended **Bluetooth** connections.

To turn this function on, press and hold ▶ on the remote control or ▶II on the unit for 5 seconds in BT (**Bluetooth**) function.

"ON-BT LOCK" appears then you can limit **Bluetooth** connection.

To turn this function on, press and hold ▶ on the remote control or ▶II on the unit for 5 seconds in BT (**Bluetooth**) function.

"OFF-BT LOCK" appears.

### ! Note

Even if you set up **Bluetooth** connection lock to On, this unit turns on by Auto Power function. Turn off Auto Power function to prevent it.  
(Page 50)

## Using the LG XBOOM App



### Note

- Only Android OS is available to use "LG XBOOM" app with this unit.
- It is recommended to use the latest version of app.

## About "LG XBOOM" App

"LG XBOOM" app brings a suite of new features to this unit.

To enjoy more features, you are recommended to download and install free "LG XBOOM" app.

Below introduces you to a feature of "LG XBOOM" app.

**Multi Juke box:** Your entertainment increases three fold when you connect up to 3 **Bluetooth** phones at the same time. Play music from all three phones and create a customized playlist from all phones.

**Sampler Creator:** Record effects on your smartphone and very simply sync them via **Bluetooth** to the system. Be as creative as you can be.

## Install "LG XBOOM" App onto Your Bluetooth Device

There are two ways to install "LG XBOOM" App onto Your **Bluetooth** Device.

### Install "LG XBOOM" App through QR code

- Install "LG XBOOM" app through QR code. Use the scanning software to scan the QR code.



- Tap an icon for installation.



### Note

- Make sure that your **Bluetooth** device is connected to the Internet.
- Make sure that your **Bluetooth** device has a scanning software application. If you don't have one, download one from "Google Android Market (Google Play Store)".
- Depending on the area, QR code may not work.
- You can find the available application of this unit by using "LG Audio" app.
  - Android O/S: Ver 5.0 (or later)

## Install "LG XBOOM" App through "Google Android Market (Google Play Store)"

1. Tap the "Google Android Market (Google Play Store)" icon.
2. In the search bar, type in the "LG XBOOM" and search it.
3. In the search result list, find and tap "LG XBOOM" to start downloading **Bluetooth** app.
4. Tap an icon for installation.



### Note

- Make sure that your **Bluetooth** device is connected to the Internet.
- Make sure that your **Bluetooth** device is equipped with "Google Android Market (Google Play Store)".

## Activate Bluetooth with "LG XBOOM" App

"LG XBOOM" app helps to connect your Bluetooth device to this unit.

Tap "LG XBOOM" app icon on the home screen to open "LG XBOOM" app, and go to the main menu.



### Note

- "LG XBOOM" app will be available in the software version as follow;
  - Android O/S: Ver 5.0 (or later)
- If you use "LG XBOOM" app for operation, there would be some differences between "LG XBOOM" app and the supplied remote control. Use the supplied remote control as necessary.
- Depending on the **Bluetooth** device, "LG XBOOM" app may not work.
- After connection of "LG XBOOM" app, music may be output from your **Bluetooth** device. In this case, try connecting procedure again.
- If you operate the other applications or change the settings on your **Bluetooth** device while using "LG XBOOM" app, "LG XBOOM" app may operate abnormally.
- When "LG XBOOM" app operates abnormally, check your **Bluetooth** device and the connection of "LG XBOOM" app and then try to connect again.
- Depending on the smart phone's operating system, you have some differences for "LG XBOOM" operation.
- Check **Bluetooth** setting on your **Bluetooth** device if "LG XBOOM" app connection does not work well.

# Radio Operations

Be sure that FM antenna is connected. (Page 20)

## Listening to the radio

1. Press **F** until FM appears in the display window. The last received station is tuned in.
2. Auto tuning:  
Press and hold **TUNING-/+** on the remote control or **KKI/DDI** on the unit until the frequency indication starts to change, then release. Scanning stops when the unit tunes in a station.  
Or  
Manual tuning:  
Press **TUNING-/+** on the remote control or **KKI/DDI** on the unit repeatedly.
3. Adjust the volume by pressing **VOL +/-** on the remote control or by rotating **MASTER VOL. +/-** knob on the unit repeatedly.

## Improving poor FM reception

Press **D** on the remote control or **DI** on the unit. This will change the tuner from stereo to mono and usually improve the reception.

## Presetting the Radio Stations

You can preset 50 stations for FM.

Before tuning, make sure to turn down the volume.

1. Press **F** until FM appears in the display window.
2. Select the desired frequency by pressing **TUNING -/+** on the remote control or **KKI/DDI** on the unit.
3. Press **O** on the remote control. A preset number will blink in the display window.
4. Press **PRESET/FOLDER +/-** on the remote control to select the preset number you want.
5. Press **O** on the remote control. The station is stored.
6. Repeat steps 2 to 5 to store other stations.
7. To listen a preset station, press **PRESET/FOLDER +/-** or **0** to **9** numerical buttons on the remote control.

## Deleting all the saved stations

1. Press **CLEAR/DELETE** on the remote control. "DEL ALL" will flash up on the display window
2. Press **CLEAR/DELETE** on the remote control to erase all the saved radio stations. "DELETED ALL" will scroll on the display window.

## Sound adjustment

### Setting the sound mode

This system has a number of pre-set equalizers. The displayed items for the equalizer may be different depending on sound sources and effects.

You can select a desired sound mode by using **EQUALIZER** on the remote control.

On Display	Description
BASS (BASS BLAST) or BASS+ (BASS BLAST+)	Reinforces the bass and powerful sound.
POP CLASSIC ROCK JAZZ	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock, pop, jazz or classic concert.
FOOTBALL	You can enjoy the equalizer FOOTBALL STADIUM.
STANDARD	You can enjoy optimized sound.

You can select a desired sound mode by using **SPECIAL EQ** on the remote control or **SPECIAL EQ / BASS BLAST** (or **BASS BLAST+**) on the unit.

On Display	Region	Description
FUNK, REGUETON, SAMBA, MERENGUE, AXE, SALSA, SERTANEJ, FORRO	Latin America	Optimized equalizer for the music genre preferred in each region.
ARABIC	Middle East	
DANGDUT	Indonesia	
AFRO	Africa	
INDIA	India	



#### Note

By pressing and holding **SPECIAL EQ / BASS BLAST** (or **BASS BLAST+**) on the unit for 3 seconds, you can directly select BASS (BASS BLAST) or BASS+ (BASS BLAST+) effect.

### Setting the USER EQ

You can adjust the sound level of Bass, Middle and Treble as your preference.

1. Press **USER EQ** on the unit. "USER EQ" is displayed.
2. Press **USER EQ** on the unit repeatedly until desired setting appears in the display window.
3. Rotate **DJ SCRATCHER / LEVEL CONTROL** on the unit to adjust the value.

## Recording to USB

You can record a various sound source to USB. (DVD/CD, AUX 1, AUX 2 FM)

1. Connect the USB device to the unit.
2. Press **F** to select a function you want to record.
3. Start the recording by pressing **USB REC** on the remote control or **USB REC / DEMO** on the unit.

Function	Result
DVD/CD, AUX 1, AUX 2, FM	Recorded until stop

### To stop recording

To stop recording, press **USB REC** on the remote control or **USB REC / DEMO** on the unit.

### To select recording bit rate

1. Press and hold **USB REC** on the remote control or **USB REC / DEMO** on the unit for 3 seconds.
2. Press **KK/KK** to select a bit rate.
3. Press **USB REC** on the remote control or **USB REC / DEMO** on the unit to finish the setting.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible  
Respect copyrights**

### Note

- You can record various sound using DJ EFFECT, DJ SCRATCH, DJ PAD, PARTY KICK STARTER or MIC.
- When you stop recording, the file that has been recorded at that time will be stored.
- Do not remove the USB device or turn off the unit during USB recording. If does not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like "NO USB", "ERROR", "USB FULL", "NOT SUPPORT" or "FILE MAX" is displayed on the display window.
- Multi card reader device or external HDD can not be used for USB recording.
- A file is recorded by about 512 Mbyte when you record for a long term.
- You can control recorded microphone sound according to microphone volume.
- You may not store more than 2,000 files.
- When you are recording during playback, the sound now playing is output.
- VOICE CANCELLER or KEY CHANGER will be reset, if you use recording function during operating VOICE CANCELLER or KEY CHANGERs.
- VOICE CANCELLER or KEY CHANGER can not be operated during recording.
- It'll be stored as follows.

DVD/CD	Tuner
<ul style="list-style-type: none"> <li>■ DISC_REC</li> <li>   - AUDIO_0001</li> <li>   - AUDIO_0002</li> <li>   - :</li> </ul>	<ul style="list-style-type: none"> <li>■ TUNER_REC</li> <li>   - AUDIO_001_107-7FM</li> <li>   - :</li> </ul>
<b>The other source*</b>	
<ul style="list-style-type: none"> <li>■ OTHERS_REC</li> <li>   - AUDIO_0001</li> <li>   - AUDIO_0002</li> <li>   - :</li> </ul>	

\*: AUX and the like.

Tuner: The current recording frequency is shown.

## Other Operations

### Turn off the sound temporarily

Press  on the remote control to mute your sound.

You can mute your unit, for example, to answer the telephone, the "MUTE" will appear in the display window.

To cancel it, press  on the remote control again or change the volume level.

### DEMO

In the power off state, press **USB REC / DEMO** on the unit once. The unit will power on and display the each of functions with demo sound in the display window.

To cancel the DEMO function, press **USB REC / DEMO** on the unit once more.

### Resume stop

The unit records the point where you pressed  depending on the disc or USB.

If you press  twice, the unit will clear the stopped point.

### CHILDSAFE Mode

This function helps to prevent you from being surprised when you turn on the unit in case that the volume of the unit is set at a high level.

To turn on CHILDSAFE mode, press and hold **OK** on the unit when the volume of the unit is "MIN".

In CHILDSAFE mode, the volume increase gradually.

To turn off CHILDSAFE mode, press and hold **OK** on the unit when the volume of the unit is "MIN" and this mode is turned on.



#### Note

In case of USB or BT (**Bluetooth**) function, CHILDSAFE mode does not work after about 2 minutes from power on the unit even if this mode is enabled.

### Last Scene Memory

#### DVD

This unit memorizes last scene from the last disc that is viewed. The last scene remains in memory even if you remove the disc from the unit or switch off the unit. If you load a disc that has the scene memorized, the scene is automatically recalled.

### Power Resume - Optional

#### DVD

Even if the power suddenly goes out, turn on the unit and then it plays a position where the contents is being played. System will periodically save current playback status.

### System Select - Optional

You must select the appropriate system mode for your TV system. Press and hold  on the remote control for more than five seconds to be able to select a system in the [Home Menu]. (NTSC ↔ PAL)



#### Note

If the USB device is connected or a disc is inserted, this function is not operated.

## Using Microphone

1. Connect your microphone to the MIC jack.
2. Play the music you want.
3. Sing along with the accompaniment. Adjust the microphone volume by pressing **MIC VOL -/+** on the remote control or rotating **MIC VOL. -/+** clockwise or counterclockwise on the unit.

### ! Note

- When not using the microphone, set the MIC volume to minimum or turn off the MIC and remove the microphone from the MIC jack.
- If the microphone is set too near the speaker, a howling sound may be produced. In this case, move the microphone away from the speaker or decrease the sound level by using the **MIC VOL -** on the remote control or **MIC VOL. -/+** on the unit.
- If sound through the microphone is extremely loud, it may be distorted. In this case, set the microphone volume by pressing **MIC VOL -** on the remote control or rotating **MIC VOL. -/+** on the unit.
- You can give an echo effect to the sound from the microphones by pressing **MIC ECHO**.

## VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

Press the **VOICE CANCELLER** and "ON - VOICE CANCELLER" will appear in display window.

To cancel it, press **VOICE CANCELLER** again.

The quality of the VOICE CANCELLER may be different depending on the recording conditions of music files.

### ! Note

- This function is available in the DVD/CD, USB or BT (**Bluetooth**) Function.
- If the function is not available, "NOT SUPPORT" appears in the display window.
- This function is available to use only when a microphone is connected.
- If a microphone is not connected, "INSERT MIC" appears in the display window.
- It is not available on the mono source.
- To initialize it, change the function or disconnect the microphone.
- This function may not be initialized depending on the status of connected devices.

## KEY CHANGER

You can adjust the key to 9 steps (4 steps higher, 4 steps lower and the original key).

- To make key more sharp, one by one, press the **KEY CHANGER(♯)** repeatedly during playback.
- To make the key more flatten, one by one, press the **KEY CHANGER(♭)** repeatedly during playback.



### Note

- This function is available in the DVD/CD, USB or BT (**Bluetooth**) Function.
- To initialize it, change the function, disconnect the microphone or change the music.
- This function may not be initialized depending on the status of connected devices.
- If the function is not available, "NOT SUPPORT" appears in the display window.
- If a microphone is not connected, "INSERT MIC" appears in the display window.

## VOCAL EFFECTS

When you connect your microphone to the MIC jack, you can enjoy karaoke function by changing voice in the various source.

To select various vocal effects mode, pressing **VOCAL EFFECTS** repeatedly or pressing **VOCAL EFFECTS** and then turning **DJ SCRATCHER / LEVEL CONTROL** on the unit when vocal effects mode appears in the display window.

BASS → SOPRANO → HELIUM → ROBOT →  
DUET MAN → DUET WOMAN → BASS ECHO1  
→ SOPRANO ECHO1 → HELIUM ECHO1  
→ ROBOT ECHO1 → DUET MAN1 → DUET  
WOMAN1 → BASS ECHO2 → SOPRANO  
ECHO2 → HELIUM ECHO2 → ROBOT ECHO2  
→ DUET MAN2 → DUET WOMAN2 → OFF



### Note

- If a microphone is not connected, "INSERT MIC" appears in the display window.
- If you press **KEY CHANGER**, **DJ EFFECT** or **MIC ECHO** on VOCAL EFFECTS mode, after backing up current VOCAL EFFECTS, turn off VOCAL EFFECTS mode and operate KEY CHANGER, DJ EFFECT or ECHO mode.
- To turn off VOCAL EFFECTS mode, press and hold **VOCAL EFFECTS**.

## ECHO

When you connect your microphone to the MIC jack, you can give an echo effect to the sound from the microphones by pressing **MIC ECHO**.

ECHO 1 → ECHO 2 → OFF

### ! Note

- If a microphone is not connected, "INSERT MIC" appears in the display window.
- If you press **VOCAL EFFECTS** button on ECHO mode, after backing up current ECHO, turn off ECHO mode and operate **VOCAL EFFECTS** mode.

To operate ECHO mode, press **MIC ECHO** again, after backing up current **VOCAL EFFECTS**.

## LIGHTING

This function offers a party atmosphere by operating the lighting on the unit.

Press **LIGHTING** on the unit repeatedly or press **LIGHTING** on the unit and then turn **DJ SCRATCHER / LEVEL CONTROL** on the unit.

PARTY → WATER → FOREST → (MY STYLE) → OFF

### ! Note

- Lighting function is available in all functions.
- Lighting mode retains in its previous mode when you first press **LIGHTING** on the unit, press again to change modes.
- If you want to use **MY STYLE**, you have to register a source with "LG XBOOM" app.
- Do not look directly at the light emitting part when the **LIGHTING** is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the **LIGHTING** of the unit.
- You can also turn off the light by pressing and holding **LIGHTING** on the unit.

## Sleep Timer Setting

Press **SLEEP** on the remote control repeatedly to select delay time between 10 and 180 minutes. After the delay time, the unit will be turned off.

To cancel the sleep function, press **SLEEP** on the remote control repeatedly until "OFF" appears.

### Note

- You can check the remaining time before the unit is turned off. Press **SLEEP** on the remote control to check or change the remaining time.
- You can edit the remain time when the remaining time or "DIMMER" is displayed.

## Dimmer

Press **SLEEP** on the remote control once. The display window will be darkened by half.

To cancel it, press **SLEEP** on the remote control repeatedly until "OFF" appears.

### Note

All the lighting turns off when Dimmer is being operated.

## Auto power down

This unit will turn itself off to save electricity in the case were the main unit is not connected to an external device and is not used for 15 minutes. The unit will also turns itself off after six hours if the main unit has been connected to another device using the analog inputs.

Auto power down function is applied to only MAIN unit in case of WIRELESS PARTY LINK connection. In case of OTHER unit, Auto power down is available after disconnection OTHER unit and MAIN unit.

## AUTO POWER On

This unit automatically turns on by an input source: BT (**Bluetooth**) or LG TV.

When you turn on your TV connected to this unit, this unit recognizes the input signal and selects the suitable function. You can hear the sound from the unit.

If you try to connect your **Bluetooth** device, this unit turns on and connects your **Bluetooth** device. You can play your music.

When you turn off this unit by pressing  on the unit for 5 seconds each time, you can turn on or off the AUTO POWER function.

On Display	Description
ON-AUTO POWER	AUTO POWER function is turned on.
OFF-AUTO POWER	AUTO POWER function is turned off.

### ! Note

- Depending on the connected device, this function may not operate.
- Depending on the connected device, the unit turns on but **Bluetooth** function may not be connected.
- If you disconnect **Bluetooth** connection by this unit, some **Bluetooth** devices try to connect to the unit continually. Therefore it is recommended to disconnect the connection before turning off the unit.
- If you try to connect to the "LG XBOOM" app, **Bluetooth** function of this unit is turned on.
- If you turn on the unit using LG TV or **Bluetooth** function, proper function of this unit is turned on.
- If you have already paired with this unit, this unit can automatically turn on by an input source when this unit is turned off.

### Auto function change

This unit recognizes input signals such as BT (**Bluetooth**), LG TV and AUX 1 and then automatically changes to the suitable function.

### When you try to connect **Bluetooth** device

When you try to connect your **Bluetooth** device to this unit, **Bluetooth** function is selected. Play your music on the **Bluetooth** device.

### When AUX IN 1 (3.5 mm stereo cable) is connected

When you connect the portable device to the **AUX IN 1** connector, AUX 1 function is selected. Play your music on the portable device.

### When LG TV is connected

When you turn on your LG TV connected by LG Sound Sync, this unit changes the function to LG TV. You can hear the sound from your TV.

### ! Note

- This function is not available during recording or deleting.
- This function only works with devices that were previously connected.
- If the **Bluetooth** connection lock function is set, **Bluetooth** and LG TV connection will be only available on **Bluetooth** and LG TV function. (Page 40)

## Setting the Clock

1. Turn the unit on.
2. Press and hold **CLOCK** on the remote control.
3. Select time mode by pressing **KKI / DDI** on the remote control.  
- AM 12:00 (for an AM and PM display) or 0:00 (for a 24 hour display)
4. Press **SET** on the remote control to confirm your selection.
5. Select the hours by pressing **KKI / DDI** on the remote control.
6. Press **SET** on the remote control.
7. Select the minutes by pressing **KKI / DDI** on the remote control.
8. Press **SET** on the remote control.

## Setting the Clock through "LG XBOOM" App

Install "LG XBOOM" app on your Android device.  
(Page 41 - 42)

Your unit's clock will be automatically synchronized with your device by activating **Bluetooth** connection through "LG XBOOM" app.

## Using your player as an alarm clock

1. Turn the unit on.
2. Press and hold **ALARM** on the remote control.
3. Press **KKI / DDI** on the remote control to change the hours and minutes and press **SET** on the remote control to save.
4. Press **KKI / DDI** on the remote control to select function and press **SET** on the remote control to save.  
- Press **KKI / DDI** on the remote control to select a preset number when you select tuner and then, press **SET** on the remote control.  
If there is no preset number, this step is skipped.
5. Press **KKI / DDI** on the remote control to change the volume and press **SET** on the remote control to save.



### Note

- If you set the clock time, you can check the time by pressing **CLOCK** on the remote control even when the player is turned off.
- You can set alarm after you set the clock time.
- If you set the clock time and alarm, you can check the alarm setting information by pressing **ALARM** on the remote control even when the unit is turned off.
- You can select ALARM ON/OFF mode by pressing **ALARM** on the remote control.
- In case of DVD/CD or USB, this function is available when you have music file. If you do not have music file, the function is changed to Tuner.

## LG Sound Sync



You can control some functions of this unit by your TV's remote control with LG Sound Sync. It is compatible with LG TV that supports LG Sound Sync. Make sure your TV has the LG Sound Sync logo.

Controllable function by LG TV's remote control:  
Volume up/down, mute

Refer to the TV's instruction manual for the details of LG Sound Sync.

1. Turn on the unit by pressing **⑤**.
2. Press **F** until LG TV function is selected.
3. Set up the sound output of TV to listen to the sound through this unit:  
TV setting menu [Sound] → [TV Sound output] → [LG Sound Sync (Wireless)]  
"PAIRED" appears on the display window for about 3 seconds and then you can see "LG TV" on the display window if the TV and this unit are connected normally.


### ! Note

- You can also use the remote control of this unit while using LG Sound Sync. If you use TV's remote control again, the unit synchronizes with the TV. (According to TV Specifications, the volume and mute of this unit synchronize with TV)
- If the connection fails, check the conditions of this unit and your TV: power, function.
- Make sure of the condition of this unit and the connection in the cases below when using LG Sound Sync.
  - The unit is turned off.
  - Changing to a different function.
  - Disconnecting the wireless connection caused by interference or a distance.
- The amount of time to turn off this unit is different depending on your TV.
- If you try to change the function on using the LG TV function, volume will be change according to the LG TV volume level.
- Details of TV setting menu vary depending on models of your TV.
- If you turned off the unit directly by pressing **⑤**, LG Sound Sync will be disconnected. To use this function again, you should reconnect the TV and the unit.
- The volume may be increased when the TV and this unit is connected by LG Sound Sync. Decrease the TV volume and then connect with this unit.
- When you turn on your LG TV connected by LG Sound Sync or enter LG TV function, this unit changes the function to LG TV automatically.
- You should set the TV Sound output manually depending on the TV version.
- If you control TV volume when this unit and TV are connected by LG Sound Sync, this unit may louder the volume due to synchronizing volume with TV's.

## WIRELESS PARTY LINK Connection

You can enjoy the sound by using two speakers. For enjoying WIRELESS PARTY LINK, you need to purchase another speaker.

It is compatible with unit that supports WIRELESS PARTY LINK.

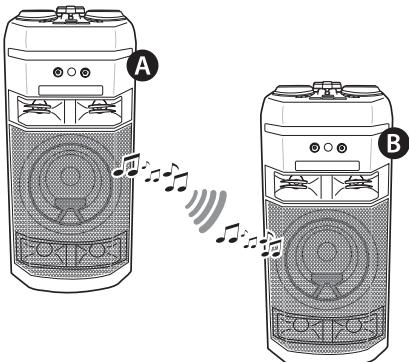

1. Press **ⓐ TWIN** on the unit.  
ROLE SELECT appears in the display window.
2. Press **ⓐ TWIN** on the unit to select MAIN or OTHER.
  - **Ⓐ** unit: Selects MAIN.
  - **Ⓑ** unit: Selects OTHER.Two units try to connect with each other.
3. When these units are successfully connected to each other, each of connected device names appears in the each unit.



## Note

- If you using the LG Sound Sync, this function is not available. If you connect the LG TV function, "NOT SUPPORT" appears in the display window.
- You can use microphone in the OTHER unit only. In case of OTHER unit, some functions are supported only.
- When WIRELESS PARTY LINK is disconnected, OTHER unit is changed to BT (**Bluetooth**) function.
- If the connection is failed, "FAILED" appears in the display window.
- Mute function is synchronized with each other.
- WIRELESS PARTY LINK connection will be disconnected when you turn off the unit or press **TWIN** on the unit.
- Sound of MAIN unit and OTHER unit may be different depending on playback status or source.
- Check the following information when connecting to **Bluetooth**.
  - You can connect only one **Bluetooth** device in the MAIN unit. You cannot connect **Bluetooth** device to the OTHER unit.
  - WIRELESS PARTY LINK connection is only supported on Android devices. (WIRELESS PARTY LINK connection may not be supported depending on the connected device specifications or OS.)
  - Removable/detachable **Bluetooth** devices (ex. Dongle etc.) will not support WIRELESS PARTY LINK connection.
  - When WIRELESS PARTY LINK is connected, Bluetooth connection is not available in status of recording or deleting.
  - If you connect WIRELESS PARTY LINK while you are playing connected **Bluetooth** device, it may be reconnected again, depending on phone specification.

# Troubleshooting

## General

Problem	Cause & Solution
The unit does not work properly.	<ul style="list-style-type: none"> <li>Turn off the power of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and turn them on again.</li> <li>Disconnect the power cord of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and then try connecting again.</li> <li>Previous setting may not be saved when device power is shut off.</li> </ul>
No Power.	<ul style="list-style-type: none"> <li>The power cord is not plugged in. Plug in the power cord.</li> <li>Check whether electricity failed. Check the condition by operating electronic devices using the same AC outlet.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so the picture from the unit appears on the TV screen.</li> <li>Connect the video cables securely to both the TV and unit.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>Check whether you select right function. Press function button and check the selected function.</li> </ul>
The DVD picture quality is poor	<ul style="list-style-type: none"> <li>Clean the disc using a soft cloth with outward strokes.</li> </ul>
A DVD/CD will not play	<ul style="list-style-type: none"> <li>Insert a disc.</li> <li>Insert a playable disc (check the disc type, colour system and regional code).</li> <li>Place the disc with the label or printed side facing upwards.</li> <li>Enter your password or change the rating level.</li> </ul>
Humming noise heard while a DVD or CD is playing	<ul style="list-style-type: none"> <li>Clean the disc using a soft cloth with outward strokes.</li> <li>Move unit and audio components further away from your TV.</li> </ul>
Radio stations cannot be tuned in properly.	<ul style="list-style-type: none"> <li>The antenna is positioned or connected poorly. Connect the antenna securely.</li> <li>The signal strength of the radio station is too weak. Tune to the station manually.</li> <li>No stations have been preset or preset stations have been cleared (when tuning by scanning preset channels). Preset some radio stations, see page 43 for details.</li> </ul>
The unit does not start playback.	<ul style="list-style-type: none"> <li>An unplayable disc is inserted. Check the playable disc.</li> <li>No disc is inserted. Insert a disc.</li> <li>The disc is dirty. Clean the disc. (Page 62)</li> <li>The disc is inserted upside down. Place the disc with the label or printed side facing upwards.</li> </ul>


Problem	Cause & Solution
The remote control does not work properly.	<ul style="list-style-type: none"> <li>The remote control is too far from the unit. Operate the remote control within about 7 m (23 feet).</li> <li>There is an obstacle in the path of the remote control and the unit. Remove the obstacle.</li> <li>The batteries in the remote control are exhausted. Replace the batteries with new ones.</li> </ul>
No speaker light.	<ul style="list-style-type: none"> <li>Check the light effects by pressing <b>LIGHTING</b> (Page 49).</li> </ul>
LG Sound Sync does not work.	<ul style="list-style-type: none"> <li>Check whether your LG TV supports LG Sound Sync.</li> <li>Check connection of LG Sound Sync.</li> <li>Check sound setting of your TV and this unit.</li> </ul>
The AUTO POWER function does not work	<ul style="list-style-type: none"> <li>Check connection of the external device such as TV or <b>Bluetooth</b> device.</li> <li>Depending on the connected device, this function may not operate.</li> </ul>

## NOTES to release Demo mode

Problem	Cause & Solution
Can not change input source with 'F' key such as BT ( <b>Bluetooth</b> ), USB etc. and only DEMO mode is showing in the display.	<ul style="list-style-type: none"> <li>Press '<b>DEMO</b>' Key on the unit for 15 seconds.</li> </ul>
Remote Control does not work properly.	

## Controlling a TV with the Supplied Remote Control

You can control your TV using the buttons below.

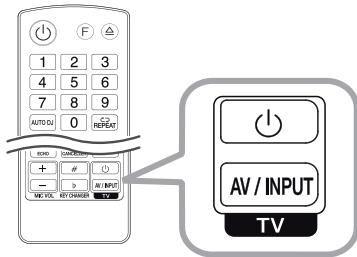

By pressing	You can
⌚ (TV POWER)	Turn the TV on or off.
AV / INPUT	Switch the TV's input source between the TV and other input sources.



### Note

Depending on the unit being connected, you may not be able to control your TV using some of the buttons.

## Setting up the remote to control your TV

You can operate your TV with the supplied remote control.

If your TV is listed in the table below, set the appropriate manufacturer code.

1. While holding down ⌚ (TV POWER) on the remote control, and press the manufacturer code for your TV with the numerical buttons on the remote control (see the table below).

Manufacturer	Code Number
LG	1(Default), 2
Zenith	3, 4
GoldStar	1, 2
Samsung	6, 7
Sony	8, 9
Hitachi	4

2. Release the ⌚ (TV POWER) on the remote control to complete setting.

Depending on your TV, some or all buttons may not function on the TV, even after entering the correct manufacturer code. When you replace the batteries of the remote, the code number you have set may be reset to the default setting. Set the appropriate code number again.

## Area Code List

Choose an area code from this list.

Area	Code	Area	Code	Area	Code	Area	Code
Afghanistan	AF	Fiji	FJ	Monaco	MC	Singapore	SG
Argentina	AR	Finland	FI	Mongolia	MN	Slovak Republic	SK
Australia	AU	France	FR	Morocco	MA	Slovenia	SI
Austria	AT	Germany	DE	Nepal	NP	South Africa	ZA
Belgium	BE	Great Britain	GB	Netherlands	NL	South Korea	KR
Bhutan	BT	Greece	GR	Antilles	AN	Spain	ES
Bolivia	BO	Greenland	GL	New Zealand	NZ	Sri Lanka	LK
Brazil	BR	Hong Kong	HK	Nigeria	NG	Sweden	SE
Cambodia	KH	Hungary	HU	Norway	NO	Switzerland	CH
Canada	CA	India	IN	Oman	OM	Taiwan	TW
Chile	CL	Indonesia	ID	Pakistan	PK	Thailand	TH
China	CN	Israel	IL	Panama	PA	Turkey	TR
Colombia	CO	Italy	IT	Paraguay	PY	Uganda	UG
Congo	CG	Jamaica	JM	Philippines	PH	Ukraine	UA
Costa Rica	CR	Japan	JP	Poland	PL	United States	US
Croatia	HR	Kenya	KE	Portugal	PT	Uruguay	UY
Czech Republic	CZ	Kuwait	KW	Romania	RO	Uzbekistan	UZ
Denmark	DK	Libya	LY	Russian		Vietnam	VN
Ecuador	EC	Luxembourg	LU	Federation	RU	Zimbabwe	ZW
Egypt	EG	Malaysia	MY	Saudi Arabia	SA		
El Salvador	SV	Maldives	MV	Senegal	SN		
Ethiopia	ET	Mexico	MX				

## Language code List

Use this list to input your desired language for the following initial settings: [Disc Audio], [Disc Subtitle] and [Disc Menu].

Language	Code	Language	Code	Language	Code	Language	Code
Afar	6565	French	7082	Lithuanian	7684	Sindhi	8368
Afrikaans	6570	Frisian	7089	Macedonian	7775	Singhalese	8373
Albanian	8381	Galician	7176	Malagasy	7771	Slovak	8375
Ameharic	6577	Georgian	7565	Malay	7783	Slovenian	8376
Arabic	6582	German	6869	Malayalam	7776	Spanish	6983
Armenian	7289	Greek	6976	Maori	7773	Sudanese	8385
Assamese	6583	Greenlandic	7576	Marathi	7782	Swahili	8387
Aymara	6588	Guarani	7178	Moldavian	7779	Swedish	8386
Azerbaijani	6590	Gujarati	7185	Mongolian	7778	Tagalog	8476
Bashkir	6665	Hausa	7265	Nauru	7865	Tajik	8471
Basque	6985	Hebrew	7387	Nepali	7869	Tamil	8465
Bengali; Bangla	6678	Hindi	7273	Norwegian	7879	Telugu	8469
Bhutani	6890	Hungarian	7285	Oriya	7982	Thai	8472
Bihari	6672	Icelandic	7383	Punjabi	8065	Tonga	8479
Breton	6682	Indonesian	7378	Pashto, Pushto	8083	Turkish	8482
Bulgarian	6671	Interlingua	7365	Persian	7065	Turkmen	8475
Burmese	7789	Irish	7165	Polish	8076	Twi	8487
Byelorussian	6669	Italian	7384	Portuguese	8084	Ukrainian	8575
Chinese	9072	Japanese	7465	Quechua	8185	Urdu	8582
Croatian	7282	Kannada	7578	Rhaeto-Romance	8277	Uzbek	8590
Czech	6783	Kashmiri	7583	Rumanian	8279	Vietnamese	8673
Danish	6865	Kazakh	7575	Russian	8285	Volapük	8679
Dutch	7876	Kirghiz	7589	Samoan	8377	Welsh	6789
English	6978	Korean	7579	Sanskrit	8365	Wolof	8779
Esperanto	6979	Kurdish	7585	Scots Gaelic	7168	Khosa	8872
Estonian	6984	Laothian	7679	Serbian	8382	Yiddish	7473
Faroese	7079	Latin	7665	Serbo-Croatian	8372	Yoruba	8979
Fiji	7074	Latvian, Lettish	7686	Shona	8378	Zulu	9085
Finnish	7073	Lingala	7678				

## Trademarks and Licenses

All other trademarks are trademarks of their respective owners.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



"DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.



The **Bluetooth**® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.

Other trademarks and trade names are those of their respective owners.

## Notes on Copyrights

- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi. Reverse engineering or disassembly is prohibited.
- Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, BD-ROM discs, DVDs, CDs and other materials may subject you to civil and/or criminal liability.

# Maintenance

## Notes on Discs

### Handling Discs

Never stick paper or tape on the disc.

### Storing Discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

### Cleaning Discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center to out.

Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for old vinyl records.

## Handling the Unit

### When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

### Keeping the exterior surfaces clean

Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic products in contact with the unit for a long period of time.

### Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

### Maintaining the Unit

The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.

## General specifications

General	
Power requirements	Refer to the main label on the unit.
Power consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 330.0 mm x 716.0 mm x 318.0 mm
Operating temperature	5 °C to 35 °C
Operating humidity	5 % to 60 % RH

Inputs	
Analog audio in (AUX IN 2)	2.0 Vrms (1 kHz, 0 dB), 600 Ω, RCA jack (L, R) x 1
Portable in (AUX IN 1)	1.0 Vrms (3.5 mm stereo jack) x 1
Microphone (MIC 1/2)	Sensitivity 20 mV (1 kHz), 6.3 mm jack x 2

Tuner	
FM Tuning Range	87.5 to 108.0 MHz or 87.50 to 108.00 MHz

System	
Frequency Response	220 to 20,000 Hz
Signal-to-noise ratio	More than 75 dB
Dynamic range	More than 80 dB
Bus Power Supply (USB)	5 V  500 mA

Amplifier (RMS Output power)	
Total output	600 W RMS
Front	193 W RMS × 2 (4 Ω at 1 kHz, THD 30%)
Sub Woofer	214 W RMS (4 Ω at 200Hz, THD 30%)

- Design and specifications are subject to change without notice.

