# **Inspiron 7380**

Setup and Specifications



Computer Model: Inspiron 7380 Regulatory Model: P83G Regulatory Type: P83G002

#### Notes, cautions, and warnings

- () NOTE: A NOTE indicates important information that helps you make better use of your product.
- △ CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.
- Marning: A WARNING indicates a potential for property damage, personal injury, or death.

© 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2018 - 08

# Contents

1 Set up your Inspiron 7380	4
2 Create a USB recovery drive for Windows	6
3 Views of Inspiron 7380	7
Front	7
Right	7
Left	
Base	
Display	
Bottom	
4 Specifications of Inspiron 7380	
Computer model	
Dimensions and weight	
Processors	
Chipset	
Operating system	
Memory	
Ports and connectors	
Communications	
Wireless module	
Audio	14
Storage	14
Media-card reader	
Keyboard	15
Camera	15
Touchpad	
Touchpad gestures	
Power adapter	
Battery	
Display	
Fingerprint reader (optional)	
Video	
Computer environment	
5 Keyboard shortcuts	20
6 Getting help and contacting Dell	22
Self-help resources	
Contacting Dell	

# Set up your Inspiron 7380

1 Connect the power adapter and press the power button.



(i) NOTE: To conserve battery power, the battery might enter power saving mode. Connect the power adapter and press the power button to turn on the computer.

2 Finish operating system setup.

#### For Ubuntu:

Follow the instructions on the screen to finish setup.

#### For Windows:

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

· Connect to a network for Windows updates.

#### (i) NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- · If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.
- · On the Support and Protection screen, enter your contact details.
- 3 Locate and use Dell apps from the Windows Start menu—Recommended

#### Table 1. Locate Dell apps

#### SupportAssist



Proactively checks the health of your computer's hardware and software.

() NOTE: Renew or upgrade your warranty by clicking the warranty expiry date in SupportAssist.



#### Dell Update

Updates your computer with critical fixes and important device drivers as they become available.



#### **Dell Digital Delivery**

Download software applications including software that is purchased but not pre-installed on your computer.

4 Create recovery drive for Windows.

(i) NOTE: It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.

For more information, see Create a USB recovery drive for Windows.

# Create a USB recovery drive for Windows

Create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.

- (i) NOTE: This process may take up to an hour to complete.
- (i) NOTE: The following steps may vary depending on the version of Windows installed. Refer to the Microsoft support site for latest instructions.
- 1 Connect the USB flash drive to your computer.
- 2 In Windows search, type Recovery.
- 3 In the search results, click Create a recovery drive. The User Account Control window is displayed.
- 4 Click **Yes** to continue.
  - The **Recovery Drive** window is displayed.
- 5 Select **Back up system files to the recovery drive** and click **Next**.
- 6 Select the USB flash drive and click Next.

A message appears, indicating that all data in the USB flash drive will be deleted.

- 7 Click Create.
- 8 Click Finish.

For more information about reinstalling Windows using the USB recovery drive, see the *Troubleshooting* section of your product's *Service Manual* at www.dell.com/support/manuals.

# Views of Inspiron 7380

### Front



#### 1 Power and battery-status light/hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.

#### () NOTE: Press Fn+H to toggle between the power and battery-status light, and hard-drive activity light.

#### Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.

#### Power and battery-status light

Indicates the power and battery-charge status.

Solid white — Power adapter is connected and the battery has more than 5% charge.

Amber — Computer is running on battery and the battery has less than 5% charge.

#### Off

- Power adapter is connected and the battery is fully charged.
- · Computer is running on battery and the battery has more than 5% charge.
- · Computer is in sleep state, hibernation, or turned off.

### Right



#### 1 SD-card slot

Reads from and writes to the SD card.


#### 2 **USB 3.1 Gen 1 port**

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

#### 3 Security-cable slot (for Noble locks)

Connect a security cable to prevent unauthorized movement of your computer.

## Left

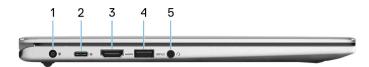

#### 1 Power-adapter port

Connect a power adapter to provide power to your computer and charge the battery.

#### 2 USB 3.1 Gen 1 (Type-C) port/DisplayPort

Connect peripherals such as external storage devices, printers, and external displays. Provides data transfer speeds up to 5 Gbps.

#### () NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

#### 3 HDMI port

Connect to a TV or another HDMI-in enabled device. Provides video and audio output.

#### 4 USB 3.1 Gen 1 port with PowerShare

Connect peripherals such as external storage devices and printers.

Provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.

- (i) NOTE: If your computer is turned off or in hibernate state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.
- (i) NOTE: Certain USB devices may not charge when the computer is turned off or in sleep state. In such cases, turn on the computer to charge the device.

#### 5 Headset port

Connect headphones or a headset (headphone and microphone combo).

### Base



#### 1 Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two finger tap to right-click.

#### 2 Left-click area

Press to left-click.

#### 3 Right-click area

Press to right-click.

#### 4 Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 4 seconds to force shut-down the computer.

If the power button has a fingerprint reader, place your finger on the power button to log in.

- (i) NOTE: Before using the fingerprint reader, configure it in Windows to recognize your fingerprint as a passcode and enable access. For more information, see www.dell.com/support/windows.
- (i) NOTE: You can customize power-button behavior in Windows. For more information, see *Me and My Dell* at www.dell.com/support/manuals.

### Display



#### 1 Left microphone

Provides digital sound input for audio recording and voice calls.

#### 2 Camera

Enables you to video chat, capture photos, and record videos.

#### 3 Camera-status light

Turns on when the camera is in use.

#### 4 Right microphone

Provides digital sound input for audio recording and voice calls.

## **Bottom**



#### 1 Left speaker

Provides audio output.

#### 2 Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

#### 3 Right speaker

Provides audio output.

# **Specifications of Inspiron 7380**

### **Computer model**

Inspiron 7380

### **Dimensions and weight**

#### Table 2. Dimensions and weight

Height:

		()	NOTE: The weight of your computer depends on the configuration ordered and the manufacturing variability.
Weigh	t (maximum)	1.40	kg (3.09 lb)
Depth		215.7	0 mm (8.49 in.)
Width		309.6	66 mm (12.19 in.)
	Rear	16.42	. mm (0.65 in.)
	Front	15.19	mm (0.60 in.)

### **Processors**

#### Table 3. Processor specifications

Processor	8 <sup>th</sup> Generation Intel Core i5	8 <sup>th</sup> Generation Intel Core i7
Wattage	15 W	15 W
Core count	4	4
Thread count	8	8
Speed	Up to 3.9 GHz	Up to 4.6 GHz
L2 cache	256 KB x 4	256 KB x 4
L3 cache	6MB	8 MB
Integrated graphics	Intel UHD Graphics 620	Intel UHD Graphics 620

## Chipset

#### Table 4. Chipset specifications

Chipset	Integrated into the processor
Processor	8 <sup>th</sup> Generation Intel Core i5/i7
DRAM bus width	Not supported
Flash EPROM	32 MB
PCIe bus	Up to PCIe Gen 3
External bus frequency	Up to 8 GT/s

### **Operating system**

- Windows 10 Home (64-bit)
- Windows 10 Professional (64-bit)
- Ubuntu

## Memory

#### Table 5. Memory specifications

Slots Type Speed Maximum memory Minimum memory Memory per slot

- Onboard memory Dual channel DDR4 2400 MHz 16 GB 8 GB Not applicable
  - 8 GB DDR4 at 2400 MHz
- 16 GB DDR4 at 2400 MHz

## Ports and connectors

#### Table 6. Ports and connectors specifications

#### External:

Network

Not supported

USB	<ul> <li>One USB 3.1 Gen 1 port</li> <li>One USB 3.1 Gen 1 port with PowerShare</li> <li>One USB 3.1 Gen 1 (Type-C) port/DisplayPort</li> </ul>
Audio	One headset port
Video	One HDMI 2.0 port
Media-card reader	One SD-card slot
Micro subscriber identity module (uSIM) card	Not supported
Docking port	Not supported
Express card	Not supported
Power adapter port	One power-adapter port
Smart card reader	Not supported
Security	One security slot for Noble lock
Legacy ports	Not supported
Internal:	
Expansion	Not supported
M.2	<ul> <li>One M.2 slot for WiFi and Bluetooth combo card</li> <li>One M.2 2280 slot for solid-state drive</li> </ul>

## Communications

### Wireless module

Table 7. Wireless module specifications				
Model number	Intel 9260	Qualcomm QCA61x4A (DW1820)		
Transfer rate	Up to 867 Mbps	Up to 867 Mbps		
Frequency bands supported	2.4 GHz/5 GHz	2.4 GHz/5 GHz		
Wireless standards	<ul> <li>WiFi 802.11ac</li> <li>WiFi 802.11a/b/g/n</li> </ul>	WiFi 802.11ac		
Encryption	<ul> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul>	<ul> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul>		
Bluetooth	Bluetooth 5.0	Bluetooth 4.2		

# Audio

Table 8. Audio specifications	
Туре	Realtek High Definition Audio
Controller	Realtek ALC3254
Stereo conversion	Supported
Internal interface	Intel High-Definition Audio (HDA)
External interface	<ul> <li>7.1 Channel output through HDMI</li> <li>One headset port (headphone and microphone combo)</li> </ul>
Speakers	Two
Internal speaker amplifier	Supported
External volume controls	Using media-control shortcut keys
Speaker output:	
Average	2 W
Peak	2.5 W
Subwoofer output	Not supported
Microphone	Digital-array microphone

## Storage

#### Table 9. Storage specifications

Storage type	Interface type	Capacity
One M.2 2280 solid-state drive	<ul><li>SATA AHCI 6 Gbps</li><li>PCIe NVMe up to 32 Gbps</li></ul>	Up to 512 GB

### **Media-card reader**

#### Table 10. Media-card reader specifications

Туре

Cards supported

#### One SD card slot

- Secure Digital (SD)
- Secure Digital High Capacity (SDHC)
- SD Extended Capacity (SDXC)

# Keyboard

#### Table 11. Keyboard specifications

Туре	Backlit keyboard
Layout	QWERTY
Number of keys	<ul> <li>United States and Canada: 80 keys</li> <li>United Kingdom: 81 keys</li> <li>Japan: 84 keys</li> </ul>
Size	<ul> <li>X = 19.05 mm key pitch</li> <li>Y = 18.05 mm key pitch</li> </ul>
Shortcut keys	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.
	(i) NOTE: You can define the primary behavior of the function keys (F1–F12) by changing Function Key Behavior in BIOS setup program.
	Keyboard shortcuts

### Camera

Table 12. Camera specifications	
Number of cameras	One
Туре	One HD fixed focus
Location	Front camera
Sensor type	CMOS
Resolution:	
Camera:	
Still image	0.92 megapixel (HD)
Video	1280 x 720 (HD) at 30 fps
Diagonal viewing angle:	
Camera	75 degrees

# Touchpad

#### Table 13. Touchpad specifications

Resolution:	
Horizontal	1229
Vertical	749
Dimensions:	
Horizontal	105 mm (4.13 in.)
Vertical	65 mm (2.56 in.)

### **Touchpad gestures**

For more information about touchpad gestures for Windows 10, see the Microsoft knowledge base article 4027871 at support.microsoft.com.

### **Power adapter**

#### Table 14. Power adapter specifications

Туре	45 W
Diameter (connector)	4.5 mm
Input voltage	100 VAC-240 VAC
Input frequency	50 Hz-60 Hz
Input current (maximum)	1.30 A
Output current (continuous)	2.31 A
Rated output voltage	19.50 VDC
Temperature range:	
Operating	0°C to 40°C (32°F to 104°F)
Storage	–40°C to 70°C (–40°F to 158°F)

# Battery

Table 15. Battery sp	ecifications	
Туре		3-cell "smart" lithium-ion (38 WHr)
Voltage		11.40 VDC
Weight (maximum)		0.18 kg (0.40 lb)
Dimensions:		
	Height	5.20 mm (0.20 in.)
	Width	256.4 mm (10.09 in.)
	Depth	65.8 mm (2.58 in.)
Temperature range:		
	Operating	0°C to 40°C (32°F to 104°F)
	Storage	-40°C to 65°C (-40°F to 149°F)
Operating time		Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Charging time (appr	roximate)	4 hours (when the computer is off)
		(i) NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manger application. For more information on the Dell Power Manger see, <i>Me and My</i> <i>Dell</i> on https://www.dell.com/
Life span (approxim	ate)	300 discharge/charge cycles
Coin-cell battery		CR-2032
Display		

#### Table 16. Display specifications

Туре	Full HD
Panel technology	In-Plane Switching (IPS) panel
Luminance (typical)	300 nits
Dimensions (active area):	
Height	164.94 mm (6.49 in.)
Width	293.47 mm (11.55 in.)

Diagonal	337.82 mm (13.30 in.)
Native resolution	1920 x 1080
Megapixels	2.07
Pixels Per Inch (PPI)	165
Contrast ratio (minimum)	600:1
Response time (maximum)	35 msec rise/fall
Refresh rate	60 Hz
Horizontal view angle	+/- 80 degrees
Vertical view angle	+/- 80 degrees
Pixel pitch	0.153 mm
Power consumption (maximum)	4.5 W
Anti-glare vs glossy finish	Glossy
Touch options	No

## Fingerprint reader (optional)

#### Table 17. Fingerprint reader specifications

Sensor technology	Capacitive
Sensor resolution	508 dpi
Sensor area	4.8 mm x 4.8 mm
Sensor pixel size	96 x 96 pixels

### Video

#### Table 18. Integrated graphics specifications

#### The following table provides the detailed integrated graphics specifications of Inspiron 7380.

Controller	External display support	Memory size	Processor
Intel UHD Graphics 620	One USB 3.1 Gen 1 (Type-C) port/ DisplayPort and one HDMI port	Shared system memory	8 <sup>th</sup> Generation Intel Core i5/i7

### **Computer environment**

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

#### Table 19. Computer environment

	Operating	Storage
Temperature range	0°C to 40°C (32°F to 104°F)	–40°C to 65°C (–40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)	0.66 GRMS	1.30 GRMS
Shock (maximum)	140 G†	160 G‡
Altitude (maximum)	0 m to 3,048 m (0 ft to 10,000 ft)	0 m to 10,668 m (0 ft to 35,000 ft)

\* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

‡ Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

# **Keyboard shortcuts**

(i) NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

#### Table 20. List of keyboard shortcuts

Keys	Description
F1 etx	Mute audio
F2 📦	Decrease volume
F3 (1)	Increase volume
F4	Play previous track/chapter
F5 ▶Ⅱ	Play/Pause
F6	Play next track/chapter
「 <sup>F8</sup> 」	Switch to external display
「F9 ア	Search
F10	Toggle keyboard backlight
F11 ⇔	Decrease brightness
F12 業	Increase brightness
Fn + PrtScr	Turn off/on wireless
Fn + S	Toggle scroll lock
Fn + Esc	Toggle Fn-key lock
Fn + B	Pause/Break
Fn + Insert	Sleep
Fn + R	System request
Fn + Ctrl	Open application menu

#### Description

Fn + H

Toggle between battery-status light and hard-drive activity light

()

NOTE: Hard-drive activity light is supported only on computers shipped with a hard drive.

# **Getting help and contacting Dell**

### Self-help resources

You can get information and help on Dell products and services using these self-help resources:

#### Table 21. Self-help resources

Information about Dell products and services

Dell Help & Support app

Tips

Contact Support

Online help for operating system

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.

Dell knowledge base articles for a variety of computer concerns.

Learn and know the following information about your product:

- · Product specifications
- Operating system
- · Setting up and using your product
- Data backup
- · Troubleshooting and diagnostics
- · Factory and system restore
- · BIOS information

# **Contacting Dell**

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

- () NOTE: Availability varies by country and product, and some services may not be available in your country.
- () NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

#### www.dell.com





In Windows search, type Contact Support, and press Enter.

www.dell.com/support/windows www.dell.com/support/linux

www.dell.com/support

- 1 Go to www.dell.com/support.
- 2 Type the subject or keyword in the **Search** box.
- 3 Click **Search** to retrieve the related articles.

See Me and My Dell at www.dell.com/support/manuals.

To locate the *Me and My Dell* relevant to your product, identify your product through one of the following:

- Select Detect Product.
- Locate your product through the drop-down menu under View Products.
- Enter the Service Tag number or Product ID in the search bar.