



THANK YOU FOR BUYING A
HOTPOINT-ARISTON PRODUCT

In order to receive a more complete assistance, please
register your product on www.hotpoint.eu/register



Before using the appliance carefully read the Safety
Instruction.

PRODUCT DESCRIPTION

FIRST TIME USE

Before connecting the appliance, clean the compartments and accessories well with lukewarm water and bicarbonate.


After plugging the appliance to the mains, it starts the operation automatically.

After starting the appliance, wait at least 4-6 hours before placing food

into the appliance.

When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

CONTROL PANEL AND TEMPERATURE SETTING

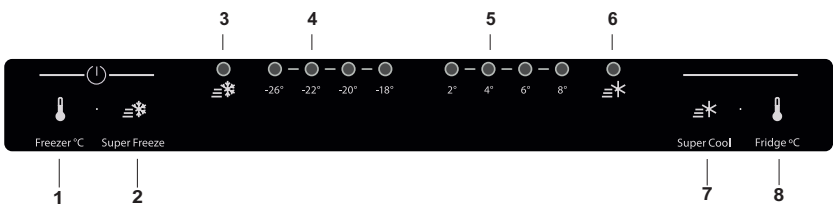

- 1. Freezer operation button
- 2. Super freeze button
- 3. Super freeze indicator light
- 4. Freezer temperature indicator light
- 5. Fridge temperature indicator light
- 6. Super cool indicator light
- 7. Super cool button
- 8. Refrigerator operation button

ON/OFF

To switch on/switch off the product press both Freezer Operation Button and Super Freeze Button by 3 seconds.

FREEZER TEMPERATURE SETTING

To regulate the temperature in the freezer compartment use Freezer Operation Button. The temperature of the Freezer is consisted with 4 levels as indicated on serigraphy (signaled by yellow led light).

SUPER FREEZE FUNCTION

Super Freeze Button (rapid freezing) to freeze fresh food. Press button for 3 seconds to switch on the product while it is switched off. Super Freeze blue light illuminates when Super Freeze button is pressed. The SUPER FREEZE function is the ideal solution to quickly freeze freshly cooked food as well as food that you want to store in the freezer.

FRIDGE TEMPERATURE SETTING

The temperature of the Fridge is consisted with 4 levels as indicated on serigraphy (signaled by yellow led light). To regulate the temperature of the refrigerator compartment use Refrigerator Operation button.

SUPER COOL FUNCTION

Use Super Cool Button (quick cool) to lower the temperature of the refrigerator compartment rapidly. Super Cool blue light illuminates when Super Cool button is pressed.

* Available only on certain models


LED LIGHT

If the LED light system does not work, please contact the Service to replace it.
Important: The refrigerator compartment light switches on when the

refrigerator door is opened. If the door is kept open for more than 8 minutes the light will be automatically switched off.


HUMIDITY CONTROL *

Open the humidity regulator (position B) if you want to store food in a less humid environment like fruit, or close it (position A) to store food in a more humid environment like vegetable.

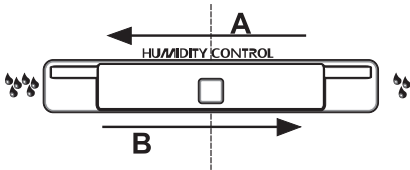

PULL OUT SHELF *

Due to the special guides the shelves are removable and the height is adjustable allowing easy storage of large containers and food. Height can be adjusted without complete removal of the shelf.

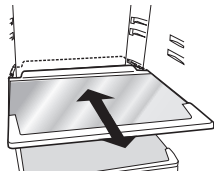

COMPARTMENT 3 IN 1 ZONE

This is the new box which offers maximum flexibility in order to stock your food in an excellent way.

- store meat, fish and delicate food;
- rapid cooling of hot food from 70°C to 3°C and of other fresh foods and leftovers
- low temperature defrosting (it inhibits the proliferation of

microorganisms).
You can get the 0°C temperature, in standard conditions, when the fridge compartment temperature is at about 4°C. By decreasing the fridge temperature you decrease the CHILLER compartment temperature too.

NO-FROST REFRIGERATOR COMPARTMENT

Refrigerator compartment defrosting is completely automatic. Droplets of water on the rear wall inside the refrigerator compartment indicate that the automatic defrost phase is in progress. The No Frost system circulates cold air continuously to collect humidity and prevent ice and frost formation. The system maintains an optimal humidity level in the compartment,

preserving the original quality of the food, preventing the food from sticking together and making defrosting a thing of the past. Do not block the aeration cells by placing food or containers in direct contact with the refrigerating back panel. Close bottles and wrap food tightly.

NO-FROST FREEZER COMPARTMENT

No Frost freezers provide chilled air circulation around the storage areas, and prevent the formation of ice, thereby completely eliminating the need for defrosting.

Frozen items don't stick to the walls, labeling stays legible and storage space remains neat and clear.

TEMPERATURE INDICATOR LIGHT*


To identify the coldest area in the refrigerator.

- Check that OK appears clearly on the indicator light (see diagram).
- If the word "OK" does not appear it means that the temperature is too high: adjust the REFRIGERATOR OPERATION knob to a higher position (colder) and wait approximately 10 hours until the temperature has been stabilised.
- Check the indicator light again: if necessary, readjust it following the initial process. If large quantities of food have been added or if the refrigerator door has been opened frequently, it is normal for the indicator not to show OK. Wait at least 10 hours before adjusting the REFRIGERATOR OPERATION knob to a higher setting.






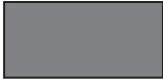 


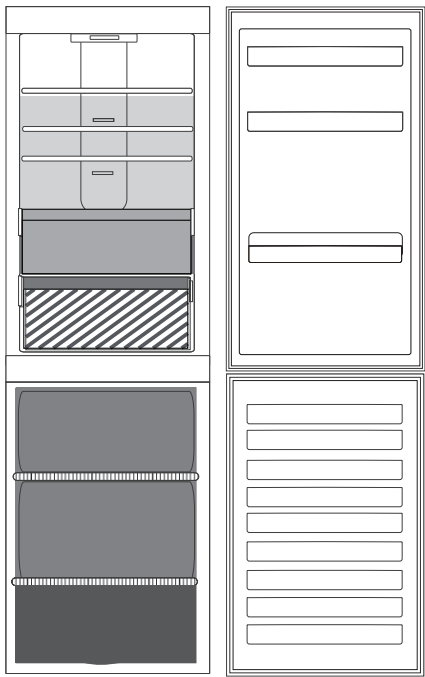* Available only on certain models

HOW TO USE THE APPLIANCE



Legend

- **TEMPERATE ZONE**
Suggested for storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam
- **COOL ZONE**
Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt
- **FRUIT AND VEGETABLE DRAWER**
- **COOLEST AREA**
Suggested for storage of cold cuts, desserts, meat and fish
- **FREEZING ZONE DRAWER**
(Max cool zone)
Suggested to freeze fresh / cooked food.
- **FREEZER DRAWERS**

ALARM TABLE

Alarm type	Signal	Cause	Cure
Door open alarm.	The alarm sounds and the light blinks.	The door has remained open for more than 3 minutes.	Close the door.
Temperature alarm.	The alarm sounds and the two blue indicator lights flash..	The temperature in the freezer is too high. Check the quality of the food products and dispose if necessary.	To turn off the acoustic signal, open and close the refrigeration door and restore normal operation product.
	The temperature in the freezer has reached a dangerous level. The food must be disposed immediately.	To turn off the acoustic signal, open and close the refrigeration door and restore normal operation product.	To turn off the acoustic signal, open and close the refrigeration door and restore normal operation product.

* Available only on certain models

TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The appliance is not working.	There may be an appliance power supply problem.	<ul style="list-style-type: none"> • Check if power cable plugged into a live socket with the proper voltage. • Check if the protection devices and fuses of the electrical system in your home
There is water in the defrost pan.	This is normal in hot, damp weather. The pan can even be half full.	<ul style="list-style-type: none"> • Make sure the appliance is level so that the water does not overflow.
The edges of the appliance cabinet, which come in contact with the door seal, are warm to the touch.	This is not a defect. This is normal in hot weather and when the compressor is running.	
The light does not work.	The light may need replacing. The appliance may be in On/ Stand-by model.	<ul style="list-style-type: none"> • Make sure if the protection devices and fuses of the electrical system in your home work well. • Check if the power cable is plugged into a live socket with the proper voltage • In case the LEDs are broken the user must call the Service for exchange of the same type available only at our Aftersales Service Centers or authorized dealers.
The motor seems to run too much.	Motor running time depends on different things: number of door openings, amount of food stored, temperature of the room, setting of the temperature controls.	<ul style="list-style-type: none"> • Make sure that the appliance controls are correctly set. • Check if there is not a large amount of food been added to the appliance. • Check that the door is not opened too often. • Check that the door close properly.
The appliance temperature is too high.	There could be various causes (see "Solutions").	<ul style="list-style-type: none"> • Make sure that the condenser (back the appliance) is free of dust and fluff. • Make sure that the door properly closed. • Make sure that the door seals properly fitted. • On hot days or if the room is warm, the motor naturally runs longer. • If the appliance door has been left open for a while or if large amounts of food have been stored, the motor will run longer in order to cool down the interior of the appliance.
The doors do not open and close properly.	There could be various causes (see "Solutions").	<ul style="list-style-type: none"> • Check that food packages are not blocking the door. • Check that the internal parts or automatic ice maker are not out of position. • Check that the door seals are not dirty or sticky. • Ensure the appliance is level.

* Available only on certain models



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website **docs.hotpoint.eu**
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.



Hotpoint

ARISTON



400011429385