Inspiron 15 5000 Setup and Specifications



Computer Model: Inspiron 5570 Regulatory Model: P75F Regulatory Type: P75F001

Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your product.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2017 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2017 - 08

Rev. A00

Contents

DØLL

Set up your computer	5
Create a USB recovery drive for Windows	8
Reinstall Windows using a USB recovery drive	
Views	10
Left	10
Right	11
For computers with optical drive	11
For computers without optical drive	11
Display	12
Base	13
Bottom	14
Specifications	15
Computer model	15
System information	15
Operating system	15
Dimensions and weight	15
Memory	
Ports and connectors	16
Communications	17

Wireless module	
Audio	
Storage	
Media-card reader	19
Keyboard	19
Camera	
Touchpad	
Power adapter	20
Battery	21
Video	21
Display	22
Computer environment	
Keyboard shortcuts	24
Getting help and contacting Dell	26
Self-help resources	26
Contacting Dell	27

Set up your computer

Connect the power adapter and press the power button. 1



D

NOTE: To conserve battery power, the battery might enter power saving mode. Connect the power adapter and press the power button to turn on the computer.

Finish operating system setup. 2

For Windows:

a) Connect to a network.

Let's get conr	nected	
Pick a network and go online	to finish setting up this device.	
Connections		
Network Connected		
Wi-Fi		
°(,)====		
((c	Pe	
Construction		
(ii, ***		
Skip this step		
(47		



NOTE: If you are connecting to a secure wireless network, enter the password for the network when prompted.

b) Sign in to your Microsoft account or create a new account.

Make it yours	
Your Microsoft account opens a world of benefits. Learn mor	e
(& © © = © b / =	
Email or phone	
Password	
Forgot my password	
No account? Create one!	
Microsoft privacy statement	
	Sign in

For Ubuntu:

Follow the instructions on the screen to finish setup.

3 Locate Dell apps in Windows.

Table 1. Locate Dell apps



Register your computer

Dell Help & Support







SupportAssist—Check and update your computer

4 Create recovery drive for Windows.

NOTE: It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.

For more information, see Create a USB recovery drive for Windows.

Create a USB recovery drive for Windows

Dell recommends that you create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.



NOTE: The following steps may vary depending on the version of Windows installed. Refer to the <u>Microsoft support site</u> for latest instructions.

- 1 Connect the USB flash drive to your computer.
- 2 In Windows search, type Recovery.
- In the search results, click Create a recovery drive.The User Account Control window is displayed.
- 4 Click Yes to continue.

The **Recovery Drive** window is displayed.

- 5 Select Back up system files to the recovery drive and click Next.
- 6 Select the USB flash drive and click Next.

A message appears, indicating that all data in the USB flash drive will be deleted.

7 Click Create.

NOTE: This process may take several minutes to complete.

8 Click Finish.

Reinstall Windows using a USB recovery drive



CAUTION: This process formats the hard drive and removes all data on your computer. Ensure that you back up data on your computer before beginning this task.



NOTE: Before reinstalling Windows, ensure your computer has more than 2 GB of memory and more than 32 GB of storage space.

- 1 Connect the USB recovery drive to your computer.
- 2 Restart your computer.

- 3 Press F12 after the Dell logo is displayed on the screen to access the boot menu.A Preparing one-time boot menu message appears.
- 4 After the boot menu loads, select the USB recovery device under **UEFI BOOT**. The system reboots and a screen to **Choose the keyboard layout** is displayed.
- **5** Choose your keyboard layout.
- 6 In the **Choose an option** screen, click **Troubleshoot**.
- 7 Click **Recover from a drive**.
- 8 Choose one of the following options:
 - Just remove my files to do a quick format.
 - Fully clean the drive to do a complete format.
- 9 Click **Recover** to start the recovery process.

This will take several minutes to complete and your computer will restart during this process.

Views

Left



1 Power-adapter port

Connect a power adapter to provide power to your computer and charge the battery.

2 Battery-status light/Hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.



NOTE: Hard-drive activity light is supported only on computers shipped with hard drive.



NOTE: Press Fn+H to toggle between the battery-status light and hard-drive activity light.

3 USB 3.1 Gen 1 (Type-C) port with Power Delivery/DisplayPort

Connect peripherals such as external storage devices, printers, and external displays.

Supports Power Delivery that enables two-way power supply between devices. Provides up to 15 W power output that enables faster charging.



NOTE: An adapter (sold separately) is required to connect a DisplayPort device.

4 HDMI port

Connect a TV or another HDMI-in enabled device. Provides video and audio output.

5 Network port

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

6 USB 3.1 Gen 1 ports (2)

Connect peripherals such as storage devices and printers. Provides data transfer speeds up to 5 Gbps.

7 Headset port

Connect headphones or a headset (headphone and microphone combo).

Right

For computers with optical drive



1 SD-card slot

Reads from and writes to the SD card.

2 USB 2.0 port

Connect peripherals such as storage devices and printers. Provides data transfer speeds up to 480 Mbps.

3 Optical drive

Reads from and writes to CDs, DVDs, and Blu-ray discs.

NOTE: Blu-ray support is only available in certain regions.

4 Security-cable slot (for Noble locks)

Connect a security cable to prevent unauthorized movement of your computer.

For computers without optical drive

For computers without optical drive



1 SD-card slot

Reads from and writes to the SD card.

2 USB 2.0 port

Connect peripherals such as storage devices and printers. Provides data transfer speeds up to 480 Mbps.

3 Security-cable slot (for Noble locks)

Connect a security cable to prevent unauthorized movement of your computer.

Display



1 Left microphone

Provides digital sound input for audio recording and voice calls.

2 Camera

Enables you to video chat, capture photos, and record videos.

3 Camera-status light

Turns on when the camera is in use.

4 Right microphone

Provides digital sound input for audio recording and voice calls.

Base



1 Left-click area

Press to left-click.

2 Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two finger tap to right-click.

3 Right-click area

Press to right-click.

4 Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for four seconds to force shut-down the computer.

If the power button has a fingerprint reader, place your finger on the power button to log in.





NOTE: Before using the fingerprint reader, configure it in Windows to recognize your fingerprint as a passcode and enable access. For more information, see www.dell.com/support/windows.



NOTE: You can customize power-button behavior in Windows. For more information, see *Me and My Dell* at http://www.dell.com/ support/manuals.

Bottom



1 Left speaker

Provides audio output.

2 Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

3 **Right speaker**

Provides audio output.

Specifications

Computer model

Table 2. Computer model

Computer model

Inspiron 5570

System information

Table 3. System information

Processor

- 8th generation Intel Core i5/i7
- 7th generation Intel Core i3/i5/i7
- 6th generation Intel Core i3
- Intel Pentium
- Intel Celeron

Integrated in processor

Chipset

Operating system

Table 4. Operating system

Operating systems supported

• Ubuntu

•

- Windows 10 Home (64-bit)
- Windows 10 Professional (64-bit)

Dimensions and weight

Table 5. Dimensions and weight

Height

22.70 mm (0.89 in)-with optical drive



19.90 mm (0.78 in)-without optical drive

380 mm (14.96 in)

258 mm (10.16 in)

- 2.12 kg (4.67 lb)-without optical drive
- 2.33 kg (5.14 lb)-with optical drive

NOTE: The weight of your laptop varies depending on the configuration ordered and the manufacturing variability.

Memory

Width

Depth Weight

Table 6. Memory specifications	
Slots	Two SODIMM slots
Туре	Dual-channel DDR4
Speed	Up to 2400 MHz
Configurations supported:	
Per memory module slot	2 GB, 4 GB, 8 GB, and 16 GB
Total memory	4 GB, 6 GB, 8 GB, 12 GB, and 16 GB

Ports and connectors

Table 7. Ports and connectors

External:	
Network	One RJ-45 port
USB	 One USB 3.1 Gen 1 (Type-C) port/ DisplayPort (optional) Two USB 3.1 Gen 1 ports One USB 2.0 port

External: Audio/Video One HDMI 1.4b port • One headset (headphone and . microphone combo) port Table 8. Ports and connectors Internal: M.2 slot One M.2 slot for the Wi-Fi and Bluetooth combo card One M.2 slot for solid-state drive . Technology supported **PCI Express** Communications Table 9. Supported communications Ethernet 10/100 Mbps Ethernet controller integrated on system board Wireless Wi-Fi 802.11ac + Wi-Fi 802.11a/b/g/n • Wi-Fi 802.11b/g/n .

- Bluetooth 4.0
- Bluetooth 4.1
- Bluetooth 4.2
- Miracast



NOTE: Windows 10 currently supports up to Bluetooth 4.1.

Wireless module

Table 10. Wireless module specifications

Transfer rate	Up to 433 Mbps	Up to 867 Mbps	Up to 150 Mbps
Frequency bands supported	Dual band 2.4 GHz/5 GHz	Dual band 2.4 GHz/5 GHz	2.4 GHz only



Encryption

ncryption	•	64-bit and 128- bit WEP	•	64-bit and 128- bit WEP	•	64-bit and 128- bit WEP
	•	CKIP	•	CKIP	•	CKIP
	•	TKIP	•	TKIP	•	TKIP
	•	AES-CCMP	•	AES-CCMP	•	AES-CCMP

Audio

Table 11. Audio specifications

Controller	Realtek ALC3246 with Waves MaxxAudio Pro
Speakers	Two
Speaker output	 Average – 2 W Peak – 2.5 W
Microphone	Digital-array microphones
Volume controls	Media-control shortcut keys

Storage

Table 12. Storage specifications

Interface	 SATA 6 Gbps for hard drive SATA 6 Gbps for solid-state drive SATA 1.5 Gbps for optical drive
Hard drive	One 2.5-inch drive
Maximum configuration supported	Up to 2 TB (5400 rpm)
Solid-state drive (SSD)	M.2 SATA SSDM.2 NVMe SSD
Maximum configuration supported	 M.2 SATA SSD–Up to 256 GB M.2 NVMe SSD–Up to 512 GB

Technology supported

Optical drive (optional)

PCI Express

One 9.5 mm DVD+/-RW drive or Blu-ray Disc writer



NOTE: Blu-ray support is only available in certain regions.

Media-card reader

Table 13. Media-card reader specifications

Туре

Cards supported

Keyboard

Table 14. Keyboard specifications

Туре

Shortcut keys

Standard keyboard

One SD-card slot

SD card

· Backlit keyboard (optional)

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.

U

NOTE: Press Fn+Esc to switch the primary behavior of the function keys (F1–F12) between two modes – multimedia key mode and function key mode.



NOTE: You can define the primary behavior of the shortcut keys by pressing Fn+Esc or by changing Function Key Behavior in System Setup.

Keyboard shortcuts

Camera

Table 15. Camera specifications

Resolution

- Still image: 0.92 megapixel
- · Video: 1280 x 720 (HD) at 30 fps

Diagonal viewing angle

Touchpad

Table 16. Touchpad

Resolution

75 degrees

- Horizontal: 1228
- Vertical: 928

Dimensions

- Height: 80 mm (3.15 in)
- Width: 105 mm (4.13 in)

Power adapter

Table 17. Power adapter specifications

Туре

- 45 W-for integrated configuration
- 65 W-for discrete configuration

Diameter (connector)	4.5 mm
Input voltage	100 VAC-240 VAC
Input frequency	50 Hz-60 Hz
Input current (maximum)	1.30 A/1.60 A/1.70 A
Output current (continuous)	2.31 A/3.34 A
Rated output voltage	19.50 VDC

Temperature range

 Operating
 0°C to 40°C (32°F to 104°F)

 Storage
 -40°C to 70°C (-40°F to 158°F)

Battery

Table 18. Battery specifications

Туре

Dimensions:

3-cell "smart" lithium ion (42 WHr)

Difficitorio.	
Width	97.15 mm (3.82 in)
Depth	184.15 mm (7.25 in)
Height	5.9 mm (0.23 in)
Weight (maximum)	0.2 kg (0.44 lb)
Voltage	11.40 VDC
Life span (approximate)	300 discharge/charge cycles
Temperature range:	
Operating	0°C to 35°C (32°F to 95°F)
Storage	–40°C to 65°C (–40°F to 149°F)
Coin-cell battery	CR-2032
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.

Video

Table 19. Video specifications

	Integrated	Discrete
Controller	 Intel UHD Graphics 620 on computers shipped with 8th generation Intel Core i5/i7 processors 	AMD Radeon 530



	Integrated	Discrete	
	 Intel HD Graphics 620 on computers shipped with 7th generation Intel Core i3/15/i7 processors 		
	 Intel HD Graphics 610 on computers shipped with Intel Pentium and Celeron processors 		
Memory	Shared system memory	Up to 4 GB GDDR5	

Display

	15.6-inch HD Non- touchscreen TN (Twisted Nematic) panel	15.6-inch FHD Touch/ Non-touchscreen TN (Twisted Nematic) panel
Resolution (maximum)	1366 x 768	1920 x 1080
Viewing angle	40/40/10/30	40/40/10/30
Pixel pitch	0.252 mm	0.179 mm
Dimensions:		
Height (excluding bezel)	344 mm (13.54 in)	
Width (excluding bezel)	194 mm (7.63 in)	
Diagonal (excluding bezel)	395 mm (15.55 in)	
Refresh rate	60 Hz	
Operating angle	0 degrees (closed) to 135 degrees	
Controls	Brightness can be controlled using shortcut keys	

Table 20. Display specifications

Computer environment

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 21. Computer environment

	Operating	Storage
Temperature range	0°C to 35°C	–40°C to 65°C
	(32°F to 95°F)	(-40°F to 149°F)
Relative humidity	10% to 90%	0% to 95%
(maximum)	(non-condensing)	(non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G [†]	160 G [‡]
Altitude (maximum)	–15.20 m to 3048 m (–50 ft to 10,000 ft)	–15.20 m to 10,668 m (–50 ft to 35,000 ft)

* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

‡ Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

Keyboard shortcuts

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

Keys	Description
F1 «×	Mute audio
F2 📣	Decrease volume
F3 ◀৩)	Increase volume
F4	Play previous track/chapter
F5 ▶Ⅱ	Play/Pause
F6	Play next track/chapter
F8 2	Switch to external display
ج ج	Search
F10	Toggle keyboard backlight (optional)
F11 ☆	Decrease brightness
F12 *	Increase brightness
Fn + PrtScr	Turn off/on wireless
Fn + S	Toggle Scroll Lock

Table 22. List of keyboard shortcuts



D

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 23. Self-help resources

Information about Dell products and services

Dell Help & Support app

Accessing help

Online help for operating system

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.

Dell knowledge base articles for a variety of computer concerns.

Learn and know the following information See Me and My Dell at www.dell.com/ about your product:

- Product specifications
- Operating system
- Setting up and using your product
- Data backup
- Troubleshooting and diagnostics

www.dell.com



In Windows search, type Help and Support, and press Enter.

www.dell.com/support/windows www.dell.com/support/linux

www.dell.com/support

- 1 Go to www.dell.com/support.
- 2 Type the subject or keyword in the Search box.
- Click **Search** to retrieve the related 3 articles.

support/manuals.

To locate the *Me and Mv Dell* relevant to your product, identify your product through one of the following:

Select Detect Product.

- Factory and system restore
- BIOS information

- Locate your product through the drop-down menu under View Products.
- Enter the **Service Tag number** or **Product ID** in the search bar.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.



NOTE: Availability varies by country and product, and some services may not be available in your country.



NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.