


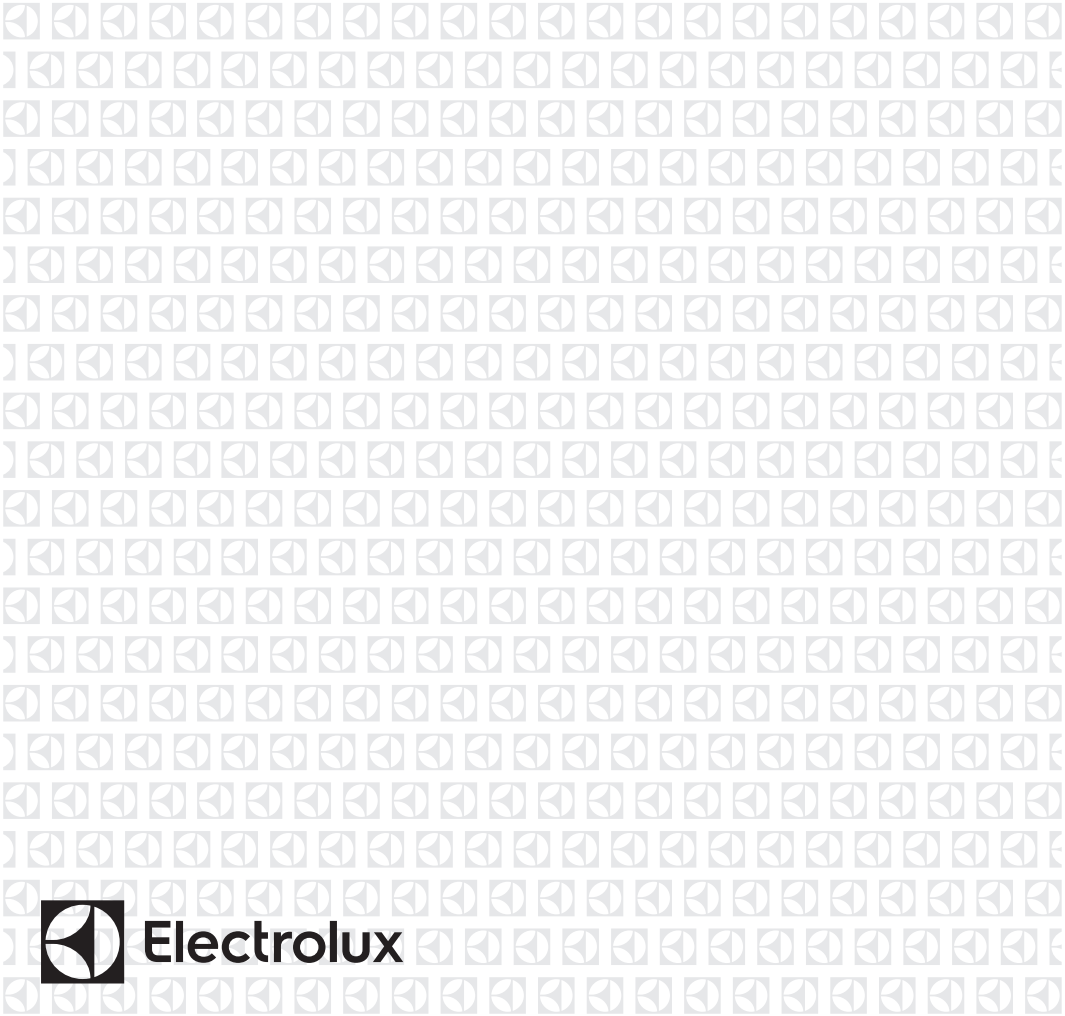

# CONTENTS

|                                                                              |    |
|------------------------------------------------------------------------------|----|
| 1. SAFETY INFORMATION.....                                                   | 3  |
| 2. SAFETY INSTRUCTIONS.....                                                  | 4  |
| 3. INSTALLATION.....                                                         | 6  |
| 4. ACCESSORIES.....                                                          | 10 |
| 5. PRODUCT DESCRIPTION.....                                                  | 11 |
| 6. CONTROL PANEL.....                                                        | 11 |
| 7. PROGRAMME CHART.....                                                      | 13 |
| 8. CONSUMPTION VALUES.....                                                   | 15 |
| 9. OPTIONS.....                                                              | 16 |
| 10. SETTINGS.....                                                            | 18 |
| 11. BEFORE FIRST USE.....                                                    | 18 |
| 12. DAILY USE.....                                                           | 19 |
| 13. HINTS AND TIPS.....                                                      | 23 |
| 14. CARE AND CLEANING.....                                                   | 24 |
| 15. TROUBLESHOOTING.....                                                     | 27 |
| 16. TECHNICAL DATA.....                                                      | 29 |
| 17. PRODUCT INFORMATION SHEET IN REFERENCE TO E.U. REGULATION 1369/2017..... | 30 |

## WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

**Visit our website for:**



Get usage advice, brochures, trouble shooter, service information:  
**[www.electrolux.com/webselfservice](http://www.electrolux.com/webselfservice)**



Register your product for better service:  
**[www.registerelectrolux.com](http://www.registerelectrolux.com)**



Buy Accessories, Consumables and Original spare parts for your appliance:  
**[www.electrolux.com/shop](http://www.electrolux.com/shop)**

## CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 **Warning / Caution-Safety information**

 **General information and tips**

 **Environmental information**

Subject to change without notice.

## 1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

### 1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

### 1.2 General Safety

- Do not change the specification of this appliance.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;

- by clients in hotels, motels, bed & breakfast and other residential type environments;
- areas for communal use in blocks of flats or in launderettes.
- Do not exceed the maximum load of 8 kg (refer to the "Programme chart" chapter).
- The operating water pressure at the water entry point from the outlet connection must be between 0.5 bar (0.05 MPa) and 8 bar (0.8 MPa).
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- The appliance must be connected to the water mains using the new supplied hose sets, or other new hose sets supplied by the Authorised Service Centre.
- Old hose sets must not be reused.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.
- Do not use high pressure water sprays and/or steam to clean the appliance.
- Clean the appliance with a moist cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

## 2. SAFETY INSTRUCTIONS

### 2.1 Installation



The installation must comply with relevant national regulations.

- Remove all the packaging and the transit bolts including rubber bush with plastic spacer.
- Keep the transit bolts in a safe place. If the appliance is to be moved in the future they must be reattached to lock the drum to prevent an internal damage.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Follow the installation instructions supplied with the appliance.
- Do not install or use a damaged appliance.
- Do not install or use the appliance where the temperature can be less

than 0°C or where it is exposed to the weather.

- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.
- Do not install the appliance directly above a floor drain.
- Do not spray water on the appliance and do not expose it to excessive humidity.
- Do not install the appliance where the appliance door cannot be fully opened.
- Do not put a closed container to collect possible water leakage under the appliance. Contact the Authorised Service Centre to ensure which accessories can be used.

## 2.2 Electrical connection



### **WARNING!**

Risk of fire and electric shock.

- The appliance must be earthed.
- Always use a correctly installed shockproof socket.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not touch the mains cable or the mains plug with wet hands.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

- This appliance complies with the E.E.C. Directives.

## 2.3 Water connection

- Do not cause damage to the water hoses.
- Before connection to new pipes, pipes not used for a long time, where repair work has been carried out or new devices fitted (water meters, etc.), let the water flow until it is clean and clear.
- Ensure that there are no visible water leaks during and after the first use of the appliance.
- Do not use an extension hose if the inlet hose is too short. Contact the Authorised Service Centre for the replacement of the inlet hose.
- It is possible to see water flowing from the drain hose. This is due to the testing of the appliance with the use of water in the factory.
- You can extend the drain hose to maximum 400 cm. Contact the Authorised Service Centre for the other drain hose and the extension.

## 2.4 Use



### **WARNING!**

Risk of injury, electric shock, fire, burns or damage to the appliance.

- Follow the safety instructions on the detergent packaging.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Make sure that all metal objects are removed from the laundry.
- Do not wash fabrics which are heavily soiled with oil, grease or other greasy substances. It can damage rubber parts of the washing machine. Prewash such fabrics by hand before loading them into the washing machine.
- Do not touch the glass door while a programme is in operation. The glass can get hot.

## 2.5 Service

- To repair the appliance contact an Authorised Service Centre.
- Use original spare parts only.

## 2.6 Disposal



### **WARNING!**

Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.

- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

# 3. INSTALLATION




### **WARNING!**


Refer to Safety chapters.

## 3.1 Unpacking


1. Remove the external film. If necessary, use a cutter.

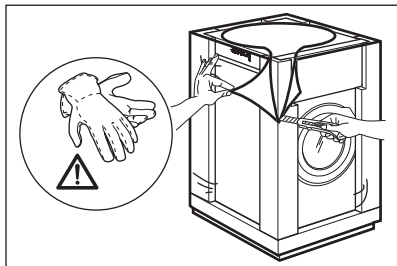


3. Open the door. Remove all the items from the drum.

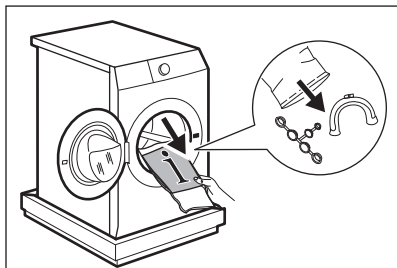


2. Remove the cardboard top and the polystyrene packaging materials.

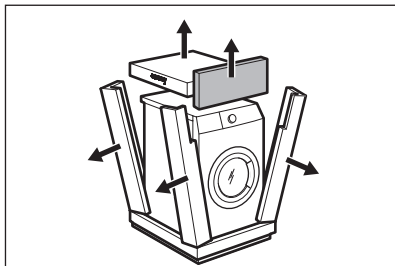


4. Put the front polystyrene packaging element on the floor under the appliance. Carefully put down the appliance onto its rear side.

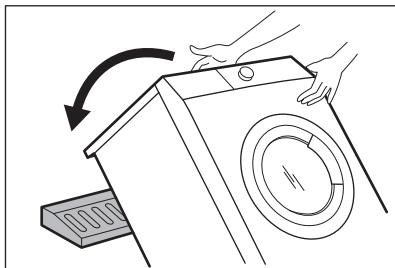

5. Remove the polystyrene protection from the bottom. Put the appliance back into an upright position.

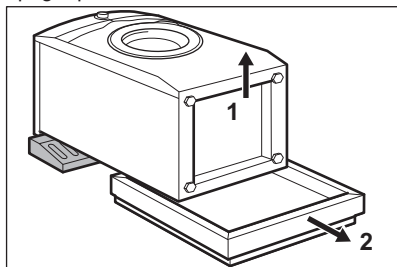

7. Remove the three transit bolts and pull out the plastic spacers.

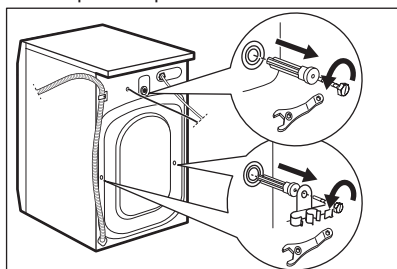

- i** We recommend that you keep the packaging and the transit bolts for any transport of the appliance.

## 3.2 Positioning and levelling


1. Install the appliance on a flat hard floor.
- i** Make sure that the appliance does not touch the wall or other units.
2. Loosen or tighten the feet to adjust the level.



### **WARNING!**



Do not put cardboard, wood or equivalent materials below the appliance feet to adjust the level.

6. Remove the power supply cable and the drain hose from the hose holders.

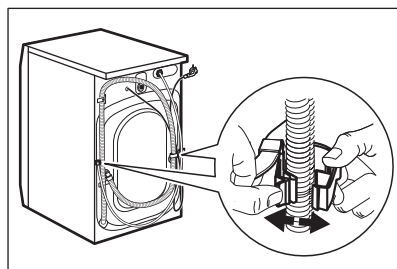

*It is possible to see water flowing from the drain hose. This is because the washing machine has been tested at the factory.*


8. Put the plastic caps, that you find in the user manual bag, in the holes.

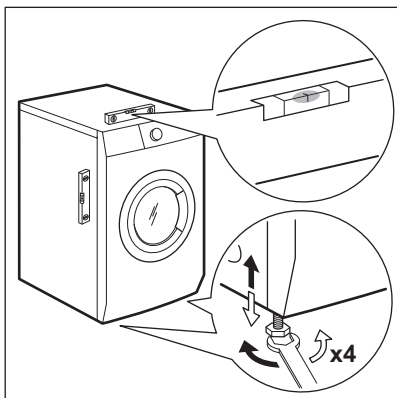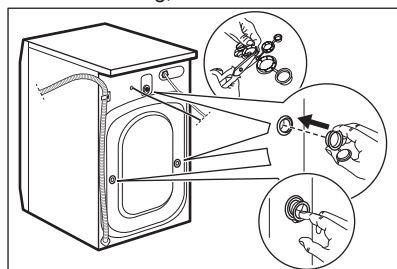

The appliance must be level and stable.


- i** A correct adjustment of the appliance level prevents the vibration, noise and the movement of the appliance when in operation.

- i** When the machine is installed on a plinth or if a washer dryer is stacked on the washing machine, use the accessories described in chapter 'Accessories'. Read carefully the instructions supplied with the appliance and with the accessory.

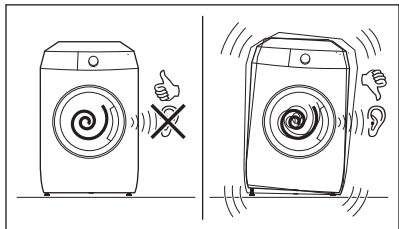


### 3.3 The inlet hose

1. Connect the water inlet hose to the back of the appliance.
2. Position it toward left or right depending on the position of the water tap.

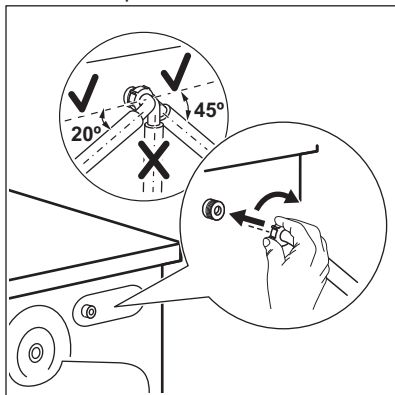

- i** Make sure that the inlet hose is not in vertical position.
3. If necessary, loose the ring nut to set it in the correct position.
  4. Connect the water inlet hose to the cold water tap with 3/4" thread.

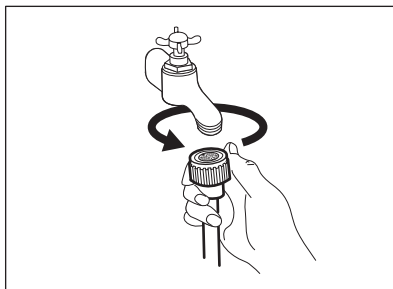

#### CAUTION!

Make sure that there are no leaks from the couplings.



Do not use an extension hose if the inlet hose is too short. Contact the service centre for the replacement of the inlet hose.

### 3.4 Water drainage


The drain hose should be positioned at a height of not less than 60 cm and not more than 100 cm from the floor.



You can extend the drain hose to maximum 400 cm. Contact the authorized service centre for the other drain hose and the extension.

It is possible to connect the drain hose in different ways:


1. Make a U shape with the drain hose and put it around the plastic hose guide.

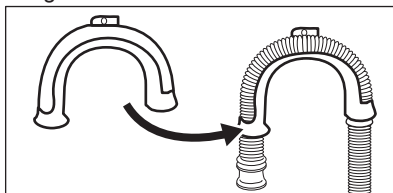

2. **On the edge of a sink** - Fasten the guide to the water tap or to the wall.




Make sure that the plastic guide cannot move when the appliance drains.

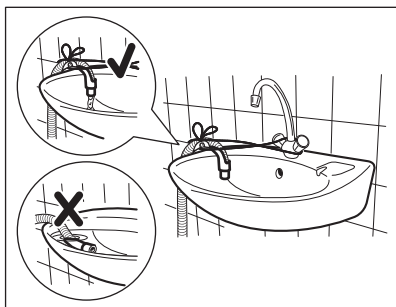


- i** Make sure that the drain hose end is not immersed in the water. There may be a return of dirty water into the appliance.

- 3. To a stand pipe with vent-hole -** Insert the drain hose directly into a drain pipe. Refer to the illustration.

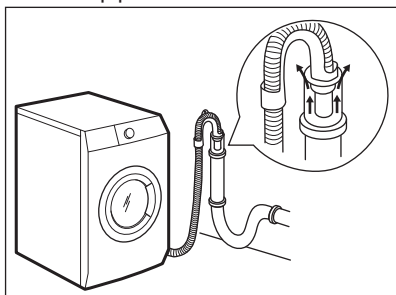


- i** The end of the drain hose must always be ventilated, i.e. the inner diameter of the drain pipe (min. 38 mm - min. 1.5") must be larger than the external diameter of the drain hose.

- 4.** If the end of the drain hose looks like this (see the picture), you can push it directly into the stand pipe.

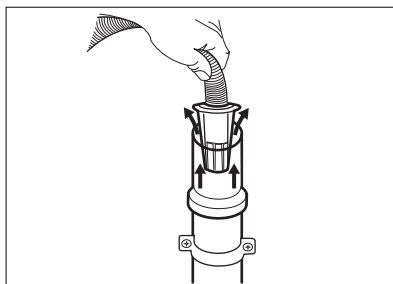


- 5. Without the plastic hose guide, to a sink spigot -** Put the drain hose in the spigot and tighten it with a clamp. Refer to the illustration.

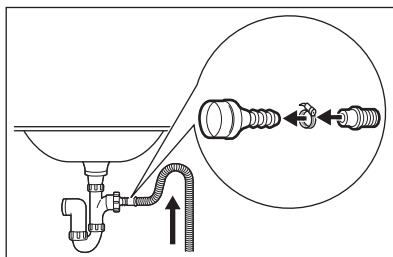

- i** Make sure that the drain hose makes a loop to prevent particles going into the appliance from the sink.

- 6.** Position the hose **directly** to a **built-in drain pipe in the room wall** and tighten it with a clamp.

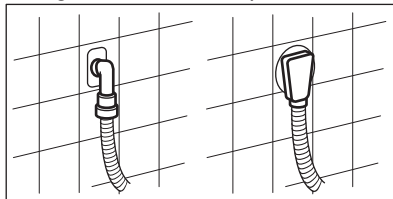

## 4. ACCESSORIES

### 4.1 Available in [www.electrolux.com/shop](http://www.electrolux.com/shop) or from authorised dealer




Only appropriate accessories approved by ELECTROLUX ensure the safety standards of the appliance. If unapproved parts are used, any claims will be invalidated.

### 4.2 Fixing plate kit (4055171146)

Available from your authorised dealer.

If you install the appliance on a plinth, secure the appliance in the fixing plates.

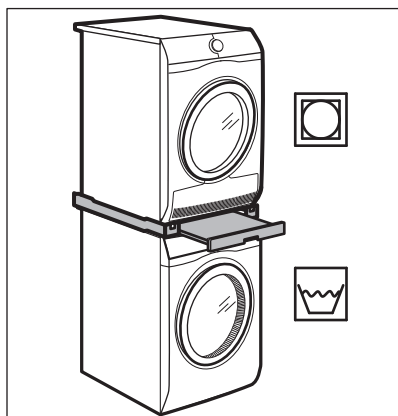

Read carefully the instructions supplied with the accessory.

### 4.3 Stacking kit

The tumble dryer can be stacked on the top of the washing machine **only by using the correct stacking kit manufactured and approved by ELECTROLUX.**




#### **WARNING!**

Verify the compatible stacking kit by checking the depth of your appliances. Do not put the tumble dryer under the washing machine.

The stacking kit can be used only with the appliances specified in the leaflet provided with the accessory. **Read carefully the instructions supplied with the appliance and with the accessory.**

## 5. PRODUCT DESCRIPTION

### 5.1 Appliance overview

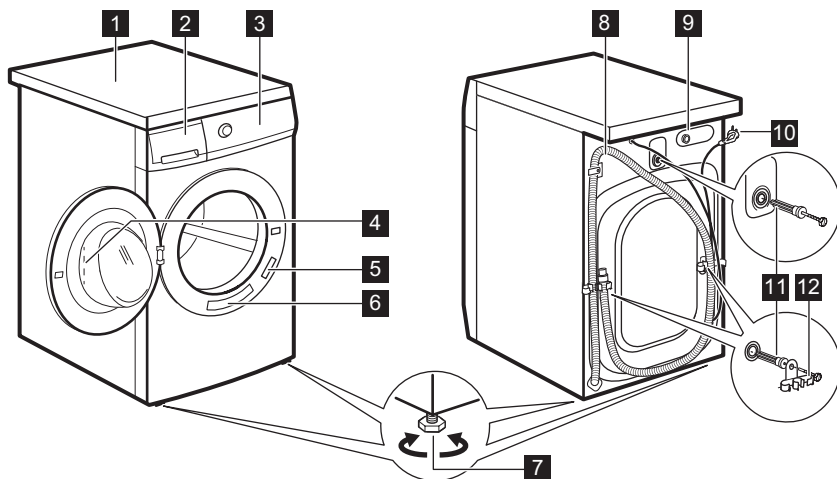

- 1 Worktop
- 2 Detergent dispenser
- 3 Control panel
- 4 Door handle
- 5 Rating plate
- 6 Quick Reminder sticker
- 7 Feet for levelling the appliance

- 8 Drain hose
- 9 Inlet hose connection
- 10 Mains cable
- 11 Transit bolts
- 12 Hose support

## 6. CONTROL PANEL

### 6.1 Special features


Your new washing machine meets all modern requirements for an effective treatment of laundry with low water, energy and detergent consumption and will care for fabrics.

This appliance is designed with a **self cleaning draining system**, allowing light fluff fibers that fall off the clothes to be drained out with the water, in such a way

that there is no need to access this area for regular maintenance and cleaning. Refer to chapter 'Care and Cleaning' for best maintenance and care of the appliance.


The **AutoSense System** automatically adjusts the programme duration to the laundry in the drum to achieve perfect washing results in the minimum possible time.

## 6.2 Control panel description

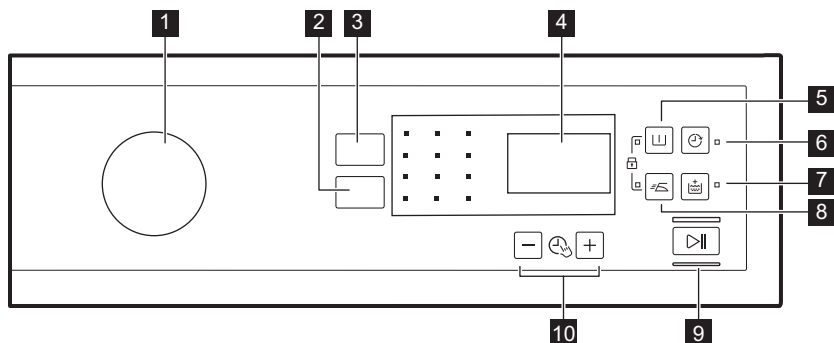

- |                                                                                                                                                                                                                |                                                                                                                                                                       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>1</b> Programme knob</p> <p><b>2</b> Centrif. reduction touchpad</p> <p><b>3</b> Temp. touchpad</p> <p><b>4</b> Display</p> <p><b>5</b> Pre-lav. touchpad </p> <p><b>6</b> Inicio Diferido touchpad </p> | <p><b>7</b> Extra Aclarado /Enxag. touchpad </p> <p><b>8</b> Fácil touchpad </p> <p><b>9</b> Inicio/Pausa touchpad </p> <p><b>10</b> Time Manager touchpads -   +</p> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## 6.3 Display

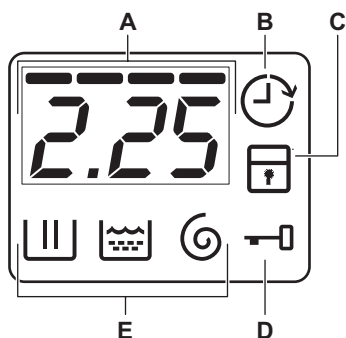

- A.** The time area:
- Programme time.
  - The alarm codes. Refer to the chapter "Troubleshooting" for their description.
  - The level of the Time Manager  
-----.
- B.** The Delay Start indicator.
- C.** The Child Lock indicator.
- D.** The Door Lock indicator:
- It is on, you cannot open the door.
  - It is off, you can open the door.
  - It flashes, you cannot open the door. Wait for some minutes until the indicator is off.
- E.** Washing phase indicators.
- : the washing phase
  - : the rinses phase
  - : the spin phase

## 7. PROGRAMME CHART

| Programme<br>Default tem-<br>perature<br>Tempera-<br>ture range                                                                     | Reference<br>spin speed<br>Spin speed<br>range | Maximum load | Programme description<br>(Type of load and soil level)                                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Washing programmes</b>                                                                                                           |                                                |              |                                                                                                                                                                                                |
| Algod.<br>40°C<br>90°C - Cold                                                                                                       | 1200 rpm<br>(1200- 400<br>rpm)                 | 8 kg         | <b>White cotton and coloured cotton.</b><br>Normal, heavy and light soil.                                                                                                                      |
|  Algod.<br>Eco <sup>1)</sup><br>40°C<br>60°C- 40°C | 1200 rpm<br>(1200- 400<br>rpm)                 | 8 kg         | <b>White cotton and fast-coloured cot-<br/>ton.</b> Normal soil. The energy con-<br>sumption decreases and the time of<br>the washing programme is extended,<br>ensuring good washing results. |
| Sintéticos<br>40°C<br>60°C - Cold                                                                                                   | 1200 rpm<br>(1200- 400<br>rpm)                 | 3 kg         | <b>Synthetic items or mixed fabric<br/>items.</b> Normal soil.                                                                                                                                 |
| Delicados<br>30°C<br>40°C - Cold                                                                                                    | 1200 rpm<br>(1200- 400<br>rpm)                 | 3 kg         | <b>Delicate fabrics such as acrylics,<br/>viscose and mixed fabrics requiring<br/>gentler washing.</b> Normal soil.                                                                            |
| <b>Special programmes</b>                                                                                                           |                                                |              |                                                                                                                                                                                                |
|  Diario<br>Express<br>40 °C<br>60 °C - Cold        | 1200 rpm<br>(1200 - 400<br>rpm)                | 3 kg         | <b>Cottons and Synthetics.</b> Programme<br>to wash daily laundry in a short time.<br>Normal to light soil.                                                                                    |
|  Rápido<br>30 min.<br>40°C<br>40°C - 30°C          | 1200 rpm<br>(1200- 400<br>rpm)                 | 3 kg         | <b>Synthetic and mixed fabric items.</b><br>Light soil.                                                                                                                                        |
|  Rápido<br>14 min.<br>30 °C                      | 800 rpm<br>(800- 400<br>rpm)                   | 1,5 kg       | <b>Synthetic and mixed fabric items.</b><br>Very light soil and items to freshen up.                                                                                                           |
| <b>Additional washing programmes</b>                                                                                                |                                                |              |                                                                                                                                                                                                |
| Centrif.                                                                                                                            | 1200 rpm<br>(1200- 400<br>rpm)                 | 8 kg         | <b>All fabrics, except woollens and del-<br/>icate fabrics.</b> To spin the laundry and<br>to drain the water in the drum.                                                                     |
| Drenar                                                                                                                              | -                                              | 8 kg         | To drain the water in the drum. <b>All fab-<br/>rics.</b>                                                                                                                                      |
| Aclarado/<br>Enxag.                                                                                                                 | 1200 rpm<br>(1200- 400<br>rpm)                 | 8 kg         | To rinse and spin the laundry. <b>All fab-<br/>rics</b> , except woollens and very delicate<br>fabrics. Reduce the spin speed accord-<br>ingly to the type of laundry.                         |

| Programme<br>Default tem-<br>perature<br>Tempera-<br>ture range                                                             | Reference<br>spin speed<br>Spin speed<br>range | Maximum load | Programme description<br>(Type of load and soil level)                                                                                                                                                                                                                                                                                                                        |
|-----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Anti-Alergia<br>60 °C                                                                                                       | 1200 rpm<br>(1200 - 400<br>rpm)                | 8 kg         | <b>White cotton items.</b> This programme removes micro-organisms thanks to a washing phase with the temperature maintained above 60°C for several minutes. This helps remove germs, bacteria, micro-organism and particles. An additional rinsing phase ensures a proper removal of detergent residues and pollens/allergenic items. In this way the wash is more effective. |
| Edred.<br>40 °C<br>60°C- Cold                                                                                               | 800 rpm<br>(800 - 400<br>rpm)                  | 3 kg         | Special programme for one <b>synthetic blanket, duvet, bedspread</b> and so on.                                                                                                                                                                                                                                                                                               |
| Sport<br>30 °C<br>40°C - Cold                                                                                               | 1200 rpm<br>(1200 - 400<br>rpm)                | 3 kg         | <b>Synthetic and delicate items.</b> Light soil items or items to refresh.                                                                                                                                                                                                                                                                                                    |
|  Lana<br>\Lãs/Seda<br>40 °C<br>40°C - Cold | 1200 rpm<br>(1200 - 400<br>rpm)                | 1,5 kg       | <b>Machine washable wool, hand washable wool and other fabrics</b> with «hand washing» care symbol <sup>2)</sup> .                                                                                                                                                                                                                                                            |

**1) Standard programmes for the Energy Label consumption values.** According to regulation 1061/2010, these programmes are respectively the «Standard 60°C cotton programme» and the «Standard 40°C cotton programme». They are the most efficient programmes in terms of combined energy and water consumption for washing normally soiled cotton laundry.



The water temperature of the washing phase may differ from the temperature declared for the selected programme.

**2)** During this cycle the drum rotates slowly to ensure a gentle wash. It can seem that the drum doesn't rotate or doesn't rotate properly, but this is normal for this programme.

**Programme options compatibility**

| Programme                                                                                      | Centrif. |  |  |  |  |  |  |
|------------------------------------------------------------------------------------------------|----------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Algod.                                                                                         | ■        | ■                                                                                   | ■                                                                                   | ■                                                                                   | ■                                                                                   | ■                                                                                   | ■                                                                                    |
| Algod. Eco  | ■        | ■                                                                                   | ■                                                                                   | ■                                                                                   | ■                                                                                   |                                                                                     | ■                                                                                    |
| Sintéticos                                                                                     | ■        | ■                                                                                   | ■                                                                                   | ■                                                                                   | ■                                                                                   | ■                                                                                   | ■                                                                                    |

| Programme                                                                                               | Centrif. |  |  |  |  |  |  |
|---------------------------------------------------------------------------------------------------------|----------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Delicados                                                                                               | ■        | ■                                                                                 | ■                                                                                 |                                                                                   | ■                                                                                 |                                                                                   | ■                                                                                  |
| Diario Express  min    | ■        | ■                                                                                 | ■                                                                                 | ■                                                                                 | ■                                                                                 | ■                                                                                 | ■                                                                                  |
| Rápido 30 min.<br> min | ■        | ■                                                                                 |                                                                                   |                                                                                   | ■                                                                                 |                                                                                   |                                                                                    |
| Rápido 14 min.<br> min | ■        | ■                                                                                 | ■                                                                                 |                                                                                   | ■                                                                                 |                                                                                   |                                                                                    |
| Centrif.                                                                                                | ■        |                                                                                   |                                                                                   |                                                                                   | ■                                                                                 |                                                                                   |                                                                                    |
| Drenar                                                                                                  |          |                                                                                   |                                                                                   |                                                                                   | ■                                                                                 |                                                                                   |                                                                                    |
| Aclarado/Enxag.                                                                                         | ■        | ■                                                                                 | ■                                                                                 |                                                                                   | ■                                                                                 |                                                                                   | ■                                                                                  |
| Anti-Alergia                                                                                            | ■        | ■                                                                                 | ■                                                                                 | ■                                                                                 | ■                                                                                 |                                                                                   |                                                                                    |
| Edred.                                                                                                  | ■        |                                                                                   |                                                                                   |                                                                                   | ■                                                                                 |                                                                                   |                                                                                    |
| Sport                                                                                                   | ■        | ■                                                                                 | ■                                                                                 | ■                                                                                 | ■                                                                                 |                                                                                   | ■                                                                                  |
| Lana\Lãs/Seda<br>      | ■        | ■                                                                                 | ■                                                                                 |                                                                                   | ■                                                                                 |                                                                                   |                                                                                    |

## 8. CONSUMPTION VALUES



Stated values are obtained in laboratory conditions with relevant standards. Different causes can change the data: the quantity and type of laundry and ambient temperature. Water pressure, the supply voltage and the temperature of inlet water may also affect the washing programme duration.



Technical specifications may be changed without prior notice to improve the quality of product.



At the start of the programme, the display shows the programme duration for the maximum load capacity.

During the washing phase the programme duration is automatically calculated and can be greatly reduced if the laundry load is lower than the maximum load capacity (e.g. Cotton 60°C, maximum load capacity 8 kg, the programme duration exceeds 2 hours; actual load 1 kg, the programme duration will be less than 1 hour).

When the appliance is calculating the real programme duration a dot flashes in the display.

| Programmes                                                                                                          | Load (kg) | Energy consumption (kWh) | Water consumption (litre) | Approximate programme duration (minutes) | Remaining moisture (%) <sup>1)</sup> |
|---------------------------------------------------------------------------------------------------------------------|-----------|--------------------------|---------------------------|------------------------------------------|--------------------------------------|
| Algod. 60°C                                                                                                         | 8         | 1,40                     | 70                        | 210                                      | 53                                   |
| Algod. 40°C                                                                                                         | 8         | 1,20                     | 69                        | 205                                      | 53                                   |
| Sintéticos 40°C                                                                                                     | 3         | 0,60                     | 56                        | 140                                      | 35                                   |
| Delicados 40°C                                                                                                      | 3         | 0,55                     | 59                        | 95                                       | 35                                   |
| Lana\Lãs/Seda 30°C <sup>2)</sup>                                                                                    | 1,5       | 0,45                     | 62                        | 75                                       | 30                                   |
| <b>Standard cotton programmes</b>  |           |                          |                           |                                          |                                      |
| Standard 60°C cotton               | 8         | 0,81                     | 52                        | 290                                      | 53                                   |
| Standard 60°C cotton               | 4         | 0,57                     | 40                        | 228                                      | 53                                   |
| Standard 40°C cotton               | 4         | 0,51                     | 40                        | 226                                      | 53                                   |

<sup>1)</sup> At the end of spin phase.

<sup>2)</sup> Not available for some models.

| Off Mode (W)                                                                                                                           | Left On Mode (W) |
|----------------------------------------------------------------------------------------------------------------------------------------|------------------|
| 0.30                                                                                                                                   | 0.30             |
| The information given in the chart above is compliant with the EU Commission regulation 1015/2010 implementing directive 2009/125/EC . |                  |

## 9. OPTIONS

### 9.1 Temp.

Set this option to change the default temperature.

Indicator  = cold water.

The indicator of the set temperature comes on.

### 9.2 Centrif.

With this option you can change the default spin speed.

The indicator of the set speed comes on.

### Additional spin options:

#### No Spin

- Set this option to deactivate all spin phases. Only the drain phase is available.
- The related indicator comes on.
- Set this option for very delicate fabrics.
- The rinses phase uses more water for some washing programmes.

#### Rinse Hold

- Set this option to prevent the laundry creases.
- The related indicator comes on.

- There is a water in the drum when the programme is completed.
- The drum turns regularly to prevent the laundry creases.
- The door stays locked. You must drain the water to unlock the door.

**i** To drain the water refer to 'At the end of the programme'.

### 9.3 Pre-lav.

With this option you can add a prewash phase to a washing programme.

The relevant indicator illuminates.

- Use this option to add a pre-wash phase before the washing phase. This option is recommended for heavily soiled laundry, especially if containing sand, dust, mud and other solid particles.

**i** This option can increase the programme duration.

### 9.4 Inicio Diferido

With this option you can delay the start of a programme to a more convenient time.

Touch the button repeatedly to set the required delay. The time increases from 30 minutes to 20 hours.

The display shows the indicator  and the selected delay time. After touching the Inicio/Pausa  button, the appliance begins the countdown and the door is locked.

### 9.5 Extra Aclarado /Enxag.

With this option you can add a few rinses according to the selected washing programme.

Use this option for people with allergies to detergent residues and with sensitive skin.

**i** This option increases the programme duration.

The corresponding indicator illuminates.

### 9.6 Fácil

The appliance carefully washes and spins the laundry to prevent the creases.

The appliance decreases the spin speed, uses more water and adapts the programme duration to the type of laundry.

The related indicator comes on.

### 9.7 Time Manager – +

With this option you can reduce the programme duration depending on the load size and the degree of soiling. When you set a washing programme, the display shows the default duration and ----- dashes.

Touch Time manager –  + button to reduce the programme duration according to your needs. The display shows the new programme duration and a number of dashes will decrease accordingly:

----- suitable for a full load of normally soiled garments.

---- a quick cycle for a full load of lightly soiled garments.

--- very quick cycle for a smaller lightly soiled load (max. half load recommended).

- the shortest cycle to freshen up a small amount of laundry.

The Time manager is available only with the programmes in the table.

| indicator | Algod. | Algod. Eco  | Sintéticos | Delicados |
|-----------|--------|------------------------------------------------------------------------------------------------|------------|-----------|
| -         | ■      |                                                                                                | ■          | ■         |
| --        | ■      | ■                                                                                              | ■          | ■         |
| ---       | ■      |                                                                                                | ■          | ■         |

| indicator | Algod. | Algod. Eco | Sintéticos | Delicados |
|-----------|--------|------------|------------|-----------|
| -----1)   | ■      | ■          | ■          | ■         |

1) Default duration for all programmes.

## 10. SETTINGS

### 10.1 Child Lock

With this option you can prevent that the children play with the control panel.

- To **activate/deactivate** this option, press  and  at the same time until the indicator  **comes on/goes off**.

You can activate this option:

- After you press : the options and the programme knob are locked.
- Before you press : the appliance cannot start.

### 10.2 Permanent Extra Rinse

With this option you can permanently have an extra rinse when you set a new programme.

- To **activate/deactivate** this option press  and  at the same time until the indicator  **comes on/goes off**.

### 10.3 Acoustic signals

The acoustic signals operate when:

- The programme is completed.
- The appliance has a malfunction.

To **deactivate/activate** the acoustic signals, press  and  at the same time for 3 seconds.



If you deactivate the acoustic signals, they continue operate when the appliance has a malfunction.

## 11. BEFORE FIRST USE



During installation or before first use you may observe some water in the appliance. This is residual water left in the appliance after a full functional test in the factory to ensure the appliance is delivered to customers in perfect working order and is no cause for concern.

1. Connect the mains plug to the mains socket.
2. Open the water tap.
3. Put a small quantity of detergent in the compartment for washing phase.
4. Set and start a programme for cotton at the highest temperature without laundry.

This removes all possible dirt from the drum and the tub.

## 12. DAILY USE



### WARNING!


Refer to Safety chapters.

### 12.1 Loading the laundry

1. Open the appliance door
2. Empty the pockets and unfold the items before you put them in the appliance.
3. Put the laundry in the drum, one item at a time.

Make sure not to put too much laundry in the drum.

4. Close the door firmly.

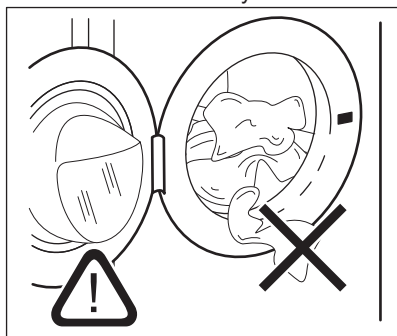


Make sure that no laundry gets caught between the seal and the door to avoid risk of water leakage and damage to the laundry.



Washing heavily oiled, greasy stains could cause damage rubber parts of the washing machine.

### 12.2 Filling the detergent and additives

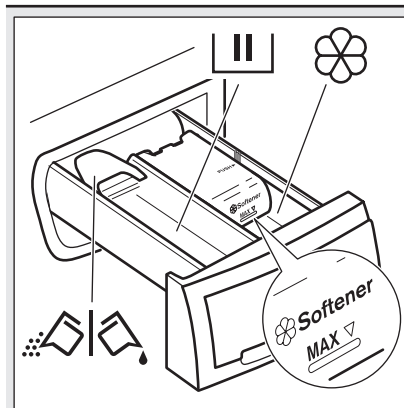

Compartment for washing phase.  
If you use liquid detergent, put it immediately before you start the programme.



Compartment for liquid additives (fabric conditioner, starch).

**MAX**

Maximum level for quantity of liquid additives.




Flap for powder or liquid detergent.


When you set a prewash programme (or option), put the detergent for prewash phase directly into the drum.

-  Always follow the instructions that you find on the packaging of the detergent products, but we recommend that you do not exceed the maximum indicated level (**MAX**). This quantity will however guarantee the best washing results.
-  After a washing cycle, if necessary, remove any detergent residue from the detergent dispenser.

## 12.3 Liquid or powder detergent

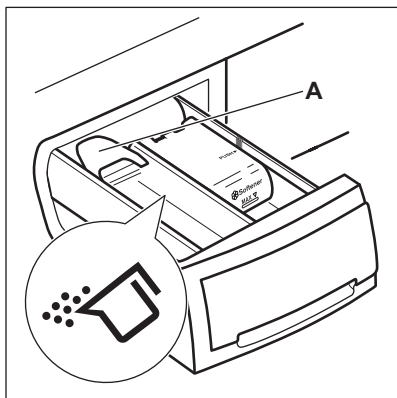


The default position of the flap is **A** (powder detergent).

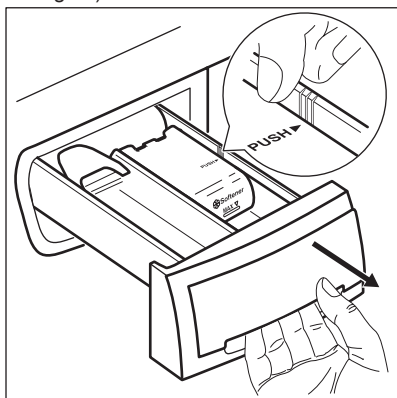


To use liquid detergent:

**1.** Remove the drawer. Push the drawer edge in the place with the arrow (PUSH) to remove the drawer easily.

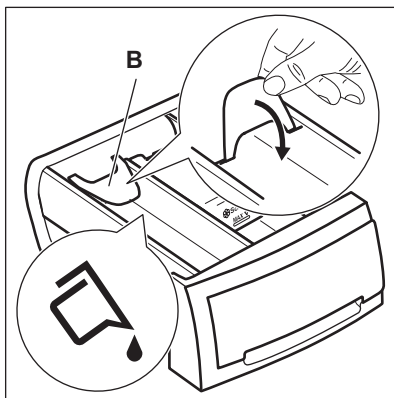

- 2.** Adjust the flap in position **B**.
- 3.** Put back the drawer in the recess.

-  When you use the liquid detergent:
  - Do not use gelatinous or thick liquid detergents.
  - Do not put more liquid then 120 ml.
  - Do not set the programme with prewash.
  - Do not set the delay start.

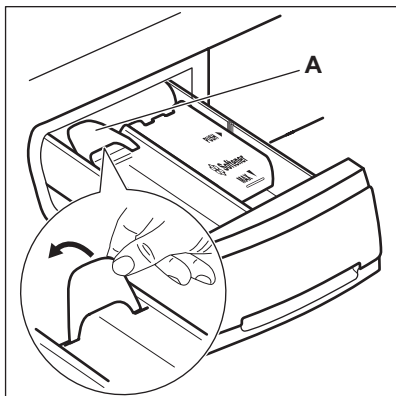

When the flap is in position **B** and you want to use powder detergent:

1. Remove the drawer.
2. Adjust the flap in position **A**.
3. Put back the drawer in the recess.

## 12.4 Setting a programme

1. Turn the programme knob and set the programme:
  - The indicator flashes.
  - The display shows the level of the Time Manager, the programme duration and the indicators of the phases of the programme.
2. If necessary, change the temperature and the spin speed or add available options. When you activate an option, the indicator of the set option comes on.

**i** If you set something incorrect, the display shows the message .

## 12.5 Starting a programme without the delay start

Press .

- The indicator of stops to flash and stays on.
- The indicator starts to flash on the display.
- The programme starts, the door locks, the display shows the indicator .

- The drain pump can operate for a short time when the appliance fills water.

**i** After approximately 15 minutes from the start of the programme:

- The appliance adjusts automatically the programme duration agree with the laundry load.
- The display shows the new value.

## 12.6 Starting a programme with the delay start

1. Press again and again until the display shows the delay you want to set.

The related indicator comes on the display.

2. Press :

- The appliance starts the countdown.
- The door locks, the display shows the indicator .
- When the countdown is completed, the programme starts automatically.

**i** You can cancel or change the set of the delay start before you press the . To cancel the delay start:

- Press to set the appliance to pause.
- Press until the display shows .
- Press again to start the programme immediately.

## 12.7 The AutoSense System load detection

After touching the Inicio/Pausa button:

1. The AutoSense System starts estimating the weight of the load to calculate the real programme

duration. During this phase the dot flashes on the display.

2. After about 15-20 minutes new cycle duration is displayed.  
The appliance automatically adjusts the programme duration to the load to achieve perfect washing results in the minimum possible time.

## 12.8 Interrupting a programme and changing the options

You can change only some options before they operate.

1. Press .  
The indicator flashes.
2. Change the options.
3. Press  again.  
The programme continues.

## 12.9 Cancelling a running programme

1. Turn the programme knob to position ① to cancel the programme and to deactivate the appliance.
2. Turn the programme knob again to activate the appliance. Now, you can set a new washing programme.



Before starting the new programme the appliance could drain the water. In this case, make sure that the detergent is still in the detergent compartment, if not fill the detergent again.

## 12.10 Opening the door when the delay start operates

While a delay start operates, the appliance door is locked and the indicator  is on.

1. Press  to pause the appliance.
2. Wait until the door lock indicator  goes off.
3. You can open the door.
4. Close the door and press the  again.

The delay start continues to operate.

## 12.11 Opening the door when the programme operates

While a programme operates, the appliance door is locked and the indicator  is on.



### CAUTION!

If the temperature and level of the water in the drum are too high, you cannot open the door.

1. Turn the programme knob to position ① to deactivate the appliance.
2. Wait for some minutes and then open the appliance door.
3. Close the appliance door.
4. Set the programme again.

## 12.12 At the end of the programme

- The appliance stops automatically.
- The acoustic signal operates (if it is activated).
- In the display  comes on.
- The indicator of the  goes off.
- The door lock indicator  goes off.
- You can open the door.
- Remove the laundry from the appliance. Make sure that the drum is empty.
- Close the water tap.
- Turn the programme knob to position ① to deactivate the appliance.
- Keep the door ajar, to prevent the mildew and odours.

**The washing programme is completed, but there is water in the drum:**

- The drum turns regularly to prevent the creases in the laundry.
- The door lock indicator  is on. The indicator  flashes. The door stays locked.
- You must drain the water to open the door.

**To drain the water:**

1. If necessary, decrease the spin speed. If you set , the appliance only drains.
2. Press . The appliance drains the water and spins.
3. When the programme is completed, and the door lock indicator  goes off, you can open the door.
4. Turn the programme knob to position  to deactivate the appliance.

 The appliance drains and spins automatically after approximately 18 hours (except for Wool programme).

deactivate the appliance, the energy saving status activates.

The energy saving status decreases the energy consumption when the appliance is on the stand by.

- All indicators and the display go off.
- The indicator of the  flashes slowly
- Press one of the options to deactivate the energy saving status.

 If you set a programme or an option that ends with water in the drum, the energy saving status function **doesn't activate** to remind you to drain the water.

## 12.13 Stand-by

Some minutes after the end of the washing programme, if you do not


# 13. HINTS AND TIPS

## 13.1 The laundry load

- Divide the laundry in: white, coloured, synthetics, delicates and wool.
- Obey the washing instructions that are on the laundry care labels.
- Do not wash white and coloured items together.
- Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times.
- Button up pillowcases, close zippers, hooks and poppers. Tie up belts.
- Turn multilayered fabrics, wool and items with painted illustrations inside out.
- Remove hard stains with a special detergent.
- Wash and pre-treat heavy soil stains before putting items in drum
- Be careful with the curtains. Remove the hooks and put the curtains in a washing bag or pillowcase.
- Do not wash laundry without hems or with cuts. Use a washing bag to wash small and/or delicate items (e.g. underwired bras, belts, tights, etc. ).
- A very small load can cause balance problems with the spin phase. If this

occurs, adjust manually the items in the tub and start the spin phase again.

- Avoid washing garments full of long animal hair or poor quality garments releasing lots of fluff that could block the drain circuit and therefore requiring the Service assistance.
- Empty the pockets and unfold the items.

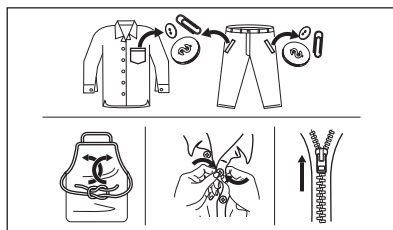

## 13.2 Stubborn stains

For some stains, water and detergent is not sufficient.

We recommend that you pre-treat these stains before you put the items in the appliance.

Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric.

### 13.3 Detergents and additives

- Only use detergents and additives specially made for washing machines:
  - powder detergents for all types of fabric,
  - powder detergents for delicate fabrics (40 °C max) and woollens,
  - liquid detergents, preferably for low temperature wash programmes (60 °C max) for all types of fabric, or special for woollens only.
- Do not mix different types of detergents.
- To help the environment, do not use more than the correct quantity of detergent.
- Obey the instructions that you find on the on packaging of these products.
- Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil.
- If your appliance does not have the detergent dispenser with the flap device, add the liquid detergents with a dosing ball (supplied by the detergent's manufacturer).

### 13.4 Ecological hints

- Set a programme without the prewash phase to wash laundry with normal soil.
- Always start a washing programme with the maximum load of laundry allowed.
- If necessary, use a stain remover when you set a programme with a low temperature.
- To use the correct quantity of detergent, check the water hardness of your domestic system. Refer to "Water hardness".

### 13.5 Water hardness

If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water hardness is soft it is not necessary to use a water softener.

To know the water hardness in your area, contact your local water authority.

Use the correct quantity of the water softener. Obey the instructions that you find on the packaging of the product.

## 14. CARE AND CLEANING



#### **WARNING!**

Refer to Safety chapters.



The appliance is intended for normal household use only.



Read the chapter carefully for best maintenance and care.

### 14.1 External cleaning

Clean the appliance with mild soap and warm water only. Fully dry all the surfaces.



#### **CAUTION!**

Do not use alcohol, solvents or chemical products.



#### **CAUTION!**

Do not clean the metal surfaces with chlorine-based detergent.

### 14.2 Descaling



If the water hardness in your area is high or moderate, we recommend that you use a water descaling product for washing machines.

Regularly examine the drum to check for limescale.

Regular detergents already contain water softening agents, but we recommend to run a cycle with an empty drum and a descaling product occasionally.

**i** Always follow the instructions that you find on the packaging of the product.

## 14.3 Maintenance wash

The repeated and prolonged use of low temperature programmes can cause detergent deposits, fluff residues, bacterial growth inside the drum and the tub. This could generate bad odours and mildew. To eliminate these deposits and clean the inner part of the appliance, run a maintenance wash regularly (at least once a month).

**i** Refer to Cleaning the drum chapter.

## 14.4 Cleaning the drum

Regularly examine the drum to prevent unwanted deposits.

Rust deposits in the drum may occur due to rusting foreign body in the washing or tap water containing iron

Clean the drum with special products for stainless steel.


**i** Always follow the instructions that you find on the packaging of the product.  
Do not clean the drum with acidic descaling products, scouring products containing chlorine or iron or steel wool.

For a thorough clean:

1. Remove all laundry from the drum.
2. Run a Algod. programme with the highest temperature.
3. Add a small quantity of powder detergent into the empty drum, in order to rinse out any left residues.

## 14.5 Door seal with double lip trap


This appliance is designed with a **self cleaning draining system**, allowing light fluff fibers that fall off the clothes to be drained out with the water, in such a way that there is no need by the customer to access this area for regular maintenance and cleaning.

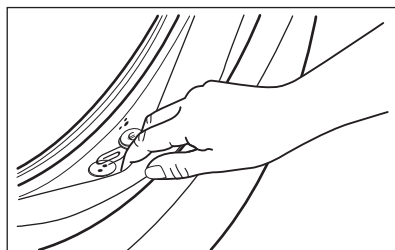


Regularly examine the seal and remove all objects from the inner part. Coins, buttons, other small items forgotten in the pockets of your clothes are deposited during the washing cycle in the special double lip trap in the porthole seal, where they can be conveniently recovered at the end of the cycle.

## 14.6 Cleaning the detergent dispenser


1.

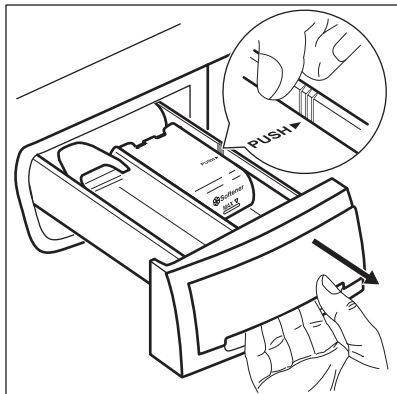


2.

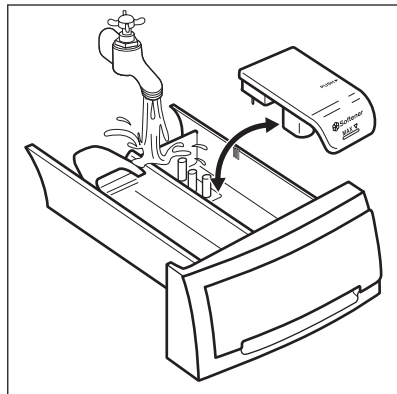



3.

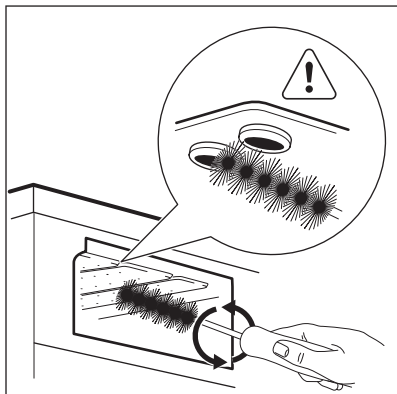


4.

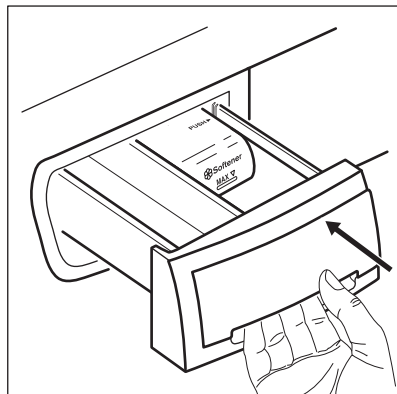

## 14.7 Cleaning the inlet hose and the valve filter

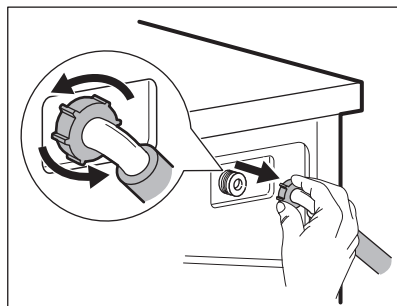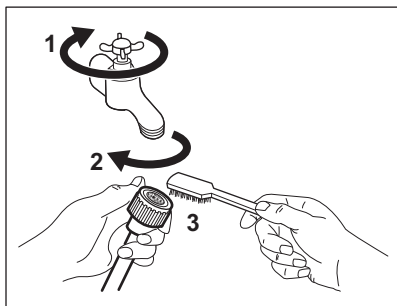


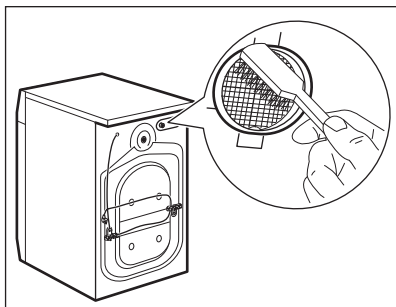

## 14.8 Frost precautions

If the appliance is installed in an area where the temperature can be less than 0° C, remove the remaining water from the inlet hose and the drain pump.

1. Disconnect the mains plug from the mains socket.
2. Close the water tap.
3. Put the two ends of the inlet hose in a container and let the water flow out of the hose.
4. Empty the drain pump. Refer to the emergency drain procedure.

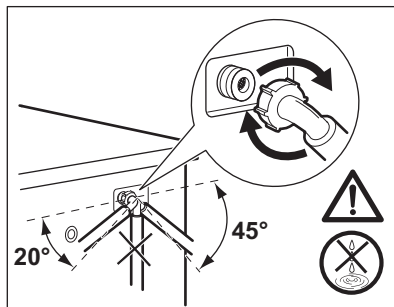

5. When the drain pump is empty, install the inlet hose again.



### **WARNING!**

Make sure that the temperature is higher than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures.

## 15. TROUBLESHOOTING



### **WARNING!**

Refer to Safety chapters.

### 15.1 Introduction

The appliance does not start or it stops during operation.

First try to find a solution to the problem (refer to the table). If the problem persists, contact the Authorised Service Centre.

**With some problems, the acoustic signals operate and the display shows an alarm code:**

- **E10** - The appliance does not fill with water properly. Start the appliance

again by pressing Inicio/Pausa button. After 10 seconds the door will be unlocked.

- **E20** - The appliance does not drain the water.
- **E40** - The appliance door is open or not closed correctly. Please check the door!
- **E90** - The mains supply is unstable. Wait until the mains supply is stable.



### **WARNING!**

Deactivate the appliance before you do the checks.

## 15.2 Possible failures

| Problem                                                                         | Possible solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The programme does not start.                                                   | <ul style="list-style-type: none"> <li>• Make sure that the mains plug is connected to the mains socket.</li> <li>• Make sure that the appliance door is closed.</li> <li>• Make sure that there is not a damaged fuse in the fuse box.</li> <li>• Make sure that the Start/Pause has been pressed.</li> <li>• If the delay start is set, cancel the setting or wait for the end of countdown.</li> <li>• Deactivate the Child Lock function if it is on.</li> </ul>                                                                                                                                                                                                                                                                     |
| The appliance does not fill with water properly.                                | <ul style="list-style-type: none"> <li>• Make sure that the water tap is open.</li> <li>• Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority.</li> <li>• Make sure that the water tap is not clogged.</li> <li>• This problem may be caused by the filter of the inlet hose or the valve drain filter which may be clogged. Refer to "Care and cleaning". If problem remains please contact the Authorised Service Centre.</li> <li>• Make sure that the inlet hose has no kinks or bends.</li> <li>• Make sure that the connection of the water inlet hose is correct.</li> <li>• Make sure that the connections of the water inlet hoses are correct.</li> </ul> |
| The appliance does not fill with water and drain immediately.                   | <ul style="list-style-type: none"> <li>• Make sure that the drain hose is in the correct position. The hose may be too low. Refer to 'Installation instruction'.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| The appliance does not drain the water.                                         | <ul style="list-style-type: none"> <li>• Make sure that the sink spigot is not clogged.</li> <li>• Make sure that the drain hose has no kinks or bends.</li> <li>• Make sure that the connection of the drain hose is correct.</li> <li>• Set the drain option if you set a programme without drain phase.</li> <li>• Set the drain option if you set an option which ends with water in the drum.</li> <li>• This problem may be caused by the clogged drain filter. Please contact the Authorised Service Centre.</li> </ul>                                                                                                                                                                                                           |
| The spin phase does not operate or the washing cycle lasts longer than usually. | <ul style="list-style-type: none"> <li>• Set the spin option.</li> <li>• Set the drain option if you set an option which ends with water in the drum.</li> <li>• This problem may be caused by the clogged drain filter. Please contact the Authorised Service Centre.</li> <li>• Adjust manually the items in the tub and start the spin phase again. This problem may be caused by balance problems.</li> </ul>                                                                                                                                                                                                                                                                                                                        |

| Problem                                       | Possible solution                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| There is water on the floor.                  | <ul style="list-style-type: none"> <li>• Make sure that the couplings of the water hoses are tight and there is not water leakages.</li> <li>• Make sure that the water inlet hose and the drain hose have no damages.</li> <li>• Make sure you use the correct detergent and the correct quantity of it.</li> </ul>                                                                                                                                                   |
| You cannot open the appliance door.           | <ul style="list-style-type: none"> <li>• Make sure that the washing programme is finished.</li> <li>• Set the drain or the spin option if there is water in the drum.</li> <li>• Do the emergency drain procedure. See "Frost precautions" (in "Care and Cleaning" chapter).</li> <li>• Make sure that the appliance receives electrical power.</li> <li>• This problem may be caused by a failure of the appliance. Contact the Authorised Service Centre.</li> </ul> |
| The appliance makes an unusual noise.         | <ul style="list-style-type: none"> <li>• Make sure the levelling of the appliance is correct. Refer to 'Installation instruction'.</li> <li>• Make sure that the packaging and/or the transit bolts are removed. Refer to 'Installation instruction'.</li> <li>• Add more laundry in the drum. The load may be too small.</li> </ul>                                                                                                                                   |
| The cycle is shorter than the time displayed. | <ul style="list-style-type: none"> <li>• The appliance calculates a new time according to the laundry load. See the 'Consumption Values' chapter.</li> </ul>                                                                                                                                                                                                                                                                                                           |
| The cycle is longer than the time displayed.  | <ul style="list-style-type: none"> <li>• An unbalanced laundry load increases the duration time. This is a normal behaviour of the appliance.</li> </ul>                                                                                                                                                                                                                                                                                                               |
| The washing results are not satisfactory.     | <ul style="list-style-type: none"> <li>• Increase the detergent quantity or use a different detergent.</li> <li>• Use special products to remove the stubborn stains before you wash the laundry.</li> <li>• Make sure that you set the correct temperature.</li> <li>• Decrease the laundry load.</li> </ul>                                                                                                                                                          |
| You cannot set an option.                     | <ul style="list-style-type: none"> <li>• Make sure that you press only the wanted touch button(s).</li> </ul>                                                                                                                                                                                                                                                                                                                                                          |

After the check, activate the appliance. The programme continues from the point of interruption.

If the problem occurs again, contact the Authorised Service Centre.

If the display shows other alarm codes. Deactivate and activate the appliance. If the problem continues, contact the Authorised Service Centre.

## 16. TECHNICAL DATA

|           |                                      |                                |
|-----------|--------------------------------------|--------------------------------|
| Dimension | Width/ Height/ Depth/<br>Total depth | 600 mm/ 850 mm/ 559 mm/ 578 mm |
|-----------|--------------------------------------|--------------------------------|

|                                                                                                                                                                                |                    |                    |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|--------------------|
| Electrical connection                                                                                                                                                          | Voltage            | 230 V              |
|                                                                                                                                                                                | Overall power      | 2200 W             |
|                                                                                                                                                                                | Fuse               | 10 A               |
|                                                                                                                                                                                | Frequency          | 50 Hz              |
| Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture |                    | IPX4               |
| Water supply pressure                                                                                                                                                          | Minimum            | 0.5 bar (0.05 MPa) |
|                                                                                                                                                                                | Maximum            | 8 bar (0.8 MPa)    |
| Water supply <sup>1)</sup>                                                                                                                                                     |                    | Cold water         |
| Maximum Load                                                                                                                                                                   | Cotton             | 8 kg               |
| Energy Efficiency Class                                                                                                                                                        |                    | A+++ -20%          |
| Spin Speed                                                                                                                                                                     | Maximum spin speed | 1151 rpm           |

<sup>1)</sup> Connect the water inlet hose to a water tap with a 3/4" thread.

## 17. PRODUCT INFORMATION SHEET IN REFERENCE TO E.U. REGULATION 1369/2017

| Product Information Sheet                                                                                                                                                                                                                                   |                             |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|
| Trade Mark                                                                                                                                                                                                                                                  | ELECTROLUX                  |
| Model                                                                                                                                                                                                                                                       | EW2F4822BF,<br>PNC914912361 |
| Rated capacity in kg                                                                                                                                                                                                                                        | 8                           |
| Energy efficiency class                                                                                                                                                                                                                                     | A+++ -20%                   |
| Energy consumption in kWh per year, based on 220 standard washing cycles for cotton programmes at 60 °C and 40 °C at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used. | 156                         |
| Energy consumption of the standard 60°C cotton programme at full load in kWh                                                                                                                                                                                | 0,81                        |
| Energy consumption of the standard 60°C cotton programme at partial load in kWh                                                                                                                                                                             | 0,57                        |
| Energy consumption of the standard 40°C cotton programme at partial load kWh                                                                                                                                                                                | 0,51                        |
| Power consumption of the off-mode in W                                                                                                                                                                                                                      | 0,3                         |
| Power consumption in left-on mode in W                                                                                                                                                                                                                      | 0,3                         |

|                                                                                                                                                                                                                                                                                                                                           |      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| Water consumption in litres per year, based on 220 standard washing cycles for cotton programmes at 60 °C and 40 °C at full and partial load. Actual water consumption will depend on how the appliance is used.                                                                                                                          | 9999 |
| Spin-drying efficiency class on a scale from G (least efficient) to A (most efficient)                                                                                                                                                                                                                                                    | B    |
| Maximum spin speed in rpm                                                                                                                                                                                                                                                                                                                 | 1151 |
| Remaining moisture content in %                                                                                                                                                                                                                                                                                                           | 53   |
| The 'standard 60 °C cotton programme' and the 'standard 40 °C cotton programme' are the standard washing programmes to which the information in the label and the fiche relates, these programmes are suitable to clean normally soiled cotton laundry and they are the most efficient in terms of combined energy and water consumption. | -    |
| Programme time of the standard 60°C cotton programme at full load in minutes                                                                                                                                                                                                                                                              | 290  |
| Programme time of the standard 60°C cotton programme at partial load in minutes                                                                                                                                                                                                                                                           | 228  |
| Programme time of the "standard 40°C cotton programme at partial load in minutes                                                                                                                                                                                                                                                          | 226  |
| Duration of the left on mode in minutes                                                                                                                                                                                                                                                                                                   | 5    |
| Airborne acoustical noise emission in db(A) washing                                                                                                                                                                                                                                                                                       | 51   |
| Airborne acoustical noise emission in db(A) spinning                                                                                                                                                                                                                                                                                      | 78   |
| Built in appliance Y/N                                                                                                                                                                                                                                                                                                                    | No   |

The information given in the chart above is compliant with the EU Commission regulation 1015/2010 implementing directive 2009/125/EC .

## 18. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol .  
Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

[www.electrolux.com/shop](http://www.electrolux.com/shop)



192929510-A-462018

