



USB 3.0 Gigabit Fiber Ethernet Adapter

P/N: USB3.0FIBB



Description:

The USB 3.0 Gigabit Fiber Ethernet adapter used an controller RTL8153, Which is features USB 3.0 to provide higher bandwidth and improved protocols for data exchange between the host and the device. USB 3.0 also offers more advanced power management features for energy saving. The RTL8153 supports IEEE802.3az-2010, also known as Energy Efficient Ethernet (EEE), and it is fully compliant with Microsoft NDIS5, NDIS6 (IPv4,IPv6,TCP,UDP) checksum features ,and supports IEEE 802 IP layer 2 priority encoding and IEEE 802.1Q Virtual bridged Local Area network (VLAN). It is suitable for desktop, workstation, server, communication platforms etc.

Specification:

- Integrated 1000Mbps-SX / LX transceiver
- Supports USB 3.0, USB 2.0 and USB 1.1
- Supports CDC-ECM
- Supports LPM (Link Power Management)
- Supports Pair swap / polarity / skew correction
- Crossover Detection & Auto-Correction
- Transmit / Receive on-chip buffer support
- Supports hardware CRC (Cyclic Redundancy Check) function
- Supports power Down / Link down power saving
- Upstream port: USB 3.0AF
- Downstream port: SFPport
- Chipset: Realtek RTL8153

System Requirements:

- Linux, MAC OS10.6~10.13, Windows XP / Vista / Win 7 / Win 8 / Win 8.1 / Win 10 32&64 bit
- Available USB 3.0 port

Package content :

- 1 x USB3.0 Gigabit Fiber Ethernet Adapter
- 1 x User's Manual
- 1 x CD

Hardware installation

1. Turn on the computer and get it into the system
2. Plug the USB 3.0 adapter into your computer's USB port
3. Insert the SFP optical fiber module into the SFP port

Install Drivers

Windows® Operating Systems

For Windows XP/Vista/Win7/Win8/Win8.1/Win10

Only need plug the USB 3.0 SFP adapter into your computer's USB port, at the same time the computer system will recognize a new drive disk, Double-click the drive disk, and the system will start and finish the driver installation automatically (if the driver does not installed, please right-click“ **open** ” to Brower drive disk file, and double-click“ **RTK_NIC_DRIVER_INSTALLER.sfx.exe** ”) . The drive disk will disappear after the driver is installed successfully.

** If the driver still installed failure, please follow below process to complete install:*

1. Pls take out the CD from the package and place it in the computer CD drive.
2. Find the driver file corresponding to the system.
3. Double-click Setup.exe to start the program installation.
4. Follow the steps in the program until the last one, and restart the computer.

To Verify Windows® Driver Installation

“ **Realtek USB GbE Family Controller** ” ... installed under Network Adapter item.

Support

More information and settings please refer to the User Guides or you can contact us.