# **Inspiron 3482**

Setup and Specifications



#### Notes, cautions, and warnings

(i) NOTE: A NOTE indicates important information that helps you make better use of your product.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2018 - 2019 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2018 - 12

# Contents

3 Views of Inspiron 14 3482	
Right	
Left	
Base	
Display	
Bottom	
4 Specifications of Inspiron 14 3482	
Dimensions and weight	
Processors	
Chipset	
Operating system	1
Memory	
Ports and connectors	
Communications	
Audio	
Storage	
Media-card reader	
Keyboard	
Camera	
Touchpad	1
Touchpad gestures	1
Fingerprint reader (optional)	
Power adapter	
Battery	
Display	
Video	
Computer environment	

# Set up your Inspiron 14 3482

#### (i) NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

1. Connect the power adapter and press the power button.



## (i) NOTE: To conserve battery power, the battery might enter power saving mode. Connect the power adapter and press the power button to turn on the computer.

2. Finish operating system setup.

#### For Ubuntu:

Follow the on-screen instructions to complete the setup. For more information about installing and configuring Ubuntu, see the knowledge base articles SLN151664 and SLN151748 at www.dell.com/support.

#### For Windows:

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

- · Connect to a network for Windows updates.
  - () NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- · If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.
- On the Support and Protection screen, enter your contact details.
- 3. Locate and use Dell apps from the Windows Start menu—Recommended

#### Table 1. Locate Dell apps

Resources	Description
	My Dell
Deal	Centralized location for key Dell applications, help articles, and other important information about your computer. It also notifies you about the warranty status, recommended accessories, and software updates if available.

#### SupportAssist



Pro-actively checks the health of your computer's hardware and software. The SupportAssist OS Recovery tool troubleshoots issues with the operating system. For more information, see the SupportAssist documentation at www.dell.com/support.

**IDENTE:** In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.

Resources	Description
	Dell Update
-{\$	Updates your computer with critical fixes and latest device drivers as they become available. For more information about using Dell Update, see the knowledge base article SLN305843 at www.dell.com/support.
	Dell Digital Delivery
	Download software applications, which are purchased but not projinstalled on your computer. For more

Download software applications, which are purchased but not pre-installed on your computer. For more information about using Dell Digital Delivery, see the knowledge base article 153764 at www.dell.com/support.

4. Create recovery drive for Windows.

() NOTE: It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.

For more information, see Create a USB recovery drive for Windows.

# **Create a USB recovery drive for Windows**

2

Create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.



### () NOTE: The following steps may vary depending on the version of Windows installed. Refer to the Microsoft support site for latest instructions.

- 1. Connect the USB flash drive to your computer.
- 2. In Windows search, type Recovery.
- 3. In the search results, click **Create a recovery drive**. The **User Account Control** window is displayed.
- **4.** Click **Yes** to continue. The **Recovery Drive** window is displayed.
- 5. Select Back up system files to the recovery drive and click Next.
- Select the USB flash drive and click Next.
   A message appears, indicating that all data in the USB flash drive will be deleted.
- 7. Click Create.
- 8. Click Finish.

For more information about reinstalling Windows using the USB recovery drive, see the *Troubleshooting* section of your product's *Service Manual* at www.dell.com/support/manuals.

# Views of Inspiron 14 3482

### Right



#### 1. SD-card slot

Reads from and writes to the SD card.


#### 2. USB 2.0 port

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

#### 3. Security-cable slot (wedge-shaped)

Connect a security cable to prevent unauthorized movement of your computer.

### Left

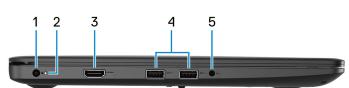

#### 1. Power-adapter port

Connect a power adapter to provide power to your computer.

#### 2. Power and battery-status light/hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.

#### (i) NOTE: Press Fn+H to toggle between the power and battery-status light, and hard-drive activity light.

#### Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.

#### Power and battery-status light

Indicates the power and battery-charge status.

Solid white — Power adapter is connected and the battery has more than 5% charge.

Amber — Computer is running on battery and the battery has less than 5% charge.

Off

- Power adapter is connected and the battery is fully charged.
- Computer is running on battery and the battery has more than 5% charge.
- · Computer is in sleep state, hibernation, or turned off.

#### 3. HDMI port

Connect to a TV or another HDMI-in enabled device. Provides video and audio output.


#### 4. USB 3.1 Gen 1 ports (2)

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

#### 5. Headset port

Connect headphones or a headset (headphone and microphone combo).

### Base

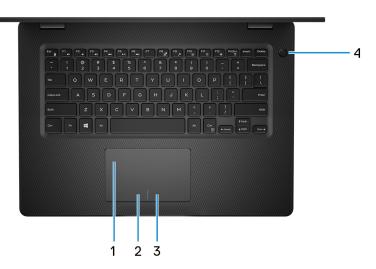

#### 1. Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two finger tap to right-click.

#### 2. Left-click area

Press to left-click.

#### 3. Right-click area

Press to right-click.

#### 4. Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 4 seconds to force shut-down the computer.

If the power button has a fingerprint reader, place your finger on the power button to log in.

(i) NOTE: You can customize power-button behavior in Windows. For more information, see *Me and My Dell* at www.dell.com/support/manuals.

### Display



#### 1. Camera

Enables you to video chat, capture photos, and record videos.

#### 2. Camera-status light

Turns on when the camera is in use.

#### 3. Microphone

Provides digital sound input for audio recording, voice calls, and so on.

### **Bottom**



#### 1. Left speaker

Provides audio output.

2. Right speaker

Provides audio output.

3. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

# **Specifications of Inspiron 14 3482**

# **Dimensions and weight**

#### Table 2. Dimensions and weight

Description	Values
Height:	
Front	19.90 mm (0.78 in.)
Rear	21 mm (0.83 in.)
Width	339 mm (13.35 in.)
Depth	241.90 mm (9.52 in.)
Weight	1.79 kg (3.95 lb)
	NOTE: The weight of your computer depends on the configuration ordered and the manufacturing variability.

### Processors

#### Table 3. Processors

Description	Values	
Processors	Intel Pentium Silver N5000	Intel Celeron Processor N4000
Wattage	6 W	6 W
Core count	4	2
Thread count	4	2
Speed	Up to 2.7 GHz Precision Boost	Up to 2.6 GHz Precision Boost
Smart cache	4 MB	4 MB
Integrated graphics	Intel HD Graphics 605	Intel HD Graphics 600

### Chipset

#### Table 4. Chipset

Description	Values
Chipset	Integrated in processor
Processor	<ul><li>Intel Pentium Silver N5000</li><li>Intel Celeron Processor N4000</li></ul>
DRAM bus width	x64

Description	Values
Flash EPROM	16 MB
PCIe bus	Up to PCIe Gen2
External bus frequency	Not supported

## **Operating system**

- Ubuntu
- Windows 10 Home (64-bit)
- Windows 10 Professional (64-bit)

## Memory

#### Table 5. Memory specifications

Description	Values
Slots	One SoDIMM slots
Туре	DDR4
Speed	2400 MHz
Maximum memory	8 GB
Minimum memory	4 GB
Memory size per slot	4 GB and 8 GB
Configurations supported	<ul> <li>4 GB DDR4 at 2400 MHz</li> <li>8 GB DDR4 at 2400 MHz</li> </ul>

## **Ports and connectors**

#### Table 6. External ports and connectors

External:	
USB	<ul><li>One USB 2.0 port</li><li>Two USB 3.1 Gen 1 ports</li></ul>
Audio	One headset port
Video	One HDMI 1.4b port
Media card reader	One SD card slot
Docking port	Not supported
Power adapter port	One power adapter port
Security	One security-cable slot (wedge-shaped)

#### Table 7. Internal ports and connectors

#### Internal:

M.2

- One M.2 slot for Wi-Fi and Bluetooth combo card
- One PCIe M.2 2242/2260/2280 slot for solid-state drive
- (i) NOTE: To learn more about the features of different types of M.2 cards, see the knowledge base article SLN301626.

## Communications

### Wireless module

#### Table 8. Wireless module specifications

Description		Values	
Model number	Qualcomm QCA9565 (DW 1707)	<ul> <li>Qualcomm QCA9377 (DW 1810)</li> <li>Qualcomm QCA61x4A (DW1820)</li> </ul>	<ul><li>Intel 9462</li><li>Intel 9560</li></ul>
Transfer rate	Up to 433 Mbps	<ul><li>Up to 433 Mbps</li><li>Up to 867 Mbps</li></ul>	<ul><li>Up to 433 Mbps</li><li>Up to 867 Mbps</li></ul>
Frequency bands supported	2.4 GHz	Dual band 2.4 GHz/5 GHz	Dual band 2.4 GHz/5 GHz
Wireless standards	Wi-Fi 802.11b/g/n	Wi-Fi 802.11a/b/g/n/ac	Wi-Fi 802.11a/b/g/n/ac
Encryption	<ul><li>64-bit/128-bit WEP</li><li>AES-CCMP</li><li>TKIP</li></ul>	<ul> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul>	<ul> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul>
Bluetooth	Bluetooth 4.0	Bluetooth 4.1	Bluetooth 5

# Audio

#### Table 9. Audio specifications

Description	Values
Controller	Realtek ALC3204
Stereo conversion	Supported
Internal interface	Intel High-definition audio
External interface	One headset port
Speakers	Two
Internal speaker amplifier	Supported (audio codec integrated)
External volume controls	Media-control shortcut keys
Speaker output:	
Average	2 W

Description	Values
Peak	2.5 W
Subwoofer output	Not supported
Microphone	Single digital microphone in the camera assembly

# Storage

#### Table 10. Storage specifications

Storage type	Interface type	Capacity
One 7 mm 2.5-inch hard drive	SATA AHCI 6 Gbps	Up to 500 GB
One M.2 2242/2260/2280 solid-state drive	PCIe NVMe up to 16 Gbps	Up to 256 GB
One eMMC	SDIO	Up to 64 GB

### **Media-card reader**

#### Table 11. Media-card reader specifications

Description	Values
Туре	One SD card slot
Cards supported	<ul> <li>Secure Digital (SD)</li> <li>Secure Digital High Capacity (SDHC)</li> <li>SD Extended Capacity (SDXC)</li> </ul>

### Keyboard

#### Table 12. Keyboard specifications

Description	Values	
Туре	<ul> <li>Backlit keyboard</li> <li>Non-backlit keyboard</li> </ul>	
Layout	QWERTY	
Number of keys	<ul> <li>United States and Canada: 80 keys</li> <li>United Kingdom: 81 keys</li> <li>Japan: 84 keys</li> </ul>	
Size	X = 19.05 mm key pitch Y = 18.05 mm key pitch	
Shortcut keys	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.  () NOTE: You can define the primary behavior of the function keys (F1–F12) by changing Function Key Behavior in BIOS setup program.	

#### Values

Keyboard shortcuts

### Camera

#### Table 13. Camera specifications

Descriptio	n	Values
Number of	cameras	One
Туре		One HD fixed focus
Location		Front camera
Sensor type	e	CMOS sensor technology
Resolution:		
	Still image	0.92 megapixel (HD)
	Video	1280 x 720 (HD) at 30 fps
Diagonal vie	ewing angle	78.6 degrees

### Touchpad

#### Table 14. Touchpad specifications

Description		Values
Resolution:		
	Horizontal	3215
	Vertical	1956
Dimensions:		
	Horizontal	105 mm (4.13 in.)
	Vertical	65 mm (2.56 in.)

### **Touchpad gestures**

For more information about touchpad gestures for Windows 10, see the Microsoft knowledge base article 4027871 at support.microsoft.com.

### **Fingerprint reader (optional)**

#### Table 15. Fingerprint reader specifications

Description	Values
Sensor technology	Capacitive
Sensor resolution	500 dpi
Sensor area	5.50 mm x 4.40 mm

Sensor pixel size

#### Values

114 x 114 pixels

## **Power adapter**

#### Table 16. Power adapter specifications

Description	Values
Туре	45 W
Diameter (connector)	4.5 mm
Input voltage	100 VAC-240 VAC
Input frequency	50 Hz-60 Hz
Input current (maximum)	1.30 A
Output current (continuous)	2.31 A
Rated output voltage	19.50 VDC
Temperature range:	
Operating	0°C to 40°C (32°F to 104°F)
Storage	-40°C to 70°C (-40°F to 158°F)

### **Battery**

#### Table 17. Battery specifications

Description	Values
Туре	3-cell "smart" lithium-ion (42 WHr)
Voltage	11.40 VDC
Weight (maximum)	0.2 kg (0.44 lb)
Dimensions:	
Height	5.90 mm (0.23 in.)
Width	175.37 mm (6.90 in.)
Depth	90.73 mm (3.57 in.)
Temperature range:	
Operating	0°C to 35°C (32°F to 95°F)
Storage	-40°C to 65°C (-40°F to 149°F)
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Charging time (approximate)	4 hours (when the computer is off) <ol> <li>NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manger application.</li> </ol>

Description	Values	
	For more information on the Dell Power Manger see, <i>Me</i> and My Dell on https://www.dell.com/	
Life span (approximate)	300 discharge/charge cycles	
Coin-cell battery	CR-2032	
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	

# Display

#### Table 18. Display specifications

Table 10. Display specifications		
Description	Values	
Туре	14-inch HD panel	14-inch FHD panel
Panel technology	Twisted Nematic (TN)	In-Plane Switching (IPS)
Luminance (typical)	220 nits	220 nits
Dimensions (Active area):		
Height	173.95 mm (6.85 in.)	173.95 mm (6.85 in.)
Width	309.40 mm (12.18 in.)	309.40 mm (12.18 in.)
Diagonal	355.60 mm (14 in.)	355.60 mm (14 in.)
Native resolution	1366 x 768	1920 x 1080
Megapixels	1.05	2.07
Pixels per inch (PPI)	111.94	157.35
Contrast ratio (min)	300:1	600:1
Response time (max)	25 msec rise/fall	35 msec rise/fall
Refresh rate	60 Hz	60 Hz
Horizontal view angle	+/- 40 degrees	+/- 80 degrees
Vertical view angle	+ 10/- 30 degrees	+/- 80 degrees
Pixel pitch	0.2265 mm	0.1614 mm
Power consumption (maximum)	3.0 W	3.7 W
Anti-glare vs glossy finish	Anti-glare	Anti-glare
Touch options	No	No

# Video

#### Table 19. Video specifications

#### Integrated graphics

Controller	External display support	Memory size	Processor
Intel HD Graphics 600	One HDMI 1.4b port	Shared system memory	Intel Celeron Processor N4000
Intel HD Graphics 605	One HDMI 1.4b port	Shared system memory	Intel Pentium Silver N5000

## **Computer environment**

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

#### Table 20. Computer environment

	Operating	Storage
Temperature range	0°C to 40°C (32°F to 104°F)	–40°C to 65°C (–40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	140 G†	160 G‡
Altitude (maximum)	0 m to 3,048 m (0 ft to 10,000 ft)	0 m to 10,668 m (0 ft to 35,000 ft)

 $\ast$  Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

 $\ddagger$  Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

# **Keyboard shortcuts**

### () NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol shown on the upper part of the key is typed out. For example, if you press 2, 2 is typed out; if you press **Shift + 2**, @ is typed out.

The keys F1-F12 at the top row of the keyboard are function keys for multi-media control, as indicated by the icon at the bottom of the key. Press the function key to invoke the task represented by the icon. For example, pressing F1 mutes the audio (refer to the table below).

However, if the function keys F1-F12 are needed for specific software applications, multi-media functionality can be disabled by pressing Fn + Esc. Subsequently, multi-media control can be invoked by pressing Fn and the respective function key. For example, mute audio by pressing Fn + F1.

() NOTE: You can also define the primary behavior of the function keys (F1–F12) by changing Function Key Behavior in BIOS setup program.

#### Table 21. List of keyboard shortcuts

Function key	Re-defined key (for multi-media control)	Behavior
F1 ≰x	Fn + <sup>F1</sup> ≰×	Mute audio
F2 救	Fn + F2 📣	Decrease volume
F3 ≼(i)	Fn + F3 ≪∜	Increase volume
F4 Iee	Fn + F4	Play previous track/chapter
F5 ▶॥	Fn + <sup>F5</sup> ≽∥	Play/Pause
F6 ▶	Fn + F6 ►►	Play next track/chapter
F8	Fn + F8	Switch to external display
<del>آ</del> 9	ج <sup>F9</sup> ج	Search
F10	Fn + F10	Toggle keyboard backlight (optional)
F11 *	Fn + F11 *	Decrease brightness
F12 *	Fn + F12	Increase brightness

The **Fn** key is also used with selected keys on the keyboard to invoke other secondary functions.

#### Table 22. List of keyboard shortcuts

Function key	Behavior
Fn + PrtScr	Turn off/on wireless

Function key	Behavior
Fn + B	Pause/Break
Fn + Insert	Sleep
Fn + S	Toggle scroll lock
Fn + H	Toggle between power and battery-status light/hard-drive activity light
Fn + R	System request
Fn + Ctrl	Open application menu
Fn + Esc	Toggle Fn-key lock
Fn + TPgUp	Page up
Fn + + PgDn	Page down
Fn + -Home	Home
Fn + End →	End

6

# **Getting help and contacting Dell**

## Self-help resources

You can get information and help on Dell products and services using these self-help resources:

#### Table 23. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell	Dell
Tips	
Contact Support	In Windows search, type Contact Support, and press Enter.
Online help for operating system	www.dell.com/support/windows
	www.dell.com/support/linux
Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.	www.dell.com/support
Dell knowledge base articles for a variety of computer concerns.	1. Go to www.dell.com/support.
	2. Type the subject or keyword in the <b>Search</b> box.
	<b>3.</b> Click <b>Search</b> to retrieve the related articles.
Learn and know the following information about your product:	See Me and My Dell at www.dell.com/support/manuals.

- Product specifications .
- Operating system
- Setting up and using your product
- Data backup
- Troubleshooting and diagnostics
- Factory and system restore
- **BIOS** information

# **Contacting Dell**

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

(i) NOTE: Availability varies by country and product, and some services may not be available in your country.

() NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

To locate the Me and My Dell relevant to your product, identify your product through one of the following:

- Select Detect Product.
- Locate your product through the drop-down menu under View Products.
- Enter the Service Tag number or Product ID in the search bar.