

# Inspiron 15 3000

## Service Manual

**Computer Model:** Inspiron 15-3565  
**Regulatory Model:** P63F  
**Regulatory Type:** P63F003



# Notes, cautions, and warnings

---



**NOTE:** A NOTE indicates important information that helps you make better use of your product.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

---

**Copyright © 2016 Dell Inc. or its subsidiaries. All rights reserved.** Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2016 - 11

Rev. A00

# Contents

<b>Before working inside your computer.....</b>	<b>10</b>
Before you begin .....	10
Safety instructions.....	10
Recommended tools.....	12
Screw list.....	12
<b>After working inside your computer.....</b>	<b>14</b>
<b>Removing the battery.....</b>	<b>15</b>
Procedure.....	15
<b>Replacing the battery.....</b>	<b>17</b>
Procedure.....	17
<b>Removing the optical drive.....</b>	<b>18</b>
Prerequisites.....	18
Procedure.....	18
<b>Replacing the optical drive.....</b>	<b>21</b>
Procedure.....	21
Post-requisites.....	21
<b>Removing the keyboard.....</b>	<b>22</b>
Prerequisites.....	22
Procedure.....	22

<b>Replacing the keyboard.....</b>	<b>25</b>
Procedure.....	25
Post-requisites.....	25
<b>Removing the base cover.....</b>	<b>26</b>
Prerequisites.....	26
Procedure.....	26
<b>Replacing the base cover.....</b>	<b>31</b>
Procedure.....	31
Post-requisites.....	33
<b>Removing the optical-drive interposer.....</b>	<b>34</b>
Prerequisites.....	34
Procedure.....	34
<b>Replacing the optical-drive interposer.....</b>	<b>36</b>
Procedure.....	36
Post-requisites.....	36
<b>Removing the hard drive.....</b>	<b>37</b>
Prerequisites.....	37
Procedure.....	37
<b>Replacing the hard drive.....</b>	<b>40</b>
Procedure.....	40
Post-requisites.....	41
<b>Removing the memory modules.....</b>	<b>42</b>
Prerequisites.....	42
Procedure.....	42



<b>Replacing the memory modules.....</b>	<b>44</b>
Procedure.....	44
Post-requisites.....	45
<b>Removing the wireless card.....</b>	<b>46</b>
Prerequisites.....	46
Procedure.....	46
<b>Replacing the wireless card.....</b>	<b>48</b>
Procedure.....	48
Post-requisites.....	50
<b>Removing the power-button board.....</b>	<b>51</b>
Prerequisites.....	51
Procedure.....	51
<b>Replacing the power-button board.....</b>	<b>54</b>
Procedure.....	54
Post-requisites.....	55
<b>Removing the speakers.....</b>	<b>56</b>
Prerequisites.....	56
Procedure.....	56
<b>Replacing the speakers.....</b>	<b>58</b>
Procedure.....	58
Post-requisites.....	58
<b>Removing the I/O board.....</b>	<b>59</b>
Prerequisites.....	59
Procedure.....	59

- Replacing the I/O board..... 61**
  - Procedure..... 61
  - Post-requisites..... 61
  
- Removing the coin-cell battery..... 62**
  - Prerequisites.....62
  - Procedure.....62
  
- Replacing the coin-cell battery..... 64**
  - Procedure.....64
  - Post-requisites..... 64
  
- Removing the heat sink..... 65**
  - Prerequisites..... 65
  - Procedure..... 65
  
- Replacing the heat sink..... 67**
  - Procedure.....67
  - Post-requisites.....67
  
- Removing the fan..... 69**
  - Prerequisites..... 69
  - Procedure..... 69
  
- Replacing the fan..... 71**
  - Procedure..... 71
  - Post-requisites..... 71
  
- Removing the status-light lens..... 72**
  - Prerequisites..... 72
  - Procedure.....72

<b>Replacing the status-light lens.....</b>	<b>74</b>
Post-requisites.....	74
Procedure.....	74
<b>Removing the system board.....</b>	<b>75</b>
Prerequisites.....	75
Procedure.....	76
<b>Replacing the system board.....</b>	<b>80</b>
Procedure.....	80
Post-requisites.....	81
<b>Removing the touch pad.....</b>	<b>82</b>
Prerequisites.....	82
Procedure.....	82
<b>Replacing the touch pad.....</b>	<b>85</b>
Procedure.....	85
Post-requisites.....	85
<b>Removing the power-adaptor port.....</b>	<b>87</b>
Prerequisites.....	87
Procedure.....	88
<b>Replacing the power-adaptor port.....</b>	<b>89</b>
Procedure.....	89
Post-requisites.....	89
<b>Removing the display assembly.....</b>	<b>91</b>
Prerequisites.....	91
Procedure.....	91

<b>Replacing the display assembly.....</b>	<b>95</b>
Procedure.....	95
Post-requisites.....	95
<b>Removing the display bezel.....</b>	<b>97</b>
Prerequisites.....	97
Procedure.....	98
<b>Replacing the display bezel.....</b>	<b>99</b>
Procedure.....	99
Post-requisites.....	99
<b>Removing the display panel.....</b>	<b>100</b>
Prerequisites.....	100
Procedure.....	100
<b>Replacing the display panel.....</b>	<b>103</b>
Post-requisites.....	103
Procedure.....	103
<b>Removing the camera.....</b>	<b>105</b>
Prerequisites.....	105
Procedure.....	105
<b>Replacing the camera.....</b>	<b>107</b>
Procedure.....	107
Post-requisites.....	107
<b>Removing the display hinges.....</b>	<b>108</b>
Prerequisites.....	108
Procedure.....	108

<b>Replacing the display hinges.....</b>	<b>110</b>
Post-requisites.....	110
Procedure.....	110
<b>Removing the display back-cover and antenna assembly.....</b>	<b>111</b>
Prerequisites.....	111
Procedure.....	112
<b>Replacing the display back-cover and antenna assembly.....</b>	<b>113</b>
Procedure.....	113
Post-requisites.....	113
<b>Removing the palm rest.....</b>	<b>115</b>
Prerequisites.....	115
Procedure.....	116
<b>Replacing the palm rest.....</b>	<b>117</b>
Post-requisites.....	117
Procedure.....	118
<b>Diagnostics.....</b>	<b>119</b>
<b>Flashing the BIOS.....</b>	<b>121</b>
<b>Getting help and contacting Dell.....</b>	<b>122</b>
Self-help resources.....	122
Contacting Dell.....	123

Identifier	GUID-5D3B1051-9384-409A-8D5B-9B53BD496DE8
Status	Released



# Before working inside your computer

---

 **NOTE: The images in this document may differ from your computer depending on the configuration you ordered.**

Identifier	GUID-B2521C24-A407-4ABB-8022-6D88B53F0B94
Status	Released









## Before you begin

- 1 Save and close all open files and exit all open applications.
- 2 Shut down your computer. Click **Start** →  **Power** → **Shut down**.  
 **NOTE: If you are using a different operating system, see the documentation of your operating system for shut-down instructions.**
- 3 Disconnect your computer and all attached devices from their electrical outlets.
- 4 Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
- 5 Remove any media card and optical disc from your computer, if applicable.
- 6 Close the display and turn the computer over.

Identifier	GUID-71128823-CE64-4E17-9439-DEE95AF668C4
Status	Released

## Safety instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.

-  **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).
-  **WARNING:** Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the electrical outlet.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat and clean.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching pins and contacts.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that shipped with the product or at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.
-  **CAUTION:** When you disconnect a cable, pull on its connector or on its pull tab, not on the cable itself. Some cables have connectors with locking tabs or thumb-screws that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending any connector pins. When connecting cables, ensure that the ports and connectors are correctly oriented and aligned.
-  **CAUTION:** Press and eject any installed card from the media-card reader.

Identifier	GUID-DEA55279-6FE6-4A1F-A152-21F8A5572B33
Status	Released

## Recommended tools

The procedures in this document may require the following tools:







- Phillips screwdriver
- Plastic scribe

Identifier	GUID-292955F1-1608-4019-BD6D-60FC125C311F
Status	Released













## Screw list

The following table provides the list of screws that are used for securing different components to the palm-rest assembly.

**Table 1. Screw list**

Component	Secured to	Screw type	Quantity	Screw image
Optical-drive assembly	Base cover	M2x5	1	
Optical-drive bracket	Optical drive	M2x3	1	
Base cover	Palm-rest assembly	M2.5x8	8	
Base cover	Palm-rest assembly	M2x5	2	
Base cover	Palm-rest assembly	M2x2	3	
Base cover	Palm-rest assembly	M2x5	5	



<b>Component</b>	<b>Secured to</b>	<b>Screw type</b>	<b>Quantity</b>	<b>Screw image</b>
Hard-drive assembly	Palm-rest assembly	M2x3	4	
Hard-drive bracket	Hard drive	M3x3	4	
Wireless-card bracket	System board	M2x3	1	
Display hinge	Palm-rest assembly	M2.5x8	3	
Power-button board	Palm-rest assembly	M2x2	1	
I/O board	Palm-rest assembly	M2x3	1	
Fan	System board	M2x5	2	
System board	Palm-rest assembly	M2x3	2	
Touch-pad bracket	Touch pad	M2x3	6	
Power-adaptor port	Palm-rest assembly	M2x3	1	
Display panel	Display back-cover and antenna assembly	M2x3	4	
Display hinges	Display back-cover and antenna assembly	M2.5xM2.5 big head	6	

Identifier	GUID-06588814-2678-4667-9FF9-C009F4BCE185
Status	Released

# After working inside your computer

---



**CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.**

- 1 Replace all screws and ensure that no stray screws remain inside your computer.
- 2 Connect any external devices, peripherals, or cables you removed before working on your computer.
- 3 Replace any media cards, discs, or any other parts that you removed before working on your computer.
- 4 Connect your computer and all attached devices to their electrical outlets.
- 5 Turn on your computer.

Identifier	GUID-D9015C06-6CEE-42EA-9215-9D0FD7B827D5
Status	Released

## Removing the battery

---




**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-49480ADF-F1DF-44D3-9858-A979D562A17A
Status	Released

## Procedure

- 1 Slide the battery-release latch to the unlocked position.  
You hear a click sound when the battery is unlocked.

- 
- 2** Using your fingertips, lift the battery at an angle and remove it from the battery bay.

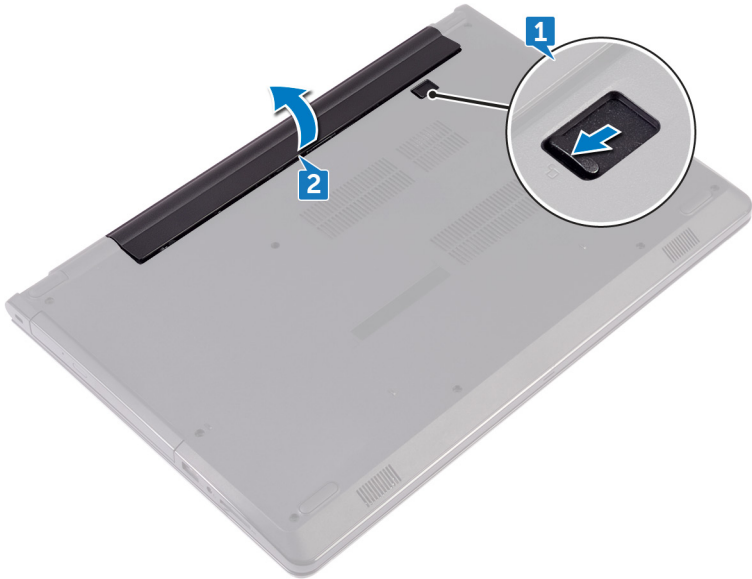

- 
- 
- 3** Turn the computer over, open the display, and press the power button for five seconds to ground the system board.

Identifier	GUID-E15EE482-44FD-4E71-91FC-899D4B61532E
------------	---

Status	Released
--------	----------

## Replacing the battery

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-1DA5696D-79B6-451A-A297-5EBD364390DB
------------	---


Status	Released
--------	----------

## Procedure

- 1 Close the display and turn the computer over.
- 2 Place the battery in the battery bay and snap the battery into place.

Identifier	GUID-5F25DB7E-BE9A-49D8-A32A-AAD2A7EDBB9E
Status	Released

## Removing the optical drive

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-3D1E92A1-04A0-481C-959A-EE8F78366F1E
Status	Released

## Prerequisites


Remove the [battery](#).

Identifier	GUID-656BFD07-D6CA-4631-8439-49E6C6A2D2D0
Status	Released

## Procedure

- 1 Remove the screw (M2x5) that secures the optical-drive assembly to the base cover.
- 2 Using a plastic scribe, push to release the optical-drive assembly from the optical-drive bay.

- 3 Pull the optical-drive assembly out of the optical-drive bay.

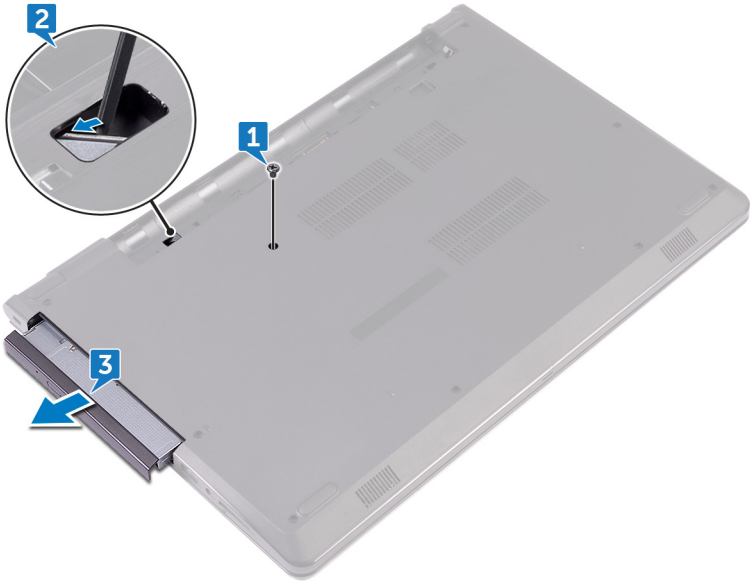

- 4 Remove the screw (M2x3) that secures the optical-drive bracket to the optical drive.



**NOTE: Note the orientation of the optical-drive bracket so that you can replace it correctly.**

- 5 Remove the optical-drive bracket from the optical drive.



- 6 Carefully pull the optical-drive bezel and remove it from the optical drive.





Identifier	GUID-01750DAC-3408-4912-B936-7DAA79351AA9
Status	Released


## Replacing the optical drive



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-EFFCE95C-D6E7-4A6A-BD44-122E8A494879
Status	Released

## Procedure

- 1 Align the tabs on the optical-drive bezel with the slots on the optical drive and snap it into place.
- 2 Align the screw hole on the optical-drive bracket with the screw hole on the optical-drive assembly.  
 **NOTE:** You must correctly align the optical-drive bracket to ensure that the optical drive can be properly secured to the computer. For correct orientation, see step 4 in "[Removing the optical drive](#)".
- 3 Replace the screw (M2x3) that secures the optical-drive bracket to the optical-drive assembly.
- 4 Slide the optical-drive assembly into the optical-drive bay and snap it into place.
- 5 Replace the screw (M2x5) that secures the optical-drive assembly to the computer base.

Identifier	GUID-A9B1117A-9466-4395-B5FF-CEDD027A42D1
Status	Released

## Post-requisites

Replace the [battery](#).

Identifier	GUID-5AE964CF-7958-4D31-BBA8-155C933167E8
Status	Released

## Removing the keyboard

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-3D1E92A1-04A0-481C-959A-EE8F78366F1E
Status	Released

## Prerequisites


Remove the [battery](#).

Identifier	GUID-CB370301-1A8A-4146-8079-BD5444FAA9A2
Status	Released

## Procedure


- 1 Turn the computer over and open the display as far as possible.
- 2 Using a plastic scribe, gently release the tabs that secure the keyboard to the palm-rest assembly.
- 3 Slide the keyboard up to release it from the slots on the palm-rest assembly.

- Carefully turn the keyboard over and place it on the palm-rest assembly.

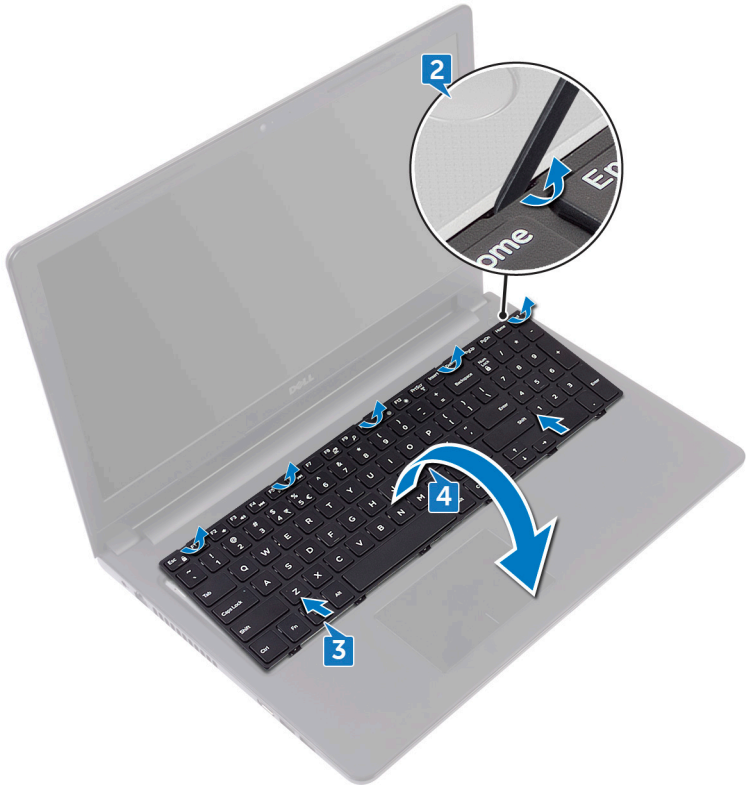

- Open the latch and disconnect the keyboard cable from the system board.

6 Lift the keyboard off the palm-rest assembly.

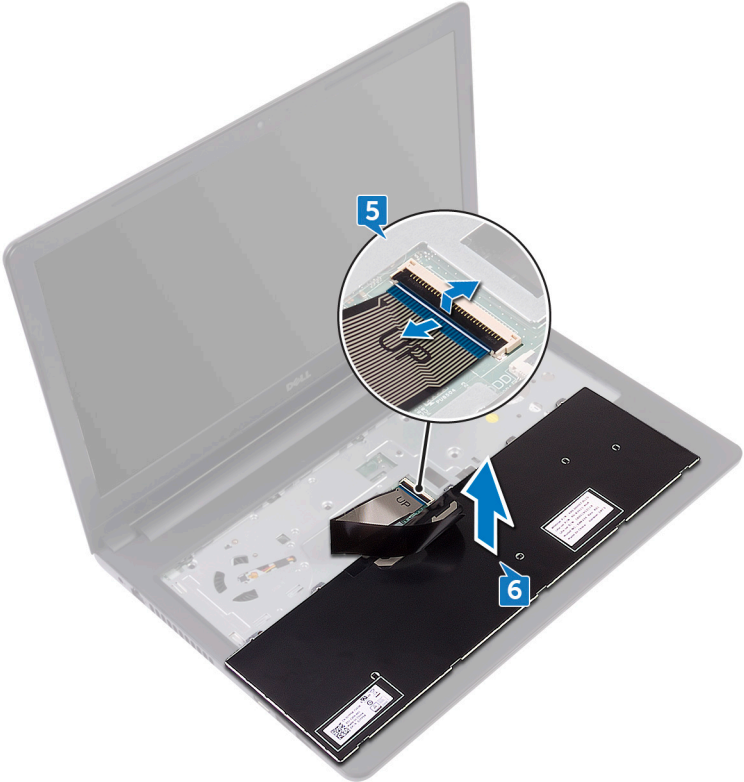

Identifier	GUID-18204C76-DF75-4DB8-BD6F-EFA74576AAD7
Status	Released

## Replacing the keyboard



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-75F48057-85D0-4D9E-8F1E-BE58217EF155
Status	Released

## Procedure

- 1 Slide the keyboard cable into the system-board connector and close the latch to secure the cable.
- 2 Turn the keyboard over, slide the tabs on the keyboard into the slots on the palm-rest assembly, and snap the keyboard into place.

Identifier	GUID-A9B1117A-9466-4395-B5FF-CEDD027A42D1
Status	Released

## Post-requisites

Replace the [battery](#).

Identifier	GUID-98068FC2-1C1C-46DE-B3FA-DF9D488E9BA1
Status	Released

## Removing the base cover



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-CD8DF065-767F-4D02-8B38-45E0E019B022
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).

Identifier	GUID-1160330A-1F01-4FEA-A639-41DE92DA4628
Status	Released

## Procedure


- 1 Remove the five screws (M2x5) that secure the base cover to the palm-rest assembly.

- 2 Open the latch, and disconnect the optical-drive cable from the connector on the system board.

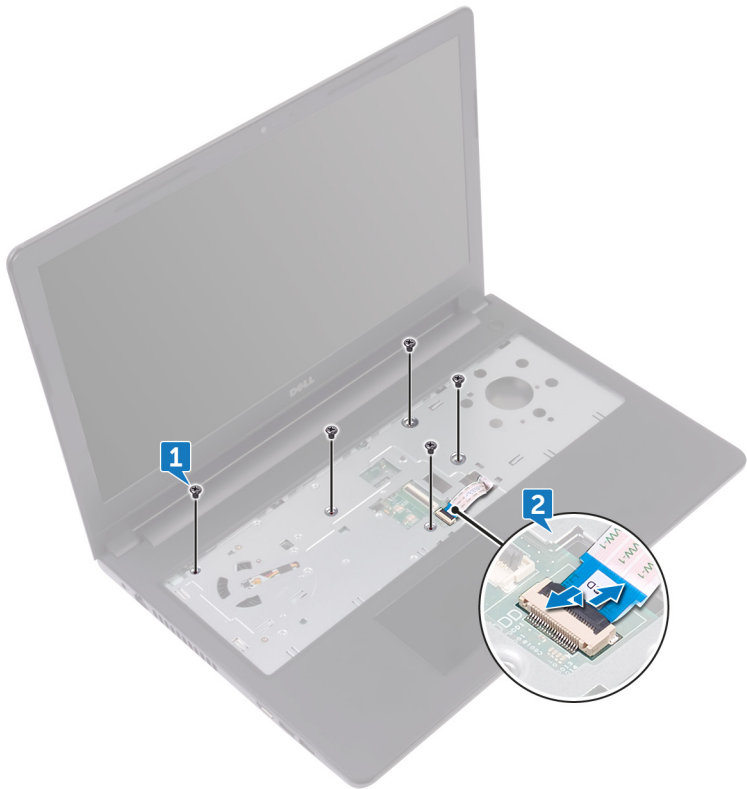


- 3 Close the display and the turn the computer over.
- 4 Remove the eight screws (M2.5x8) that secure the base cover to the palm-rest assembly.
- 5 Remove the three screws (M2x2) that secure the base cover to the palm-rest assembly.

- 6 Remove the two screws (M2x5) that secure the base cover to the palm-rest assembly.

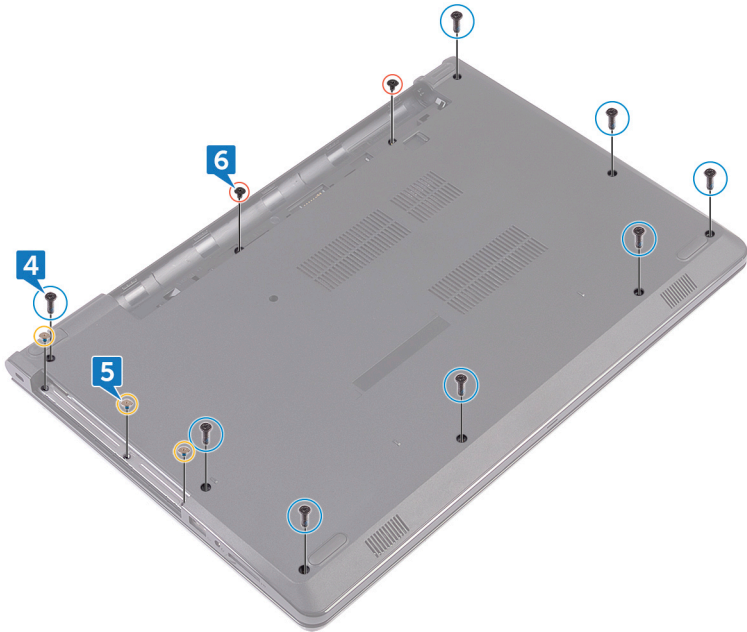




- 7 Using a plastic scribe, pry the base cover off the palm-rest assembly.

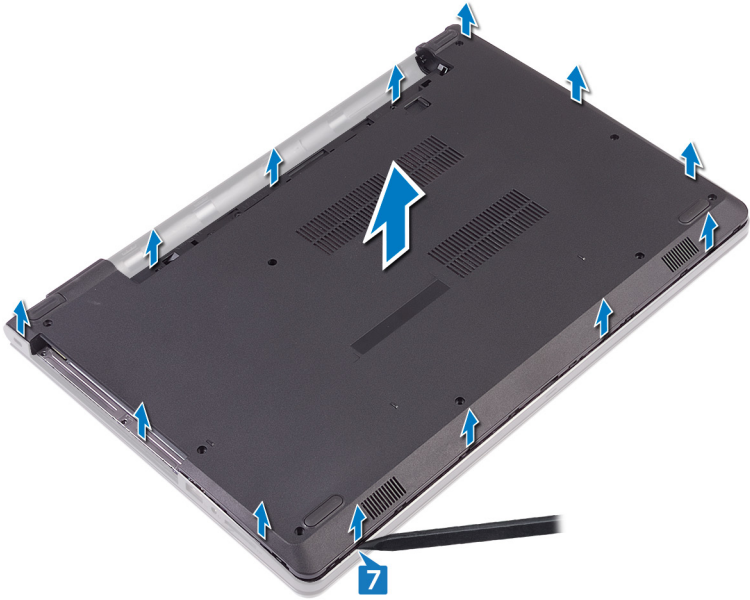

- 8 Turn the base cover over.

- 9 Remove the [optical-drive interposer](#).

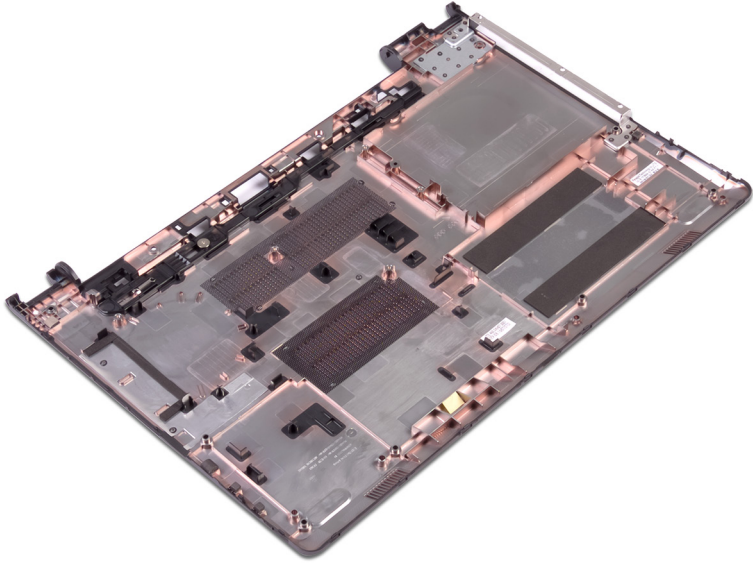

Identifier	GUID-27446428-82D7-4881-9220-9EB090B046EA
Status	Released

## Replacing the base cover

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-2907DFEA-3569-48BF-93A6-19B859F7FD8C
Status	Released

## Procedure

- 1 Replace the [optical-drive interposer](#).
- 2 Turn the base cover over.

- 3** Place the base cover on the palm-rest assembly and route the optical-drive cable through the slot on the palm-rest assembly.



- 4** Slide the tabs on the base cover into the slots on the palm-rest assembly and snap the base cover into place.
- 5** Slide the optical-drive cable into its connector on the system board and close the latch to secure the cable.
- 6** Replace the five screws (M2x5) that secure the palm-rest assembly to the base cover.
- 7** Close the display and turn the computer over.
- 8** Replace the three screws (M2x2) that secure the base cover to the palm-rest assembly.

- 9 Replace the two screws (M2x5) that secure the base cover to the palm-rest assembly.
- 10 Replace the eight screws (M2.5x8) that secure the base cover to the palm-rest assembly.

Identifier	GUID-A6F83985-AADB-477B-A744-DA3E1D4A740F
Status	Released

## Post-requisites

- 1 Replace the [keyboard](#).
- 2 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 3 Replace the [battery](#).

Identifier	GUID-B784848F-125E-46FD-9A22-A7892EC032F0
Status	Released

# Removing the optical-drive interposer

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-202BB23F-2F14-40F9-A32C-45A856454769
Status	Released


## Prerequisites

- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 8 in "[Removing the base cover](#)".

Identifier	GUID-3C866451-5CA6-4510-B958-BD15D9C28AEA
Status	Released

## Procedure

Release the optical-drive interposer from the tabs on the base cover.

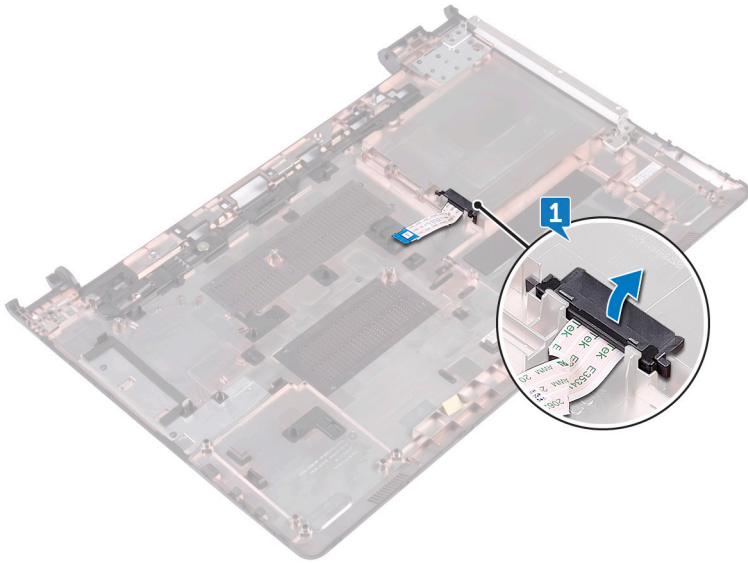

Identifier	GUID-7D3D6B04-3ECE-4E21-8CF6-A1AFBDE2E206
Status	Released

# Replacing the optical-drive interposer

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-23736137-9084-4A9E-A8BB-7A9FE35F0C16
Status	Released

## Procedure

Align the tabs on the base cover and snap it into place.

Identifier	GUID-3B41D390-34F8-4332-BB7E-2339D1E7877A
Status	Released


## Post-requisites

- 1 Follow the procedure from step 2 to step 9 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).
- 3 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4 Replace the [battery](#).




Identifier	GUID-5DE1E07B-4633-4536-ACBF-4A3067007FE0
Status	Released

## Removing the hard drive

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

 **CAUTION:** Hard drives are fragile. Exercise care when handling the hard drive.

 **CAUTION:** To avoid data loss, do not remove the hard drive while the computer is in sleep or on state.

Identifier	GUID-6A7D8CA2-6CA0-4578-85F4-31A64335F44C
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".

Identifier	GUID-F84D6B00-40E5-4878-9D13-819407376C5B
Status	Released


## Procedure

- 1 Open the latch and disconnect the hard-drive cable from the system board.
- 2 Remove the four screws (M2x3) that secure the hard-drive assembly to the palm-rest assembly.

- 3 Lift the hard-drive assembly off the palm-rest assembly.

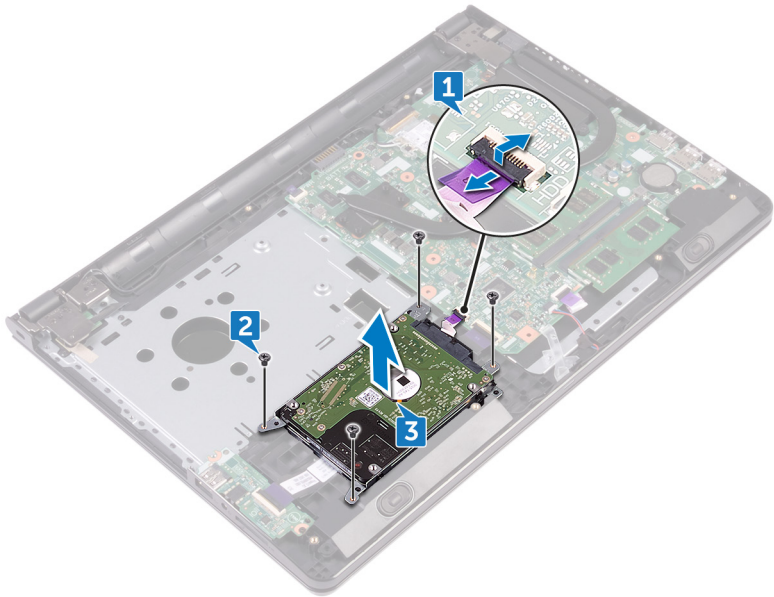


- 4 Disconnect the interposer from the hard-drive assembly.

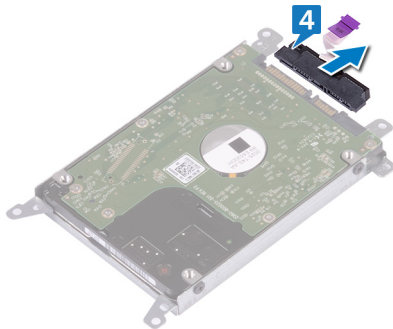

- 5 Remove the four screws (M3x3) that secure the hard-drive bracket to the hard drive.

- 6 Lift the hard drive off the hard-drive bracket.

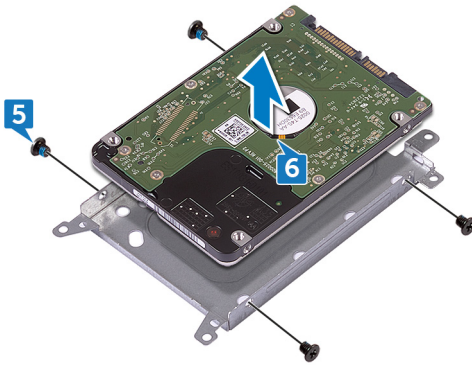

Identifier	GUID-8D72BB77-0F8B-428E-A98E-FF7DA2CDA899
Status	Released

## Replacing the hard drive

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).



**CAUTION:** Hard drives are fragile. Exercise care when handling the hard drive.

Identifier	GUID-FBBC8B34-98ED-4084-B648-306EB454B5D3
Status	Released

## Procedure

- 1 Align the screw holes on the hard-drive bracket with the screw holes on the hard drive.
- 2 Replace the four screws (M3x3) that secure the hard-drive bracket to the hard drive.
- 3 Connect the interposer to the hard drive.
- 4 Place the hard-drive assembly in the palm-rest assembly and align the screw holes on the hard-drive assembly with the screw holes on the palm-rest assembly.
- 5 Replace the four screws (M2x3) that secure the hard-drive assembly to the palm-rest assembly.
- 6 Slide the hard-drive cable into its connector on the system board and close the latch to secure the cable.

Identifier	GUID-BFB0454B-272F-45FD-BAAA-71386A1E16EC
Status	Released

## Post-requisites

- 1 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).
- 3 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4 Replace the [battery](#).

Identifier	GUID-AAC0DC5A-1680-492D-804F-52F812D409C2
Status	Released

## Removing the memory modules



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-187D5E55-08FA-4A7F-AFF4-B757ABE4D947
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".

Identifier	GUID-017081C7-D0F5-45E4-AA2C-F3862EBCD5F9
Status	Released

## Procedure

- 1 Using your fingertips, carefully spread apart the securing clips on each end of the memory-module slot until the memory module pops up.

2 Slide and remove the memory module from the memory-module slot.

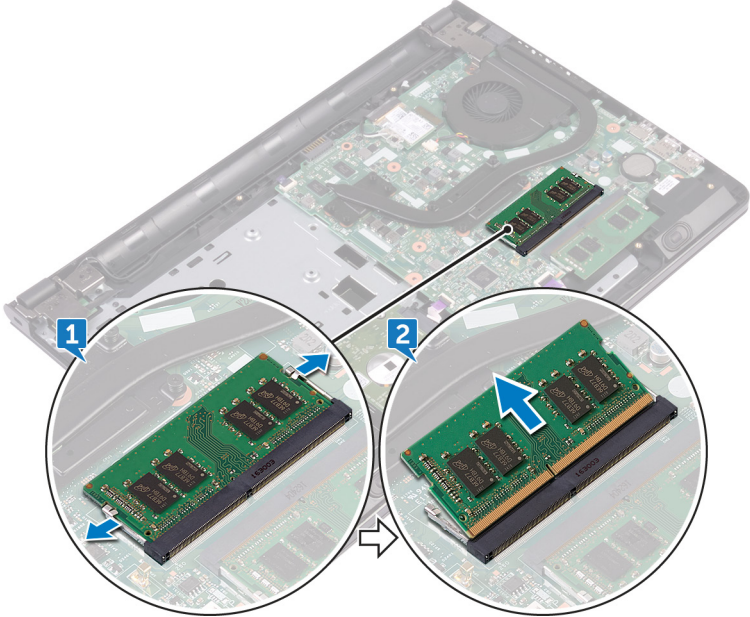

Identifier	GUID-1F5023F5-9868-4AAF-A9F5-BFB400CD890A
Status	Released

## Replacing the memory modules



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-BCF8CD9C-4E34-48F8-B271-EB2D6F4CD223
Status	Released


## Procedure

- 1 Align the notch on the memory module with the tab on the memory-module slot and slide it firmly into the slot at an angle.



- 2 Press the memory module down until it clicks into place.

 **NOTE: If you do not hear the click, remove the memory module and reinstall it.**

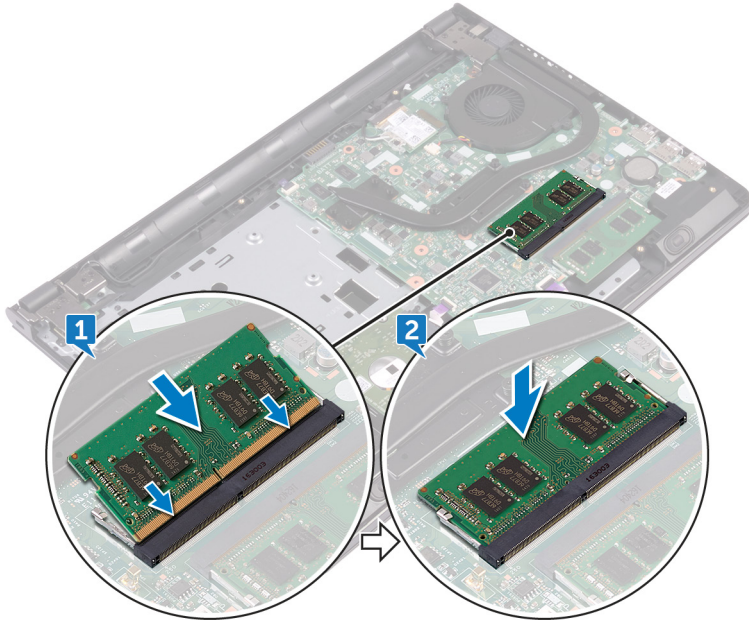

Identifier	GUID-A5C66E53-6F20-4E0C-8365-03D54CDB4EBC
Status	Released

## Post-requisites

- 1 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).
- 3 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4 Replace the [battery](#).

Identifier	GUID-4AF7A7F4-79DC-43F4-A4DF-63362F890FB6
Status	Released

## Removing the wireless card



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-072C9B3B-D370-4A7C-AB4F-3FE20281A30B
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".

Identifier	GUID-727BE292-6253-4682-8E4F-895F5275586D
Status	Released

## Procedure

- 1 Remove the screw (M2x3) that secures the wireless-card bracket to the wireless card and system board.
- 2 Remove the wireless-card bracket from the wireless card.
- 3 Disconnect the antenna cables from the wireless card.


4 Slide and remove the wireless card from the wireless-card slot.

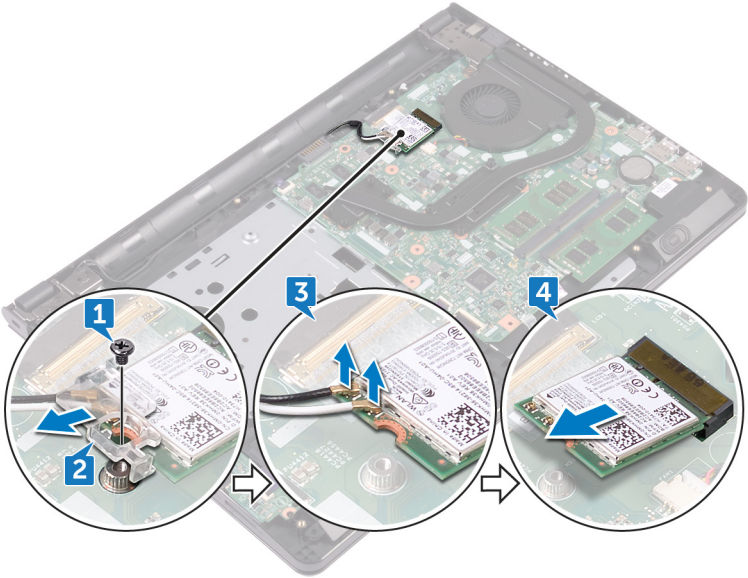

Identifier	GUID-94E88AEC-6F12-4B0E-AA6A-B28D8E200225
Status	Released

## Replacing the wireless card

---

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-1FBCF473-69F7-490A-9D50-7B5F57B0D0A2
Status	Released

## Procedure

 **CAUTION:** To avoid damage to the wireless card, do not place any cables under it.


- 1 Align the notch on the wireless card with the tab on the wireless-card slot.
- 2 Slide the wireless card at an angle into the wireless-card slot.

- 3 Connect the antenna cables to the wireless card.

The following table provides the antenna-cable color scheme for the wireless card supported by your computer:

**Table 2. Antenna-cable color scheme**

Connectors on the wireless card	Antenna cable color
Auxiliary (black triangle)	Black
Main (white triangle)	White

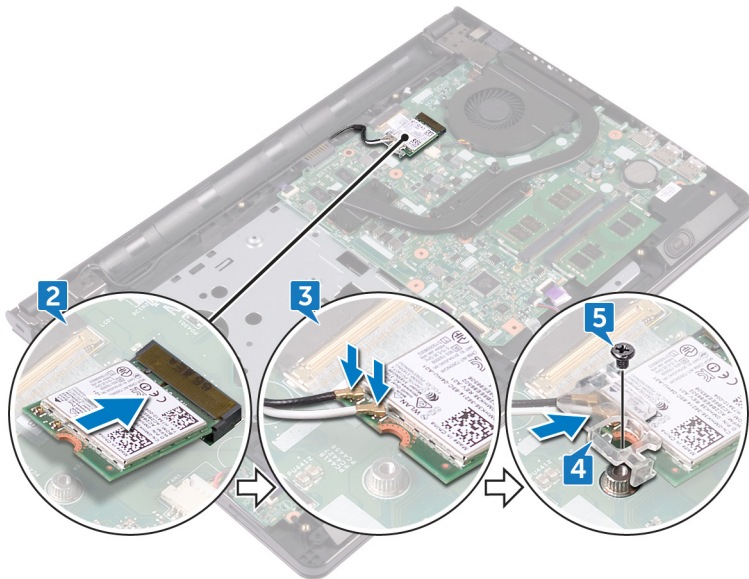

- 4 Align the screw hole on the wireless-card bracket with the screw hole on the wireless card and the system board.
- 5 Replace the screw (M2x3) that secures the wireless-card bracket to the wireless card and system board.

Identifier	GUID-0EA17A6A-7BEA-42D5-B5BE-7E7EDDAA7FD0
Status	Released

## Post-requisites

- 1 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).
- 3 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4 Replace the [battery](#).

Identifier	GUID-A35BD2D5-B3B3-4708-AF1C-D61C58B9F952
Status	Released

# Removing the power-button board

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-635CFE71-B5A3-4457-AA74-D19384E67E9D
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".

Identifier	GUID-950DCC4F-D653-4C7C-AD89-91B2F054A648
Status	Released

## Procedure

- 1 Remove the two screws (M2.5x8) that secure the display hinge to the palm-rest assembly.


- 2 Open the hinge to an angle of 90 degrees.

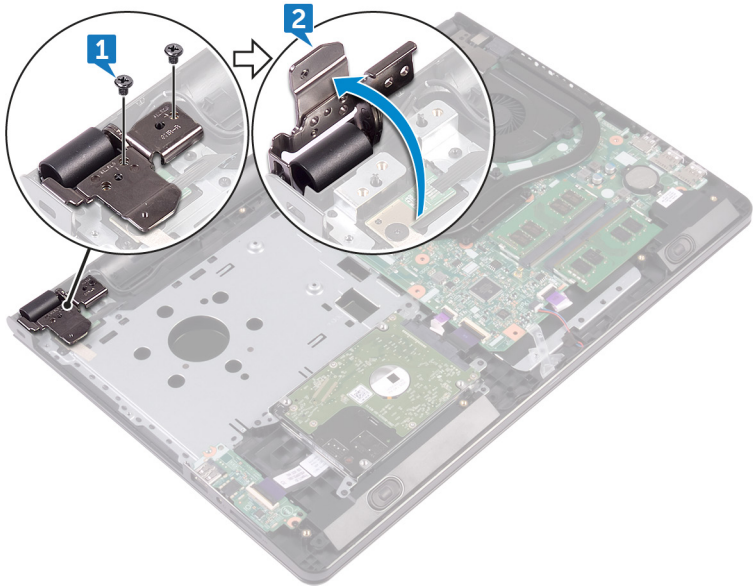

- 3 Open the latch and disconnect the power-button board cable from the system board.
- 4 Remove the screw (M2x2) that secures the power-button board to the palm-rest assembly.
- 5 Peel the tape that secures the power-button board to the palm-rest assembly.
- 6 Slide and remove the power-button board from the tab on the palm-rest assembly.



- 7 Note the power-button board cable routing and peel it off the palm-rest assembly.

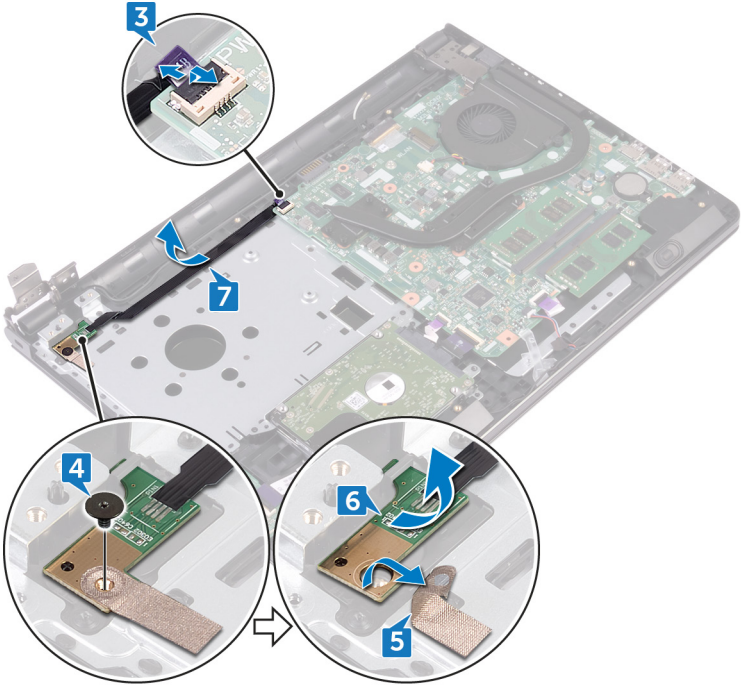

Identifier	GUID-FBA68EE4-1E13-4F28-9B84-362694B97060
Status	Released

# Replacing the power-button board

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-67191CEF-4843-459F-8223-B736F401FDD4
Status	Released

## Procedure

- 1 Slide the power-button board under the tab on the palm-rest assembly and align the screw hole on the power-button board with the screw hole on the palm-rest assembly.
- 2 Replace the screw (M2x2) that secures the power-button board to the palm-rest assembly.
- 3 Adhere the tape that secures the power-button board to the palm-rest assembly.
- 4 Route the power-button board cable through the slot on the palm-rest assembly.
- 5 Slide the power-button board cable into its connector on the system board and close the latch to secure the cable.
- 6 Close the display hinges.
- 7 Align the screw holes on the display hinges with the screw holes on the palm-rest assembly.
- 8 Replace the two screws (M2.5x8) that secure the display hinges to the palm-rest assembly.

Identifier	GUID-E9397EB8-432A-4AEF-82EB-06A08293BB96
Status	Released

## Post-requisites

- 1 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).
- 3 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4 Replace the [battery](#).

Identifier	GUID-BF7F1ECA-BC62-4949-B1BE-EC64E351719E
Status	Released

## Removing the speakers



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-93630ABA-68F4-47E7-AD1E-6A8037E30FF2
Status	Released

## Prerequisites

- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".


Identifier	GUID-A2A2CD23-9FA6-405B-9F1B-BDA9A1123B5D
Status	Released

## Procedure

- 1 Disconnect the speaker cable from the system board.
- 2 Peel off the tape that secures the speaker cable to the palm-rest assembly.

- 3 Note the speaker-cable routing and lift the speakers, along with the speaker cable, off the palm-rest assembly.

 **NOTE:** Note the position of the rubber grommets before lifting the speaker.

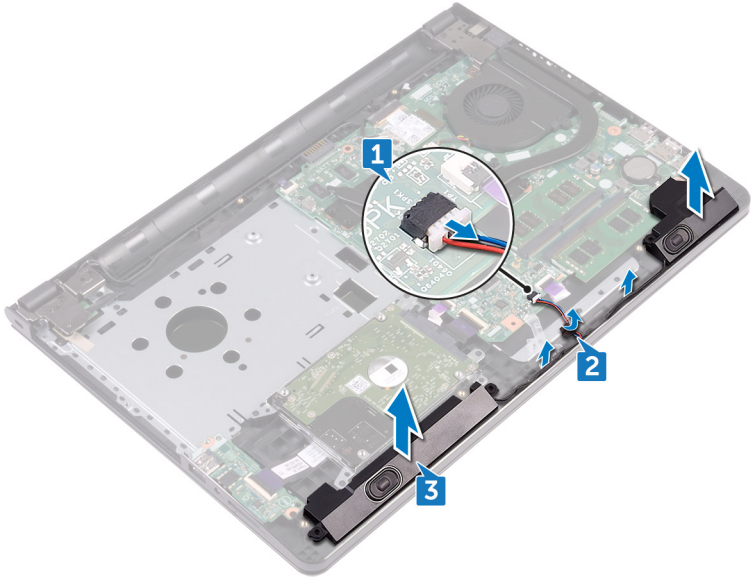

Identifier	GUID-40DC76F7-B3EC-450A-848E-632D68C352E2
Status	Released

## Replacing the speakers



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-328ADBAF-F532-4AD0-B3A0-7FD0ABC70064
Status	Released

## Procedure



**NOTE:** The rubber grommets may get pushed out while replacing the speaker. Ensure that the rubber grommets are in their position after placing the speaker on the system board.

- 1 Align the speakers using the alignment posts on the palm-rest assembly and snap the speakers into place.
- 2 Route the speaker cable through the routing guides on the palm-rest assembly.
- 3 Connect the speaker cable to the system board.
- 4 Adhere the tape that secures the speaker cable to the palm-rest assembly.

Identifier	GUID-A8610907-8DBD-4174-8513-0FCA7FB2CE6A
Status	Released

## Post-requisites

- 1 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).
- 3 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4 Replace the [battery](#).

Identifier	GUID-DC61C8F1-86D0-49DE-B8D8-229750E714D6
Status	Released

## Removing the I/O board



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-93935EBB-E9A5-4F67-A63F-D23AB1968F8B
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".

Identifier	GUID-817539F7-1851-4D4A-B38B-BE9F50298FC9
Status	Released

## Procedure

- 1 Open the latch and disconnect the I/O-board cable from the I/O board.
- 2 Remove the screw (M2x3) that secures the I/O board to the palm-rest assembly.
- 3 Push the securing tab to release the I/O board from the palm-rest assembly.

4 Lift the I/O board off the palm-rest assembly.

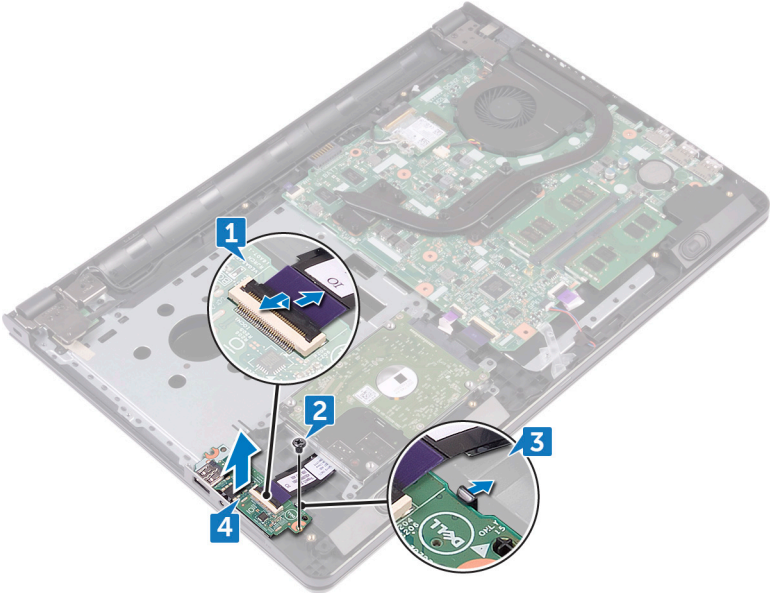



Identifier	GUID-98F27B1C-9F09-48EC-83D7-FC85C825E6A4
Status	Released

## Replacing the I/O board



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-6979B91E-B5B2-482F-874B-F52B901AEE90
Status	Released

## Procedure

- 1 Using the alignment posts, place the I/O board on the palm-rest assembly and snap the I/O board into place.
- 2 Slide the I/O-board cable into its connector on the I/O board and close the latch to secure the cable.
- 3 Replace the screw (M2x3) that secures the I/O board to the palm-rest assembly.


Identifier	GUID-4C2D900F-66F6-4EC6-BA2A-E75511EC1D81
Status	Released


## Post-requisites

- 1 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).
- 3 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4 Replace the [battery](#).

Identifier	GUID-30EEBC49-DE3E-4C3F-8226-86CE5F32F388
Status	Released

## Removing the coin-cell battery

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

 **CAUTION:** Removing the coin-cell battery resets the BIOS setup program's settings to default. It is recommended that you note the BIOS setup program's settings before removing the coin-cell battery.

Identifier	GUID-C1071902-D42D-4CCD-91C9-C2C889C9FE51
Status	Released


### Prerequisites

- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".

Identifier	GUID-E1FCCEFF-91CF-4ECC-8039-28FBEE2FBC28
Status	Released

### Procedure

Using a plastic scribe, gently pry the coin-cell battery out of the battery socket.

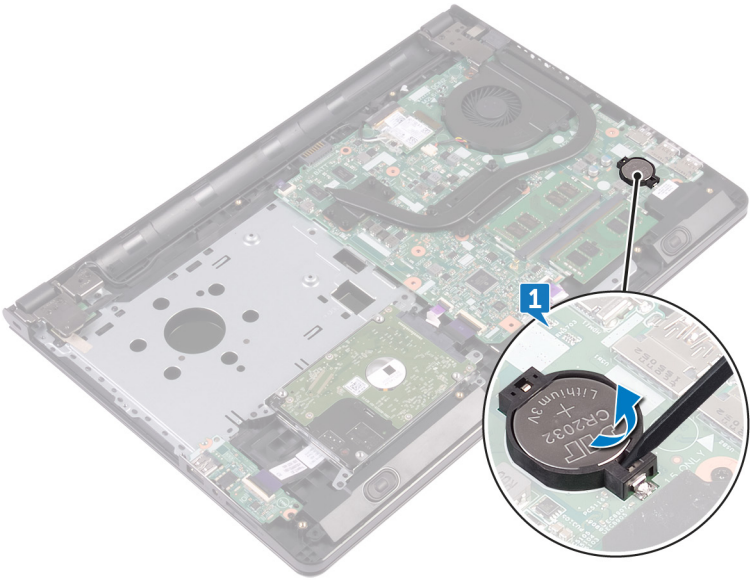

Identifier	GUID-5E22F4A0-F01F-4522-8155-BE22A8CA6E5F
------------	---

Status	Released
--------	----------

## Replacing the coin-cell battery



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-0DB62353-FDD0-48DF-BA7A-A86A6A52F278
------------	---

Status	Released
--------	----------

## Procedure

With the positive-side facing up, snap the coin-cell battery into the battery socket.

Identifier	GUID-9C3198AF-012B-4CE1-A54D-C62E7C645185
------------	---

Status	Released
--------	----------

## Post-requisites

- 1 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).
- 3 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4 Replace the [battery](#).

Identifier	GUID-3AE08A92-614C-4411-90FB-8693F1DE2634
------------	---

Status	Released
--------	----------

## Removing the heat sink

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).



**WARNING:** The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.



**CAUTION:** For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

Identifier	GUID-C1071902-D42D-4CCD-91C9-C2C889C9FE51
------------	---

Status	Released
--------	----------

## Prerequisites

- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".

Identifier	GUID-6EB5CCC1-4AA2-44AE-A8C8-75DF27FD3456
------------	---


Status	Released
--------	----------

## Procedure


- 1 Remove the captive screws that secure the heat sink to the system board.

2 Lift the heat sink off the system board.

**Integrated:** Eight screws

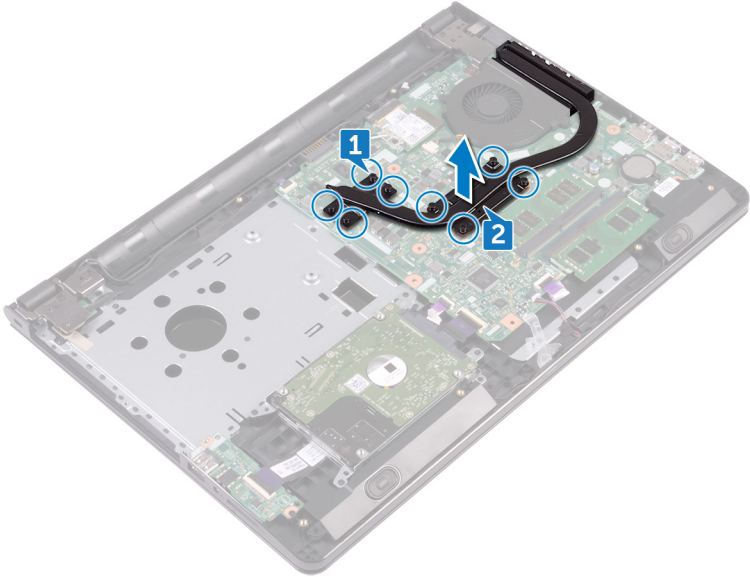

**Discrete:** Four screws

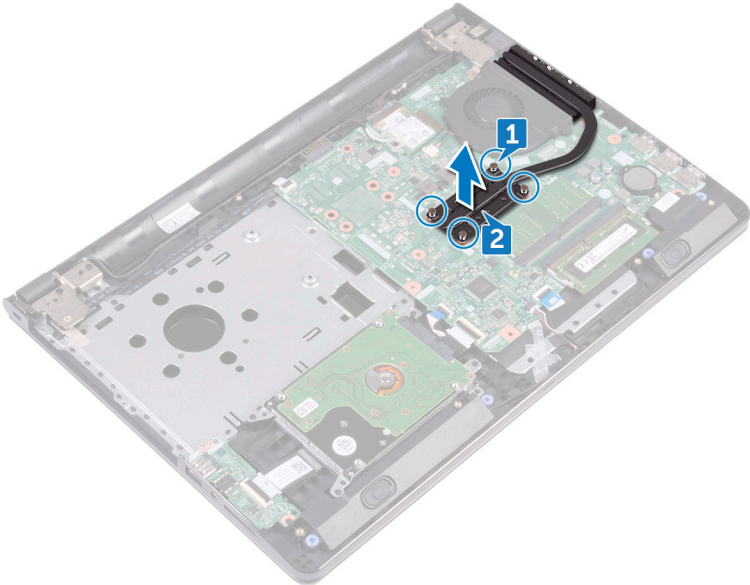

Identifier	GUID-69332260-F504-4C70-A535-1E11124CC185
Status	Released

## Replacing the heat sink



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).



**CAUTION:** Incorrect alignment of the heat sink can damage the system board and processor.



**NOTE:** The original thermal grease can be reused if the original system board and heat sink are reinstalled together. If either the system board or the heat sink is replaced, use the thermal pad provided in the kit to ensure that thermal conductivity is achieved.

Identifier	GUID-5B6E532B-8D4C-4D9C-9316-F06C4E02B1CB
Status	Released

## Procedure

- 1 Align the screws on the heat sink with the screw holes on the system board.
- 2 Replace the captive screws that secure the heat sink to the system board.

**Integrated:** Eight screws

**Discrete:** Four screws

Identifier	GUID-9C3198AF-012B-4CE1-A54D-C62E7C645185
Status	Released

## Post-requisites

- 1 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).

- 3** Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4** Replace the [battery](#).



Identifier	GUID-FAA962E5-AD4D-4E85-BCA3-D99993D9AFD2
Status	Released

## Removing the fan

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-C1071902-D42D-4CCD-91C9-C2C889C9FE51
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".

Identifier	GUID-3BCAC2FE-0DA0-4173-A2D0-97212BEC125E
Status	Released

## Procedure

- 1 Disconnect the fan cable from the system board.
- 2 Remove the two screws (M2x5) that secure the fan to the palm-rest assembly.

**3** Lift the fan off the palm-rest assembly.

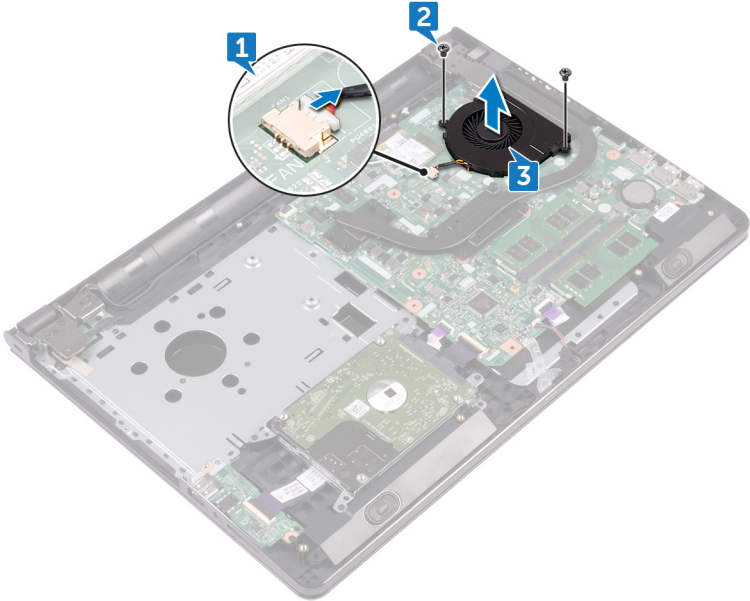

Identifier	GUID-2596AFC0-F1E8-4A0E-A603-7D2CFE582ECE
Status	Released

## Replacing the fan



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-B6850EB7-1B1C-480C-B72C-967D319DC2CA
Status	Released

## Procedure

- 1 Place the fan on the palm-rest assembly.
- 2 Align the screw holes on the fan with the screw holes on the palm-rest assembly.
- 3 Replace the two screws (M2x5) that secure the fan to the system board.
- 4 Connect the fan cable to the system board.

Identifier	GUID-9C3198AF-012B-4CE1-A54D-C62E7C645185
Status	Released

## Post-requisites

- 1 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).
- 3 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4 Replace the [battery](#).

Identifier	GUID-F42C380A-F67D-4E95-A199-C8F817B29994
------------	---

Status	Released
--------	----------

## Removing the status-light lens



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-C1071902-D42D-4CCD-91C9-C2C889C9FE51
------------	---

Status	Released
--------	----------

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".

Identifier	GUID-C7574DC2-7AC4-4E4C-B9ED-C6074D7BC43E
------------	---

Status	Released
--------	----------

## Procedure

Remove the status-light lens from the guide on the palm-rest assembly.

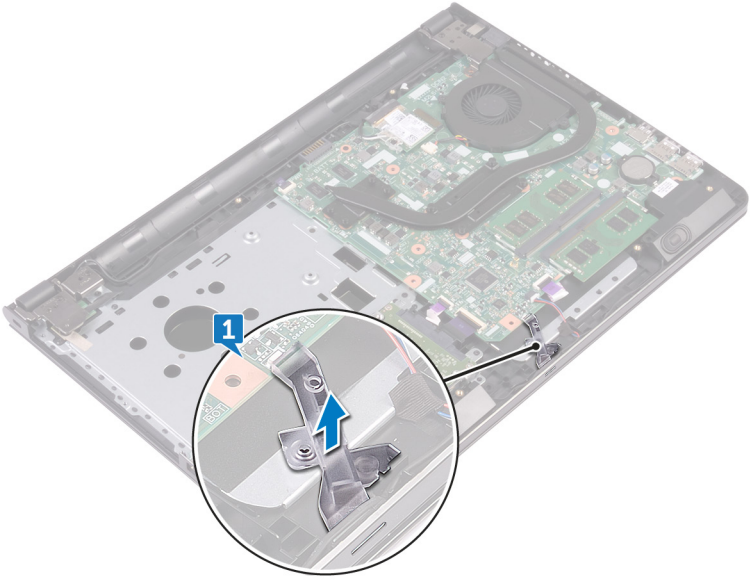

Identifier	GUID-9BAE2E8A-2C23-4895-A21A-05D7B8BE9811
Status	Released

## Replacing the status-light lens



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-9C3198AF-012B-4CE1-A54D-C62E7C645185
Status	Released

## Post-requisites

- 1 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 2 Replace the [keyboard](#).
- 3 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 4 Replace the [battery](#).

Identifier	GUID-B50303E1-25BA-4170-95BC-6FBF1D873A16
Status	Released

## Procedure

Align the status-light lens with the guide on the palm-rest assembly.

Identifier	GUID-B54497E8-5AD5-4FF9-AD4A-F32FDBEDE1E8
Status	Released

## Removing the system board



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).



**NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



**NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.



**NOTE:** Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect the cables correctly after you replace the system board.

Identifier	GUID-D003B4D6-D615-492E-A173-3946F05DD05D
Status	Released

## Prerequisites

- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".
- 5 Remove the [wireless card](#).
- 6 Remove the [memory modules](#).
- 7 Remove the [heat sink](#).
- 8 Remove the [fan](#).

Identifier

GUID-0C9F5F3A-C042-418F-8F49-FC29EAFEE0C3

Status

Released


## Procedure

- 1 Remove the screw (2.5x8) that secure the display hinge to the palm-rest assembly.



**NOTE: These instructions are applicable only for laptops with a non-touch screen display.**


- 2 Open the hinge to an angle of 90 degrees.

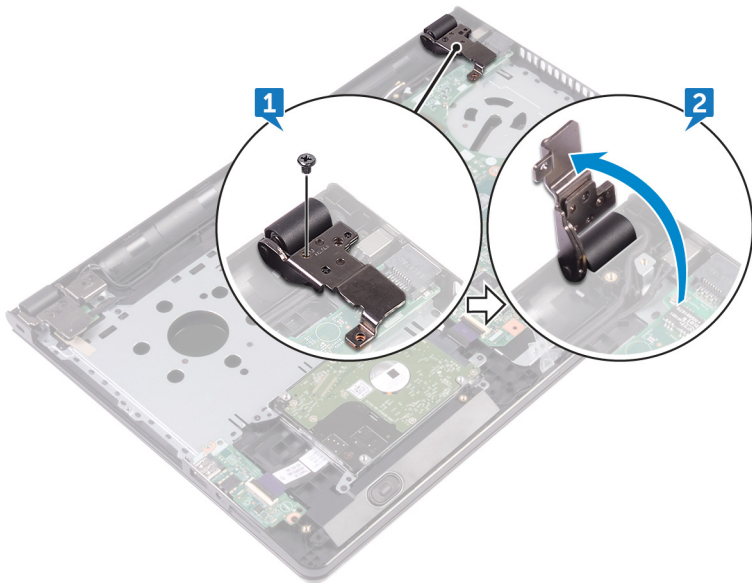

- 3 Peel the tape that secures the display cable to the system board.
- 4 Open the latch and disconnect the display cable from the system board.
- 5 Open the latch and disconnect the power-button board cable from the system board.
- 6 Open the latch and disconnect the hard-drive cable from the system board.
- 7 Open the latch and disconnect the I/O-board cable from the system board.
- 8 Disconnect the speaker cable from the system board.




- 9 Open the latch and disconnect the touch-pad cable from the system board.

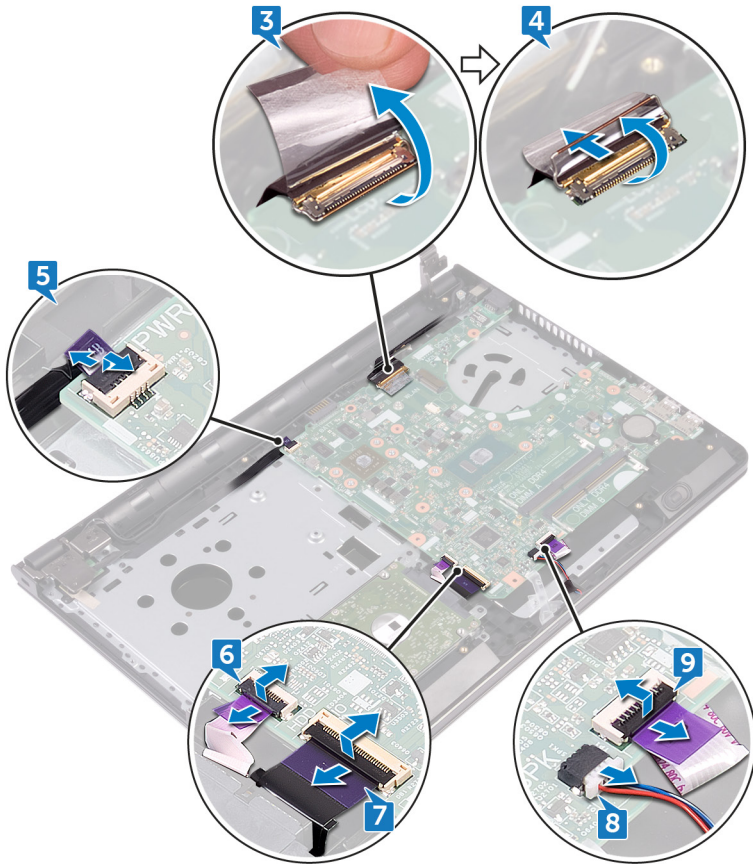


- 10 Remove the two screws (M2x3) that secures the system board to the palm-rest assembly.
- 11 Gently release the ports on the system board from the slots on the palm-rest assembly.

**12** Carefully turn the system board over.

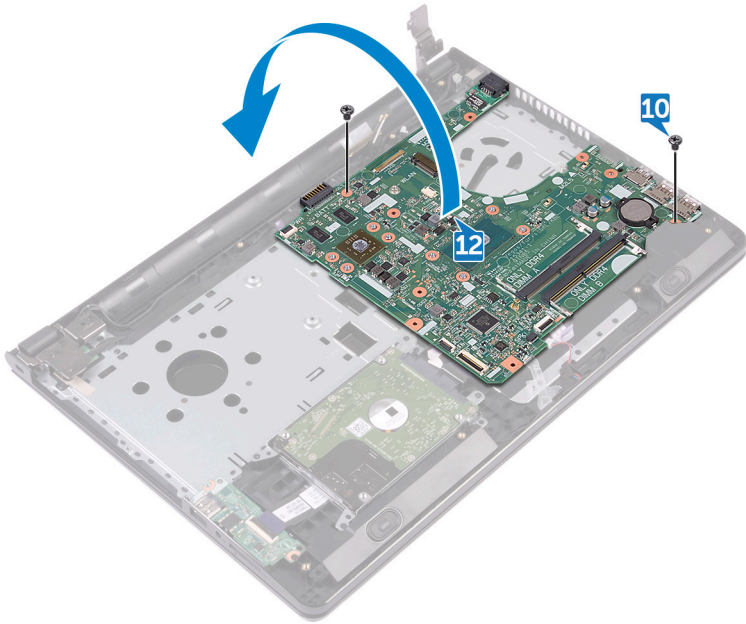

**13** Peel the tape that secures the power-adaptor port cable to the system board and disconnect the power-adaptor port from the system board.

**14** Lift the system board off the palm-rest assembly.

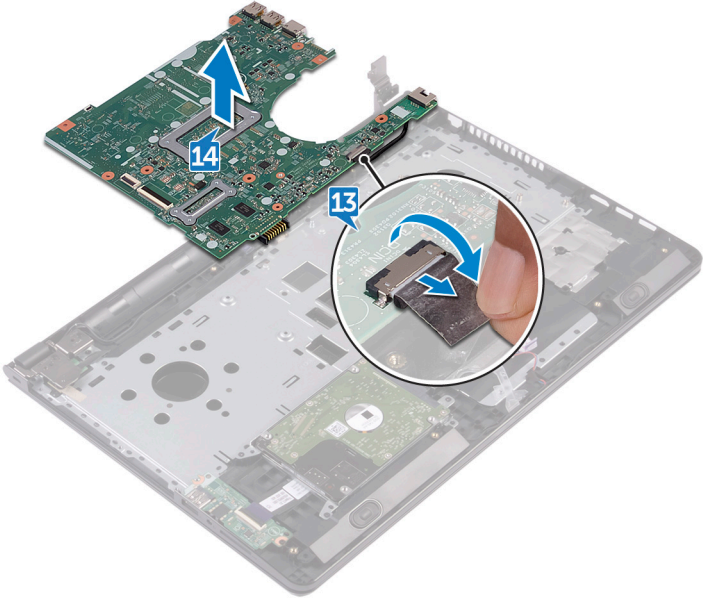

Identifier	GUID-67274E98-E2F1-4B7B-A903-F38BA6B62028
Status	Released

## Replacing the system board



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).



**NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



**NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.

Identifier	GUID-94C58F5F-515D-4653-A6E6-437DDB6ED01B
Status	Released

## Procedure

- 1 Connect the power-adaptor port cable to the system board.
- 2 Adhere the tape that secures the power-adaptor port cable to the system board.
- 3 Turn the system board over.
- 4 Align the screw holes on the system board with the screw holes on the palm-rest assembly.
- 5 Replace the two screws (M2x3) that secures the system board to the palm-rest assembly.
- 6 Connect the touch-pad cable and close the latch to secure the cable.
- 7 Connect the speaker cable to the system board.
- 8 Connect the I/O-board cable and close the latch to secure the cable.
- 9 Connect the hard-drive cable and close the latch to secure the cable.
- 10 Connect the power-button board cable and close the latch to secure the cable.

- 11 Connect the display cable and close the latch to secure the cable.
- 12 Adhere the tape that secures the display cable to the system board.
- 13 Close the display hinges.
- 14 Align the screw holes on the display hinges with the screw holes on the palm-rest assembly.



**NOTE: These instructions are applicable only for laptops with a non-touch screen display.**

- 15 Replace the screw (2.5x8) that secure the display hinges to the palm-rest assembly.

Identifier	GUID-A301D633-2465-4FFF-B856-2D6531A80875
Status	Released

## Post-requisites

- 1 Replace the [fan](#).
- 2 Replace the [heat sink](#).
- 3 Replace the [memory modules](#).
- 4 Replace the [wireless card](#).
- 5 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 6 Replace the [keyboard](#).
- 7 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 8 Replace the [battery](#).

Identifier	GUID-8D2AE471-594B-46FC-808B-9037BC410EC5
Status	Released

## Removing the touch pad



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-2C700CBB-CABB-4B3B-B00D-B7FFD8F1DFDD
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".
- 5 Remove the [memory modules](#).
- 6 Remove the [wireless card](#).
- 7 Remove the [heat sink](#).
- 8 Remove the [fan](#).
- 9 Remove the [system board](#).

Identifier	GUID-7C01ED6A-F114-4F4B-ACC9-796319A04E29
Status	Released


## Procedure

- 1 Peel the tape that secures the touch-pad bracket to the palm-rest assembly.
- 2 Remove the six screws (M2x3) that secure the touch-pad bracket to the touch pad.

**3** Lift the touch-pad bracket off the palm-rest assembly.

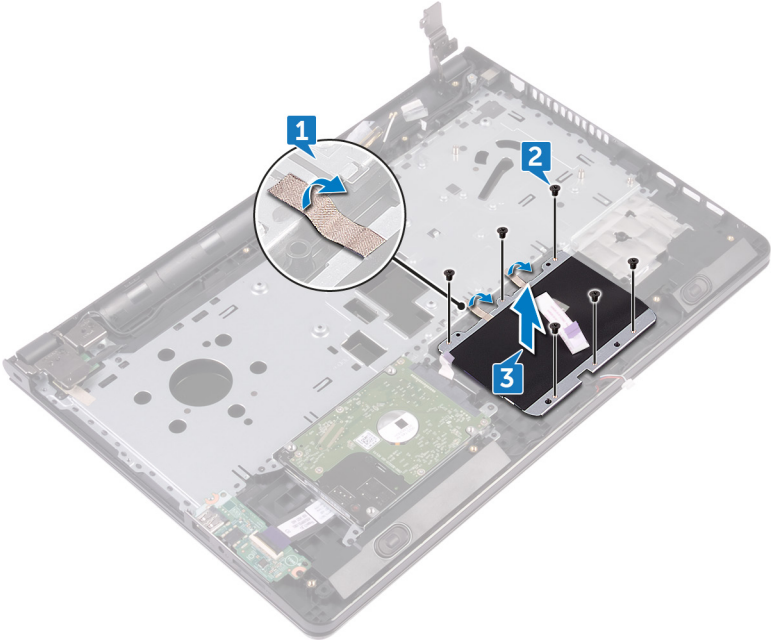

4 Lift the touch pad off the palm-rest assembly.

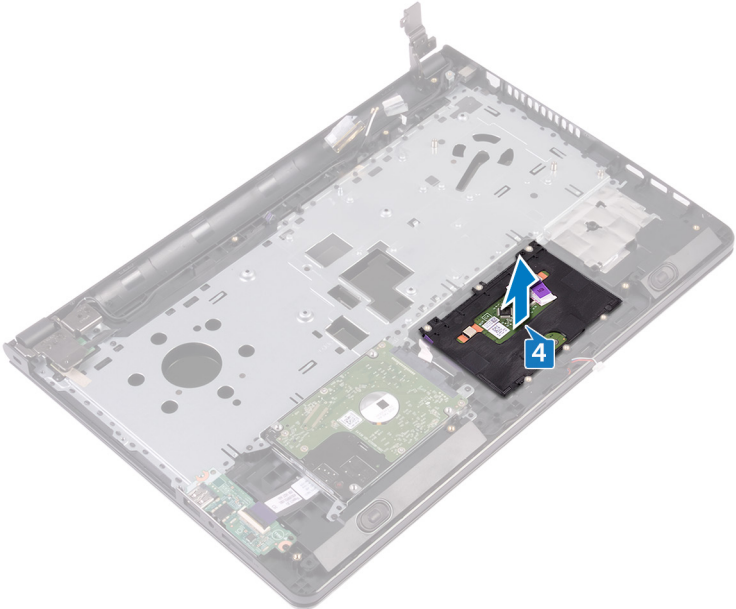



Identifier	GUID-B55423C5-03BB-46A2-9B5F-B8F3B4C854AB
Status	Released

## Replacing the touch pad



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-8D4FA1DC-BD32-4D3D-A9D2-FD77C18B7368
Status	Released

## Procedure

- 1 Place the touch pad on the palm-rest assembly.
- 2 Align the screw holes on the touch-pad bracket with the screw holes on the palm-rest assembly.
- 3 Replace the six screws (M2x3) that secure the touch-pad bracket to the touch pad.
- 4 Adhere the tape that secures the touch-pad bracket to the palm-rest assembly.

Identifier	GUID-AE6744AE-1513-4DF8-A4FF-9FD8D4470597
Status	Released

## Post-requisites

- 1 Replace the [system board](#).
- 2 Replace the [fan](#).
- 3 Replace the [heat sink](#).
- 4 Replace the [wireless card](#).
- 5 Replace the [memory modules](#).
- 6 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 7 Replace the [keyboard](#).

- 8** Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 9** Replace the [battery](#).

Identifier	GUID-35D5032D-9652-403C-9A8A-F98FFABA8776
Status	Released

# Removing the power-adapter port

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-8579985B-E504-4C7D-98DF-908EA73F7F85
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".
- 5 Remove the [coin-cell battery](#).
- 6 Remove the [memory modules](#).
- 7 Remove the [wireless card](#).
- 8 Remove the [heat sink](#).
- 9 Remove the [fan](#).
- 10 Remove the [system board](#).

Identifier GUID-940B4A13-3E87-4FB8-9E64-82CB7066B2D5

Status Released

## Procedure

- 1 Remove the screw (M2x3) that secures the power-adaptor port to the palm-rest assembly.
- 2 Note the power-adaptor port cable routing and remove the cable from its routing guides.
- 3 Lift the power-adaptor port off the palm-rest assembly.

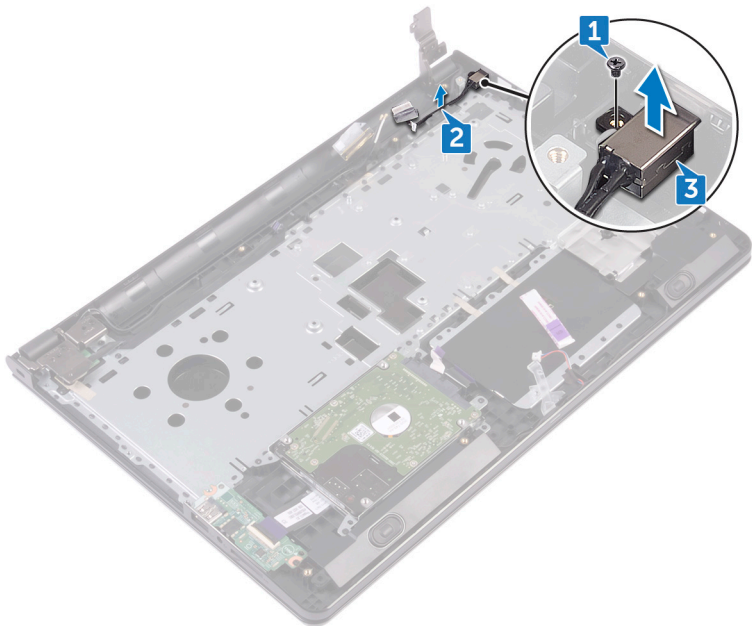

Identifier	GUID-A99140DB-7AF3-4218-B305-532FF94DF51D
Status	Released

# Replacing the power-adapter port

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-2AF34443-50A0-4705-8EFF-95BF2F102337
Status	Released

## Procedure

- 1 Slide the power-adapter port into the slot on the palm-rest assembly.
- 2 Replace the screw (M2x3) that secures the power-adapter port to the palm-rest assembly.
- 3 Route the power-adapter port cable along its routing guides on the palm-rest assembly.

Identifier	GUID-C976A2C3-CDC5-48D2-A6A1-F1AAA199F88C
Status	Released

## Post-requisites

- 1 Replace the [system board](#).
- 2 Replace the [fan](#).
- 3 Replace the [heat sink](#).
- 4 Replace the [wireless card](#).
- 5 Replace the [memory modules](#).
- 6 Replace the [coin-cell battery](#).

- 7** Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 8** Replace the [keyboard](#).
- 9** Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 10** Replace the [battery](#).

Identifier	GUID-AB1F153B-621B-42FC-89BE-0E1105FF1786
Status	Released

## Removing the display assembly



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-1E396A7F-EB63-4619-AD30-141CDF09FC2A
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".
- 5 Remove the [wireless card](#).

Identifier	GUID-7DD12D08-FC99-41D0-92A9-7AD81AAF2253
Status	Released

## Procedure

- 1 Remove the three screws (2.5x8) that secure the display hinges to the palm-rest assembly.


- 2 Open the display hinges to an angle of 90 degrees.

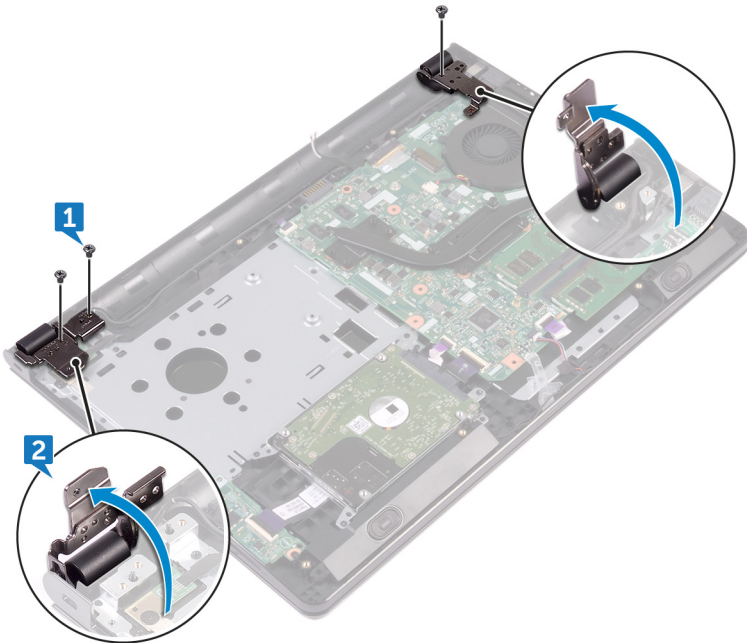


- 3 Peel the tape that secures the display cable to the palm-rest assembly.
- 4 Open the latch and disconnect the display cable.
- 5 Note the display cable routing and remove the display cable from the routing guides on the palm-rest assembly.



- 6** Note the antenna cable routing and remove the cable from its routing guides on the palm-rest assembly.

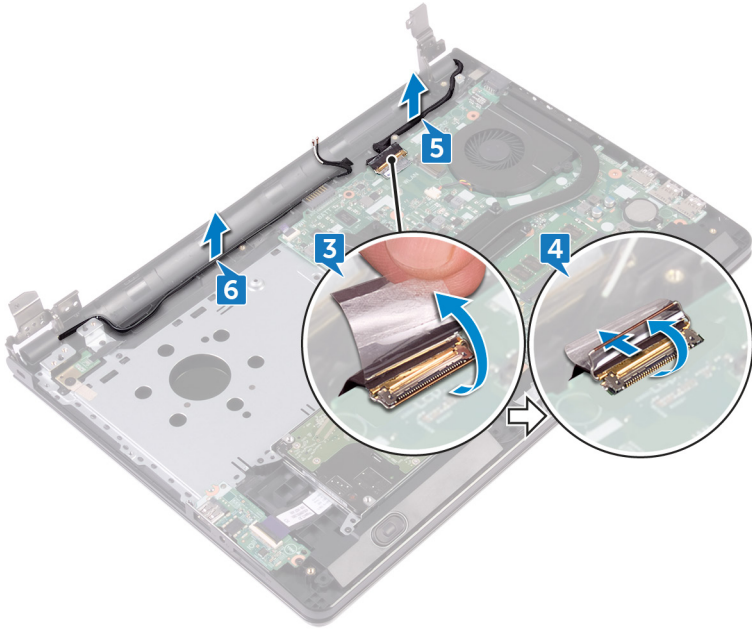

7 Open the palm-rest assembly at an angle and slide it off the display assembly.

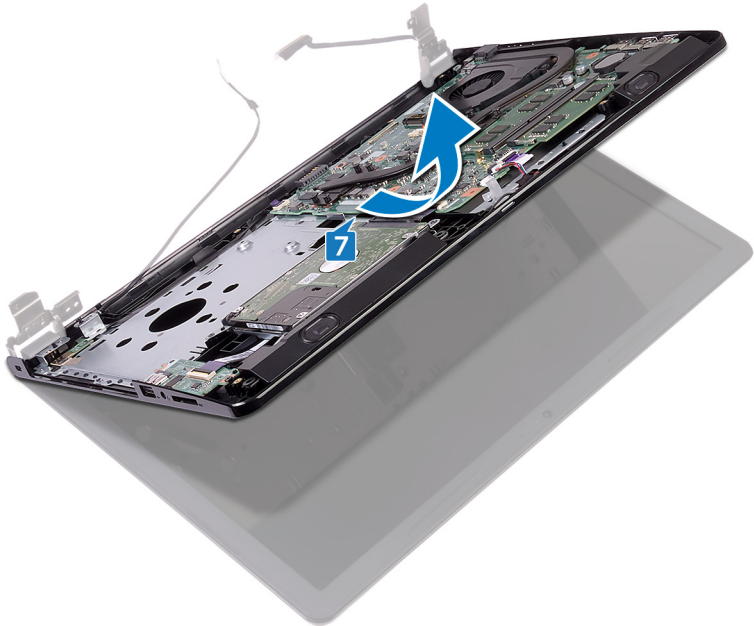

Identifier	GUID-2DF70EB1-9D26-4051-8B7C-FB14A89925D8
Status	Released

## Replacing the display assembly



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-62AB4848-D5A3-4AF2-B46D-39CD23B6A295
Status	Released

## Procedure

- 1 Place the display assembly on a clean, flat surface.
- 2 Place the palm-rest assembly on the display assembly.
- 3 Close the display hinges and align the screw holes on the display hinges with the screw holes on the palm-rest assembly.
- 4 Replace the three screws (2.5x8) that secure the display hinges to the palm-rest assembly.
- 5 Route the antenna cables through the routing guides on the palm-rest assembly.
- 6 Connect the display cable and close the latch to secure the cable.
- 7 Route the display cable through the routing guides on the palm-rest assembly.
- 8 Adhere the tape that secures the display cable to the palm-rest assembly.
- 9 Close the display and turn the computer over.

Identifier	GUID-5DC778A8-9551-4C91-B6BD-5F67561D8F5F
Status	Released

## Post-requisites

- 1 Replace the [wireless card](#).
- 2 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".

- 3** Replace the [keyboard](#).
- 4** Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 5** Replace the [battery](#).

Identifier	GUID-5C27B5F7-0EC4-42CD-AB68-CFC88E655D56
Status	Released

# Removing the display bezel



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-9A51D789-4FCA-4B51-802C-36D772D8C206
Status	Released

## Prerequisites



**NOTE:** These instructions are applicable only for laptops with a non-touch screen display.

- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".
- 5 Remove the [wireless card](#).
- 6 Remove the [display assembly](#).

Identifier


GUID-949F26EC-FC92-47A5-9F84-29B5D1CD77B5

Status

Released

## Procedure

- 1 Using your fingertips, carefully pry up the inner edges of the display bezel.

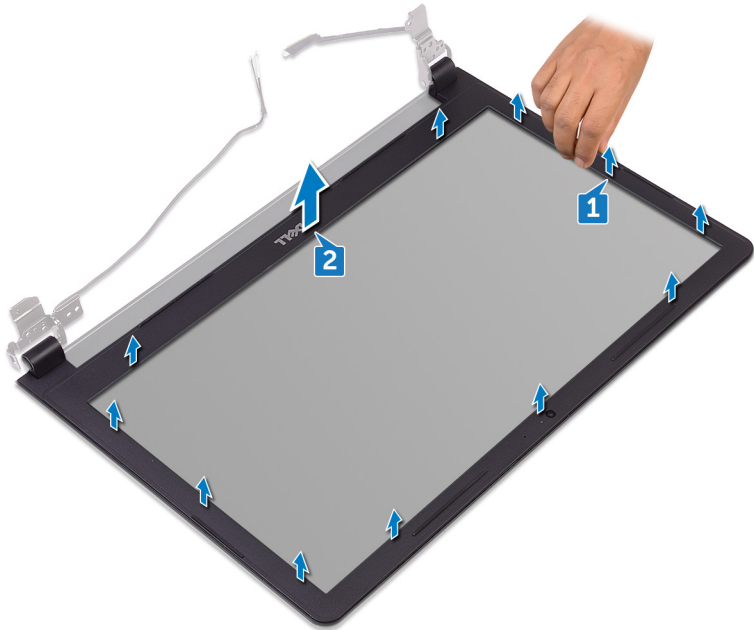

- 2 Remove the display bezel off the display back-cover and antenna assembly.

Identifier	GUID-619F529E-294B-4F0D-BB9D-9B71EB448811
Status	Released

## Replacing the display bezel



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-125925B2-0E02-4EF6-821A-339AAF38A987
Status	Released

## Procedure

Align the display bezel with the display back-cover and gently snap the display bezel into place.

Identifier	GUID-FBBF73E8-855A-457C-BE07-6FE41103FD3D
Status	Released

## Post-requisites

- 1 Replace the [display assembly](#).
- 2 Replace the [wireless card](#).
- 3 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 4 Replace the [keyboard](#).
- 5 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 6 Replace the [battery](#).

Identifier	GUID-7D2CEA1B-1FC0-4606-86EB-F51C5DFB6E52
Status	Released

## Removing the display panel



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-EBF819AD-F1A5-4FB5-A341-37F7D31B59F3
Status	Released

## Prerequisites



**NOTE:** These instructions are applicable only for laptops with a non-touch screen display.

- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".
- 5 Remove the [wireless card](#).
- 6 Remove the [display assembly](#).
- 7 Remove the [display bezel](#).


Identifier	GUID-DFAC3E03-E62A-4C07-8D09-F862E8A29F4D
Status	Released

## Procedure

- 1 Remove the four screws (M2x3) that secure the display panel to the display back-cover and antenna assembly.




- 2 Lift the display panel and turn it over.

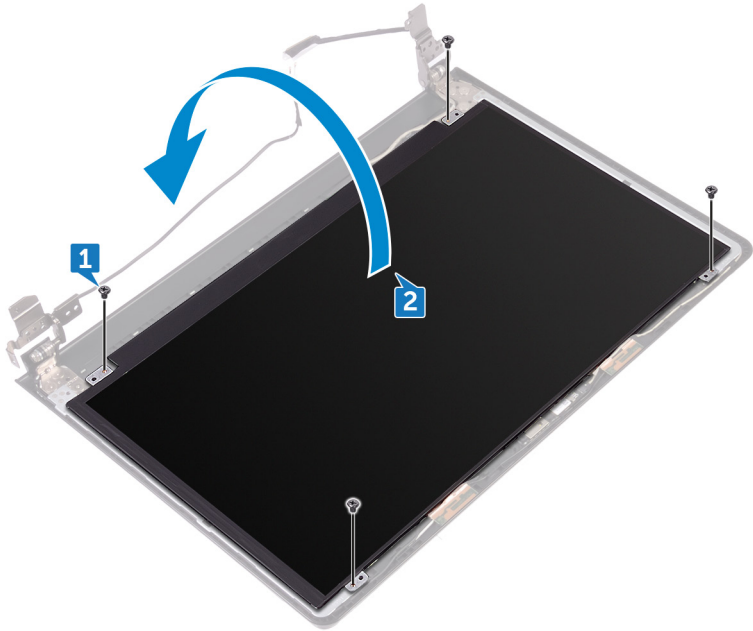

- 3 Peel the tape that secures the display cable to the display panel.
- 4 Open the latch and disconnect the display cable from the display panel.

5 Lift the display panel off the display back-cover and antenna assembly.

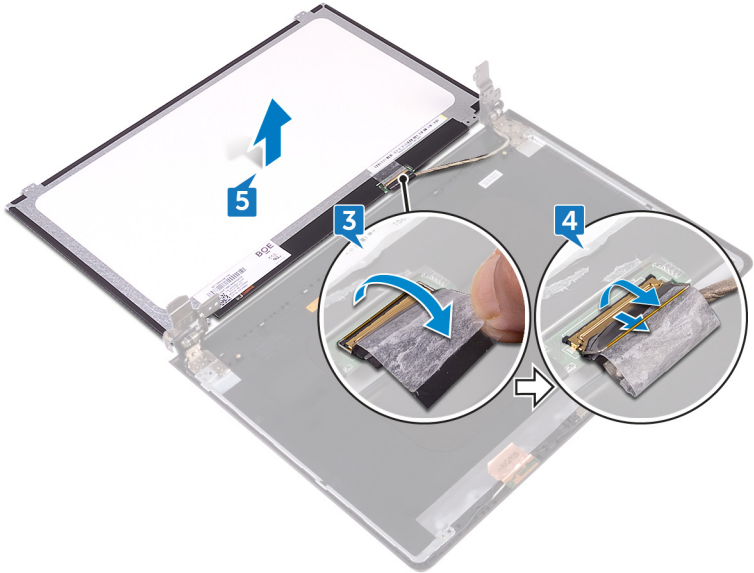

Identifier	GUID-6FD32244-34F4-4843-983D-B6C14903EFC9
Status	Released

## Replacing the display panel



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-AF700FCC-27BA-49F0-8261-916C55C09516
Status	Released

## Post-requisites

- 1 Replace the [display bezel](#).
- 2 Replace the [display assembly](#).
- 3 Replace the [wireless card](#).
- 4 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 5 Replace the [keyboard](#).
- 6 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 7 Replace the [battery](#).

Identifier	GUID-716756C0-70C5-412E-9B63-23B0905819B7
Status	Released

## Procedure

- 1 Slide the display cable into the connector on the display panel and close the latch to secure the cable.
- 2 Adhere the tape that secures the display cable to the display panel.
- 3 Turn the display panel over and place it on the display back-cover and antenna assembly.

- 4** Align the screw holes on the display panel with the screw holes on the display back-cover and antenna assembly.
- 5** Replace the four screws (M2x3) that secure the display panel to the display back-cover and antenna assembly.

Identifier	GUID-1FB16E7C-AF0C-4FA0-8736-EAD91D8969A8
Status	Released

## Removing the camera



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-FB62EF02-CB3E-4F53-B78C-0816CE706B3C
Status	Released

## Prerequisites



**NOTE:** These instructions are applicable only for laptops with a non-touchscreen display.


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in “[Removing the optical drive](#)”.
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in “[Removing the base cover](#)”.
- 5 Remove the [wireless card](#).
- 6 Remove the [display assembly](#).
- 7 Remove the [display bezel](#).

Identifier	GUID-47863B75-88C5-4FDF-A8FF-3AD4C9FAD416
Status	Released

## Procedure

- 1 Using a plastic scribe, gently pry the camera and lift it at an angle.
- 2 Disconnect the camera cable from the camera.

**3** Lift the camera off the display back-cover and antenna assembly.

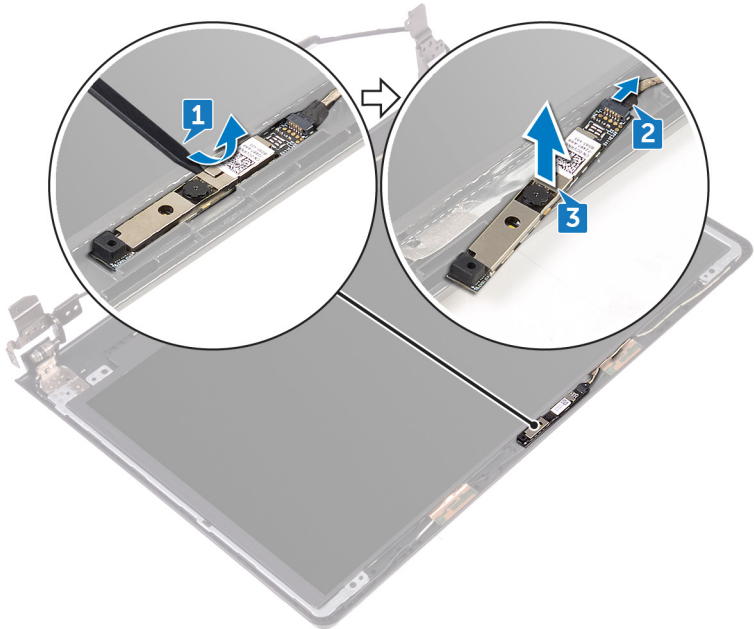

Identifier	GUID-690FF12D-2581-4326-8270-C4B813388FD3
Status	Released

## Replacing the camera



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-46780472-66FE-4478-8173-1DFEB809A792
Status	Released

## Procedure

- 1 Using the alignment post, adhere the camera on the display back-cover and antenna assembly.
- 2 Connect the camera cable to the camera.

Identifier	GUID-3B1127AB-D738-4EC6-9A6C-AB2B4ADEB008
Status	Released

## Post-requisites

- 1 Replace the [display bezel](#).
- 2 Replace the [display assembly](#).
- 3 Replace the [wireless card](#).
- 4 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 5 Replace the [keyboard](#).
- 6 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 7 Replace the [battery](#).

Identifier GUID-6C4E9746-B780-409D-B703-9A43273C227D

Status Released

## Removing the display hinges



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier GUID-EE9F30AB-7458-434B-AEE9-38C27D153C95

Status Released

## Prerequisites



**NOTE:** These instructions are applicable only for laptops with a non-touchscreen display.

- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".
- 5 Remove the [wireless card](#).
- 6 Remove the [display assembly](#).
- 7 Remove the [display bezel](#).
- 8 Remove the [display panel](#).

Identifier GUID-76E10474-6928-44E1-92C5-9C380F3B3371


Status Released

## Procedure

- 1 Remove the six screws (M2.5x2.5 big head) that secure the display hinges to the display back-cover and antenna assembly.



2 Carefully lift the display hinges off the display back-cover and antenna assembly.

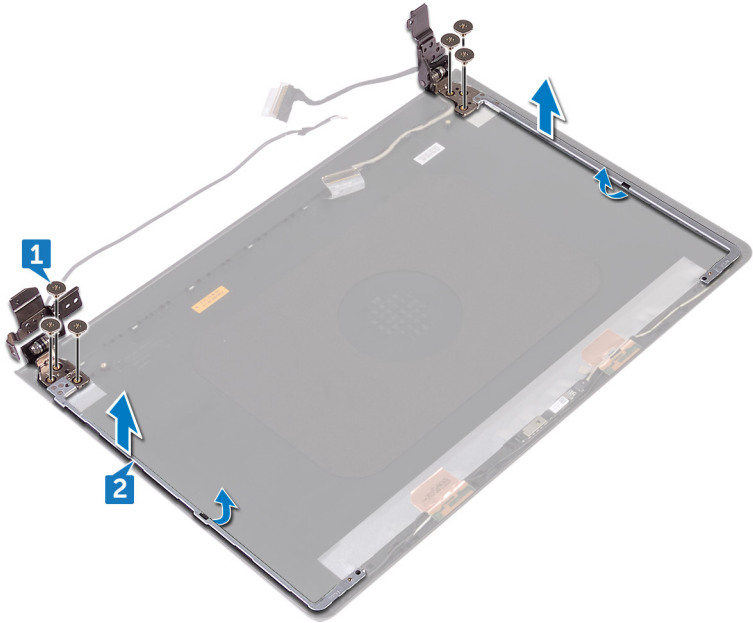

Identifier	GUID-E3D5A4DB-BAB5-4F6F-B7B6-8BC4EF0CC57D
Status	Released

## Replacing the display hinges



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-3F2F2AD6-27AD-436F-B3C0-AC02AF3792DD
Status	Released

## Post-requisites

- 1 Replace the [display panel](#).
- 2 Replace the [display bezel](#).
- 3 Replace the [display assembly](#).
- 4 Replace the [wireless card](#).
- 5 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 6 Replace the [keyboard](#).
- 7 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 8 Replace the [battery](#).

Identifier	GUID-BC776595-E586-4159-B682-B781D654E974
Status	Released

## Procedure

- 1 Align the screw holes on the display hinges with the screw holes on the display back-cover and antenna assembly.
- 2 Replace the six screws (M2.5x2.5 big head) that secure the display hinges to the display back-cover and antenna assembly.

Identifier	GUID-2850CA15-9CEF-415A-ADAA-1614E65C491B
Status	Released

# Removing the display back-cover and antenna assembly

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-98461849-D288-4CB0-80FA-742FE38224F8
Status	Released

## Prerequisites


- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in [Removing the optical drive](#)
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in “[Removing the base cover](#)”.
- 5 Remove the [wireless card](#).
- 6 Remove the [display assembly](#).
- 7 Remove the [display bezel](#).
- 8 Remove the [display panel](#).
- 9 Remove the [display hinges](#).
- 10 Remove the [camera](#).

Identifier	GUID-16157B68-0E07-40D9-8F4F-27FC73B97040
Status	Released

## Procedure

 **NOTE:** These instructions are applicable only for laptops with a non-touch screen display.

After performing the steps mentioned in the prerequisites, we are left with the display back-cover and antenna assembly.

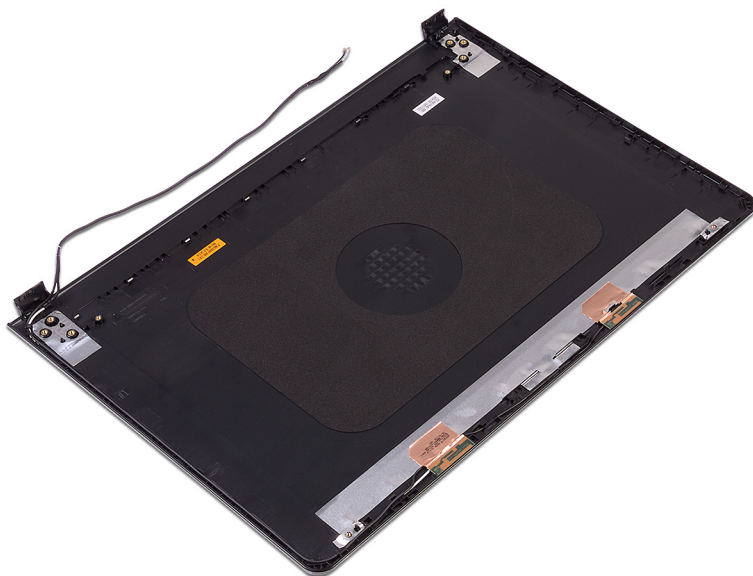

Identifier	GUID-2EF50600-2483-40F4-A773-07DC95179CB6
------------	---

Status	Released
--------	----------

## Replacing the display back-cover and antenna assembly

---



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-789DA912-16BA-43F2-BF9E-878A9D8865E0
------------	---

Status	Released
--------	----------

## Procedure

Place the display back-cover and antenna assembly on a clean, flat surface.

Identifier	GUID-776C5E82-B564-425E-AC1A-28D07C293CB7
------------	---

Status	Released
--------	----------

## Post-requisites

- 1 Replace the [camera](#).
- 2 Replace the [display hinges](#).
- 3 Replace the [display panel](#).
- 4 Replace the [display bezel](#).
- 5 Replace the [display assembly](#).
- 6 Replace the [wireless card](#).
- 7 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 8 Replace the [keyboard](#).
- 9 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".

**10** Replace the [battery](#).

Identifier	GUID-DB825F91-AB3C-47B9-A43E-A9B2B38F0AFD
Status	Released

# Removing the palm rest



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-4C3B4071-4899-4C45-AA84-EE6B1CB89202
Status	Released

## Prerequisites

- 1 Remove the [battery](#).
- 2 Follow the procedure from step 1 to step 3 in "[Removing the optical drive](#)".
- 3 Remove the [keyboard](#).
- 4 Follow the procedure from step 1 to step 7 in "[Removing the base cover](#)".
- 5 Follow the procedure from step 1 to step 3 in "[Removing the hard drive](#)".
- 6 Remove the [memory modules](#).
- 7 Remove the [wireless card](#).
- 8 Remove the [power-button board](#).
- 9 Remove the [speakers](#).
- 10 Remove the [I/O board](#).
- 11 Remove the [heat sink](#).
- 12 Remove the [fan](#).
- 13 Remove the [status-light lens](#).
- 14 Remove the [system board](#).
- 15 Remove the [touch pad](#).
- 16 Remove the [power-adapter port](#).
- 17 Remove the [display assembly](#).

Identifier

GUID-A21C2AE2-2CDF-4994-96D3-9C651B50CD57

Status

Released

## Procedure

After performing the steps in the prerequisites we are left with the palm rest.





Identifier	GUID-F8EF3836-195A-4CD7-ADEA-1ADBFCD7F625
Status	Released

## Replacing the palm rest



**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

Identifier	GUID-C0DCEC25-2467-4848-85B2-C3BA02766C7D
Status	Released

## Post-requisites

- 1 Replace the [display assembly](#).
- 2 Replace the [power-adapter port](#).
- 3 Replace the [touch pad](#).
- 4 Replace the [system board](#).
- 5 Replace the [status-light lens](#).
- 6 Replace the [fan](#).
- 7 Replace the [heat sink](#).
- 8 Replace the [I/O board](#).
- 9 Replace the [speakers](#).
- 10 Replace the [power-button board](#).
- 11 Replace the [wireless card](#).
- 12 Replace the [memory modules](#).
- 13 Follow the procedure from step 4 to step 6 in "[Replacing the hard drive](#)".
- 14 Follow the procedure from step 2 to step 8 in "[Replacing the base cover](#)".
- 15 Replace the [keyboard](#).
- 16 Follow the procedure from step 4 to step 5 in "[Replacing the optical drive](#)".
- 17 Replace the [battery](#).

Identifier	GUID-7A69F534-7338-4E74-A981-5687F4060F70
Status	Released

## Procedure

Place the palm rest on a clean and flat surface.

Identifier	GUID-A19276F3-446F-46A8-8C42-95C2498F1570
Status	Released

# Diagnostics

---

**Power and battery-status light/hard-drive activity light:** Indicates the battery-charge status or the hard-drive activity.



**NOTE:** Press **Fn+H** to toggle this light between power and battery-status light and hard-drive activity light.

## Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.

## Power and battery-status light

Indicates the power and battery-charge status.

**Solid white** – Power adapter is connected and the battery has more than 5 percent charge.

**Amber** – Computer is running on battery and the battery has less than 5 percent charge.

## Off

- Power adapter is connected and the battery is fully charged.
- Computer is running on battery and the battery has more than 5 percent charge.
- Computer is in sleep state, hibernation, or turned off.

The power and battery-status light blinks amber along with beep codes indicating failures.

For example, the power and battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off indicating no memory or RAM is detected.

The following table shows different light patterns and what they indicate.

**Table 3. Diagnostics**

<b>Light Pattern</b>	<b>Problem description</b>
<b>2,1</b>	CPU failure
<b>2,2</b>	System board: BIOS and ROM failure
<b>2,3</b>	No memory or RAM detected
<b>2,4</b>	Memory or RAM failure
<b>2,5</b>	Invalid memory installed
<b>2,6</b>	System board or chipset error
<b>2,7</b>	LCD failure
<b>3,1</b>	CMOS battery failure
<b>3,2</b>	PCI or video card or chip failure
<b>3,3</b>	Recovery image not found
<b>3,4</b>	Recovery image found but invalid

The computer may emit a series of beeps during start-up if the errors or problems cannot be displayed. The repetitive beep codes help the user troubleshoot problems with the computer.

**Camera status light:** Indicates whether the camera is in use.

- Solid white – Camera is in use.
- Off – Camera is not in use.

**Caps Lock status light:** Indicates whether Caps Lock is enabled or disabled.


- Solid white – Caps Lock enabled.
- Off – Caps Lock disabled.

Identifier	GUID-F5899359-C2E1-41C0-9663-4C79969506EB
Status	Released

# Flashing the BIOS

---

You may need to flash (update) the BIOS when an update is available or when you replace the system board. To flash the BIOS:

- 1 Turn on your computer.
- 2 Go to [www.dell.com/support](http://www.dell.com/support).
- 3 Click **Product support**, enter the Service Tag of your computer, and then click **Submit**.  
 **NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.**
- 4 Click **Drivers & downloads** → **Find it myself**.
- 5 Select the operating system installed on your computer.
- 6 Scroll down the page and expand **BIOS**.
- 7 Click **Download** to download the latest version of the BIOS for your computer.
- 8 After the download is complete, navigate to the folder where you saved the BIOS update file.
- 9 Double-click the BIOS update file icon and follow the instructions on the screen.

Identifier GUID-AF18382F-D265-43C2-85DA-28FFB5875F37

Status Released

# Getting help and contacting Dell

## Self-help resources

You can get information and help on Dell products and services using these self-help resources:

**Table 4. Self-help resources**

Information about Dell products and services

[www.dell.com](http://www.dell.com)

Dell Help & Support app



Get started app



Accessing help

In Windows search, type **Help** and **Support**, and press Enter.

Online help for operating system

[www.dell.com/support/windows](http://www.dell.com/support/windows)

[www.dell.com/support/linux](http://www.dell.com/support/linux)

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.

[www.dell.com/support](http://www.dell.com/support)

Learn about your operating system, setting up and using your computer, data backup, diagnostics, and so on.

See *Me and My Dell* at [www.dell.com/support/manuals](http://www.dell.com/support/manuals).

# Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [www.dell.com/contactdell](http://www.dell.com/contactdell).



**NOTE: Availability varies by country and product, and some services may not be available in your country.**



**NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.**