

## Quick Reference Guide



Unlocked<sup>1</sup>

## Samsung Care

How can we help you?

Get to know your product:

- Access user manuals, tips and more at [samsung.com/us/support](https://samsung.com/us/support)

Ask the community:

- Ask questions and get solutions from Samsung customers, at [us.community.samsung.com](https://us.community.samsung.com)

Contact us for support:

- For hardware or software support, at [samsung.com/us/support/contact](https://samsung.com/us/support/contact) or call us at 1.800.SAMSUNG.
- Find a service location near you, at [samsung.com/us/support/service/locations](https://samsung.com/us/support/service/locations)


## About your device




## Set up your device

Remove and replace the back cover

Locate the cover release slot and carefully pull the cover off.


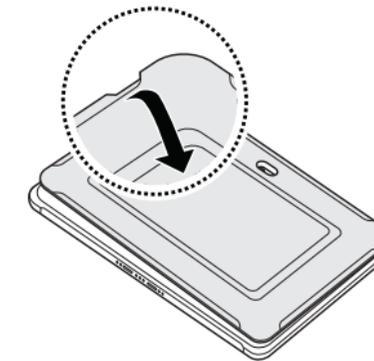


Place the back cover over the back of the device. Then press down along the edges to secure the cover.

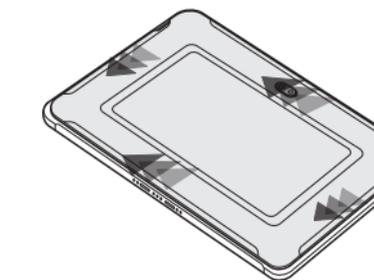


Insert the SIM and optional microSD card

- Locate the card slot, and slide in the SIM and optional microSD™ card (if using) with the gold contacts facing down.

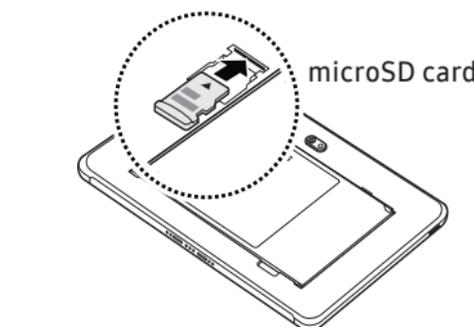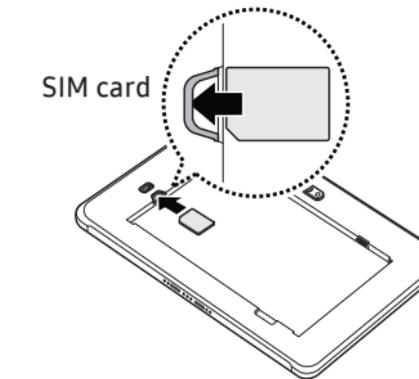


Install the battery

Insert the battery, with the gold contacts aligned and press down to secure the battery.

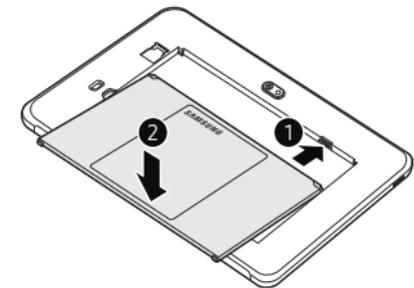

Charge your device


Before turning on your device, charge it.

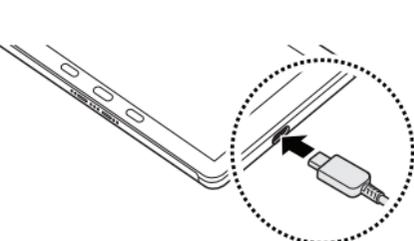

## Personalize your device

Customize, connect or turn on options to make the device your own.

-  **Wallpaper** Change the look of the Home and Lock screens.
-  **Accounts and backup** Tap Users to add additional users for the device.
-  **Biometrics and security** Set biometric security options.
-  **Connections** Connect to a Wi-Fi network, Bluetooth device and other connection options.
-  **Lock screen** Select a screen lock and set security options.
-  **Display** Customize the Home screen and display brightness and more.
-  **Sounds and vibration** Set device volume and sounds.

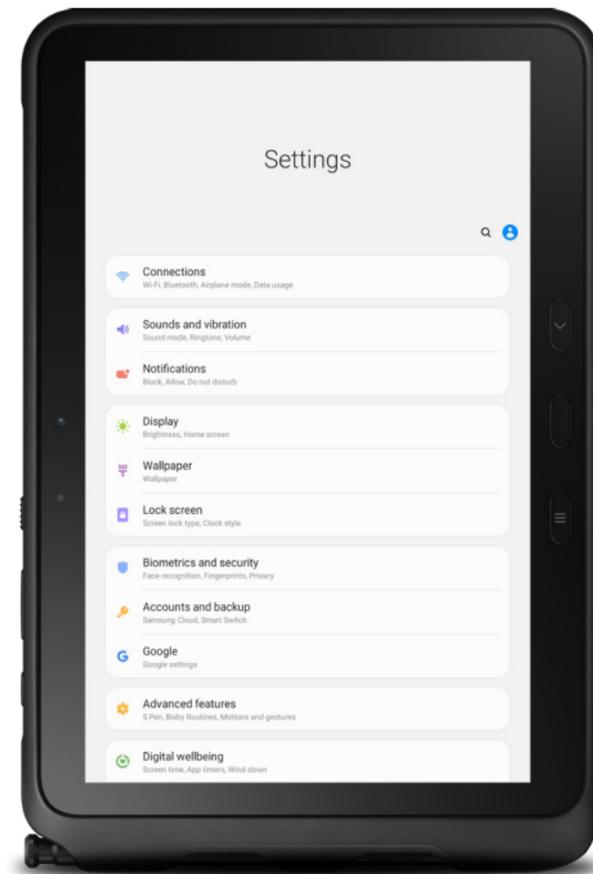

## Search

From the home screen swipe up, and search for anything on the device. For example enter an app or settings name.



## Get creative with the S Pen

### There's no limit to the S Pen

Write and draw directly into emails or the calendar, as well as Word, Excel®, PowerPoint®, and PDF documents.

### S Pen button

Press the S Pen button to launch Air Command.

Tap **Settings**  to customize your S Pen features.



### Air Command

Air Command gives you access to signature S Pen features.

**Create note:** Create customized notes.

**View all notes:** View all notes created.

**Smart select:** Outline and crop anything on the screen and freely edit or share.

**Screen write:** Capture a screen image and write or draw on it.

**Live message:** Create live messages and GIFs.

**PENUP:** Use the S Pen to draw, color, edit, and share live drawings.

**Add shortcuts:** Select an app or function to add to the Air Command menu.

## Learn more

### Need help?

Use the Help feature to access the user manual and information on how to use your device.

To open, from the Home screen, swipe up and tap **Settings**  > **Help** .

-  Downloading apps
-  Downloading apps created for Galaxy devices.
-  Connecting and controlling smart devices
-  Managing contacts
-  Configuring accessibility settings
-  Get what you need in a glance  
Swipe your home screen to the right to quickly setup and start using Bixby home.

<sup>1</sup>Wireless voice, data and messaging services compatible with most major U.S. GSM and CDMA networks. Visit [www.samsung.com](http://www.samsung.com) for more information on your device. Support for certain features and services such as VoWiFi and hotspot, vary by wireless service provider. See provider for compatibility details.

©2019 Samsung Electronics America, Inc. Samsung and Galaxy Active are both trademarks of Samsung Electronics Co., Ltd. LTE is a trademark of ETSI.

Device and screen images simulated. Appearance of device may vary.