

Hand Blender Set

User Manual



HBA6700W

EN

01M-8836873200-4116-03

beko

Please read this user manual first!

Dear Customers,

Thank you for selecting a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:

| | |
|--|---|
|  | Important information and useful hints about usage. |
|  | WARNING: Warnings for dangerous situations concerning the safety of life and property. |
|  | Materials are intended to be in contact with food. |
|  | Do not immerse the appliance, power cord or power plug in water or in other liquids. |
|  | Protection class against electric shock |



This product has been produced in environmentally-friendly, state-of-the-art facilities.



This product does not contain PCB's.

CONTENTS

1 Important instructions for safety and environment 4

- 1.1 General safety 4
- 1.2 Compliance with the WEEE Directive and disposal of waste products 5
- 1.3 Package information 5
- 1.4 Compliance with RoHS Directive 5
- 1.5 Things to do for energy saving 5
- 1.6 Plug Wiring 6

2 Hand Blender Set 7

- 2.1 Overview7
- 2.2 Technical data.....7

3 Operation 8

- 3.1 Preparation 8
- 3.2 Maximum quantities and processing time . 8
- 3.3 Blending..... 8
- 3.4 Chopping..... 9
- 3.5 Whisking 10

4 Information 11

- 4.1 Cleaning and care 11
- 4.2 Storage..... 11
- 4.3 Handling and transportation..... 11

5 Guarantee 12

1

Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

1.1 General safety

- This appliance complies with the international safety standards.
- This appliance may be used by children and the people whose physical, perceptive or mental skills are impaired or who are inexperienced or not knowledgeable about the appliance as long as they are supervised or informed and made understood the safe use of the appliance and the encountered dangers. Children should not play with the appliance.
- This appliance shall not be used by children.
- Keep the appliance and its cord out of the reach of children.
- Do not use it if the power cable, blades or the appliance itself is damaged. Contact an authorised service.
- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not pull the power cable when unplugging the appliance.
- Wait for moving accessories to stop and unplug the appliance when left attended, while installing/removing accessories or before cleaning.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not use the device for hot food.
- To prevent overheating, do not use the appliance continuously for more than 10 seconds. Leave to cool for 1 minute in between each 10 seconds of operation.
- Use the appliance only with the supplied rubber base and glass container.

1

Important instructions for safety and environment

- Do not operate the appliance without the ingredients in the bowl.
- Remove bones and stones from food to prevent the blades and the appliance from getting damaged.
- This appliance is not suitable for dry or hard foods as this will quickly cause the blades to become dull.
- Follow all warnings to prevent injuries due to incorrect use.
- When emptying the container, during cleaning and grabbing chopping blades with bare hands serious injuries could result due to incorrect use. Use the plastic section trying to hold the chopping blade.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.
- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- If you keep the packaging materials, store them out of the reach of children.

1.2 Compliance with the WEEE Directive and disposal of waste products



Compliance with WEEE Directive and Disposing of the Waste Product This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.3 Package information



Package of the product is made of recyclable materials in accordance with our national legislation. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.4 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.5 Things to do for energy saving

Follow the times recommended in the manual during use. Unplug the appliance after use.

1

Important instructions for safety and environment

1.6 Plug Wiring


The moulded plug on this appliance incorporates a 13 A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers are available from any good electrical store.

• Fiting a different plug

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:


- Brown cable = L (Live)
- Blue cable = N (Neutral)
- Green/yellow cable must be connected to ground (E) \equiv line

With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptore or in the main fuse box. If in doubt contact a qualified electrician.

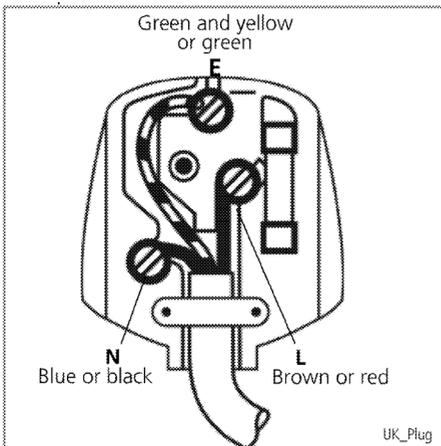

2 Hand Blender Set

2.1 Overview

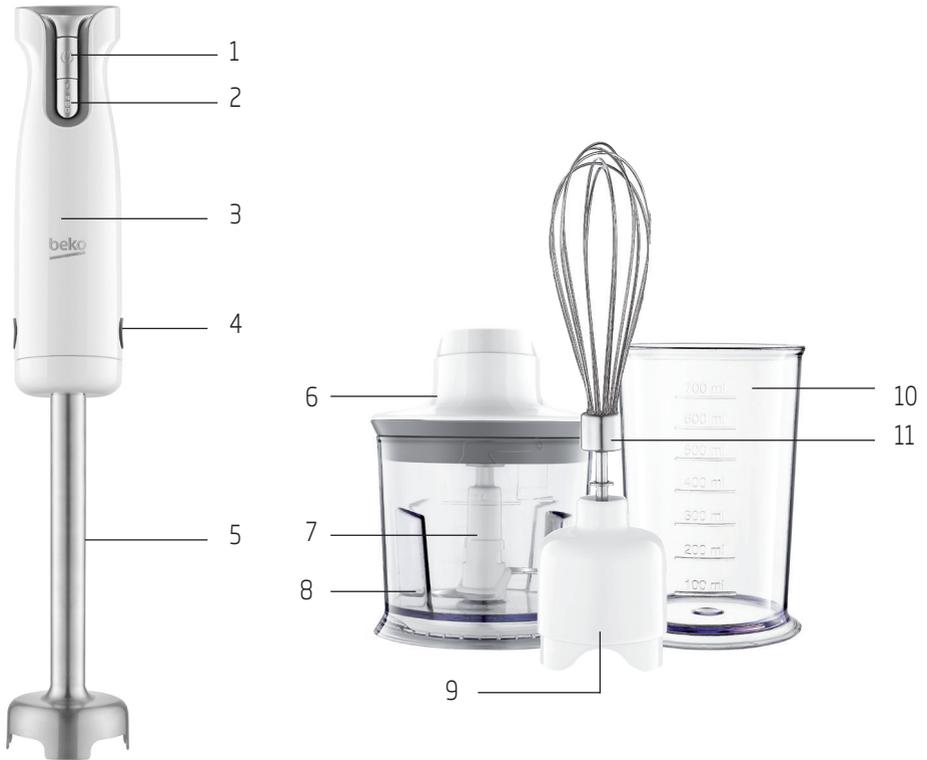

1. On/Off button
2. Turbo button
3. Motor unit
4. Attachment release buttons
5. Blending attachment
6. Chopping lid
7. Chopping blade
8. Chopping bowl
9. Whisk holder

10. Measuring beaker
11. Balloon whisk

2.2 Technical data

Power supply: 220-240 V~, 50/60 Hz

Power: 700 W

Technical and design modifications reserved.

The values which are declared in the markings affixed on your appliance or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

3 Operation

3.1 Preparation

1. Remove all packaging and sticker materials and dispose of them according to the applicable legal regulations.
2. Before using the appliance for the first time, clean parts which come into contact with food (see the "Cleaning and care" section).
3. Cut the food into small pieces before processing with the appliance.

3.2 Maximum quantities and processing time

| Ingredients | Maximum quantities | Processing time |
|--------------------------|--------------------|-----------------|
| Meat/Fish | 200g | 10-15 seconds |
| Herbs | 20g | 20 seconds |
| Nuts | 200g | 15 seconds |
| Cheese | 150g | 15 seconds |
| Bread | 1 slice | 20 seconds |
| Eggs (hard-boiled) | 2 eggs | 5 seconds |
| Onions (cut in 8 pieces) | 100 g | 10 seconds |

3.3 Blending

1. Put the food that you would like to puree or mix in the measuring beaker (10) or a similar bowl.
2. Attach the blending attachment (5) to the motor unit (3) by pushing the attachment to the motor until it locks. Make sure the blending attachment is properly attached to the motor unit.
3. Insert the plug into the wall socket.
4. Immerse the blending attachment (5) in the measuring beaker (10), that contains the ingredients to be blended.



To prevent the ingredients from splashing, do not press the On/Off button (1) or turbo button (2) until the blending attachment has been immersed in the ingredients.

5. Press and hold down the On/Off button (1).
 - The appliance starts operating.
6. Use the speed control to select a speed or press and hold the turbo button (2).
 - The speed indicator LED illuminates according to the desired speed 1-6.



When you use the turbo button the appliance operates at maximum speed. In this case you cannot adjust the speed with the speed control.



While using the turbo button (2), all speed indicator LEDs illuminate.

7. Move the appliance slowly up and down and in circles to blend the ingredients.



Always switch off the appliance before taking out the processed food.

8. Release the On/Off button (1) or turbo button (2) when you are finished and disconnect the power plug from the wall socket. Remove the mixture from the measuring beaker (10).
9. Disassemble the blending attachment (5) only by pushing the attachment release buttons (4) at the sides of the appliance and pulling it off from the motor unit.



To prevent overheating do not operate the appliance continuously for more than 10 seconds.



Never switch on the appliance for longer than necessary for processing the food.

3 Operation



To prevent overflowing of the mixture do not overfill the measuring beaker (10) or bowl. Smaller amounts are easier to process.



To prevent any accidents use the beaker lid as anti-slip rubber pad by putting the beaker base on the lid.



If you would like to use the blending attachment directly in the pot, first take the pot off the stove to prevent the blending attachment from overheating.

3.4 Chopping



Do not chop extremely hard items such as coffee beans, ice cubes, nutmeg, grains or bones. Remove stalks from herbs, shells from nuts and bones, tendons and gristle from meat.



Cut the food in small pieces.

1. Put the chopping bowl (8) on an even surface.
2. Place the chopping blade (7) onto the fixed shaft in the chopping bowl (8).



WARNING: Be careful when inserting the chopping blade (7) as it is very sharp.



WARNING: Do not touch the chopping blade with bare hands.

3. Place the ingredients in the chopping bowl (8).
4. Put the chopping lid (6) on the chopping bowl (8). Make sure that the claws on the chopping lid are firmly locked on the bowl.



WARNING: Never operate the appliance if the chopping lid is not properly seated on the chopping bowl, as this could damage the chopping blade.

5. Put the motor unit (3) on the chopping lid (6). Push the motor unit so that it is firmly locked in place. Make sure the motor unit is securely attached to the chopping lid.



During operation always hold the chopping bowl with one hand to prevent it from tipping over.

6. Insert the plug into the wall socket.
7. Press and hold down the On/Off button (1).
 - The appliance starts operating.
8. Press and hold the turbo button (2).



Do not use the appliance continuously for more than 10 seconds.



To achieve the best results press the On/Off button or turbo button intermittently.

9. Release the On/Off button (1) or turbo button (4) when you finish the process and disconnect the power plug from the wall socket. Remove the motor unit (3) from the chopping lid (8) by pushing the attachment release buttons (4) at the sides of the appliance and pulling it off. Take the chopping lid (6) off. Take the chopping blade (7) out of the chopping bowl (8) carefully prior to removing the chopped food.

3 Operation

3.5 Whisking

- You can use the balloon whisk (11) for whipping cream and beating eggs.
 - Never process more than 4 egg whites or 200 ml cream.
1. Insert the balloon whisk (11) into the whisk holder (9) until it clicks into place.
 2. Connect the motor unit (3) to the whisk holder (9) by putting the whisk holder onto the motor unit. Push the whisk holder to the motor unit. Make sure that the whisk holder is securely attached to the motor unit.
 3. Put the ingredients that you would like to process in the measuring beaker (10) or a similar bowl.
 4. Insert the power plug into the wall socket.
 5. Hold the balloon whisk (11) into the mixture to be processed.
 6. Press and hold the On/Off button (1).
 - The appliance starts operating.
 7. Press and hold the turbo button (2).
 8. Move the appliance slowly up and down and in circles to whisk the ingredients.
 9. Release the On/Off button (1) or turbo button (2) when you are finished and disconnect the power plug from the wall socket. Remove the mixture from the measuring beaker (10). Remove the motor unit (3) from the whisk holder (9) by pushing the attachment release buttons (4) at the two sides of the appliance and pulling it off.

4 Information

4.1 Cleaning and care



WARNING: Never use petrol solvents, abrasive cleaners, metal objects or hard brushes to clean the appliance.



WARNING: Do not touch the chopping blades with your bare hands. The blades are very sharp. Use a brush!



WARNING: Never put the motor unit (3) or power cord in water or any other liquids and never hold them under running water.

1. Turn the appliance off and disconnect it from the wall socket.
2. Let the appliance cool down completely.
3. Use a damp soft cloth to clean the motor unit (3).
4. Immediately after using, clean the blending attachment (5) and measuring beaker (10) with warm, soapy water and dry them thoroughly. Never wash them in dishwasher.



Before using or storing the appliance after cleaning, dry all parts carefully using a soft cloth.

4.2 Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully. Make sure the appliance is unplugged and completely dry.
- Store the appliance in a cool, dry place. Make sure the appliance is kept out of the reach of children.

4.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance will render it non-operational or cause permanent damage.

5 Guarantee

Product Guarantee

12 months breakdown and repair guarantee

Guarantor: **Beko plc, 1 Greenhill Crescent, Watford, Hertfordshire. WD18 8UF**

The guarantee does not in any way diminish your statutory or legal rights.

Your **appliance** has the benefit of our manufacturer's guarantee which covers the product for 12 months from the date of original purchase.

This gives you reassurance that if within that time, your **appliance** is proven to be defective because of either workmanship or materials, we will at our discretion either repair or replace your **appliance**.

The **appliance** must be correctly installed, located and operated in accordance with the instructions contained in the user manual. The guarantor disclaims any liability for accidental or consequential damage.

The Guarantee is subject to the following conditions:

- Documentary proof of the original purchase date is provided.
- The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The appliance is used only on the electricity supply on the rating plate.
- The appliance has only been used for normal domestic purposes.
- The appliance has not been altered, serviced, dismantled or otherwise interfered with by any person.
- The appliance is used in the United Kingdom or Republic of Ireland.
- Any parts removed during repair work or any product that has been replaced becomes our property.
- The guarantee is not transferrable if the product is resold.

The Guarantee does not cover:

- Transit, installation or delivery damage.
- Accidental damage.
- Misuse or abuse.
- Replacement of any consumable item or accessories. These include but are not limited to: plugs, cables, light bulbs, knobs, filters and flaps.
- Repairs or replacements required as a result of unauthorised repairs or inexperienced installation that fails to meet the requirements contained in the user guide or instruction book.
- Repairs to products used in commercial or non-residential household premises.

How to obtain after sales service, help or general advice

Please keep your purchase receipt or other proof of purchase in a safe place as you will need to show us this document if your product requires attention within the guarantee period.

Please also record your product details below, which will allow you to access our services more quickly and help us identify your product. The model number is printed on the front of the user guide and the serial and model number is shown on your products rating plate.

| Model number | Serial number | Purchased from | Date of purchase |
|--------------|---------------|----------------|------------------|
| | | | |

Please call our UK based Customer Service department if you need help or advice from us:

United Kingdom and Northern Ireland: **0845 600 4911 / 0345 600 4911**
Republic of Ireland: **01 862 3411**
You can also contact us through our website: **www.beko.co.uk**

