Lenovo

ideacentre 510S Desktop PC User Guide

Machine Type (MT): 90LX [ideacentre 510S-07ICK/Energy Star]





* Combo audio jack: Used to connect headsets.

ATTENTION: Be sure not to block any air vents on the computer. Blocked air vents may cause thermal problems.



NOTE: If your model has two VGA monitor connectors, be sure to use the connector on the graphics adapter.

ATTENTION: Do not open the Wi-Fi antenna cover.

Safety information for replacing CRUs

Do not open your computer or attempt any repairs before reading the "Important safety information" in the *Safety, Warranty, Environment, Recycling Information Guide* and *Important Product Information Guide* that was included with your computer.

If you no longer have this copy of the Safety, Warranty, Environment, Recycling Information Guide and Important Product Information Guide, you can obtain one online from the website at http://www.lenovo.com/UserManuals.

Pre-disassembly instructions

Before proceeding with the disassembly procedure, make sure that you do the following:

- 1. Turn off the power to the system and all peripherals.
- 2. Unplug all power and signal cables from the computer.
- 3. Place the system on a flat, stable surface.

CRUs for your computer include:

- keyboard
- mouse
- hard disk drive
- solid state drive
- optical drive
- card reader module
- PCI express adapter
- power supply
- memory module
- coin-cell battery

This part contains instructions for replacing the following parts:

- Card reader module (Follow steps: 1) (2) (3)
- Optical drive (Follow steps: 10 2 4)
- Hard disk drive (Follow steps: 1 2 4 5)
- Solid state drive (Follow steps: 1) 6
- PCI express adapter (Follow steps: 10 0)
- Power supply (Follow steps: 10 8)
- Memory module (Follow steps: 1 9)
- Coin-cell battery (Follow steps: 10 (0))

1 Removing the computer cover



2 Removing the front bezel



3 Replacing the card reader module



4 Replacing the optical drive



6 Replacing a hard disk drive

HDD: 3.5"







6 Replacing a solid state drive

M.2 SSD 2242:



M.2 SSD 2280:







8 Replacing a power supply



9 Replacing a memory module







Replacing the coin-cell battery

