

playmobil®

STUNT
SHOW



70552



WARNING: CHOKING HAZARD


Small parts. Not for children under 3 years.

"Ne concerne que les USA"


Abbildungen können vom Original abweichen.
Product may differ from image shown.
Les illustrations peuvent différer de l'original.
Las ilustraciones pueden diferir del original.
Afbeeldingen kunnen verschillen van het werkelijke artikel.

Wichtige Unterlagen, bitte sorgfältig aufbewahren!
Important: Please keep these instructions for future reference!
Documents importants, à conserver soigneusement!
¡Por favor, guarde estas instrucciones para el futuro!
Belangrijke documenten, bewaar deze zorgvuldig!

1

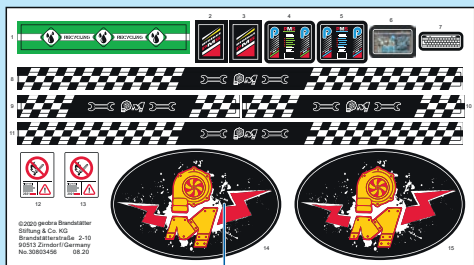


30 80 3456

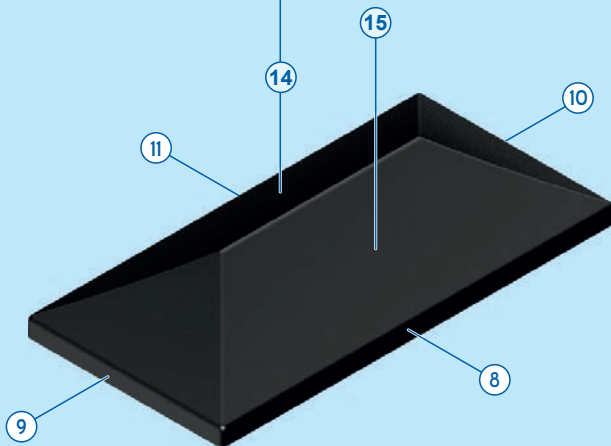

30 07 8363


2

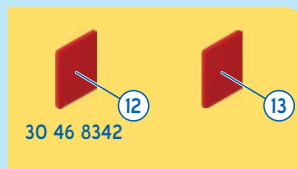

30 46 8342



30 51 1713

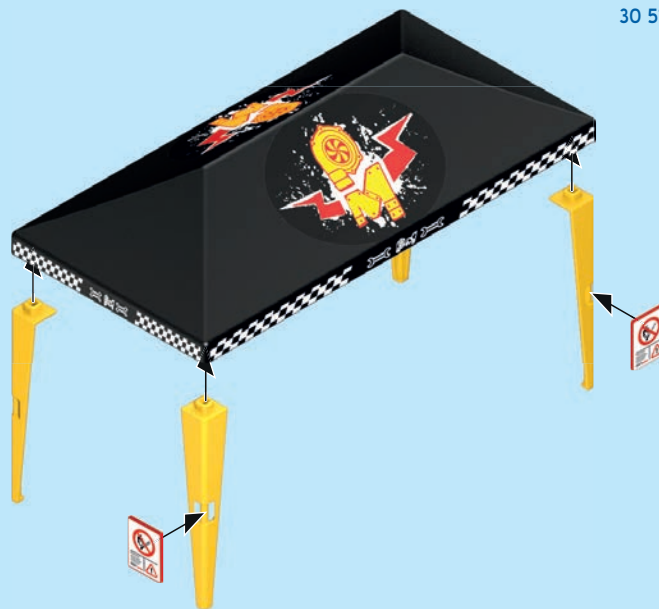

30 04 6310



30 22 2042

30 64 6400



30 08 1630

30 62 4462



30 64 6410

30 08 1620

30 08 1660

30 23 4343

30 07 8323

30 82 1210

30 23 4383





30 07 8333

30 07 8343

30 03 4460



30 24 5760

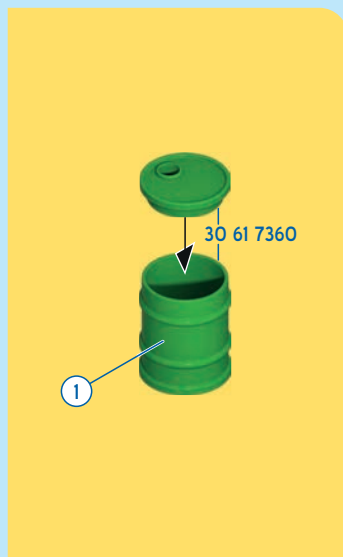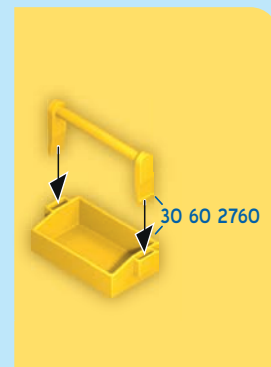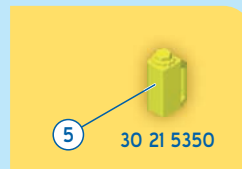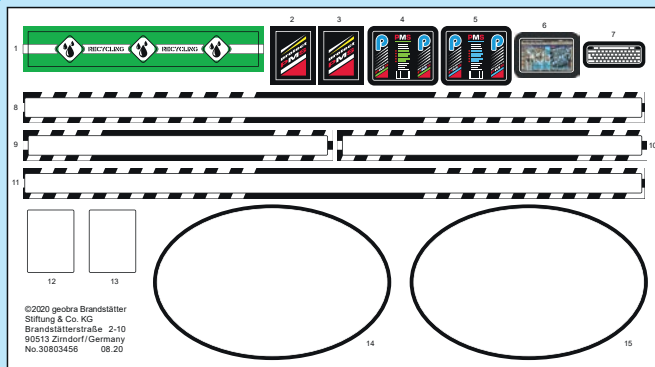

30 81 6420



30 64 7940



30 51 0492



2x 30 08 2000



30 07 8353



30 23 4293



70552 + 70551

Serviceadressen finden Sie in allen
PLAYMOBIL-Prospekten

Addresses of Customer Service Depart-
ments are shown in all PLAYMOBIL
catalogues

L'adresse du service consommateurs
est indiquée dans tous les catalogues
PLAYMOBIL

Troverete gli indirizzi dei centri di
assistenza in tutti i cataloghi PLAYMOBIL

In alle PLAYMOBIL catalogi vindt u
het adres van onze klantendienst.

Las Direcciones de los Departamentos
de Servicio al Consumidor se encuentran
en todos los catálogos PLAYMOBIL

Η διεύθυνση του Γραφείου Εξυπηρέτησης
Καταναλωτών PLAYMOBIL βρίσκεται σε
όλους τους καταλόγους PLAYMOBIL.

pronounced: plāy-mō-bēl



70551



70552



70553



70554



70544



70550



70549

