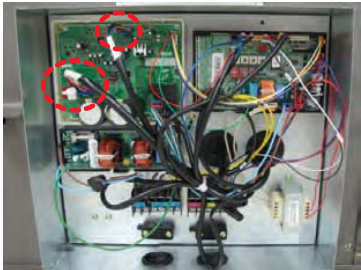
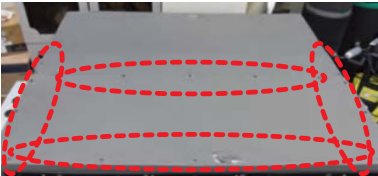
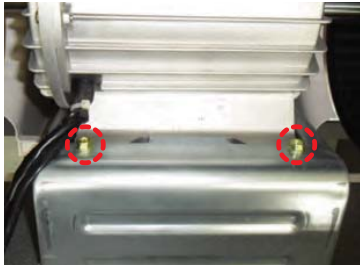
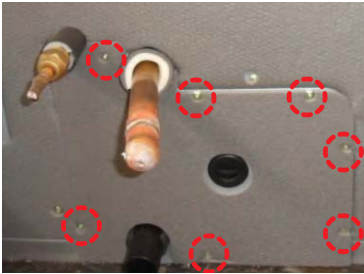
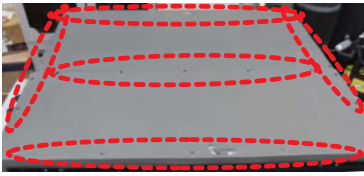


Disassembly and Reassembly

Repairs must be carried out by trained professional.

For any repairs, please contact our service provider or independent qualified professional.

No	Parts	Procedure	Remark
1	MOTOR & BLOWER	1) Detach the motor connectors from the PCB. 2) Unscrew 16 screws and detach Cabinet-Base Blower. (Use+Screw Driver) 3) Unscrew 8 screws and detach Case-Blower. (Use +Screw Driver) 4) Unscrew 4 bolts and separate Motor & blower from Bracket-Motor. (Use +Screw Driver)	     

No	Parts	Procedure	Remark
1		5) Unscrew bolt and Separate Blower from the motor. (Use +Screw Driver)	
2	EVAPORATOR & DRAIN-PAN	1) Detach EEV and Sensor connectors from the PCB. (Use +Screw Driver) 2) Unscrew 8 screws and Detach Cover-Pipe. (Use +Screw Driver) 3) Unscrew 31 screws and detach Cabinet- Base Blower and Cabinet-Base Drain. (Use +Screw Driver)	   

Disassembly and Reassembly

No	Parts	Procedure	Remark
2		4) Unscrew 10 screws and detach Drain-Pan from the indoor unit. (Use +Screw Driver) 5) Separate Evaporator from the indoor unit.	 