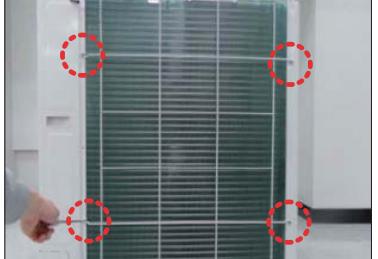
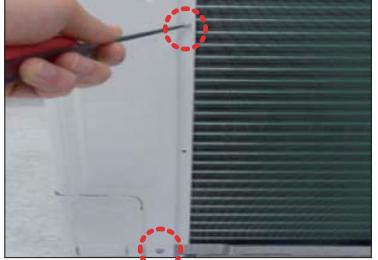
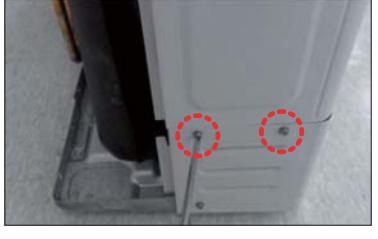


Disassembly and Reassembly



Repairs must be carried out by trained professional.

For any repairs, please contact our service provider or independent qualified professional.

| No | Parts | Procedure | Remark |
|----|--------------------|---|--|
| 1 | Cabi Front RH | <p>⚠ You must turn off the Power before disassembly.</p> <p>1) Unscrew and remove two mounting screw in the Cabinet Front RH. (Use +Screw Driver)</p> |   |
| 2 | Cabi Top | 1) Unscrew and remove 9 screws on each side of the Cabinet-Top. (Use +Screw Driver) |  |
| 3 | Cabi Install Front | 1) Unscrew and remove 1 screw in the Cabinet-Install Front. (Use +Screw Driver) |  |

| No | Parts | Procedure | Remark |
|----|--------------|---|---|
| 4 | Guard Cond | <p>1) Pull the sensor from Guard Cond.</p> <p>2) Unscrew and remove 4 screws in the Guard Cond. (Use +Screw Driver)</p> |   |
| 5 | Cabi Back RH | <p>1) Pull the sensor from Cabi Back RH.</p> <p>2) Unscrew and remove 4 screws on each side of the Cabinet Back RH. (Use +Screw Driver)</p> |    |

Disassembly and Reassembly
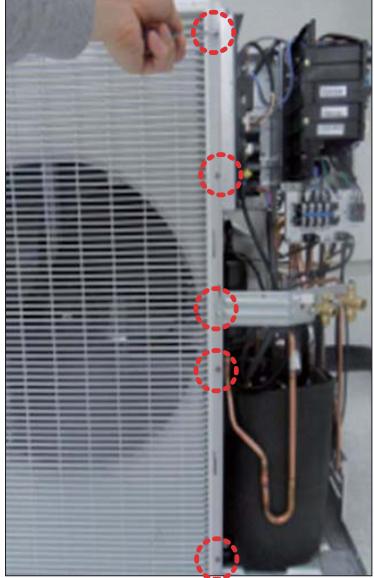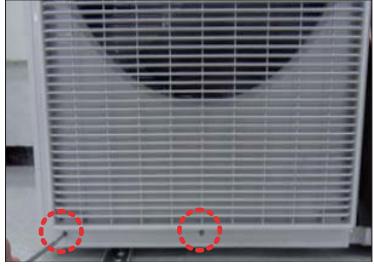
| No | Parts | Procedure | Remark |
|----|-------------------|--|---|
| 6 | Cabi Install Back | 1) Unscrew and remove 1 screw in the Cabinet-Install Back. (Use +Screw Driver) |  |
| 7 | Cabi Front LF | 1) Unscrew and remove 10 screws in the Cabinet-Front LF. (Use +Screw Driver) |   |

| No | Parts | Procedure | Remark |
|----|-------|--|---|
| 7 | | |   |
| 8 | Fan | 1) Turn 2 mounting nuts as shown in the picture and remove it. (Use Adjustable Wrench) |  |

Disassembly and Reassembly

| No | Parts | Procedure | Remark |
|----|---------------|---|--|
| 9 | Motor | <p>1) Separate the Fan Propeller.</p> <p>2) Unscrew and remove the 8 Motor mounting screws. (Use +Screw Driver)</p> <p>3) Disconnect the Motor wire From Ass'y Control Out.</p> |   |
| 10 | Bracket Motor | 1) Unscrew and remove 2 mounting screws in Bracket Motor. (Use +Screw Driver) |  |