

Quick start guide




Step A **Connect**


Step B **Enjoy**

What's in the Box?

You should find these items upon opening the box.

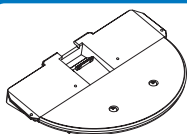

Stand

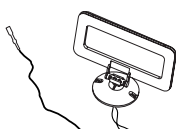

FM and MW antenna



 
Remote Control




Pull out the plastic protective sheet.



Quick Start Guide
Wall Mounting



User manual

 


2 x screw and plug
assembly

PHILIPS

Step A *Connect*


- 1 For radio reception, connect the supplied **MW loop antenna** and **FM antenna** to the respective terminals.
- 2 Connect the speaker wires to the **SPEAKERS** terminals, right speaker to "**RIGHT**" and left speaker to "**LEFT**", colored (marked) wire to "+" and black (unmarked) wire to "-".
- 3 After ensuring all the above connections have been made, connect the AC power cord to the wall outlet.

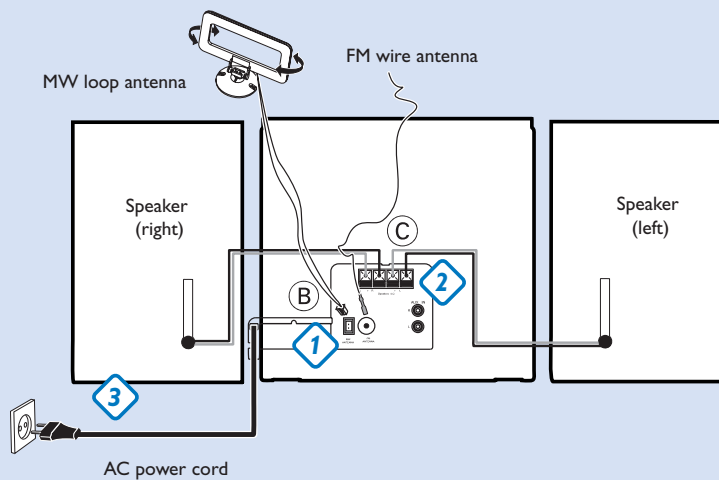

Step B *Enjoy*

Loading a CD

- 1 Press **SOURCE** on the front panel of the system to select CD or press CD on the remote.
- 2 Press **OPEN-CLOSE ▲** to open the CD compartment.
- 3 Insert a CD with the printed side facing up. Press **OPEN-CLOSE ▲** again to close the compartment.

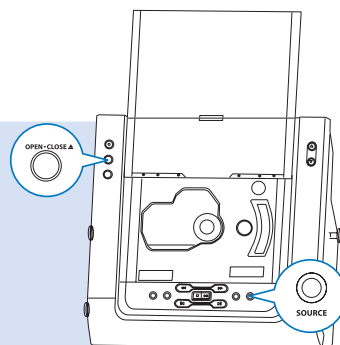

Tip

See the User Manual for playback of MP3-CDs.

Playback

- 1 After the system successfully reads the inserted CD, press **PRESET ◀ / ▶** once or repeatedly until the desired track number appears in the display.
- 2 Press **▶ ||** to start playback.
- 3 Press **■** to stop playback.

