


Quick Start Guide

- A** Connect
- B** Setup
- C** Enjoy



What's in the box?

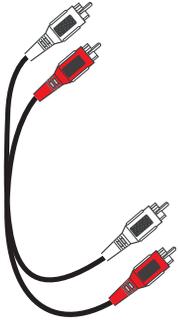

Audio cables
(red/white)




Composite
video cable
(yellow)




FM wire
antenna



Quick Start
Guide

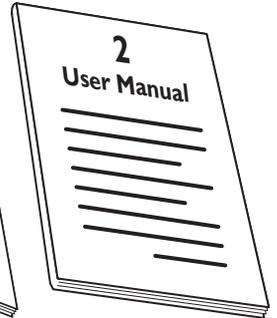


User Manual

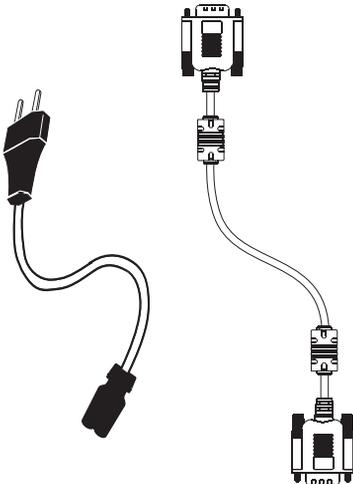


2 x AC power
cord

Din cable

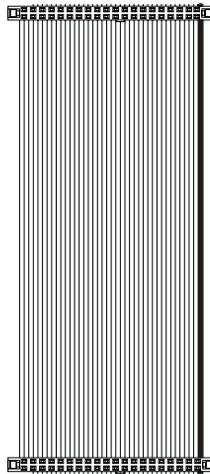

2 x IDE control
cables

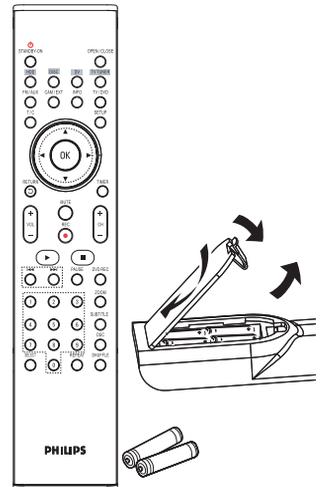

Remote control with two
AAA batteries

A Connect

1 Connect the speakers and subwoofer.

2 Connect the IDE control cables.

3 Connect the ground cables.

4 Connect FM wire antenna.

5 Connect the existing TV signal and RF coaxial cable (not supplied).



6 Connect the video and audio cables.

7 Connect the power cords.

Tips

- See the User Manual for other possible connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.

7 AC power

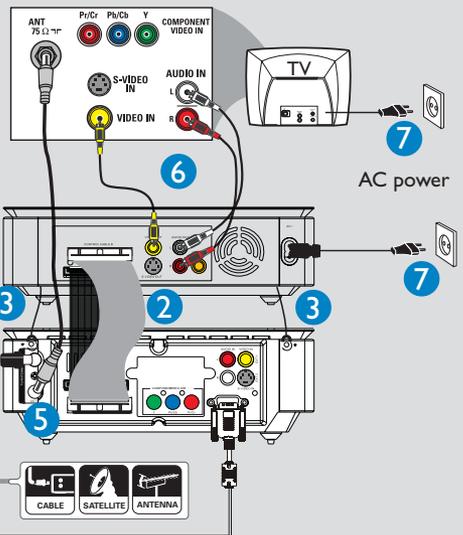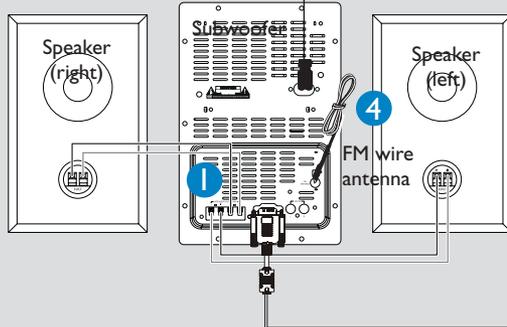

B Setup

Finding the viewing channel


1

Press **STANDBY-ON**  on the recorder to turn it on.


2

Turn on the TV and set it to the correct video-in channel.


Initial installation (setting the TV channels, languages and date/time)

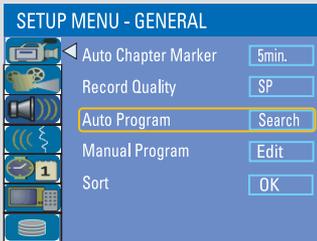

(TV channels)

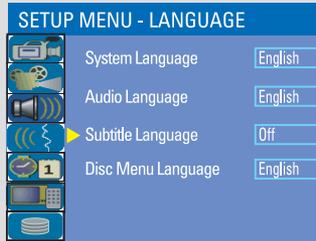

(Languages)

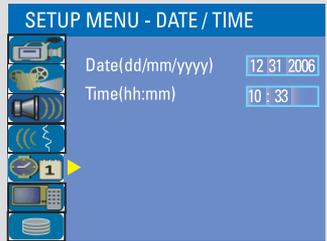

(Date/time)

1

Press **SETUP** on the remote control to enter the setup menu.

2

Press     to navigate in the menu.

3

Press   to highlight an option of an item to be set and then press **OK** to confirm the selection.

● For date/time setting, use the numeric keypad 0-9 to input values and then press **OK** to confirm.

4

Press **SETUP** again to finish initial installation.

→ Your Philips recorder is now ready for use.



Enjoy


About the Time Shift Buffer (TSB)

Once you switch on this recorder, the currently selected TV program will be stored in a temporary storage called the 'TSB' (Time Shift Buffer). The TSB can store up to 6 hours of recordings temporarily.

- Press **INFO** once to display the Time Shift video bar.

WARNING!

- The TV programs stored in the temporary HDD storage will be deleted once it has exceeded the storage buffer or when you press **STANDBY-ON**  to turn off the recorder.
- Executing the following actions will also clear the contents in the temporary HDD storage:
 - Press **DV** or **CAM/EXT** on the remote control.
 - Use the option { **Delete HDD** } to erase all contents of your hard disk storage.

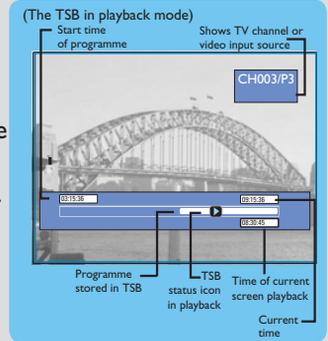

Pause 'live' TV

At times, you may be interrupted while watching your favourite program. Now you can PAUSE it, as if you were in control of the broadcast.

1

Press **PAUSE** while watching any live TV program to suspend it.

2

Press **▶** (PLAY) to continue.

3

To return to live broadcast, press **▶** (PLAY) or press and hold **▶**.

Instant Replay function

Whilst watching a live TV program, you can press **◀** on the remote control to jump back 10 seconds upon every single press for instant replay.

If you want to return to the live TV program, press and hold **▶**.



Recording to hard disk

1

Set the recording quality for content to be recorded to the time shift buffer through **SETUPMENU → GENERAL → RECORD QUALITY**.

Record Quality	Hours of Recording that can be stored	
	HDD 160G	DVD±R/±RW 4.7GB recordable disc
HQ High Quality	34	1
SP Standard Play	68	2
SPP Standard Play Plus	85	2.5
LP Long Play	102	3
EP Extended Play	136	4
SLP Super Long Play	204	6
SEP Super Extended Play	270	8

Values are estimates only. Parts of the HDD storage capacity will be reserved for the operations of this recorder and time shifting.

2

Press **TVTUNER** to switch to the TV tuner mode and then **CH +/-** to go to the TV channel you wish to record.

3

Press **INFO** to display the time shift video bar.



4

Press **REC** to start recording.

5

To stop recording, simply press **STOP**.

Recording to a DVD recordable disc

1

Press **TV TUNER** to switch to the TV tuner mode and then **CH +/-** to go to the TV channel you wish to record.

2

Press **OPEN/CLOSE** ▲ to open the disc tray and load in a DVD recordable disc, then press the same button again to close the disc tray.

→ Make sure the label side of the disc is facing up.



3

Press **DVD REC** to switch to direct recording mode and display the information bar.

System State: Stop
Record to Optical Disc As **Standard Play**
Elapsed Time: 00:00:00 Remaining Time: 02:00:00

4

Press **SELECT** to select your preferred mode of recording quality.

5

Press **REC** ● to start recording.

6

To stop recording, simply press **STOP** ■.

Tips:

To record from a connected external device to the hard disk or a DVD recordable disc, before starting recording, press **CAM/EXT** repeatedly or **DV** to select the correct input channel that matches the connected jack of the device.

- { CAM 1 } : 3.5mm AV jack on the front.
- { EXT 1 } : EXT 1 jack at the back.
- { EXT 2 } : EXT 2 jack at the back.
- { DV IN } : DV IN jack on the front.



Enjoy

Playback from hard disk

No.	Ch.	Date	Time	Title
001	CH001	05/20/05	02.00 PM	Travel
002	CH003	05/14/05	04.00 PM	News
003	CH009	04/25/05	08.30 PM	Drama
004	CH004	04/30/05	03.30 PM	Nature
005	CH002	03/28/05	08.30 PM	News
006	CH008	04/12/05	11.00 AM	Title 3
007	CH012	05/08/05	08.30 PM	News
008	CH010	06/30/05	10.30 PM	Discover

For other options, press [DVD], [DVI], [TUNER] keys. Press [RIGHT] to edit menu.

Press [SHUFFLE] to sort by title.

1. Press [SELECT] to mark or unmark recordings.
2. Press [HDD] to copy selected recordings to DVD.

1

Press **HDD** on the remote control to view the titles on the hard disk.

2

Use **▲ ▼** keys to highlight a title and press **OK** on the remote control to start playback.

3

Press **HDD** to go back to the disc menu anytime.

Playback from a disc

1

Insert a disc in the same way as described above.

2

Playback will start automatically. If not press **▶** (PLAY).

- If a disc menu appears on the TV, use the **numeric keypad 0-9** to input your selection or use **◀▶▲▼** keys to select a play option and press **OK** to start playback.

3

To stop playback, press **STOP**.



Enjoy

Copying from HDD to a recordable DVD

You can copy the contents in your hard disk to a DVD recordable disc.

1

Insert a DVD recordable disc into the recorder as described above.

2

Press **HDD** on the remote control.

→ The HDD content menu appears on the screen.

3

Use **▲ ▼** keys to highlight the title/titles and press **SELECT** to mark the titles to copy to DVD.

4

Press **HDD** on the remote control to start copying.

→ The dubbing icon  will be displayed at the bottom right corner of the screen.

→ Once complete, the icon will not be shown.

5

To stop recording, press **STOP** on the remote control.

Types of discs used on this recorder

Type	Record	Playback	Edit	Type	Record	Playback	Edit
 DVD+RW	✓	✓	✓	 AUDIO CD	✗	✓	✗
 DVD+R	✓	✓	✓	 VIDEO CD	✗	✓	✗
 DVD-RW	✓	✓	✓	 DATA CD	✗	✓	✗
 DVD-R	✓	✓	✓	 DATA CD	✗	✓	✗
 DVD VIDEO	✗	✓	✗				



Enjoy

Programming and tuning to radio stations

1

Press **FM/AUX** on the remote control to select FM tuner source.

2

Press and hold **SELECT** on the remote control for more than two seconds to program all available stations in order of waveband.

3

Press **CH+/-** on the remote control until the desired preset station is displayed.

Tip:

Detailed recording/playback features and additional functions are described in the accompany owner's manual.

Need help?

Onscreen Helptext

Press **INFO** on the remote control for onscreen helptext when using your Philips recorder.

User Manual

See the user manual that came with your Philips recorder.

Online

Go to www.philips.com/support.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

