



MCPUX CPU COOLER USER MANUAL

Part List

A CPU Cooler

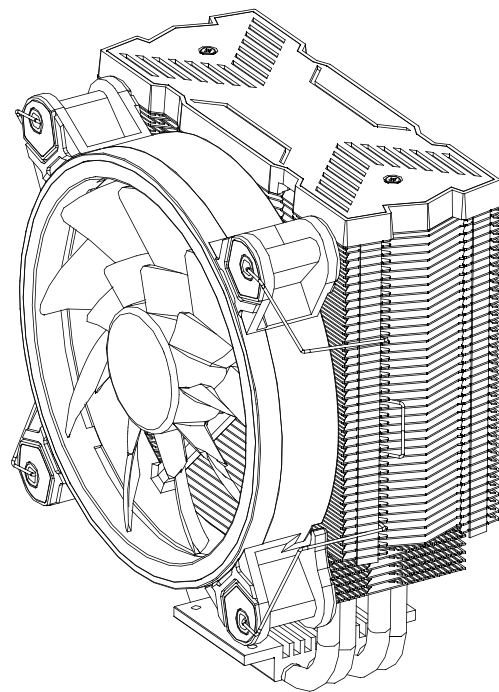


B Back Plate

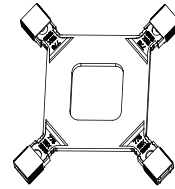


C Bracket Screw



D Intel Bracket

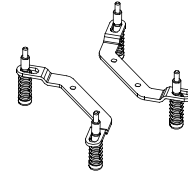


E AMD Bracket

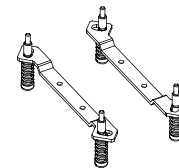

F Thermal Grease



G LGA 2011 Bracket

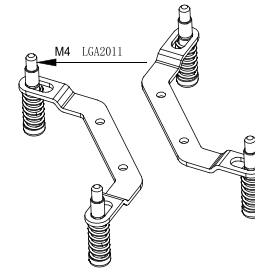


H Adapter Cable




Intel Installation

Step1

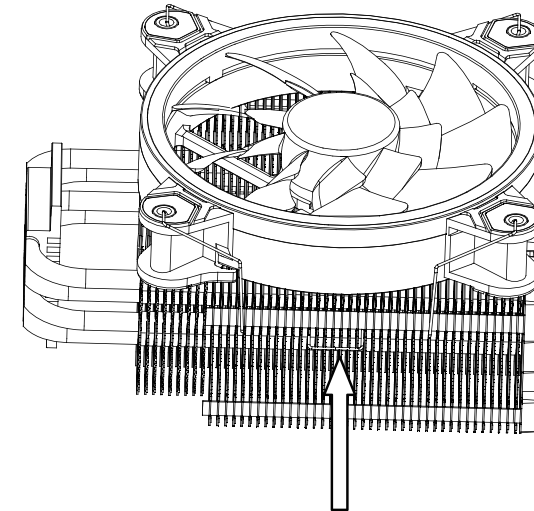


EN Please remove the fan before installing radiator by opening those 2 buckles pointed by arrow.

Step2

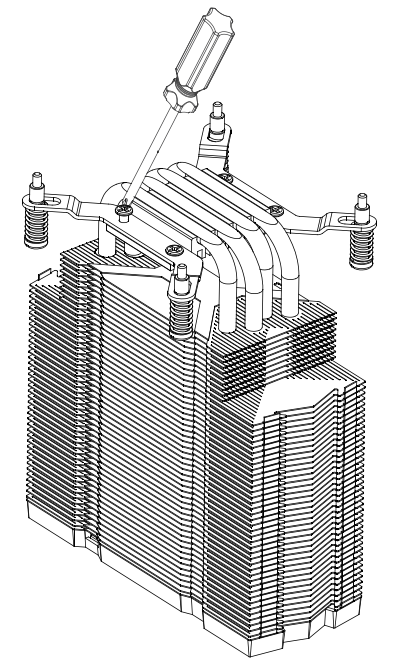


EN Install the bracket mount on the cooler base. Fasten the bracket mount with screws.

Step3

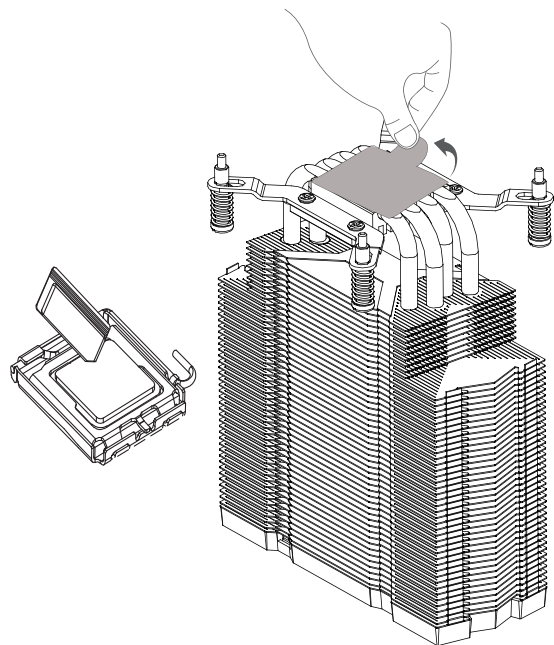


Step4

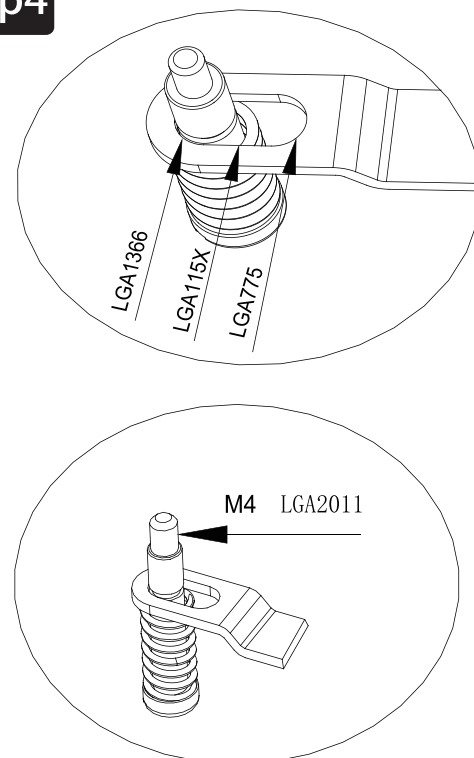


EN Move the screw on the bracket to the corresponding position according to the main board type. (As shown in the above figure)

Step5

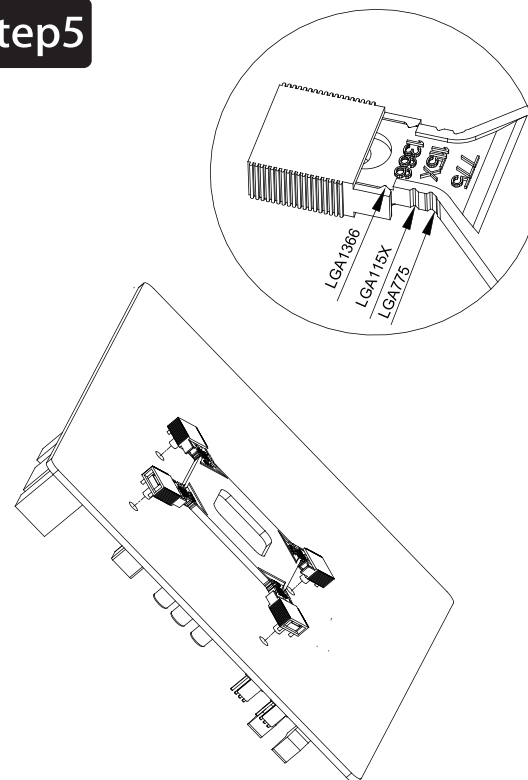


EN The backplane positioning slider is moved to the desired position and loaded into the main board. If your motherboard is LGA2011, use the original motherboard backplane.

Step6

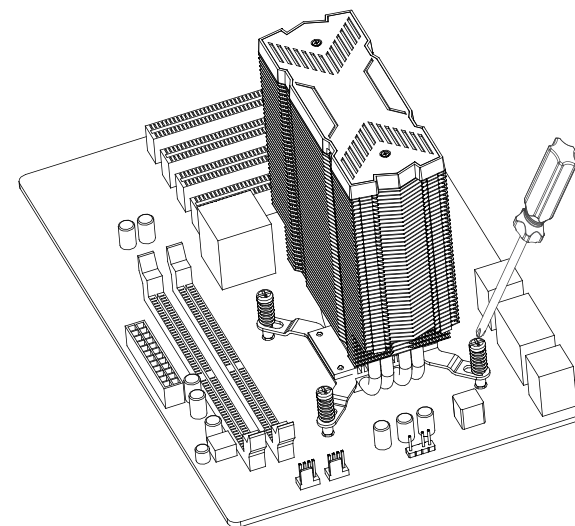

EN Place the radiator on the CPU while aligning the support screw to the backplane nut and tightening (Pictured above)


Step7

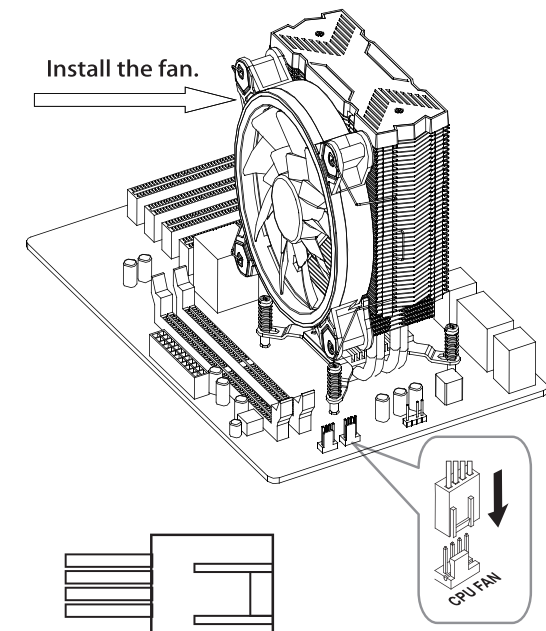

EN After installing the fan, connect the fan wire to the main board


AMD Installation

Step1

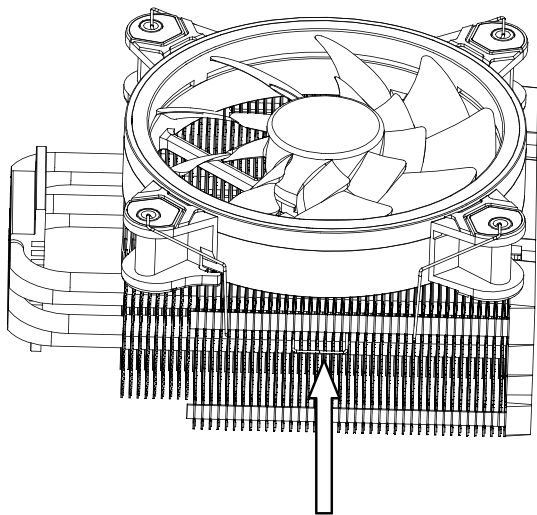


EN Please remove the fan before installing radiator by opening those 2 buckles pointed by arrow.

Step2

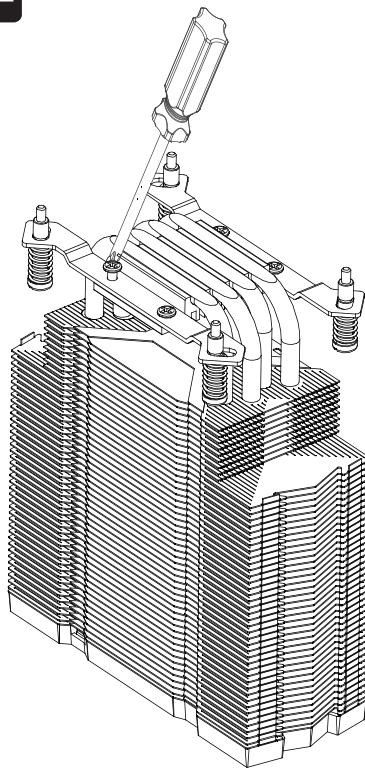


EN Install the bracket mount on the cooler base. Fasten the bracket mount with screws.

Step3

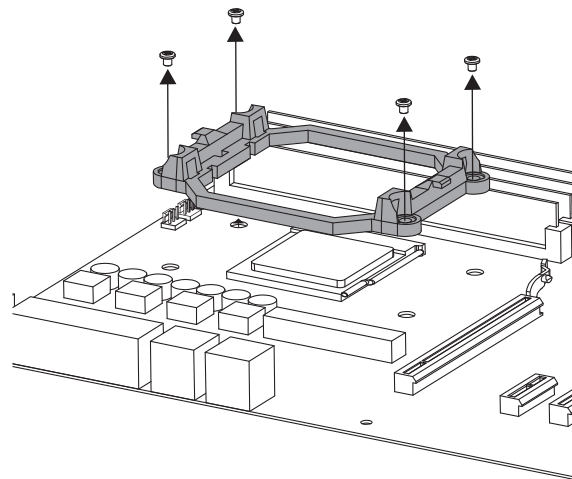


EN Please remove the original upper bracket on the AMD motherboard. (As shown above)

Step4

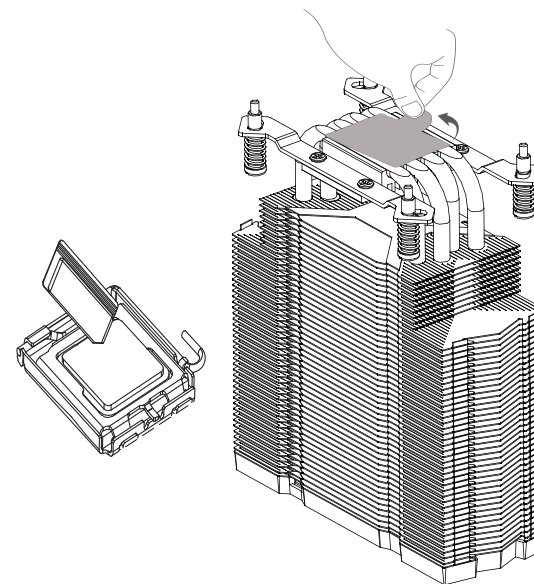


EN Evenly spread the heat sink paste on the surface of the CPU and remove the bottom of the radiator.

Step5

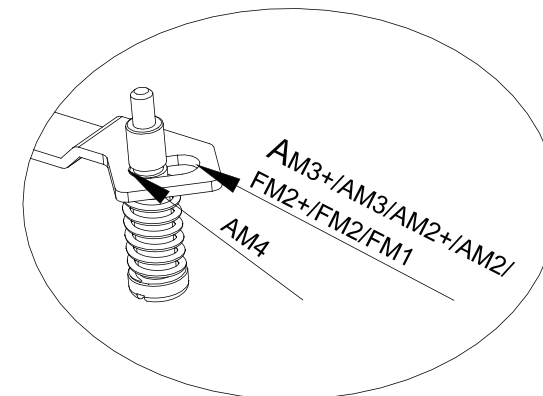


EN Move the screw on the bracket to the corresponding position according to the main board type. (As shown in the above figure)

Step6

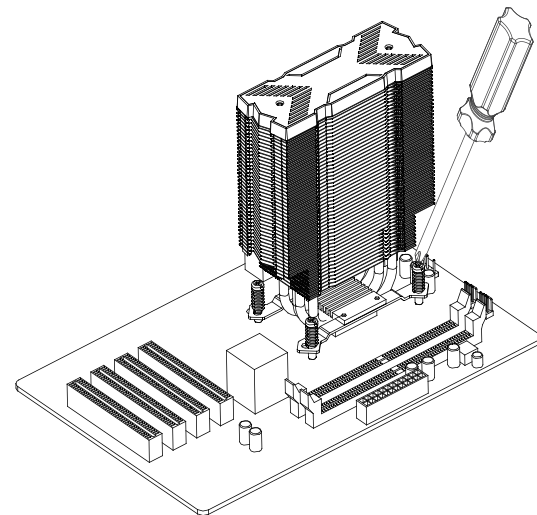


EN Place the radiator on the CPU and screw the bracket screw to the base of the original cooling rack (Pictured above)

Step7

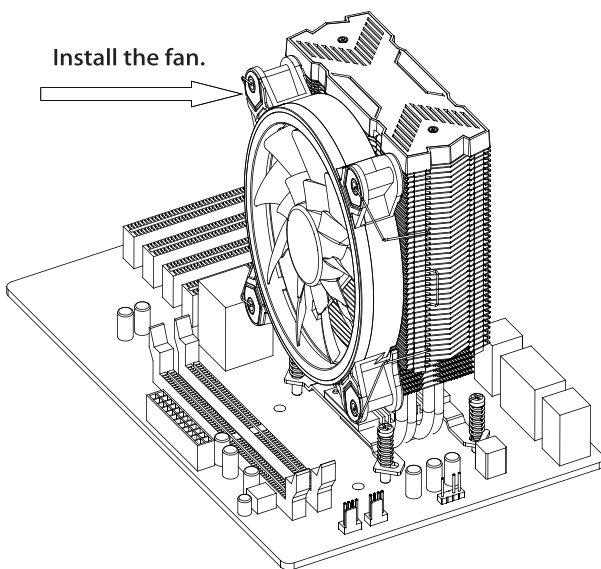

EN Install the fan.

Step8

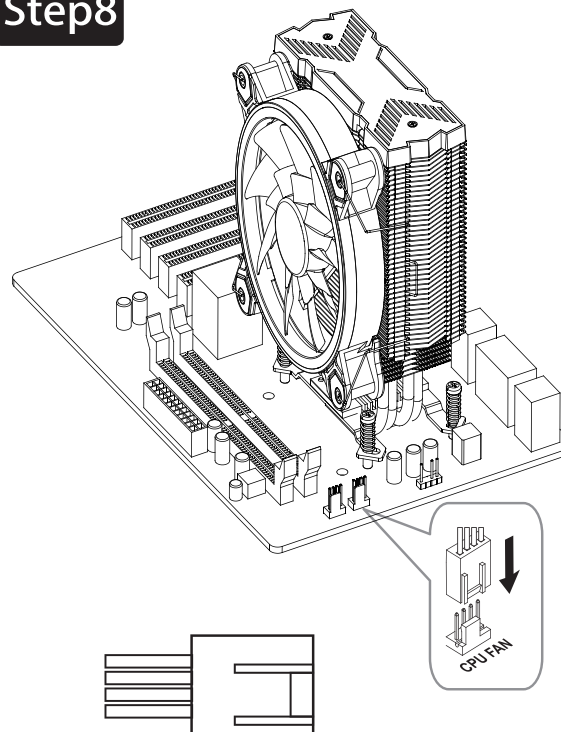


EN After installing the fan, connect the fan wire to the main board

Addressable RGB lighting control

Connect the Addressable RGB adaptor **H** to MCPUX.

Connect the ARGB +5V 3pin connector to the ARGB motherboard / controller connector.

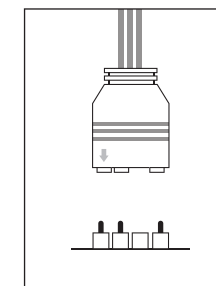

Compatible with: Asus Aura Sync, Mystic Light Sync, RGB Fusion (Aorus) and ARGB controllers

Note to user: Check for ARGB compatibilities on your motherboard's user manual. Please keep this sheet for future reference. Visit our website www.marsgaming.eu for more info about your product.

MARS GAMING
GAMERS UNIVERSE

MCPUX CPU COOLER
USER MANUAL