

AZ1038

1 Choosing Power Supply

a Connect the AC power cord to the **AC MAINS ~** inlet and the wall socket.

-OR-

b Open the battery door and insert 6 x **C batteries** (not included)

2 Listening to the Radio

a Push the **source selector** to **TUNER**

b Push **BAND** to **MW** or **FM**

c Turn **TUNING** to tune to a station

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, and MP3-CD.

IMPORTANT: For a disc with CD Audio tracks and MP3 files, only the CD audio tracks will be played.




a Lift the CD door at **LIFT TO OPEN**.

b Insert a CD with the printed facing up and press the CD door gently.

c Adjust the **source selector** to **CD/MP3**.

d Press **▶/||** to start playback.

e To stop disc playback, press **■**.

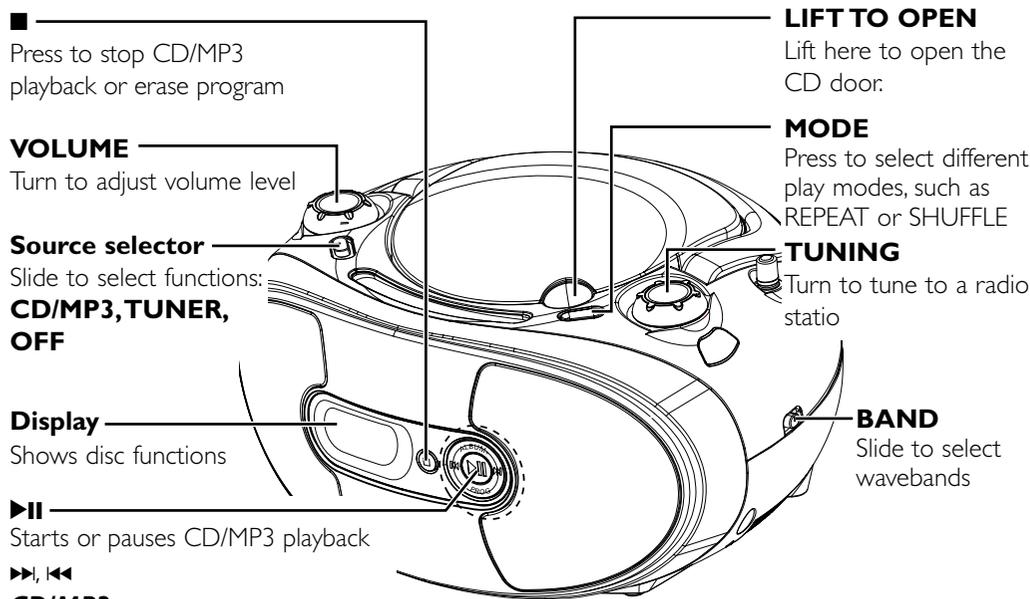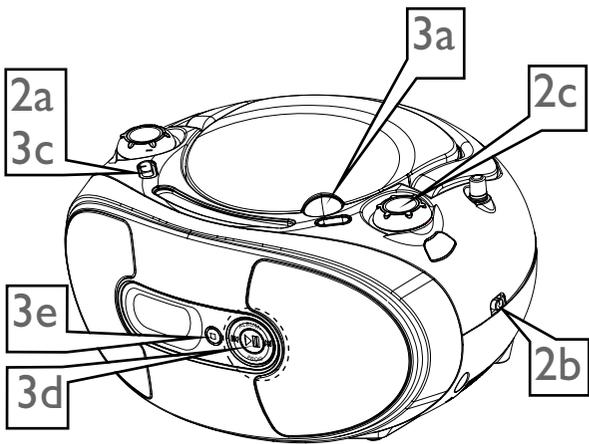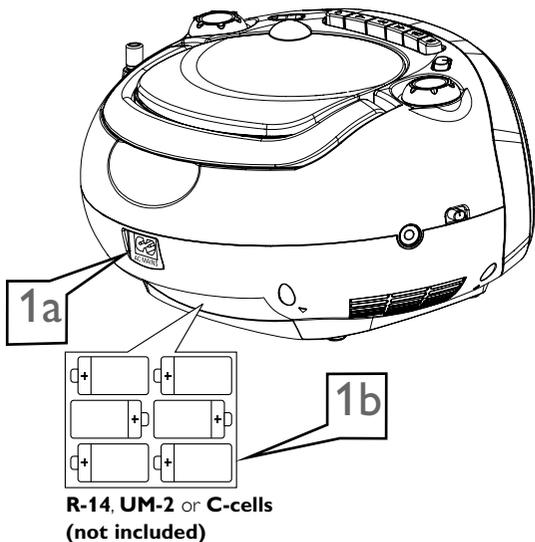

▶/|| Starts or pauses CD/MP3 playback

▶▶, ◀◀

CD/MP3:

- fast searches back and forward
- skips to the beginning of a current track/ previous/ later track

ALBUM+

MP3 only: selects albums (up)

PROG
Programs tracks and reviews the program

