








Quick Start Guide

DCS-4712E
DCS-4714E

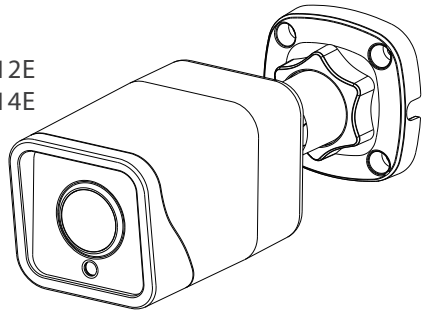


DCS-4718E

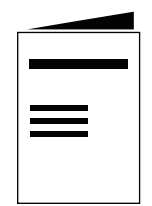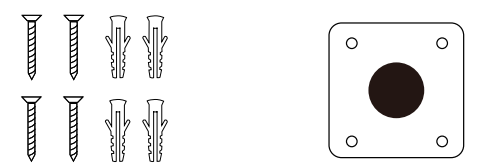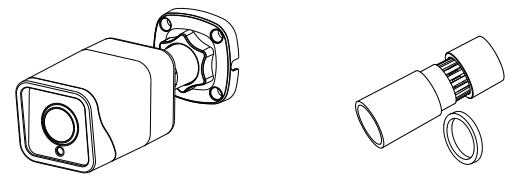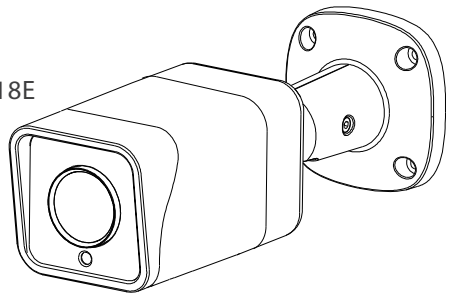


<https://eu.dlink.com/support>

DCS-4712E / DCS-4714E / DCS-4718E



1

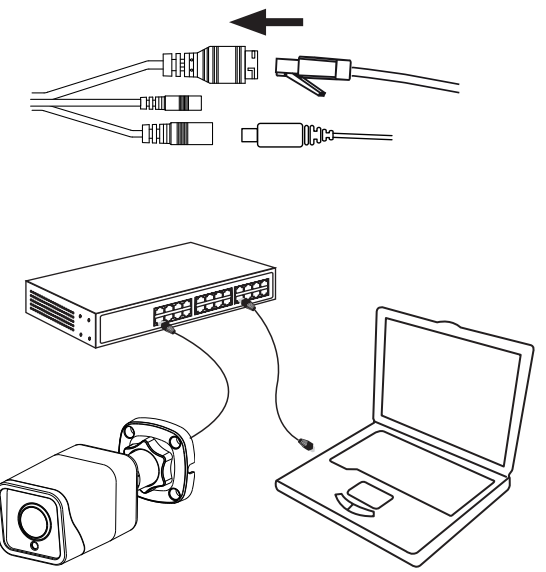


2

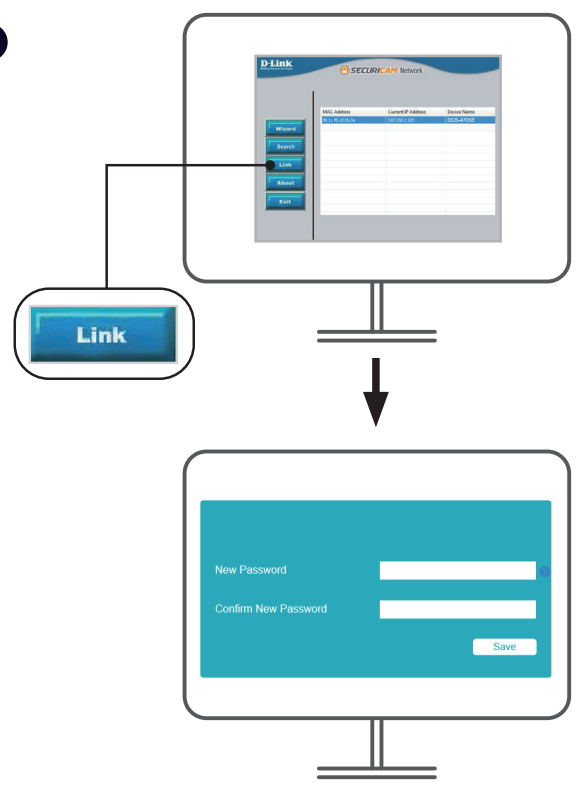


1

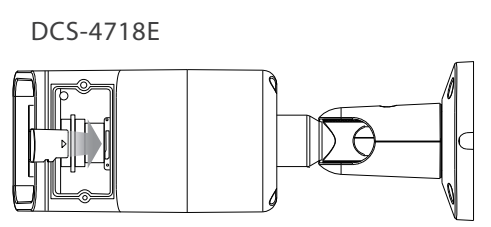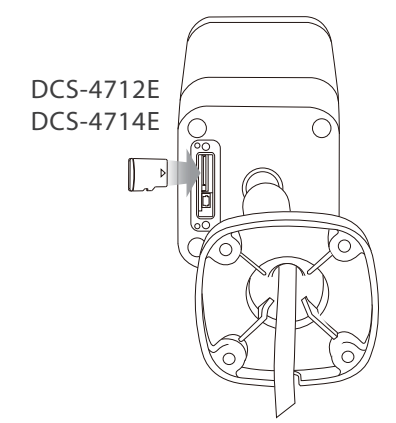

2

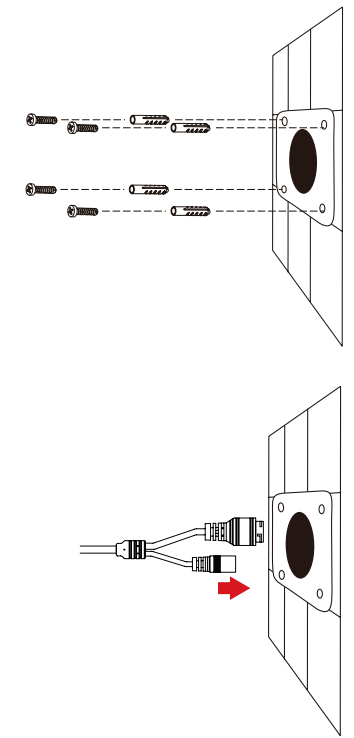


3

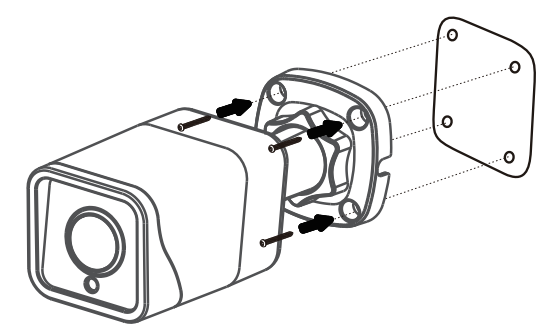







4

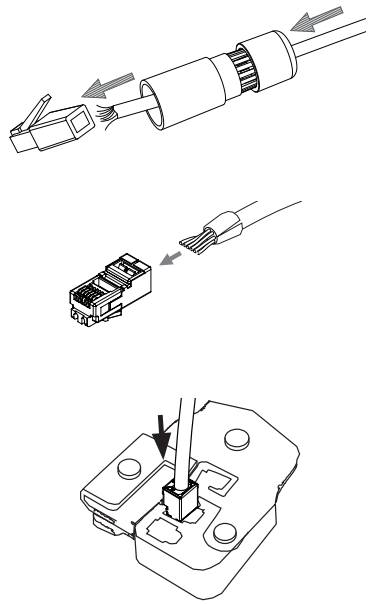

5

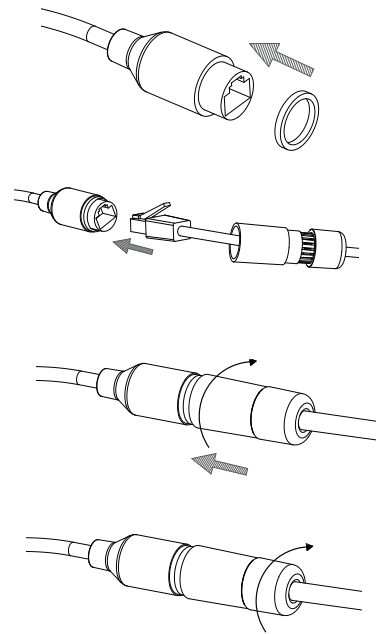

6

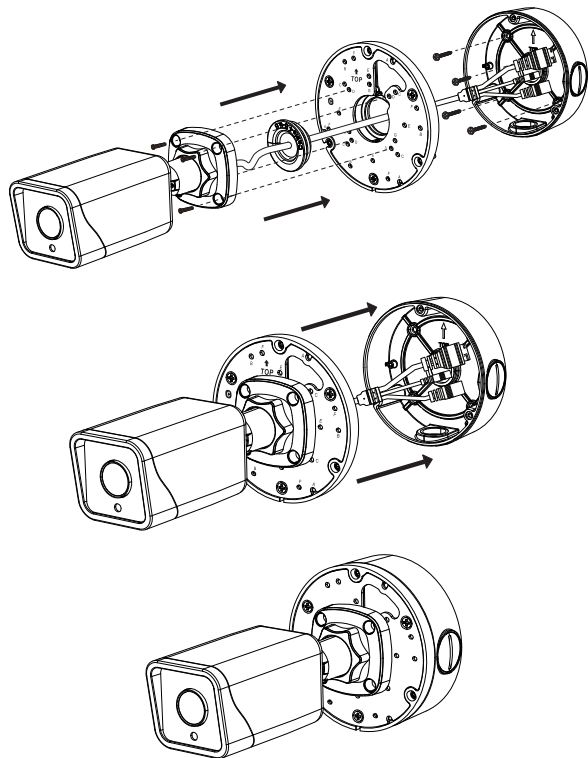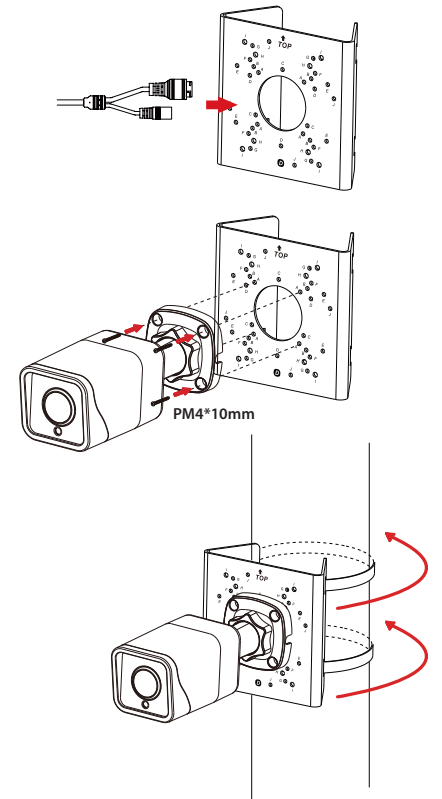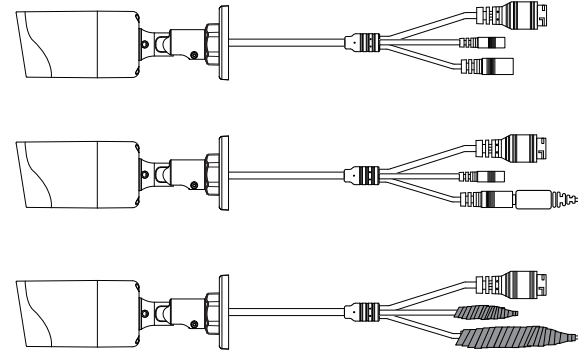

Model no.	DCS-37-4		DCS-37-6	
	Screw hole	Screw size	Screw hole	Screw size
DCS-4712EK DCS-4714EK	A	PM4*10mm	D	PM4*10mm
DCS-4718EK	B	PM4*10mm	C	PM4*10mm



<https://www.dlink.com/warranty>



<https://eu.dlink.com/support>